
# ETSITS 129 232 V7.8.0 (2008-01)

Technical Specification

Universal Mobile Telecommunications System (UMTS);
Media Gateway Controller (MGC) Media Gateway (MGW) interface;
Stage 3
(3GPP TS 29.232 version 7.8.0 Release 7)

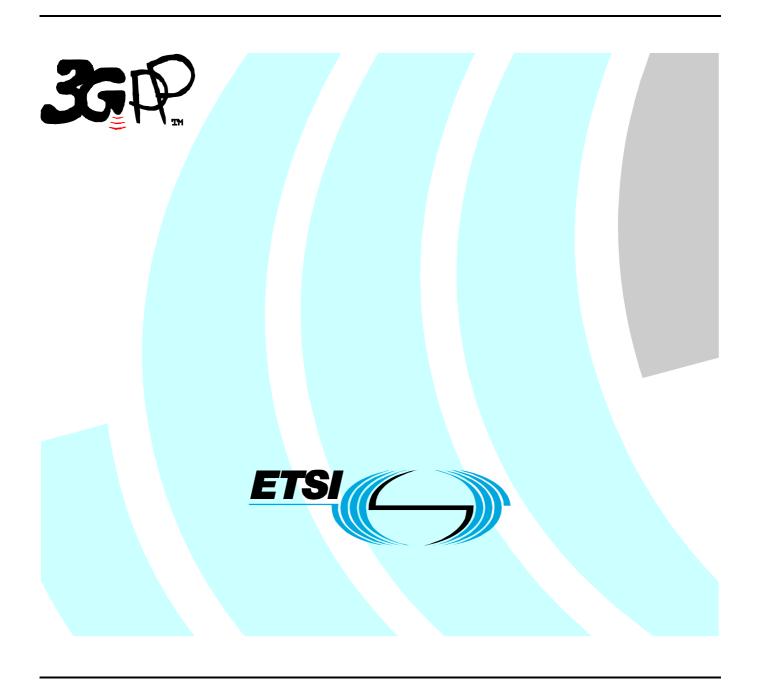

Reference
RTS/TSGC-0429232v780

Keywords

UMTS

#### **ETSI**

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

#### Important notice

Individual copies of the present document can be downloaded from: <u>http://www.etsi.org</u>

The present document may be made available in more than one electronic version or in print. In any case of existing or perceived difference in contents between such versions, the reference version is the Portable Document Format (PDF). In case of dispute, the reference shall be the printing on ETSI printers of the PDF version kept on a specific network drive within ETSI Secretariat.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

<a href="http://portal.etsi.org/tb/status/status.asp">http://portal.etsi.org/tb/status/status.asp</a></a>

If you find errors in the present document, please send your comment to one of the following services: http://portal.etsi.org/chaircor/ETSI\_support.asp

#### **Copyright Notification**

No part may be reproduced except as authorized by written permission. The copyright and the foregoing restriction extend to reproduction in all media.

© European Telecommunications Standards Institute 2008. All rights reserved.

**DECT**<sup>TM</sup>, **PLUGTESTS**<sup>TM</sup>, **UMTS**<sup>TM</sup>, **TIPHON**<sup>TM</sup>, the TIPHON logo and the ETSI logo are Trade Marks of ETSI registered for the benefit of its Members. **3GPP**<sup>TM</sup> is a Trade Mark of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

# Intellectual Property Rights

IPRs essential or potentially essential to the present document may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (http://webapp.etsi.org/IPR/home.asp).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

#### **Foreword**

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities, UMTS identities or GSM identities. These should be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between GSM, UMTS, 3GPP and ETSI identities can be found under <a href="http://webapp.etsi.org/key/queryform.asp">http://webapp.etsi.org/key/queryform.asp</a>.

# Contents

Intell	lectual Property Rights	2
Forev	word	2
Forev	word	8
1	Scope	9
2	References	
3	Definitions, symbols and abbreviations	
3.1	Definitions	
3.2	Symbols	
3.3	Abbreviations	
4	UMTS capability set	11
4.1	Profile Identification.	
4.2	Profile Registration.	12
5	Naming conventions	12
5.1	MGC/MGW naming conventions	12
5.2	Termination names	12
6	Topology descriptor	12
7	Transaction timers	12
8	Transport	12
9	Multiple Virtual MG.	13
10	Formats and codes	13
11	Mandatory Support of SDP and H.248.1 annex C information elements	15
12	General on Packages and Transactions	
13	BICC packages	16
13.1	Mandatory BICC packages	
13.2	Optional BICC packages	16
14	H.248 standard packages	16
14.1	Call independent H.248 transactions	
14.1.1		
14.1.2		18
14.1.3		
14.1.4 14.1.5		
14.1.6		
14.1.7	• • • • • • • • • • • • • • • • • • • •	
14.1.8		
14.1.9		
14.1.1	10 Audit Value	21
14.1.1	1	
14.1.1	1 2	
14.1.1		
14.1.1	$\mathcal{E}$	
14.1.1	$\mathcal{E}$	
14.1.1 14.1.1	•	
14.1.1	· · · · · · · · · · · · · · · · · · ·	
14.1.1	· · · · · · · · · · · · · · · · · · ·	
14.1.2		

14.2	Call related H.248 transactions	
14.2.1	Change Flow Direction	
14.2.2	Isolate Bearer Termination	
14.2.3	Join Bearer Termination	
14.2.4	Establish Bearer	
14.2.5	Prepare Bearer	
14.2.6	Change Through Connection	
14.2.7	Activate Interworking Function	
14.2.8	Release procedures	
14.2.8.1		
14.2.8.2		
14.2.9	Bearer Released	
14.2.10		
14.2.11	Send Tone	
14.2.12		
14.2.13	Send DTMF	
14.2.14		
14.2.15	1	
14.2.16		
14.2.17	$\epsilon$	
14.2.18		
14.2.19 14.2.20		
14.2.21	Tone Completed	
14.2.21	<u>.</u>	
14.2.23	Stop Tone	
14.2.24	1	
14.2.25	Stop DTMF	
14.2.26	1	
14.2.27		
14.2.28	·	
14.2.29		
14.2.30		
14.2.31	TFO Activation	
14.2.32	Optimal Codec and Distant List_Notify	37
14.2.33	Codec Modify	38
14.2.34		
14.2.35	Command Rejected	
14.2.36		
14.2.37	E .	
14.2.38	$\mathcal{C}$	
14.2.39	11	
14.2.40	1	
14.2.41	Prepare IP transport	
14.2.42	• 1	
14.2.43		
14.2.44		
14.2.45		
14.2.46 14.2.47		
14.2.47	<i>e</i> ,	
14.2.49		
14.2.50		
15 L	UMTS packages	
15.1	Mandatory UMTS packages	
15.1.1	3GUP package.	
15.1.1.1	1	
15.1.1.2		
15.1.1.3		
15.1.1.4		
15.1.1.5	Procedures	51

15.1.2	Void	53
15.1.3	Void	53
15.1.4	Void	53
15.1.5	Void	53
15.1.6	Void	53
15.1.7	Void	53
15.1.8	Void	53
15.1.9	Void	53
15.2	Optional UMTS packages	53
15.2.1	Circuit Switched Data package	54
15.2.1.1	Properties	
15.2.1.2	Events	
15.2.1.3	Signals	
15.2.1.4	Statistics	
15.2.1.5	Procedures	
15.2.2	TFO package	
15.2.2.1	Properties	
15.2.2.2	Events	
15.2.2.3	Signals	
15.2.2.4	Statistics	
15.2.2.5	Procedures	
15.2.3	3G Expanded Call Progress Tones Generator Package	
15.2.3.1	Properties	
15.2.3.2	Events	
15.2.3.3	Signals	
15.2.3.4	Statistics	
15.2.3.5 15.2.4	Procedures	
15.2.4.1	Properties	
15.2.4.1	Events	
15.2.4.2	Signals	
15.2.4.4	Statistics	
15.2.4.5	Procedures	
15.2.5	Enhanced Circuit Switched Data package	
15.2.5.1	Properties	
15.2.5.2	Events	
15.2.5.3	Signals	
15.2.5.4	Statistics	
15.2.5.5	Procedures	
15.2.6	Cellular Text telephone Modem Text Transport	
15.2.6.1	Properties	62
15.2.6.2	Events	63
15.2.6.3	Signals	63
15.2.6.4	Statistics	64
15.2.6.5	Procedures	
15.2.7	IP transport package	
15.2.7.1	Properties	
15.2.7.2	Events	
15.2.7.3	Signals	
15.2.7.4	Statistics	
15.2.7.5	Procedures	
15.2.8	Flexible Tone Generator Package	
15.2.8.1 15.2.8.2	Properties	
15.2.8.2	Events	
15.2.8.4	Signals	
15.2.8.5	Statistics	
15.2.8.3	Trace Package	
15.2.9.1	Properties	
15.2.9.1	Events	
15.2.9.2	Signals	
15.2.9.3	Statistics	70

15.2.9.5	Procedures	70
15.2.10	ASCI Group call package	70
15.2.10.1	Properties	70
15.2.10.2	Events	71
15.2.10.3	Signals	71
15.2.10.4	Statistics	71
15.2.10.5	Procedures	71
Annex A	A (informative): The Framing protocol Interworking Function (FPIF)	72
A.1 In	troduction	72
A.2 F	PIF procedures with respect to Iu framing protocol	72
A.2.1	Payload	
A.2.1 A.2.2	RFCIs	
A.2.3	FQC	
A.2.4	Frame number	
A.3 R A.3.1	elay of status information	
A.3.1 A.3.2	Rate Control Frames	
A.3.2	Time Alignment	
	B (informative): Examples for Usage of the 3GUP Package "Initialization Direction" Property	
Annex (	C (Normative): Profile description	76
C.1	Profile Identification.	
C.2	Summary	
C.3	Gateway Control Protocol Version	
C.4	Connection Model	
C.5	Context Attributes	
C.6	Terminations.	
C.6.1	Termination Names.	
C.6.1.1	General	
C.6.1.2	ASN.1 Coding	
C.6.1.2.1	· · · · · · · · · · · · · · · · · · ·	
C.6.1.2.2		
C.6.1.3	ABNF Coding	
C.6.1.3.1	E	
C.6.1.3.2		78
C.6.1.3.2		70
C.6.1.3.3	Multiplexed terminations	
C.0.2 C.7	Descriptors	
C.7.1	Stream Descriptor	
C.7.1.1	LocalControl Descriptor	
C.7.1.1 C.7.2	Events Descriptor	
C.7.2 C.7.3	•	
	EventBuffer Descriptor	
C.7.4	Signals Descriptor	
C.7.5	DigitMap Descriptor	
C.7.6	Statistics Descriptor	
C.7.7	ObservedEvents Descriptor	
C.7.8	Topology Descriptor	
C.7.9	Error Descriptor	
C.7.10	TerminationState Descriptor	
C.8	Command API	
C.8.1	Add	
C.8.2	Modify	
C.8.3	Subtract	
C.8.4	Move	
C.8.5	AuditValue	
C.8.6	AuditCapability	
C.8.7	Notify	87

C.8.8	ServiceChange	
C.8.9	Manipulating and auditing context attributes	
C.9	Generic command syntax and encoding	89
C.10	Transactions	89
C.11	Messages	
C.12	Transport	
C.13	Security	
C.14	Packages	91
C.14.1	Generic Package	94
C.14.2	Base Root Package	96
C.14.3	Tone Generator Package	
C.14.4	Tone Detection Package	
C.14.5	Basic DTMF Generator Package	100
C.14.6	Basic DTMF Detection Package	102
C.14.7	Continuity Package	104
C.14.8	TDM Circuit Package	105
C.14.9	Text Telephony Package	106
C.14.10	Call Discrimination Package	107
C.14.11	Announcement Package	109
C.14.12	Media Gateway Resource Congestion handling Package	111
C.14.13	Hanging Termination Detection Package	112
C.14.14	Bearer Characteristics Package	112
C.14.15	Generic Bearer Connection Package	113
C.14.16	Bearer Control Tunnelling Package	115
C.14.17	Basic Call Progress Tones Generator with Directionality	115
C.14.18	Expanded Call Progress Tones Generator Package	116
C.14.19	Basic Services Tones Generation Package	117
C.14.20	Expanded Services Tones Generation Package	
C.14.21	Intrusion Tones Generation Package	119
C.14.22	Business Tones Generation Package	
C.14.23	3GUP Package	
C.14.24	Modification of Link Characteristics Bearer Capability	
C.14.25	TFO package	122
C.14.26	Circuit Switched Data package	
C.14.27	Enhanced Circuit Switched Data package	
C.14.28	3G Expanded Call Progress Tones package	
C.14.29	Cellular Text Telephone Modem Text Transport Package	125
C.14.30	IP Transport package	
C.14.31	Flexible Tone Generator package	126
C.14.32	Trace Package	127
C.14.33	ASCI Group call	
C.14.34	IP domain connection	
C.14.35	Inactivity Timer Package	
C.15	Mandatory support of SDP and Annex C information elements	
C.16	Optional support of SDP and Annex C information elements	131
Annex I	O (informative) Change history	132
History		

# Foreword

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

#### where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

# 1 Scope

The present document describes the protocol to be used on the Media Gateway Controller (MGC) – Media Gateway (MGW) interface. The Media Gateway Controllers covered in this specification are the MSC server and the GMSC server. The basis for this interface profile is the H.248.1 [10] protocol as specified in ITU-T. The BICC architecture as described in 3GPP TS 23.205 [2] and 3GPP TS 29.205 [7] defines the usage of this protocol.

This specification describes the changes to H.248 which are needed to handle 3GPP specific traffic cases. This is done by using the H.248 standard extension mechanism. In addition certain aspects of the base protocol H.248 are not needed for this interface and thus excluded by this profile.

# 2 References

[12]

[13]

[14]

[15]

package".

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.
- Release as the present document. [1] 3GPP TS 23.153: "Out of band transcoder control; Stage 2". [2] 3GPP TS 23.205: "Bearer independent circuit-switched core network; Stage 2". 3GPP TS 24.008: "Mobile radio interface Layer 3 specification; Core network protocols; Stage 3". [3] [4] 3GPP TS 25.415: "UTRAN Iu interface user plane protocols". [5] 3GPP TS 28.062: "Inband Tandem Free Operation (TFO) of speech codecs; Service description; Stage 3". 3GPP TS 29.007: "General requirements on interworking between the Public Land Mobile [6] Network (PLMN) and the Integrated Services Digital Network (ISDN) or Public Switched Telephone Network (PSTN)". [7] 3GPP TS 29.205: "Application of Q.1900 series to Bearer Independent circuit-switched network architecture; Stage 3". 3GPP TS 29.415: "Core Network Nb interface user plane protocols". [8] 3GPP TS 48.008: "Mobile Switching Centre - Base Station System (MSC - BSS) interface; [9] Layer 3 specification". [10] ITU-T Recommendation H.248.1 (05/2002): "Gateway control protocol". Version 2, including the Corrigendum1 for Version 2 (03/04). [11] ITU-T Recommendation Q.2210 (1996): "Message transfer part level 3 functions and messages using the services of ITU-T Recommendation Q.2140".

3GPP TS 29.202: "Signalling System No. 7 (SS7) signalling transport in core network; Stage 3".

ITU-T Recommendation H.248.8 (09/2005): "Error codes and service change reason description".

ITU-T Recommendation H.248.10 (07/2001): "Media gateway resource congestion handling

IETF RFC 2960: "Stream control transmission protocol".

[16]	3GPP TS 26.103: "Speech codec list for GSM and UMTS".
[17]	ITU-T Recommendation H.248.2 (01/2005): "Facsimile, text conversation and call discrimination packages".
[18]	3GPP TS 26.226: "Cellular text telephony; Transport of text in the voice channel".
[19]	ITU-T Recommendation T.140 (02/1998): "Protocol for multimedia application text conversation".
[20]	3GPP TS 25.413: "UTRAN Iu interface RANAP signalling".
[21]	3GPP TS 25.414: "UTRAN Iu interface data transport and transport signalling".
[22]	3GPP TS 23.078: "Customized Applications for Mobile network Enhanced Logic (CAMEL); Stage 2".
[23]	ITU-T Recommendation Q.1950 (12/2002):: "Bearer independent call bearer control protocol".
[24]	ITU-T Recommendation Q.765.5 (04/2004): "Signalling system No. 7 - Application transport mechanism: Bearer Independent Call Control (BICC)".
[25]	ITU-T Recommendation G.711 (11/1988): "Pulse code modulation (PCM) of voice frequencies".
[26]	3GPP TS 26.102: "3rd Generation Partnership Project; Mandatory speech codec; AMR speech codec; Interface to Iu, Uu and Nb"
[27]	3GPP TS 23.014: "Technical Specification Group Core Network; Support of Dual Tone Multi-Frequency (DTMF) signalling".
[28]	ITU-T Recommendation H.248.7 (03/2004): "Generic Announcement Package".
[29]	3GPP TS 32.421: " Subscriber and equipment trace: Trace concepts and requirements ".
[30]	3GPP TS 32.422: "Subscriber and equipment trace: Trace control and configuration management".
[31]	3GPP TS 32.423: "Subscriber and equipment trace: Trace data definition and management".
[32]	3GPP TS 29.414: "Core Network Nb data transport and transport signalling".
[33]	$ITU-T\ Recommendation\ X.213\ (11/95): "Information\ technology\ -\ Open\ systems\ interconnection\ -\ Network\ Service\ Definitions".$
[34]	IETF RFC 2327: " Session Description Protocol".
[35]	3GPP TS 43.045: "Technical Realization Of Facsimile Group 3 service - Transparent".
[36]	ITU-T Recommendation H.248.36 (09/2005): "Hanging Termination Detection Package".
[37]	3GPP TS 23.172: "Technical Specification Group Core Network and Terminals; Technical realization of Circuit Switched (CS); multimedia service UDI/RDI fallback and service modification; Stage 2
[38]	3GPP TS 33.210 : "Technical Specification Group Services and System Aspects;3G Security; Network Domain Security; IP Network Layer Security.
[39]	3GPP TS 43.068: " Voice Group Call Service (VGCS)".
[40]	3GPP TS 43.069: " Voice Broadcast Service (VBS)".
[41]	ITU-T Recommendation X.690: "ASN.1 encoding rules: Specification of Basic Encoding Rules (BER), Canonical Encoding Rules (CER) and Distinguished Encoding Rules (DER)"
[42]	ITU-T Recommendation H.248.41 (05/2006): " IP Domain Connection package ".
[43]	3GPP TS 23.003: "Numbering, addressing and identification".
[44]	RFC 3309: "Stream Control Transmission Protocol (SCTP) Checksum Change"

[45] ITU-T Recommendation H.248.14 (03/2002):"Inactivity timer package"

# 3 Definitions, symbols and abbreviations

#### 3.1 Definitions

For the purposes of the present document, the following terms and definitions apply:

context (H.248): association between a number of Terminations

The context describes the topology (who hears/sees whom) and the media mixing and/or switching parameters if more than two terminations are involved in the association.

**package** (**H.248**): different types of gateways may implement terminations which have differing characteristics Variations in terminations are accommodated in the protocol by allowing terminations to have optional properties. Such options are grouped into packages, and a termination may realise a set of such packages.

**termination** (H.248): logical entity on an MGW which is the source and/or sink of media and/or control streams A termination is described by a number of characterising properties, which are grouped in a set of descriptors which are included in commands. Each termination has a unique identity (TerminationID).

termination property (H.248): used to describe terminations

Related properties are grouped into descriptors. Each termination property has a unique identity (PropertyID).

## 3.2 Symbols

For the purposes of the present document, the following symbols apply:

Iu Interface between the RNS and the core network. It is also considered as a reference point.

Mc Interface between the server and the media gateway.

#### 3.3 Abbreviations

For the purposes of the present document, the following abbreviations apply:

BICC Bearer Independent Call Control
M3UA SS7 MTP3 – User Adaptation Layer
MGC Media Gateway Controller

MGC Media Gateway Controller MTP3 Message Transfer Part layer 3

RFC Request For Comment; this includes both discussion documents and specifications in the IETF

domain

SCTP Stream Control Transmission Protocol

TFO Tandem Free Operation
TrFO Transcoder Free Operation

# 4 UMTS capability set

The support of the Mc interface capability set shall be identified by the Mc profile and support of this profile shall then be indicated in ServiceChange procedure via the ServiceChangeProfile parameter as defined in H.248.1 [10] and clarified in section 4.2.The mandatory parts of this profile shall be used in their entirety. Failure to do so will result in a non-standard implementation.

ITU-T Recommendation H.248.1 [10] shall be the basis for thisprofile. The compatibility rules for packages, signals, events, properties and statistics and the H.248 protocol are defined in ITU-T Recommendation H.248.1 [10] Their use or exclusion for this interface is clarified in clause 12.

#### 4.1 Profile Identification

For Profile Identification see Annex C.1.

# 4.2 Profile Registration

The following description is based on H.248.1 profile registration procedure with some clarifications. The reply to the ServiceChange Request containing the SCP parameter indicates if the MSC Server supports the requested profile or if it does not support it and wants to propose an alternative profile. The profile (name and version) is only returned in the reply if the MGC cannot support the specified profile in the ServiceChangeRequest. The returned reply shall indicate the profile and version supported or "NoProfile" if no profile is supported. Upon reception of a profile in the reply, if the MGW supports the indicated profile, it shall issue a new ServiceChange Request with the agreed profile to explicitly confirm the acceptance of the profile to the MGC; otherwise, if the MGW does not support the indicated profile, it may continue the registration or re-registration procedure by issuing a new ServiceChange Request with an alternative profile; until such procedure is successfully completed the MGW shall remain out of service. In the instance that the MGW did not indicate a profile in the original ServiceChangeRequest and the MGC returned a profile in the reply, the MGW shall issue a new ServiceChangeRequest with the appropriate profile or "NoProfile" if no profile is supported. If the profile is not returned the MGC shall use the capabilities specified by the Profile indicated in the service change request.

Note:

It should be observed that the profile registration is not a "cold calling" negotiation; the operator shall have configured the network to support certain profiles and so the profile registration within the Mc interface permits network upgrade scenarios but otherwise is simply a means to confirm the connection of the profile to be used over the Mc interface between MGC and MGW.

# 5 Naming conventions

# 5.1 MGC/MGW naming conventions

For definition see Annex C.11.

#### 5.2 Termination names

For definition see Annex C.6.1.

# 6 Topology descriptor

For definition see Annex C.7.8.

# 7 Transaction timers

For definition see Annex C.10.

# 8 Transport

Each implementation of the Mc interface should provide the appropriate protocol options: MTP3B as defined in ITU-T Recommendation Q.2210 [11] (for ATM signalling transport) or SCTP as defined in RFC 2960 [12] and as updated by RFC3309 [44] (for IP signalling transport) and in the case where the signalling relation consists of both ATM signalling transport and IP signalling transport the M3UA protocol layer (3GPP TS 29.202 [13]) shall be added to SCTP to provide interworking. M3UA layer may also be added to SCTP for pure IP signalling transport. IPsec shall not be used by MSC Server or MGW for the Mc interface. Normally the Mc interface lies within a single operator's secure domain.

If this is not the case then a Za interface (Security Gateway deploying IPSec) may be required, however this is a separate logical function/entity and thus is not attributed to Mc profile, the MSC Server or the MGW; for further details see 3GPP TS 33.210 [38] . For further definition see Annex C.12.

# 9 Multiple Virtual MG.

If an MGW is connected to more than one (G)MSC, the MGW shall fulfil the requirements outlined in the subclause "Multiple virtual MGW" in ITU-T Recommendation H.248.1 [10].

## 10 Formats and codes

Table 1 shows the parameters which are required, in addition to those defined in the subclause "Formats and Codes" of ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]).

The coding rules applied in ITU-T Recommendation H.248.1 [10] for the applicable coding technique shall be followed for the UMTS capability set.

Unsupported values of parameters or properties may be reported by the MGW and shall be supported by the MSC as such by using H.248.1 error code #449 " Unsupported or Unknown Parameter or Property Value ". **Error Text in the error Descriptor**: The unsupported or unknown value is included in the error text in the error descriptor.

Table 10.1: Additional parameters required

Signalling Object	H.248 Descriptor	Coding
actprot	Signal descriptor	As for the signal "Activate protocol" in subclause 15. 2.1.3
Mode	Local control	As for the property "UP mode of operation" in subclause 15.1.1.1
Version	Local control	As for the property "Upversion" in subclause 15.1.1.1
Value	Local control	As for the property " Delivery of erroneous SDUs" in subclause
		15.1.1.1
Interface	Local control	As for the property " Interface" in subclause 15.1.1.1
Initdirection	Local control Local control	As for the property "Initialization Direction" in subclause 15.1.1.1 As for the property "PLMN BC" in subclause 15. 2.1.1
PLMN bearer capability	Local control	As for the property PLIVIN BC III subclause 15, 2,1,1
Coding	Local control	As for the property " GSM channel coding" in subclause 15. 2.1.1
tfoactvalue	Local control	As for the property " TFO activity control" in subclause 15. 2.2.1
Codeclist	Local control	As for the property" TFO Codec List" in subclause 15. 2.2.1
Result	ObservedEvent	As for the ObservedEventDescriptor parameter "Protocol Negotiation
	descriptor	Result" in subclause 15. 2.1.2
Cause	ObservedEvent	As for the ObservedEventDescriptor parameter "Protocol Negotiation
	descriptor	Result" in subclause 15. 2.1.2
Rate	ObservedEvent descriptor	As for the ObservedEventDescriptor parameter "Rate Change" in subclause 15. 2.1.2
Optimalcodec	ObservedEvent	As for the ObservedEventDescriptor parameter "Optimal Codec
	descriptor	Type" in subclause 15. 2.2.2
Distlist	ObservedEvent descriptor	As for the ObservedEventDescriptor parameter "Distant TFO List" in subclause 15. 2.2.2
On/Off	Local control	As for the property "Echo cancelling" in subclause E.13.1 in ITU-T
		Recommendation H.248.1 [10] . Default value is Off.
Error	Error descriptor	As defined in the subclause "Command error code" in ITU-T
	·	Recommendation H.248.1 [10]
MGW Resource	EventDescriptor	As for the EventDescriptor in subclause 4.2.1/H.248.10
Congestion Handling -		"MGCongestion"
Indication	Observed Freet	As for the Observered Franch Descriptor in substance 4.2.4/L.240.40
Reduction	ObservedEvent descriptor	As for the ObserverdEventDescriptor in subclause 4.2.1/H.248.10 "MGCongestion".
Bearer Modification	EventDescriptor	As for the EventsDescriptor in "Bearer Modification Support" in
Support	·	subclause 15. 2.3.2.
Bearer modification	ObservedEvent	As for the ObserverdEventDescriptor in "Bearer Modification
possible	descriptor	Support" in subclause 15. 2.3.2.
Ctmstate	TerminationState	As for the TerminationState "Text termination connection state" in subclause 15. 2.6.1.
Ctmtransport	Local control	As for the property "Text Transport" in subclause 15.2.6.1.
Ctmtext version	Local control	As for the property " Text Protocol Version" in subclause 15.2.6.1.
Connchng	ObservedEventDe	As for the ObservedEventDescriptor " Connection State Change in
	scriptor	subclause 15.2.6.2
Ctmbits	Statistics	As for the Statistics descriptor "Characters Transferred" in subclause
D'i	descriptor	15.2.6.4
Bitrate Ipaddress	Local control	As for the property" Bitrate" in subclause 15.1.7.1  As for the property" IP transport address" in subclause 15.2.7.1
UDPport	Local control  Local control	As for the property "UDP port " in subclause 15.2.7.1
ові роп		
Flextone	Signal descriptor	As for the signal "Flexible Tone " in subclause 15.2.8.3
Trace reference	Local control	As for the property "Trace Reference" in subclause 15.2.9.1
Trace Recording Session	Local control	As for the property "Trace Recording Session Reference" in
Reference Trace Dopth	Local control	subclause 15.2.1.1
Trace Depth Triggering events	Local control Local control	As for the property "Trace Depth" in subclause 15.2.9.1 As for the property "Triggering events" in subclause 15.2.9.1
List of interfaces	Local control	As for the property "List of interfaces" in subclause 15.2.9.1
IMSI	Local control	As for the property "IMSI" in subclause 15.2.9.1
IMEI(SV)	Local control	As for the property "IMEI(SV)" in subclause 15.2.9.1
Trace activativity request	Local control	As for the property "Trace Activation Control" in subclause 15.2.9.1
Trace Activation Result	ObservedEvents	As for the ObservedEventDescriptor " Trace Activation result" in
	descriptor	subclause 15.2.9.2
TFO Status	EventDescriptor	As for the EventsDescriptor in "TFO_Status Event" in subclause 15.2.2.2
tfostatus	ObservedEvent	As for the ObservedEventDescriptor parameter "TFO Status" in
	descriptor	subclause 15.2.2.2

termination heartbeat	EventDescriptor	As for the EventsDescriptor in subclause 5.2.1/H.248.36 "Termination Heartbeat"
Termination heartbeat	ObservedEvent descriptor	As for the ObserverdEventDescriptor in subclause 5.2.1/H.248.36 "Termination Heartbeat"
Needed conference terminations	Local control	As for the property "Number of needed conference terminations" in subclause 15.2.10.1
Desired listener context terminations	Local control	As for the property "Number of desired listener context terminations" in subclause 15.2.10.1
IP realm identifier	Local control	As for the property "IP realm identifier " in subclause 5.1.1/H.248.41
inactivity timeout	EventDescriptor	As for the EventsDescriptor in subclause 5.2/H.248.14 "Inactivity Timeout"
Inactivity timeout	ObservedEvent descriptor	As for the ObserverdEventDescriptor in subclause 5.2/H.248.14 " Inactivity Timeout "

# 11 Mandatory Support of SDP and H.248.1 annex C information elements

This section shall be in accordance with the subclause "Mandatory Support of SDP and H.248.1 annex C information elements" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following requirements:

- Mc Single Codec encoding:

The ACodec property in H.248 binary encoding and codecconfig attribute in H.248 text encoding are set as defined in ITU-T Recommendation Q.765.5 [24], for single codec information (figure 14/Q.765.5), where the Codec Information is defined either in ITU-T Recommendation Q.765.5 [24] or in another specification for the given Organization Identifier. For 3GPP codecs these are defined in 3GPP TS 26.103 [16]. The codecconfig and ACodec parameters contain the contents of the Single Codec IE, excluding the Single Codec Identifier, Length Indication and Compatibility Information.

The "vsel" attribute is omitted in H.248 text encoding.

Example of encoding of an AMR codec:

Acodec = 0206959504 (binary encoding)

codecconfig = 0206959504 (text encoding)

where the AMR parameters are: ETSI, UMTS\_AMR\_2, [ACS={4.75, 5.90, 7.4, 12.2}, SCS={4.75, 5.90, 7.4, 12.2}, OM=0, MACS=4]

Example of encoding of a G.711 codec:

Acodec = 0101 (binary encoding)

codecconfig = 0101 (text encoding)

where the G.711 parameters are: ITU-T, G.711 64kps A-law

NOTE: The "Mc Single Codec IE" differs from the ITU-T defined "Single Codec IE", while on the Nc interface (i.e. in OoBTC) the ITU-T Single Codec IE is used without deviation.

The Acodec property or codecconfig attribute set to the MuMe Dummy codec denotes a multimedia call. The Acodec property and codecconfig attribute shall never be set to the MuMe2 Dummy codec. See 3GPP TS 26.103 [16] and 3GPP TS 23.172 [37].

For further definition see Annex C.15.

# 12 General on Packages and Transactions

The use of "Overspecified" (e.g. range of values) and "Underspecified" (e.g. "?") parameter specification shall not be permitted except where explicitly indicated in or referenced by the Mc interface specification.

The use of wildcarding for the Termination Id shall be performed using 1 octet only.

Notifications shall not be sent by the MGW in response to Release Termination procedure.

Parameter modification and event notification shall not be permitted on non-ROOT Terminations in the NULL Context.

Commands on ROOT Termination shall only use the NULL Context.

If a command cannot be executed by the MSC Server due to a temporary congestion/ongoing task the error code 511 ("Temporarily Busy") may be returned; the MGW may then re-issue the command as the condition may have abated.

NOTE: At the time of inclusion this error code did not exist in the H.248.8 further details of this error code see ITU-T Sub-series Implementors' Guide.(13 April 2006).

If a circumstance arises at an MGW where a substantial number of notifications accumulate, either because of transmission difficulties or because the MGW recognised a number of events in a short time period, the MGW should send the notifications in a restricted manner (e.g. via configuration) until the backlog is cleared.

For further definition see Annex C.

# 13 BICC packages

## 13.1 Mandatory BICC packages

Mandatory BICC packages are listed in Annex C.14.13.2 Optional BICC packages

# 13.2 Optional BICC packages

Optional BICC packages are listed in Annex C.14.

# 14 H.248 standard packages

Mandatory and Optional H.248 packages are listed in Annex C.14.14.1 Call independent H.248 transactions

# 14.1 Call independent H.248 transactions

Table 2 shows the relationship between each non call-related procedure in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) and the corresponding stage 2 procedure defined in 3GPP TS 23.205 [2].

For further description of error codes and service change reasons, refer to ITU-T Recommendation H.248.8 [14].

Table 14.1.1: Correspondence between ITU-T Recommendation Q.1950 [23] non call-related transactions and 3GPP TS 23.205 [2] procedures

Transaction used in ITU-T Recommendation Q.1950 [23]	Procedure defined in 3GPP TS 23.205 [2]	Support	Comments
BIWF_Service_Cancellation_Indication	MGW Out of Service	Mandatory	
BIWF_Lost_Communication	MGW Communication Up	Mandatory	
BIWF_Service_Restoration_Indication	MGW Restoration	Mandatory	
BIWF_Registration	MGW Register	Mandatory	
BIWF_Re-Registration	MGW Re-register	Mandatory	
CCU Ordered BIWF Re-Registration	(G)MSC Server Ordered Re-register	Mandatory	
CCU Initiated Service Restoration	(G)MSC Server Restoration	Optional	
CCU Initiated Service Cancellation	(G)MSC Server Out of Service	Optional	
BIWF_Service_Cancellation_Indication	Termination Out-of-Service	Mandatory	Is a part of BIWF Service cancellation in Q.1950
BIWF_Service_Restoration_Indication	Termination Restoration	Mandatory	Is a part of BIWF Service cancellation in Q.1950
Audit_Values	Audit Value	Mandatory	Shall be supported for the audit of Termination State and for periodic audit of MGW (empty Audit descriptor). May be supported for the audit of packages.
Audit_Capabilities	Audit Capability	Optional	The capabilities to be audited shall be defined in clause 12.
BIWF_Capability_Change	Capability Update	Optional	This corresponds to MGW Capability Change in this document.
	MGW Resource Congestion Handling - Activate	Mandatory	
	MGW Resource Congestion Handling - Indication	Mandatory	
Continuity Check Tone		Optional	
Continuity Check Verify		Optional	
Continuity Check Response		Optional	
Not Defined	Inactivity Timeout - Activate	Optional	
Not Defined	Inactivity Timeout - Indication	Optional	

# 14.1.1 MGW Out of service/Maintenance Locking

This procedure is the same as described in the subclause "BIWF Service Cancellation Indication" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]), with the following clarification.

Table 14.1.1.1: MGW Out of service/Maintenance Locking

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = Null	
	Termination ID = Root	
	Service Change Reason =	
	MGW impending failure	
	Termination Taken out of service	
	Service Change Method =	
	Graceful / Forced	

Delay is not used.

NOTE: The termination that is taken out of service is a Media Gateway.

## 14.1.2 MGW Communication Up

This procedure is the same as described in the subclause "BIWF Lost Communication" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification.

Use of time stamps is optional.

Context Id value Null shall be used in this procedure.

The ServiceChangeMGCId parameter may be returned in the MGW Communication Up response if the MGC does not wish to sustain an association with the MGW. If present in the response, the MGW shall not consider itself registered and should preferably attempt to re-register with the MGC specified in the ServiceChangeMgcID before any further alternate MGCs.

#### 14.1.3 MGW Restoration

This procedure is the same as described in the subclause "BIWF Service Restoration Indication" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification.

Table 14.1.3: MGW Restoration

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = Null	
	Termination ID = Root	

Delay is not used.

The ServiceChangeMGCId parameter may be returned in the MGW Communication Up response if the MGC does not wish to sustain an association with the MGW. If present in the response, the MGW shall not consider itself registered and should preferably attempt to re-register with the MGC specified in the ServiceChangeMgcID before any further alternate MGCs.

## 14.1.4 MGW Register

This procedure is the same as that described in the subclause "BIWF Registration" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification.

14.1.4: MGW Register

Address Information	Control information	Bearer information
	ServiceChangeProfile =	
	mcprofilename / version	

Use of time stamps is optional.

Context Id value Null shall be used in this procedure.

Non Standard Data is shall not be supported.

Service Change Address shall not be used.

The ServiceChangeMGCId parameter may be returned in the MGW Re-register response. If present in the response, the MGW shall not consider itself registered and should preferably attempt to re-register with the MGC specified in the ServiceChangeMgcID before any further alternate MGCs.

# 14.1.5 MGW Re-register

This procedure is the same as that described in the subclause "BIWF Re-Registration" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification.

Table 14.1.5.1: MGW Re-register

Address Information	Control information	Bearer information
	ServiceChangeProfile =	
	mcprofilename / version	

Use of time stamps is optional.

Context Id value Null shall be used in this procedure.

Non Standard Data is shall not be supported.

Service Change Address shall not be used.

The ServiceChangeMGCId parameter may be returned in the MGW Register response. If present in the response, the MGW shall not consider itself registered and should preferably attempt to re-register with the MGC specified in the ServiceChangeMgcID before any further alternate MGCs.

## 14.1.6 (G)MSC Server Ordered Re-register

This procedure is the same as described in the subclause "CCU Ordered BIWF Re-registration" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarifications:

Context Id value Null shall be used in this procedure.

# 14.1.7 (G)MSC Server Restoration

This procedure is the same as described in the subclause "CCU Initiated Service Restoration" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification.

Table 14.1.7.1: (G)MSC Server Restoration

Address Information	Control information	Bearer information
	Context ID = Null	
	Termination ID =	
	Root Service Change Reason =	
	Cold Boot / Warm Boot	
	Service Change Method = Restart	

Delay is not used.

#### 14.1.8 Termination Out-of-Service

This procedure is the same as described in the subclause "BIWF Service Cancellation Indication" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarifications. This procedure may be used to inform the MSC Server of the Service State of Terminations after MGW Restart or Registration.

Table 14.1.8.1:ServiceChange.req (Termination Out-of-Service) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = Contexts / Null / All Termination ID = ALL/Termination(s) Service Change Reason = Transmission failure / Termination malfunctioning / Loss of lower layer connectivity / Termination taken out of service Service Change Method = Graceful / Forced  NOTE1: "All" shall refer to 1 TDM group. 1 TDM group is at a T1/E1.	

Delay is not used.

The MGW shall delay initiating a TDM Termination Out-of-Service procedure till completion of any on-going Termination Restoration procedure for the same TDM termination, if any, unless the MGW considers the previous transaction request or reply lost, due to e.g. failure of the control association.

The following table illustrates the allowed combinations that can be obtained with the ServiceChange Command:

Table 14.1.8.2: Combinations of ContextID and TerminationID in Termination Out-of- Service Procedure

ContextID	TerminationID	Description
Specific	Specific	Service Change of a specific Termination in a specific Context
Null	Wildcard	Service Change of all matching TDM T1/E1 level terminations in the
		Null Context
Null	Specific	Service Change of a specific termination in the Null Context
All	Wildcard	Service Change of all matching TDM T1/E1 level terminations in specific (non-Null) contexts in which the terminations currently
		exist.

#### 14.1.9 Termination Restoration

This procedure is the same as described in the subclause "BIWF Service Restoration Indication" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification. This procedure may be used to inform the MSC Server of the Service State of Terminations after MGW Restart or Registration and shall be used when individual trunks are commissioned.

**Table 14.1.9.1: Termination Restoration** 

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = Contexts / Null / All	
	Termination ID = ALL/Termination(s)	
	Service Change Reason =	
	Service Restored	
	Service Change Method = Restart	
	NOTE1: "All" shall refer to 1 TDM	
	group. 1 TDM group is at	
	a T1/E1.	

Delay shall not be used.

The MGW shall delay initiating a TDM Termination Restoration procedure till completion of any on-going Termination Out-of-Service procedure for the same TDM termination, if any, unless the MGW considers the previous transaction request or reply lost, due to e.g. failure of the control association.

The following table illustrates the allowed combinations that can be obtained with the ServiceChange Command:

Table 14.1.9.2: Combinations of ContextID and TerminationID in Termination Restoration Procedure

ContextID	TerminationID	Description
Specific	Specific	Service Change of a specific Termination in a specific Context
Null	Wildcard	Service Change of all matching TDM T1/E1 level terminations in the
		Null Context
Null	Specific	Service Change of a specific termination in the Null Context
All	Wildcard	Service Change of all matching TDM T1/E1 level terminations in
		specific (non-Null) contexts in which the terminations currently
		exist.

#### 14.1.10 Audit Value

This procedure is the same as described in the subclause "Audit Values" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]), with the following clarifications. This procedure shall be used by the MSC Server to determine the service state of physical terminations when the MSC Server itself has restarted if it is subsequently unsure of the service state of terminations or when O&M procedures indicate new physical trunks have been commissioned to an in service MGW. It shall also be used for determining the Termination State after MGW Registration (Cold Boot) prior to deblocking devices in the network if the MSC Server has not been informed specifically by Termination Restoration or Termination Out Of Service Procedure. Table 14.1.10.1: AUD\_VAL.req (Audit\_Values) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = Null/Context ID/ALL	
	Termination ID =	
	Termination/Root/ALL(see NOTE1)	
	Audit Descriptor =	
	Empty/	
	IndAuditParameter:=	
	IndAudMediaDescriptor:=	
	TermStateDescriptor (NOTE3)	
	Packages (See NOTE2)	
	NOTE1: "All" shall refer to 1 TDM group. 1 TDM group is at a T1/E1 level It shall not be used for ATM or IP termination. "Termination" shall only be used for individual IP or ATM terminations, not TDM.	
	NOTE2: Packages is for - Null/Root Combination, or - TDM/ATM/IP individual termination to audit the Hanging Termination Detection Package.	
	NOTE3: Pre Rel6 this is performed with Audit Token	

Upon reception of the command in the MGW:

- The Service State returns the current Service State
- When Packages are requested, the Package Names and Versions are returned

The following table illustrates the allowed combinations that can be obtained with the AuditValue Command:

Table 14.1.10.2: Combinations of AuditValue Command

ContextID	TerminationID	Information Obtained
Specific	Wildcard	Audit of matching Terminations in a Context
Specific	Specific	Audit of a single Termination in a Context
Null	Root	Audit of Media Gateway state and events
Null	Wildcard	Audit of all matching TDM T1/E1 level Terminations in the null Context
Null	Specific	Audit of a single Termination outside of any Context
All	Wildcard	Audit of all matching TDM T1/E1 level Terminations and the Context to which they are associated
All	Specific	(Non-null) ContextID in which the Termination currently exists

Table 14.1.10.3: AUD\_VAL.resp MGW to MGC

Address Information	Control information	Bearer information
	Transaction $ID = z$	
	Context ID = Null/Context ID	
	Termination ID =	
	Termination/Root/All(seeNO TE1)	
	Empty Audit Descriptor:	
	-	
	AuditToken =  Media/IndAudMediaDescript or=TermStateDescriptor:	
	Service State = Current Service State	
	AuditToken = Packages:	
	Packages Descriptor =	
	Package Names + Versions	
	NOTE1: ALL may be returned for a TDM group.	

# 14.1.11 Audit Capability

This procedure is the same as described in the subclause "Audit Capabilities" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]).

## 14.1.12 MGW Capability Change

This procedure is the same as described in the subclause "BIWF Capability Change" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification:.

For Capability changes concerning the whole MGW:

Service Change Reason Media/Event or Signal Capability Failure shall not be used instead the following information shall be used:

ServiceChange.req (MGW Capability Change)

MGW to MGC

Table 14.1.12.1: MGW Capability Change

Address Information	Control information	Bearer information
	Service Change Reason =	
	Packages Change/ Capability Change	
	Service Change Info = changed package/property/signal/event/ statistics	
Note: The changed package/pr	operty/signal/event/ statistics information is	FFS

## 14.1.13 (G)MSC Server Out of Service

This procedure is the same as that described in the subclause "CCU Initiated Service Cancellation" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the clarification that Delay shall not be used.

# 14.1.14 MGW Resource Congestion Handling - Activate

If the procedure "MGW Resource Congestion Handling - Activate" is required the following procedure is initiated.

The MGC sends a MOD.req command with the following information.

Table 14.1.14.1: MOD.req(MGW Resource Congestion Handling - Activate) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = Null Termination ID = Root	
	NotificationRequested (Event ID = x, "MGW Resource Congestion Handling - Indication")	

When the processing of command (1) is complete, the MGW initiates the following procedure.

Table 14.1.14.2: MOD.resp (MGW Resource Congestion Handling - Activate) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = Null	
	TerminationID = Root	

#### 14.1.15 MGW Resource Congestion Handling - Indication

If the procedure "MGW Resource Congestion Handling - Indication" is required, the following procedure is initiated:

The MGW sends a NOT.req command with the following information.

Table 14.1.15.1: NOT.reg (MGW Resource Congestion Handling - Indication) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = Null Termination ID = Root	
	Event_ID (Event ID = x, "MGW Resource Congestion Handling - Indication (Reduction)")	

When the processing of command (1) is complete, the MGC initiates the following procedure.

Table 14.1.15.2: NOT.resp (MGW Resource Congestion Handling - Indication) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = Null	
	Termination ID = Root	

## 14.1.16 Continuity Check Tone

This procedure is the same as described in Annex B.7.1.1 of ITU-T Recommendation Q.1950 [10] with the following clarification:

The addition to "Prepare BNC Notify" defined in Annex B.7.1.1 of ITU-T Recommendation Q.1950 [10] shall be applied instead to "Reserve Circuit", as defined in Clause 13.2.2.1

Note:

This does not preclude the use of the continuity check tone for other maintenance procedures. If the termination is audited it shall report state in service.

# 14.1.17 Continuity Check Verify

This procedure is the same as described in Annex B.7.2.1 of ITU-T Recommendation Q.1950 [10]

# 14.1.18 Continuity Check Response

This procedure is the same as described in Annex B.7.1.2 of ITU-T Recommendation Q.1950 [10] with the following clarification:

The addition to "Prepare BNC Notify" defined in Annex B.7.1.2 of ITU-T Recommendation Q.1950 [10] shall be applied instead to "Reserve Circuit", as defined in Clause 13.2.2.1

Note:

This does not preclude the use of the continuity check response for other maintenance procedures. If the termination is audited is shall report state in service.

# 14.1.19 Inactivity Timeout - Activate

If the procedure "Inactivity Timeout - Activate" is required the following procedure is initiated.

The MGC sends a MOD.req command with the following information.

Table 14.1.19.1: MOD.req (Inactivity Timeout - Activate) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = Null Termination ID = Root	
	NotificationRequested (Event ID = x, "Inactivity Timeout - Indication")	

When the processing of command (1) is complete, the MGW initiates the following procedure.

Table 14.1.19.2: MOD.resp (Inactivity Timeout - Activate) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = Null	
	TerminationID = Root	

#### 14.1.20 Inactivity Timeout – Indication

When the procedure "Inactivity Timeout indication" is required the following procedure is initiated: the MGW sends a NOT.req command with the following information.

Table 14.1.20.1: NOT.req (Inactivity Timeout - Indication) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = NULL Termination ID = Root	
	Event_ID (Event ID = x,	

When the processing of command is complete, the MGC initiates the following procedure.

Table 14.1.20.2: NOT.resp (Inactivity Timeout - Indication) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = NULL	
	Termination ID = Root	

## 14.2 Call related H.248 transactions

Table 14.2.1 shows the relationship between each call-related procedure in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) and the corresponding stage 2 procedure defined in 3GPP TS 23.205 [2], as well as specifying the requirement for support of each procedure on the Mc interface.

Table 14.2.1: Correspondence between ITU-T Recommendation Q.1950 [23] call-related transactions and 3GPP TS 23.205 [2] and 3GPP TS 23.153 [1] procedures

Transaction used in Q.1950	Procedure defined in 3GPP TS 23.205 [2] and 23.153 [1]	Support	Comments
Change_Topology	Change Flow Direction	Mandatory	
Join	Join Bearer Termination	Mandatory	
Isolate	Isolate Bearer Termination	Mandatory	
Establish_BNC_Notify+(tunnel)	Establish Bearer	Mandatory	
Prepare_BNC_Notify+(tunnel)	Prepare Bearer	Mandatory	
Cut_Through	Change Through Connection	Mandatory	
Not defined in Q.1950	Activate Interworking Function	Optional	
Cut_BNC (include several procedures).	Release Bearer (Release Bearer and Release termination)	Mandatory	
BNC Established	Bearer Established	Mandatory	
BNC Release	Bearer Released	Mandatory	
Insert_Tone	Send Tone	Mandatory	
Insert_Annoucement	Play Announcement	Mandatory	
Signal Completion	Announcement Completed	Mandatory	
Detect Digit	Detect DTMF	Mandatory	
Insert_Digit	Send DTMF	Mandatory	
Digit Detected	Report DTMF	Mandatory	
Confirm_Char	Confirm Char	Optional	
Modify_Char	Modify Char	Optional	
Reserve_Char	Reserve Char	Optional	
BNC Modified	Bearer Modified		
		Optional	
Echo Canceller	Activate Voice Processing Function	Mandatory	
BNC Modification failed	Bearer Modified Failed	Optional	
Tunnel (MGC-MGW)	Tunnel Information Down	Optional	Shall be supported if the Nb interface transport protocol is IP
Tunnel (MGW-MGC)	Tunnel Information Up	Optional	Shall be supported if the Nb interface transport protocol is IP
Insert _Tone	Stop Tone	Mandatory	
Insert _Announcement	Stop Announcement	Mandatory	
Detect_Digit	Stop DTMF Detection	Optional	
Insert_Digit	Stop DTMF	Mandatory	
Signal Completion	Tone Completed	Optional	
Not defined	Reserve Circuit	Mandatory	
Not defined	Command Rejected	Mandatory	
Not defined	TFO Activation	Optional	
Not defined	Codec Modify	Optional	
Not defined	Optimal Codec and Distant List_Notify	Optional	
Not defined	Distant Codec List	Optional	
Not defined	TFO status Notify	Optional	
Not defined	TFO status	Optional	
Modify_Char	Modify Bearer Characteristics	Mandatory	
Not defined	Rate Change	Optional	
Not defined	Bearer Modification Support	Optional	
Not defined	Protocol Negotiation Result	Optional	
Reserve_Char	Reserve Bearer Characteristics	Optional	
Confirm_Char	Confirm Bearer Characteristics	Optional	
ECS_Indication	Emergency Call Indication	Optional	
Continuity Check Tone	Continuity Check Tone	Optional	See 14.1.16
	Continuity Check Verify		See 14.1.16 See 14.1.17
Continuity Check Verify		Optional	
Continuity Check Response Not Defined	Continuity Check Response Prepare IP Transport	Optional Optional	Shall be supported if IP used on
Not Defined	Modify IP Transport Address	Optional	lu interface Shall be supported if IP used on lu interface
Not defined	Termination heartbeat	Optional (NOTE 2)	

NOTE 2: It is highly recommended to support this procedure to allow detection of hanging contexts and terminations in the MGW that may result e.g. from a loss of communication between the MSC-S and the MGW.

## 14.2.1 Change Flow Direction

This procedure is the same as that defined in the subclause "Change Connection Topology" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following additions.

Table 14.2.1.1: Change Flow Direction request additions

Address Information	Control information	Bearer information
	Context ID = c1,? Connection Configuration = (TerminationID= x1, ? TerminationID=x2,? [type = x]),	

This procedure shall not be used for Multiparty bridge contexts.

The Change Flow Direction response shall contain the Context ID.

A command is only required if this procedure is combined with some other procedure which changes a termination functionality.

#### 14.2.2 Isolate Bearer Termination

This procedure is the same as that defined in the subclause "Isolate" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]).

#### 14.2.3 Join Bearer Termination

This procedure is the same as that defined in the subclause "Join" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]).

#### 14.2.4 Establish Bearer

This procedure is the same as that defined in the subclause "Establish BNC\_notify" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) except that the Command MOV shall not be used and with additions as shown below. If IPBCP Tunnel Option 1 is required then the Command Response shall always precede the IPBCP Notify Command.

Table 14.2.4.1: Establish Bearer additions

Address Information	Control information	Bearer information
	UP mode = Mode	If SCUDIF multimedia call:
	UP version = version	MuMe codec (NOTE 1)
	Delivery of erroneous SDUs = value	
	Interface = interface	
	If support mode: Initdirection = initdir	If data call other than SCUDIF multimedia call and Access Termination or Anchor MGW Network Termination:
	If indication on Protocol Negotiation Result requested:	PLMN bearer capability = PLMN capability (NOTE2)
	NotificationRequested (Event ID = x, "Prot Negotiation Result")	If GSM data call other than SCUDIF multimedia call and (Anchor MGW Network Termination):
	If indication on Rate Change requested:	GSM channel coding = coding
	NotificationRequested (Event ID = x, "RateChange")	
	If detection of hanging termination is requested: (NOTE 3) NotificationRequested (Event ID = x, "termination heartbeat")	
	If Listener context: number of desired listener context terminations = required listener context terminations	
	If multiple IP realms: IP realm Identifier = required IP realm identifier	
NOTE1: Bearer Service Charact	eristics shall be excluded when this pro	perty is included.
	eristics may be included.	
	ed to request termination heartbeat notif	
termination in the MGW the MGW.	that may result e.g. from a loss of com	munication between the MSC-S and

# 14.2.5 Prepare Bearer

This procedure is the same as that defined in the subclause "Prepare\_BNC\_notify" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) except that the Commands MOD and MOV shall not be used, the MGW shall not choose the BNC Characteristics, the BNC-cut-through-capability shall not be used and with additions as shown below.

**Table 14.2.5.1: Prepare Bearer additions** 

Address Information	Control information	Bearer information	
	UP mode = mode	If SCUDIF multimedia call and	
	UP version = version	(network termination or Anchor	
	Delivery of erroneous SDUs = value	MGW Access Termination):	
	Interface = interface If support mode:	MuMe codec (NOTE2)	
	Initdirection = initdir	If data call other than SCUDIF	
		multimedia call and (Anchor	
		MGW Access Termination or	
	State= ctmstate	Anchor MGW Network	
	Transport= ctmtransport	Termination):	
	Version= ctmtext version If data call and Non-Anchor MGW	PLMN bearer capability = PLMN capability (NOTE4)	
	RAN-side termination:	1 Livin capability (NOTE4)	
	Bitrate = bitrate (NOTE1)	If GSM data call other than SCUDIF	
	, ,	multimedia call and Anchor MGW	
	If indication on Protocol Negotiation	Network Termination:	
	Result requested:	GSM channel coding = coding	
	NotificationRequested (Event ID = x, "Prot Negotiation Result")		
	i fot Negotiation Nesult )		
	If indication on Rate Change		
	requested:		
	NotificationRequested (Event ID = x,		
	"RateChange") If indication on Bearer Modification		
	requested:		
	NotificationRequested (Event ID = x,		
	"Bearer Modification Support")		
	If notification on CTM negotiation		
	result requested:		
	NotificationRequested (Event ID = x, " connchange ")		
	Connentinge )		
	If detection of hanging termination is		
	requested: (NOTE 3)		
	NotificationRequested (Event ID = x,		
	"termination heartbeat")		
	If VGCS/VBS context: number of		
	needed conference terminations		
	= required conference		
	terminations		
	If multiple IP realms:		
	IP realm Identifier = required IP		
	realm identifier.		
	eristics shall be excluded when this pro		
	when bitrate = 64000 and then Bearer Service Characteristics may be included. Bitrate is optional for		
	transparent data calls when the data rate is 64k bits/s.		
termination in the MGW that may result e.g. from a loss of communication between the MSC-S and			
the MGW.			
NOTE4: Bearer Service Characteristics shall be excluded when this property is included, except for Anchor			
MGW network terminati	on for which it may be included.		

# 14.2.6 Change Through Connection

This procedure is the same as that defined in the subclause "Cut Through" in ITU-T Recommendation Q.1950 [23] (see  $3GPP\ TS\ 29.205\ [7]$ ) with the following clarification and deletion.

NotificationRequested = (Event ID = x, "Cut Through") is deleted and therefore only the Explicit (MGC Controlled Cut-Through procedure is supported.

## 14.2.7 Activate Interworking Function

When the procedure "Activate Interworking Function" is required the following procedure is initiated:

The MGC sends a MOD.req command with the following information.

Table 14.2.7.1: MOD.req (Activate Interworking function) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	
	Signal=actpro	
	If indication on Protocol Negotiation Result requested: NotificationRequested (Event ID = x, "Prot Negotiation Result")	
	If indication on Rate Change requested: NotificationRequested (Event ID = x, "RateChange")	

When the processing of command (1) is complete, the MGW initiates the following procedure.

Table 14.2.7.2: MOD.resp (Activate Interworking function) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	TerminationID = bearer1	

## 14.2.8 Release procedures

This subclause includes a number of procedures.

#### 14.2.8.1 Release Bearer

This procedure is the same as that defined in the subclause "Release" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) including the Modify command in the transaction with the clarification that the Termination ID and/or Context ID may be wildcarded (ALL).

#### 14.2.8.2 Release Termination

This procedure is the same as that defined in the subclause "Release"in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) including a Subtract command in the transaction with the following additions.

Table 14.2.8.1 Sub.req (Release termination) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1/ALL	
	Termination ID = bearer1/ALL	

Table 14.2.8.2.2: Sub.resp (Release termination) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1/ALL	
	Termination ID = bearer1/ALL	
	If requested	
	Statistics= Ctmbits	

#### 14.2.9 Bearer Released

This procedure is the same as that defined in the subclause "BNC Release" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification:

Termination ID shall be provided in the response.

#### 14.2.10 Bearer Established

This procedure is the same as that defined in the subclause "BNC Established" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification:

Termination ID shall be provided in the response.

#### 14.2.11 Send Tone

This procedure is the same as that defined in the subclause "Media Content Insertion" - "Insert Tone" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following additions.

Table 14.2.11.1: Send Tone additions

Address Information	Control information	Bearer information
	If CAMEL Prepaid Warning Tone	
	Signal = warning tone	
	. Or	
	Signal = flextone	
	If detection of hanging termination is requested: NotificationRequested (Event ID = x,	
	"termination heartbeat")	

Signal Direction shall be either "internal" or "external".

Only the Tone Signal Ids shall be used, not the Tone Ids within the PlayTone Signal Id.

# 14.2.12 Play Announcement

This procedure is the same as that defined in the subclause "Media Content Insertion" - "Insert Announcement" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarifications:

Table 14.2.12.1: Play Announcement additions

Address Information	Control information	Bearer information
	If detection of hanging termination is requested: NotificationRequested (Event ID	
	= x, "termination heartbeat")	

Signal Direction shall be either "internal" or "external".

Stream mode may be maintained as for the ongoing call or may be changed be restricted to "send only".

Signal Lists shall be supported.

It is highly recommended to request termination heartbeat notification when requesting a new ephemeral bearer termination to detect hanging context and termination in the MGW that may result e.g. from a loss of communication between the MSC-S and the MGW.

#### 14.2.13 Send DTMF

This procedure is the same as that defined in the subclause "Media Content Insertion" - "Insert Digit" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]). The MGW shall ensure the minimum duration timing and minimum interval timing is achieved in accordance with the DTMF timing defined in TS 23.014 [27]. Maximum duration shall also be controlled by the MGW if required by the network.

#### 14.2.14 Detect DTMF

This procedure is the same as that defined in the subclause "Media Content Detection" - "Detect Digit" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the exception that "long tone detected" (Event Id ltd) shall not be used. In addition "start tone detected" (EventId std) is optional and if not supported shall result in the command error code #449 "Unsupported or Unknown Parameter or Property Value". If both a request for "start tone detected" and "end tone detected" is received by the MGW that does not support "start tone detected" then it shall only report a notification upon detecting the end of a digit.

Parameter Duration shall not be used.

All digits shall be requested i.e. Tone\_Id shall be wildcarded.

#### 14.2.15 Report DTMF

This procedure is the same as that defined in the subclause "Detected Digit" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification:

Termination ID shall be provided in the response.

# 14.2.16 Announcement Completed

This procedure is the same as that defined in the subclause "Signal Completion" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification:

Termination ID shall be provided in the response.

The Signal List ID should be provided additionally if the completed Announcement belongs to a Signal List.

# 14.2.17 Activate Voice Processing Function

When the procedure "Activate Voice Processing Function" (VPF) is required the following procedure is initiated:

The MGC sends an ADD.req, MOD.req or MOV.req command with the following information.

Table 14.2.17.1: ADD.req/MOD.req/MOV.req (Activate Voice Processing Function) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1 Termination ID = bearer1	
	ActivateVPF "ec"= on/off	

When the MGW receives the command, it shall associate the relevant voice processing function resources with the specified termination.

When the processing of command (1) is complete, the MGW may initiate the "Voice Processing Function Ack" procedure.

14.2.17.2: ADD.resp/MOD.resp/MOV.resp (Voice Processing Function Ack) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

#### 14.2.18 Reserve Circuit

This procedure is activated when the "Reserve Circuit" procedure is initiated.

An ADD.req command is sent with the following information.

Table14.2.18.1: ADD.req (Reserve\_Circuit) CSM to BIWF

Address Information	Control information	Bearer information
	Transaction ID = z	Bearer Service Characteristics
	Termination ID = bearer1	If data call, Access Termination:
	Context Requested:	PLMN capabilities
	Context ID = ?	If GSM data call, Access
	Context Provided:	Termination:
	Context ID = c1	GSM channel coding = coding
	State= ctmstate	
	Transport= ctmtransport	
	Version= ctmtext version	
	If indication on Protocol	
	Negotiation Result requested:	
	NotificationRequested (Event ID	
	= x, "Prot Negotiation Result")	
	Result )	
	If indication on Rate Change	
	requested:	
	NotificationRequested (Event ID = x, "RateChange")	
	If notification on CTM negotiation	
	result requested:	
	NotificationRequested (Event ID	
	= x, " connchange ")	
	If detection of hanging termination is requested:	
	NotificationRequested (Event ID	
	= x,"termination heartbeat")	
	liftin disertion on Decree Del	
	If indication on Bearer Released requested:	
	NotificationRequested (Event ID	
	= x, "BNC Release (Cause)") -	
	as defined in ITU-T	
	Recommendation Q.1950 [23] ]	
	If Listener context: number of	
	desired listener context	
	terminations = required	
	listener context terminations	

Upon completion of processing command (1) an ADD.resp command (2) is sent.

Table14.2.18.2: ADD.resp BIWF to CSM

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	TerminationID = bearer1	

# 14.2.19 Tunnel Information Up

This procedure is the same as that defined in the subclause "Tunnel" in ITU-T Recommendation Q.1950 [23] (see  $3GPP\ TS\ 29.205\ [7]$ ) with the clarification that BT/TunOpt = ? and BT/TunOpt = NO shall not be used.

NOTE: This procedure is always initiated from the MGW.

## 14.2.20 Tunnel Information Down

This procedure is the same as that defined in the subclause "Tunnel" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the clarification that BT/TunOpt = ? and BT/TunOpt = NO shall not be used.

NOTE: This procedure is always initiated from the MGC.

## 14.2.21 Tone Completed

This procedure is the same as that defined in the subclause "Signal.Completion" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification:

Termination ID shall be provided in the response.

## 14.2.22 Stop Announcement

This procedure is the same as that defined in the subclause "Insert Announcement" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification. The signal descriptor shall not include any signal.

## 14.2.23 Stop Tone

This procedure is the same as that defined in the subclause "Insert Tone" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification. The signal descriptor shall not include any signal.

## 14.2.24 Stop DTMF Detection

This procedure is the same as that defined in the subclause "Detect Digit" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with the following clarification. The eventDescriptor shall not include any event.

# 14.2.25 Stop DTMF

This procedure is the same as that defined in the subclause "Media Content Insertion" - "Insert Digit" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]). The signal descriptor shall not include any signal. The MGW shall ensure the minimum duration timing and minimum interval timing is achieved in accordance with the DTMF timing defined in TS 23.014 [27]. Maximum duration shall also be controlled by the MGW if required by the network.

## 14.2.26 Confirm Char

This procedure is the same as that defined in the subclause "Confirm Char" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]).

# 14.2.27 Modify Char

This procedure is the same as that defined in the subclause "Modify Char" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]).

### 14.2.28 Reserve Char

This procedure is the same as that defined in the subclause "Reserve Char" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]).

### 14.2.29 Bearer Modified

This procedure is the same as that defined in the subclause "BNC Modified" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]).

## 14.2.30 Bearer Modification Failed

This procedure is the same as that defined in the subclause "BNC Modification failure" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]).

## 14.2.31 TFO Activation

When the procedure "TFO activation" is required the following procedure is initiated:

The MGC sends a ADD.req, MOD.req or MOV.req command with the following information.

Table 14.2.31.1: ADD.req/MOD.req/MOV.req (TFO activation) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	
	tfoenable = tfoactvalue	
	If TFO codec list:	
	Property= codeclist	

When the processing of command (1) is complete, the MGW initiates the following procedure.

Table 14.2.31.2: ADD.resp/MOD.resp/MOV.resp (TFO activation) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	TerminationID=bearer1	

# 14.2.32 Optimal Codec and Distant List\_Notify

When the procedure "Optimal Codec and Distant List" is required the following procedure is initiated:

The MGC sends a ADD.req, MOD.req or MOV req. command with the following information.

Table 14.2.32.1: ADD.req/MOD.req/MOV.req (Codec modify and distant list) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	
	Property= codeclist	
	NotificationRequested (Event ID = x,	
	"Codec modify")	
	NotificationRequested (Event ID = $x$ ,	
	"Distant List")	

When the processing of command (1) is complete, the MGW initiates the following procedure.

Table 14.2.32.2: ADD.resp/MOV.resp (Optimal codec and codec list) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	TerminationID= bearer1	

# 14.2.33 Codec Modify

When the procedure "Codec Modify" is required the following procedure is initiated:

The MGW sends a NOT.req command with the following information.

Table 14.2.33.1: NOT.req (Codec modify) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1 Termination ID = bearer1	
	Event ( Event Id = x, "codec_modify (optimalcodec)")	

When the processing of command (1) is complete, the MGC initiates the following procedure.

Table 14.2.33.2: NOT.resp (Codec modify) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

## 14.2.34 Distant Codec List

When the procedure "Distant Codec List" is required the following procedure is initiated:

The MGW sends a NOT.req command with the following information.

Table 14.2.34.1: NOT.req (Distant codec list) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	
	Event(Event ID = x, "	
	distant_codec_list(distlist) ")	

When the processing of command (1) is complete, the MGC initiates the following procedure.

Table 14.2.34.2: NOT.resp (Distant codec list) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

# 14.2.35 Command Rejected

When the procedure "Command Reject" is required the following procedure is initiated:

The MGW/MGC sends .resp to any command.req with the following information.

Table 14.2.34.1: NYcommand.resp (command reject ) GW/MGC to MGC/MGW

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1 or no context	
	Reason=Error	

## 14.2.36 Modify Bearer Characteristics

This procedure is the same as that defined in the subclause "Modify Char" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with additions as shown below.

Table 14.2.36.1: Modify bearer Characteristics additions

Address Information	Control information	Bearer information
	If framing protocol used:	If SCUDIF multimedia call and
		(network termination or Anchor
	UP mode = mode	MGW Access Termination):
	UPversion =version	MuMe codec (NOTE 2)
	Delivery of erroneous SDUs=value Interface=interface	If data call other than SCUDIF
	Interrace=interrace	
	If support mode:	multimedia call and (Anchor MGW Access Termination or Anchor MGW
	Initdirection=initdir	Network Termination):
	i intail obtion—i intail	Notwork Tommadony.
	If data call and Non-Anchor MGW	PLMN bearer capbility =
	RAN-side termination:	PLMN capability (NOTE3)
	Bitrate = bitrate (NOTE1)	·
	If indication on Protocol Negotiation	If GSM data call other than SCUDIF
	Result requested:	multimedia call and Anchor MGW
	NotificationRequested (Event ID = x,	Network Termination:
	"Prot Negotiation Result")	GSM channel coding=coding
	If indication on Rate Change	
	requested:	
	NotificationRequested (Event ID = x,	
	"RateChange")	
NOTE1: Bearer Service Characteristics shall be excluded when this property is included except for the case		
when bitrate = 64000 and then Bearer Service Characteristics may be included. Bitrate is optional for		
transparent data calls when the data rate is 64k bits/s.		
NOTE2: Bearer Service Characteristics shall be excluded when this property is included.  NOTE3: Bearer Service Characteristics shall be excluded when this property is included, except for Anchor		
MGW network termination for which it may be included.		perty is included, except for Anchor
MOV hower termination for which it may be included.		

If the "Modify Bearer Characteristics" procedure contains a codec that is not currently in use at the Termination when it receives this procedure, and if the framing protocol is used in support mode, the MGW shall be prepared to handle a framing protocol initialisation. If the "Modify Bearer Characteristics" contains no codec or the codec that is already in use at the Termination when it receives this procedure, the MGW does not need to be prepared to handle a framing protocol initialisation.

# 14.2.37 Protocol Negotiation Result

When the procedure "Protocol Negotiation Result" is required the following procedure is initiated:

The MGW sends a NOT.req command with the following information.

Table 14.2.37.1: NOT.req (Protocol negotiation result) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1 Termination ID = bearer1	
	Event (Event ID = x, " protres (Result,Cause)")	

When the processing of command (1) is complete, the MGC initiates the following procedure.

Table 14.2.37.2: NOT.resp (Protocol negotiation result) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

# 14.2.38 Rate Change

When the procedure "Rate Change" is required the following procedure is initiated:

The MGW sends a NOT.req command with the following information.

Table 14.2.38.1: NOT.req (Rate change) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1 Termination ID = bearer1	
	Event (Event ID = x, "ratechg(rate)")	

When the processing of command (1) is complete, the MGC initiates the following procedure.

Table 14.2.38.2: NOT.resp (Rate change) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

# 14.2.39 Bearer Modification Support

When the procedure "Bearer Modification Support" is required, the following procedure is initiated:

The MGW sends a NOT.req command with the following information to indicate that the bearer can be modified.

Table 14.2.39.1: NOT.req (Bearer Modification Support) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1 Termination ID = bearer1	
	Event (Event ID = x, "mod_link_supp")	

When the processing of command (1) is complete, the MGC initiates the following procedure.

Table 14.2.39.2: NOT.resp (Bearer Modification Support) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

## 14.2.40 CTM report

When the procedure "CTM report" is required the following procedure is initiated:

The MGW sends a NOT.req command with the following information.

Table 14.2.40.1: NOT.req (CTM report) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1	
	Termination ID = bearer1	
	Event (Event ID = x, "connchange	
	(connchng) ")	

When the processing of command (1) is complete, the MGC initiates the following procedure.

Table 14.2.40.2: NOT.resp (CTM report) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

# 14.2.41 Prepare IP transport

This procedure is activated when the "Prepare IP transport" procedure is initiated.

An ADD.req command is sent with the following information.

Table 14.2.41.1: ADD.req (Prepare IP transport) MGC to MGW

Address Information	Control information	Bearer information
IP Transport Address=?	Transaction ID = z	If SCUDIF multimedia call and
	Termination ID = ?	Anchor MGW Access Termination:
UDP port =?	Logical Port ID = y	MuMe codec (NOTE 2)
	If Context Requested:	
	Context ID = ?	If data call other than SCUDIF
	If Context Provided:	multimedia call, Anchor MGW
	Context ID = c1	Access Termination:
		PLMN bearer capability =
	UP mode = mode	PLMN capability (NOTE2)
	UP version = version	
	Delivery of erroneous SDUs = value	If data call and Non-Achor RAN
	Interface = interface	termination:
		Bearer Service Characteristics
	If support mode:	(NOTE 1)
	Initdirection = initdir	
		If speech call, Access Termination:
		Codec
	State= ctmstate	
	Transport= ctmtransport	Bearer Characteristics = "IP"
	Version= ctmtext version	
	If data call and Non-Anchor MGW	
	RAN-side termination:	
	Bitrate = bitrate (NOTE1)	
	Notification_Requested (Event ID =	
	x, "BNC Connected", "BNC Release	
	(Cause)","BNC Modifed", "BNC Mod	
	Failed") – as defined in ITU-T	
	Recommendation Q.1950 [23]	
	recommendation Q.1000 [20]	
	If multiple IP realms:	
	IP realm Identifier = required IP	
	realm identifier	
	If detection of hanging termination is	
	requested: (NOTE 3)	
	NotificationRequested (Event ID = $x$ ,	
	"termination heartbeat")	
NOTE1: Bearer Service Characteristics shall be excluded when this property is included except for the case		
when bitrate = 64000 and then Bearer Service Characteristics may be included. Bitrate is optional for		
transparent data calls when the data rate is 64k bits/s		
NOTE2: Bearer Service Characteristics shall be excluded when this property is included.		
NOTE3: It is highly recommended to request termination heartbeat notification to detect hanging context and		
termination in the MGW that may result e.g. from a loss of communication between the MSC-S and		

When the processing of command (1) is complete, the MGW initiates the following procedure.

Table 14.2.41.2: ADD.resp (Prepare IP transport) MGW to MGC

Address Information	Control information	Bearer information
IP-Transport Address=Ipaddress	Transaction ID = z	
	Context ID = c1	
UDP port =UDPport	Termination ID = bearer1	

# 14.2.42 Modify IP transport address

the MGW.

This procedure is activated when the "Modify IP transport address" procedure is initiated.

A MOD.req command is sent with the following information.

Table 14.2.42.1: MOD.req (Modify IP transport address) MSC to MGW

Address Information	Control information	Bearer information
IP-Transport Address=Ipaddress	Transaction ID = z	
	Context ID = c1	
UDP port =UDP port	Termination ID = bearer1	

When the processing of command (1) is complete, the MGW initiates the following procedure.

Table 14.2.42.2: MOD.resp (Modify Ip transport address) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	TerminationID=bearer1	

## 14.2.43 Reserve Bearer Characteristics

This procedure is the same as that defined in the subclause "Reserve Char" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with additions as shown below.

Table 14.2.43.1: Reserve Bearer Characteristics additions

Address Information	Control information	Bearer information
	If framing protocol used:	
	UP mode = mode UPversion =version Delivery of erroneous SDUs=value Interface=interface Initdirerection=initdirection	

If the "Reserve Bearer Characteristics" procedure contains a codec that is not currently in use at the Termination when it receives this procedure, and if the framing protocol is used in support mode, the MGW shall be prepared to handle a framing protocol initialisation. If the "Reserve Bearer Characteristics" contains no codec or the codec that is already in use at the Termination when it receives this procedure, the MGW does not need to be prepared to handle a framing protocol initialisation.

## 14.2.44 Confirm Bearer Characteristics

This procedure is the same as that defined in the subclause "Confirm Char" in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]) with additions as shown below.

Table 14.2.44: Confirm Bearer Characteristics additions

Address Information	Control information	Bearer information
	If framing protocol used:	
	UP mode = mode UPversion =version Delivery of erroneous SDUs=value Interface=interface Initdirerection=initdirection	

If the "Confirm Bearer Characteristics" procedure contains a codec that is not currently in use at the Termination when it receives this procedure, and if the framing protocol is used in support mode, the MGW shall be prepared to handle a framing protocol initialisation. If the "Confirm Bearer Characteristics" contains no codec or the codec that is already in use at the Termination when it receives this procedure, the MGW does not need to be prepared to handle a framing protocol initialisation.

## 14.2.45 Trace activation/deactivation

This procedure is activated when the "Trace activation/deactivation" procedure is initiated.

An ADD.req command is sent with the following information.

Table 14.2.45.1: ADD.req/MOD.req (Trace activation/deactivation) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z Termination ID = bearer1	
	Context ID = c1	
	Trace Reference Trace Recording Session Reference Trace Depth Triggering events List of interfaces	
	IMSI IMEI(SV)	
	Trace activity control = trace activity request	
	If indication on Trace Activation Result requested: NotificationRequested (Event ID = x, "Trace activation result")	

Upon completion of processing command (1) an ADD.resp or MOD.resp command (2) is sent.

Table 14.2.45.2: ADD.resp/MOD.resp/ MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	TerminationID = bearer1	

## 14.2.46 Trace Activation result notification

When the procedure "Trace Activation result notification" is required, the following procedure is initiated:

The MGW sends a NOT.req command with the following information to indicate the result of the trace activation.

Table 14.2.46.1: NOT.req (Trace Activation result Notification) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1 Termination ID = bearer1	
	Event_ID (Event ID = x, " tracact (res)")	

When the processing of command (1) is complete, the MGC initiates the following procedure.

Table 14.2.46.2: NOT.resp (Trace Activation result Notification) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

# 14.2.47 Emergency Call Indication

This procedure is the same as that defined in the subclause "ECS\_Indication" in ITU-T Recommendation Q.1950 Annex F [23] (see 3GPP TS 29.205 [7]) with additions as shown below.

Table 14.2.47.1: Emergency Call Indication additions

145.5 1	=orgono, can maicano	
Address Information	Control information	Bearer information
Or as per flow 14.2.4	Or as per flow 14.2.4	Or as per flow 14.2.4
Establish Bearer	Establish Bearer	Establish Bearer
Or as per flow 14.2 F	With the following additions:	Or an par flow 14.2.5
Or as per flow 14.2.5 Prepare Bearer	If Context Requested & Emergency Call:	Or as per flow 14.2.5 Prepare Bearer
r repare Bearer	Emergency Call Indication	r repare Bearer
Or as per flow 14.2.12	e.gee, eaa.eae	Or as per flow 14.2.12
Play Announcement	Or as per flow 14.2.5	Play Announcement
	Prepare Bearer	
Or as per flow 14.2.18	With the following additions:	Or as per flow 14.2.18
Reserve_Circuit	If Context Requested &	Reserve_Circuit
On an man flavor 4.4.0.44	Emergency Call Indication	On an man flow 4.4.2.44
Or as per flow 14.2.41 Prepare_IP_transport	Emergency Call Indication	Or as per flow 14.2.41 Prepare_IP_transport
Frepare_iF_transport	Or as per flow 14.2.12	Prepare_iP_transport
Or as per flow 14.2.2	Play Announcement	Or as per flow 14.2.2
Isolate Bearer Termination	With the following additions:	Isolate Bearer Termination
	If Context Requested &	
Or as per flow 14.2.3	Emergency Call:	Or as per flow 14.2.3
Join Bearer Termination	Emergency Call Indication	Join Bearer Termination
	0	
	Or as per flow 14.2.18 Reserve_Circuit	
	With the following additions:	
	If Context Requested &	
	Emergency Call:	
	Emergency Call Indication	
	Or as per flow 14.2.41	
	Prepare_IP_transport	
	With the following additions:	
	If Context Requested & Emergency Call:	
	Emergency Call Indication	
	Emorgonoy Gan maidation	
	Or as per flow 14.2.2	
	Isolate Bearer Termination	
	With the following additions:	
	If Context Requested &	
	Emergency Call:	
	Emergency Call Indication	
	Or as per flow 14.2.3	
	Join Bearer Termination	
	With the following additions:	
	If Context Requested &	
	Emergency Call:	
	Emergency Call Indication	

# 14.2.48 TFO status Notify

When the procedure "TFO status notify" is required the following procedure is initiated:

The MGC sends a ADD.req, MOD.req or MOV req. command with the following information.

**Emergency Call Indication** 

Table 14.2.48.1: ADD.reg/MOD.reg/MOV.reg (TFO status) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1 Termination ID = bearer1	
	NotificationRequested (Event ID = x, "TFO Status")	

The support of the TFO status notification is optional in the TFO package. If supported, when the processing of command (1) is complete, the MGW initiates the following procedure.

Table 14.2.48.2: ADD.resp/MOD.resp/MOV.resp (TFO status) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	TerminationID= bearer1	

Otherwise it returns an error codec to the MGC indicating that the requested event is unsupported or unknown., as specified in ITU-T Recommendation H.248.8 [14].

## 14.2.49 TFO Status

When the procedure "TFO Status" is required the following procedure is initiated:

The MGW sends a NOT.req command with the following information.

Table 14.2.49.1: NOT.req (TFO Status) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	
	Event_ID (Event ID = x, "	
	TFO_status(tfostatus) ")	

When the processing of command (1) is complete, the MGC initiates the following procedure.

Table 14.2.49.2: NOT.resp (TFO Status) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

## 14.2.50 Termination heartbeat indication

When the procedure "Termination heartbeat indication" is required the following procedure is initiated: the MGW sends a NOT.req command with the following information.

Table 14.2.50.1: NOT.req (Termination heartbeat) MGW to MGC

Address Information	Control information	Bearer information
	Transaction ID = z Context ID = c1 Termination ID = bearer1	
	Event_ID (Event ID = x, "termination heartbeat")	

When the processing of command is complete, the MGC initiates the following procedure.

Table 14.2.50.2: NOT.resp (Termination heartbeat) MGC to MGW

Address Information	Control information	Bearer information
	Transaction ID = z	
	Context ID = c1	
	Termination ID = bearer1	

The heartbeat timer shall be configured to a value much greater than the mean call holding time.

The MSC-S is in charge of correcting any detected mismatch, by substracting hanging terminations or clearing hanging contexts.

# 15 UMTS packages

# 15.1 Mandatory UMTS packages

The following package shall be supported for the UMTS Bearer Independent Circuit-Switched Core Network:

- 3GUP (User Plane) package (see subclause 15.1.1).

# 15.1.1 3GUP package.

PackageID: threegup (0x002f)

Version: 1

Extends: None

This package identifies that the User Plane package is used for the termination. It also contains some parameters for the User Plane functions in the MGW.

The UP Protocol operates independently of the stream mode property, i.e. type 14 UP PDUs (which are used for inband UP signalling) can be transported between UP peers, irrespective of the stream mode direction. However, other types of UP PDUs shall be handled according to the stream mode property.

### 15.1.1.1 Properties

UP Mode of operation:

PropertyID: mode (0x0001).

Description: Defines the mode of operation of the User Plane functions, for further definitions see  $3GPP\ TS\ 25.415\ [4]$  and  $29.415\ [8]$ .

Type: Enumeration.

Possible Values:

- "Trans" (0x0001) Transparent mode.

- "Supp" (0x0002) Support mode for predefined SDU sizes.

Default: "Trans" (0x0001) Transparent mode.

Defined in: Local Control descriptor.

Characteristics: Read/Write.

### UP versions:

PropertyID: upversions (0x0002).

Description: Defines the required versions of the UP mode of operation.

Type: Sub-list of enumeration.

### Possible Values:

-	"1" (0x01)	Version 1.
-	"2" (0x02)	Version 2.
-	"3" (0x03)	Version 3.
-	"4" (0x04)	Version 4.
-	"5" (0x05)	Version 5.
-	"6" (0x06)	Version 6.
-	"7" (0x07)	Version 7.
-	"8" (0x08)	Version 8.
-	"9" (0x09)	Version 9.
-	"10" (0x0A)	Version 10.
-	"11" (0x0B)	Version 11.
-	"12" (0x0C)	Version 12.
-	"13" (0x0D)	Version 13.
-	"14" (0x0E)	Version 14.
-	"15" (0x0F)	Version 15.
-	"16" (0x10)	Version 16.
-	Default: "1" (0x01)	Version 1.

Defined in: Local Control descriptor.

Characteristics: Read/Write.

### Delivery of erroneous SDUs:

PropertyID: delerrsdu (0x0003).

Description: Indicates how erroneous SDUs should be handled. If it is set to YES then the UP entity implements error checking and sets Frame Quality Classification (FQC) bits accordingly; bad frames are delivered to the UP layer. If it is set to NO then the UP entity performs error checking and if a bad frame is detected then it is discarded. These settings are required only when the payload is to be examined by upper layer services; an MGW may ignore the settings of this parameter if it passes frames transparently through the UP entities. If it is set to NA then no checking is performed.

Type: Enumeration.

#### Possible Values:

- "Yes" (0x0001) Yes.
- "No" (0x0002) No.
- "NA" (0x0003) Not Applicable.

Default: "NA" (0x0003) Not Applicable.

Defined in: Local Control descriptor.

Characteristics: Read/Write.

#### Interface:

PropertyID: interface (0x0004).

Description: Indicates the type of interface on which the termination is used.

Type: Enumeration.

#### Possible Values:

- "RAN" (0x0001) Iu interface.
- "CN" (0x0002) Nb interface.

Defined in: Local Control descriptor.

Characteristics: Read/Write.

#### **Initialisation Direction:**

PropertyID: initdir (0x0005).

Description: Indicates whether or not the termination in the MGW should expect initialisation information, or initiate UP initialisation itself.

For a termination with property "interface = CN":

- If Initialisation Direction is set to Incoming then the MGW shall expect to receive an initialisation either at this termination or from an other Nb or Iu termination in the same context.
- If Initialisation Direction is set to outgoing, then the MGW shall send out an initialisation procedure from this
  termination. If another termination in the same context is initialised with the same codec type and
  configuration the MGW should re-use the RFCI values for its Initialisation PDU, otherwise it must assign its
  own values.

For a termination with property "interface = RAN":

- If Initialisation Direction is set to "incoming", then the initialisation received at this termination is from the originating RAN and can be forwarded internally to other terminations for subsequent UP initialisations.
- If Initialisation Direction is set to "outgoing", then initialisations received are from the terminating RAN and cannot be forwarded internally. RFCI value correction can be performed at this termination, and initialisations can be sent out to the RAN.

Examples for the usage of this property are given in annex B.

Type: Enumeration.

#### Possible Values:

- "In" (0x0001) Incoming.
- "Out" (0x0002) Outgoing.

Defined in: Local Control descriptor.

Characteristics: Read/Write.

15.1.1.2 Events

None.

15.1.1.3 Signals

None.

15.1.1.4 Statistics

None.

#### 15.1.1.5 Procedures

The MGC uses this package to indicate to the MGW that the Iu (or Nb) User Plane is used between the RNC (or distant MGW) and the MGW. The package is sent in the Establish bearer, Modify Bearer Characteristics and Prepare bearer procedures. For more information on the User Plane and for a description of 'UP mode of operation', 'UP versions' and 'Delivery of erroneous SDUs' see 3GPP TS 25.415 [4].

The following procedures are valid for UP in Support Mode:

- The MGW shall be able to initiate and respond to the UP control procedures (PDU type 14 frames) independently of the Stream Mode during the call establishment phase, i.e. when not in TrFO.
- Otherwise, during TrFO the MGW shall be able to forward UP control procedures (PDU type 14 frames) received at one termination to the other termination.
- The UP Initialisation procedure is always acknowledged between MGW peers. If an MGW receives a request for a notification for the bearer establishment then the MGW shall not send the notification until after it has either sent or received the acknowledgement for the UP initialisation.
- The MGW shall always store RFCI parameters against the MGW termination that received or that sent the UP initialisation.
- If an MGW has the UP termination property Initialisation Direction = Incoming then it expects to either receive an Initialisation (externally) or after receiving initialisation information internally send an initialisation (externally), based on what occurs first.
- If an MGW has UP termination property Initialisation Direction = Outgoing and interface CN, then it generates a network originated Initialisation PDU as soon as the bearer towards the succeeding node is successfully established, with RFCIs corresponding to the last codec configured on the termination. If another termination in the same context is initialised with the same codec type and configuration the MGW should re-use the RFCI values for its Initialisation PDU, otherwise it must assign its own values. The initialisation information sent by the MGW depends on the service that the bearer supports. For CSD service see 3GPP TS 29.007 [6] chapter 11.5. For speech service see 3GPP TS 26.102 [26] chapter 8.
- If an MGW has UP termination property Initialisation Direction = Outgoing and interface RAN, then it expects to receive an Initialisation externally. It shall not pass the initialisation parameters internally. It may initiate RFCI Value Correction out from this termination.
- A CN incoming or outgoing termination having already completed its UP initialisation towards a peer MGW shall not send externally any new UP initialisation except if a reserve / modify characteristic procedure occured on that termination since the last initialisation.
- RAN Outgoing termination may perform, during its lifetime, subsequent RFCI Value corrections, e.g. due to changes of RFCIs on other terminations.
- If an MGW has two terminations in the same context defined as supporting the UP package and with Initialisation Direction incoming, then when it receives an Initialisation procedure from one side (provided the

bearer connection from the other termination to its peer MGW is established) it shall start the UP initialisation procedure towards the peer MGW. The MGW shall perform this procedure independently of the through-connection of the terminations in the context. The MGW shall relay control information from the first initialisation to the UP peer for use at the subsequent initialisation. Also, subsequent control procedures received on one UP shall be relayed to the other UP entity when the two UP entities are connected within the MGW. This behaviour is described in more detail in Annex A. - When adding a new CN incoming termination to a context that has already a RAN or CN incoming termination, if the existing termination has already completed its UP initialisation, the MGW shall not start an initialisation procedure on the new termination based on the control information already stored at the initialised incoming termination in the context.

- If an MGW has one termination with properties "interface = RAN" and "initialisation direction = outgoing" and another termination with property "initialisation direction = Incoming" in the same context, then the MGW shall not forward the UP initialisation from the Incoming termination until it has received a UP initialisation at the "RAN"/"outgoing" side. If the codec type and codec modes configured on both terminations are identical, and if the RFCI values stored at the "incoming" termination do not match the RFCI values stored at the "outgoing" RAN side then "RFCI Value Correction" may be performed to the "outgoing" RAN side: The MGW starts UP initialisation with the RFCI values 'relayed' from the "Incoming" side. No "RFCI Value Correction" is permitted at an outgoing RAN termination whose Iu initialisation negotiates the version 1 of the support mode, at an "incoming" Iu termination or at any Nb termination.
- If a new RAN outgoing termination is added to a context that has already a RAN incoming or CN incoming termination, and if the existing termination has already completed its UP initialisation, the MGW may carry out a RFCI value correction on the new RAN outgoing termination., The control information to be used for the RFCI value correction shall be relayed from the initialised incoming termination in the context.
- No RFCI value correction shall be triggered for data call.
- As an implementation option, "RFCI Value Correction" may be delayed if terminations are not throughconnected; it will be triggered by connection modification. Otherwise it shall be performed immediately
- If "RFCI Value Correction" is not performed the MGW shall map the indexes for frames from one side to the RFCI indexes for frames from the other side. This behaviour is described in more detail in Annex A.
- If an MGW has two RAN terminations connected to the same context then the "RFCI Value Correction" is performed by the Outgoing termination.
- If an MGW has two terminations which support the UP package connected to the same context and both RFCI sets match then the MGW may pass frames transparently through the UP entities; no monitoring of the frames is performed, provided that the terminations are through-connected. This behaviour is described further in Annex A.
- If the MGW is passing frames transparently, no UP monitoring is performed. When the MGW receives an H.248 procedure request which requires interpretation or interaction with the UP, then it shall resume its UP protocol responsibilities, i.e. perform monitoring or termination of the UP protocol.
- If an MGW sends an FP UP initialization message from a termination, the MGW shall only offer versions of the FP UP, which are given in the property "UP versions" of this termination and which are supported by the MGW for this termination.
- If an MGW receives an FP UP initialization message at a termination, the MGW shall only positively acknowledge this initialization message, if versions of the FP UP are offered, which are given in the property "UP versions" and which are supported at the MGW for this termination. In the positive FP UP initialization acknowledge message, the MGW shall select one of these versions. If none of these versions are offered in the FP UP initialization message, the MGW shall send a negative FP UP acknowledge message and it shall not forward the initialization to a possible second FP UP termination in the same context.

- If PCM is used on the Nb then FP UP initialization shall be performed by the termination with property "Outgoing". If the termination property is "Incoming" then it shall receive the RFCI's from its IuFP peer (or from internal MGW termination with IuFP and same codec). If IuFP is defined on another termination in the MGW but the codec is different, i.e. not TrFO then the relaying of RFCI's shall not be performed. These IuFP peer connection shall be seen as completely separate.
- the UP initialisation information attached to a termination (RFCI values, codec type and mode(s), UP initialisation completed or not) are kept unchanged when the termination is moved to a new context.
- the initialisation direction may be changed during the lifetime of a termination; upon such a change, the MGW shall apply the behaviour attached to the new initialisation direction.

The procedures for a termination configured in UP Transparent Mode are those described in 3GPP TS 25.415 [4].

1	_	1	.2	١.	10	id
	J.	- 1		v	U	ıu

- 15.1.3 Void
- 15.1.4 Void
- 15.1.5 Void
- 15.1.6 Void
- 15.1.7 Void
- 15.1.8 Void
- 15.1.9 Void

# 15.2 Optional UMTS packages

The following packages may be supported by the UMTS Bearer Independent Circuit-Switched Core Network as required by the network services deployed in the network:

- Circuit Switched Data package (see subclause 15.2.1);
- TFO package (see subclause 15.2.2);
- 3G Expanded Call Progress Tones Generator package (see subclause 15.2.3);
- Modification of Link Characteristics Bearer Capability package (see subclause 15.2.4);
- Enhanced Circuit Switched Data package (see subclause 15.2.5);
- Cellular Text telephone Modem Text Transport package (see subclause 15.2.6);
- IP transport package (see subclause 15.2.7);
- Flexible Tone Generator Package (see subclause 15.2.8);
- Trace Package (see subclause 15.2.9);
- ASCI Group Call package (see subclause 15.2.10).

## 15.2.1 Circuit Switched Data package

PackageID: threegcsd (0x0030)

Version: 1

Extends: None

This package contains the information needed to be able to support GSM and UMTS Circuit Switched Data from the media gateway.

## 15.2.1.1 Properties

#### PLMN BC:

PropertyID: plmnbc (0x0001).

Description: The PLMN Bearer Capability.

Type: Octet string.

Possible values:

- Specified in the subclause "Bearer capability" in 3GPP TS 24.008 [3], including the Bearer Capability IEI and Length.

Defined in: Local Control Descriptor.

Characteristics: Read/Write.

### GSM channel coding:

PropertyID: gsmchancod (0x0002).

Description: Channel information needed for GSM.

Type: Octet string.

Possible values:

- The second octet of Chosen Channel as specified in the subclause "Chosen Channel" in 3GPP TS 48.008 [9].

Defined in: Local Control Descriptor.

Characteristics: Read/Write.

### 15.2.1.2 Events

**Protocol Negotiation Result:** 

EventID: protres (0x0001).

Description: This event is used to report the result of the protocol negotiation.

EventsDescriptor Parameters: None.

ObservedEventsDescriptor Parameters:

- Negotiation Result:
  - ParameterId: result (0x0001).
  - Description: reports whether the protocol negotiation has been successful.
  - Type: Enumeration.

- Possible Values:
  - o "Success" (0x0001): the protocol negotiation on the termination has been successful.
  - o "Failure" (0x0000): the protocol negotiation on the termination has failed.
- Possible Failure Cause:
  - ParameterId: cause (0x0002).
  - Description: indicates the possible failure cause.
  - Type: Enumeration.
  - Possible Values:
    - o "Unsp" (0x0001): the protocol negotiation has failed for an unspecified reason.
    - o "V8V34" (0x0002): the V.8 or the V.34 protocol negotiation has failed (modem termination only).

#### Rate Change:

EventID: ratechg (0x0002).

Description: This event is used to report a rate change. For example for GSM FAX if the detected rate does not match the channel rate the MGW shall use this to request a new channel rate. See CMM in 3GPP TS 43.045 [35].

EventsDescriptor Parameters: None.

ObservedEventsDescriptor Parameters:

- New Rate:
  - ParameterId: rate (0x0001).
  - Description: reports the new rate for the termination.
  - Type: Integer.
  - Possible Values: transmission rate in bits per second, rounded to the nearest integer value. The value must be a valid bitrate; one of the following rates: 2400, 4800, 9600, 14400, 28800, 57600. An invalid rate shall cause the call to be released by the MSC Server.

## 15.2.1.3 Signals

#### Activate Protocol:

SignalID: actprot (0x0001).

Description: Activate the higher layer protocol.

Signal type: Brief.

Duration: N/A.

Additional parameter:

- Local Peer Role:
  - ParameterID: localpeer (0x0001).
  - Type: Enumeration.

- Possible values:
  - o "Orig" (0x0000): originating.
  - o "Term" (0x0001): terminating.
- Description: This parameter is optional, but is required for modem and fax calls. It is used to inform the modem whether it should act as originating or terminating peer. This parameter is only included within signal towards the radio access. This may either be an Access Termination or a CN Termination toward another MGW that serves the radio access.

### 15.2.1.4 Statistics

None.

#### 15.2.1.5 Procedures

This package is used to set up data calls within the CS domain. For more information on the IWF, refer to 3GPP TS 29.007 [6].

When the Media Gateway Controller initiates the "Establish Bearer" procedure, the "Prepare Bearer" procedure, the "Modify Bearer" procedure or the "Reserve Circuit" procedure, it shall provide the PLMN BC ("plmnbc" property above) for the termination on the mobile side and the ISDN BC (standard H.248 properties, subclause "Bearer Capabilities") for the termination on the fixed side. For a mobile-to-mobile call, it shall provide the PLMN BC on both terminations.

The presence of the PLMN BC property may trigger the use of the IWF.

Once the bearer has been established, after B-answer, the "Activate Interworking Function" procedure is used to activate the IWF. The Activate Protocol signal ("actprot") will start the negotiation of the layer 2 protocols on both sides. If a modem or fax service is requested, the signal shall contain the Local Peer Role parameter ("localpeer"), to tell the modem whether it should act as originating or terminating peer.

NOTE: The Activate Protocol signal is needed only after B-answer as described above or after successful in-call modification from speech to fax, to activate the protocol timers at the correct time. This is the only time when this signal is needed (specifically, the signal is not used after a handover sequence or for lawful interception).

The IWF Protocol Indication notifications are used by the MGW to inform the MSC server about IWF protocol events. The MSC has to request the detection of the events "Protocol Negotiation Result" and "Rate Change" in the "Activate IWF" procedure, the "Establish Bearer" procedure, the "Prepare Bearer" procedure, the "Modify Bearer" procedure or the "Reserve Circuit" procedure.

For handover to GSM, or change of channel characteristics within the GSM network, the property GSM Channel Coding ("gsmchancod"), which contains the information about the channel type and the number of channels, shall be transmitted to the termination on the mobile side in the "Establish Bearer", the "Prepare Bearer" and the "Reserve Circuit" procedures together with the PLMN BC. The presence of the GSM Channel Coding property also indicates that the termination is using a GSM access network.

If the MGW has requested a rate change due to GSM fax rate mismatch (CMM procedure see 3GPP TS 43.045 [35]) then it shall suspend transmission until it the MSC Server has modified the PLMN Bearer Capability and GSM Channel Coding property to match the required rate. If this occurs while other context manipulations are occurring the MGW shall only resume transmission when the streams are bothway connected and the PLMN Bearer Capability and Channel Coding are correct. The MGW shall not send subsequent rate change notifications while the outstanding rate change has not be performed by the MSC Server.

# 15.2.2 TFO package

PackageID: threegtfoc (0x0031)

Version: 2

Extends: None

This package defines events and properties for Tandem Free Operation (TFO) control. TFO uses inband signalling and procedures for Transcoders to enable compressed speech to be maintained between a tandem pair of transcoders. This package allows an MGW, which has inserted a transcoder, to support TFO.

## 15.2.2.1 Properties

TFO Activity Control:

PropertyID: tfoenable (0x0001).

Description: Defines if TFO is enabled or not.

Type: Enumeration.

Possible Values:

- "On" (0x0001): TFO is enabled, TFO protocol is supported.
- "Off" (0x0002): TFO is not enabled, TFO protocol is not initiated or terminated.

Defined in: Local Control descriptor.

Characteristics: Read/Write.

TFO Codec List:

PropertyID: codeclist (0x0002).

Description: List of codecs for use in TFO protocol, the Local Used Codec (see 3GPP TS 28.062 [5]) is always the first entry in the list. The MSC Server may enable TFO without providing a TFO Codec List; in this case, the MGW shall behave as if it had received a TFO Codec List composed of the selected codec of the opposing termination within the Context.

Type: Sub-list of Octet string.

Possible Values:

- List of codec types; each entry:

Mc Single Codec, similar to as defined in ITU-T Recommendation Q.765.5 [24], for single codec information (figure 14/Q.765.5), where the Codec Information is defined either in ITU-T Recommendation Q.765.5 [24] or in another specification for the given Organization Identifier. For 3GPP codecs these are defined in 3GPP TS 26.103 [16]. The ACodec property in H.248 binary encoding or codecconfig attribute in H.248 text encoding contain the contents of the ITU-T Single Codec IE, excluding the Single Codec Identifier, Length Indication and Compatibility Information.

In H.248 text encoding, the value of the codeclist property shall be encoded as:

LBRKT codecconfig \*(COMMA codecconfig) RBRKT

Example: H.248 text encoding of the TFO codec list (UMTS\_AMR\_2 with Preferred Configuration set 1, and UMTS\_AMR-WB with Preferred Configuration set 0):

Threegtfoc/codeclist =  $\{0206959504, 020A00\}$ 

Where:

- UMTS\_AMR\_2 parameters are: ETSI, UMTS\_AMR\_2, ACS={12.2, 7.4, 5.9, 4.75}, SCS={12.2, 7.4, 5.9, 4.75}, OM=0 plus MACS=4
- UMTS\_AMR\_WB parameters are: ETSI, UTMS\_AMR\_WB, Config-WB-Code=00

Defined in: Local Control descriptor.

Characteristics: Read/Write.

#### 15.2.2.2 Events

Optimal Codec Event:

EventID: codec\_modify (0x0010).

Description: The event is used to notify the MGC that TFO negotiation has resulted in an optimal codec type being proposed.

EventsDescriptor Parameters: None.

ObservedEventsDescriptor Parameters:

- Optimal Codec Type.
  - ParameterID: optimalcodec (0x0011).
  - Description: indicates which is the proposed codec type for TFO.
  - Type: Octet string.
  - Possible Values:

Mc Single Codec;

Similar to as defined in ITU-T Recommendation Q.765.5 [24], for single codec information (figure 14/Q.765.5), where the Codec Information is defined either in ITU-T Recommendation Q.765.5 [24] or in another specification for the given Organization Identifier. For 3GPP codecs these are defined in 3GPP TS 26.103 [16]. The ACodec property in H.248 binary encoding or codecconfig attribute in H.248 text encoding contain the contents of the ITU-T Single Codec IE, excluding the Single Codec Identifier, Length Indication and Compatibility Information.

#### Codec List Event:

EventID: distant codec list (0x0012).

Description: The event is used to notify the MGC of the distant TFO partner's supported codec list.

EventsDescriptor Parameters: None.

ObservedEventsDescriptor Parameters:

- Distant Codec List:
  - ParameterID: distlist(0x0013).
  - Description: indicates the codec list for TFO.
  - Type: Sub-list of Octet string.
  - Possible Values:

List of codec types; each entry:

Mc Single Codec similar to as defined in ITU-T Recommendation Q.765.5 [24], for single codec information (figure 14/Q.765.5), where the Codec Information is defined either in ITU-T Recommendation Q.765.5 [24] or in another specification for the given Organization Identifier. For 3GPP codecs these are defined in 3GPP TS 26.103 [16]. The ACodec property in H.248 binary encoding or codecconfig attribute in H.248 text encoding contain the contents of the ITU-T Single Codec IE, excluding the Single Codec Identifier, Length Indication and Compatibility Information.

The first Codec Type in the list is the Distant Used Codec, received from the distant TFO partner (see 3GPP TS 28.062 [5]).

In H.248 text encoding, the value of the distlist parameter shall be encoded as:

LBRKT codecconfig \*(COMMA codecconfig) RBRKT

TFO Status Event:

EventID: TFO\_status (0x0014).

Description: The event is used to notify the MGC that a TFO link has been established or broken.

EventsDescriptor Parameters: None.

ObservedEventsDescriptor Parameters:

- TFO Status:
  - ParameterId: tfostatus (0x0015).
  - Description: reports whether TFO has been established or broken. Upon TFO activation, no notification is sent if TFO has not been established. A TFO\_Off notification is only reported when a TFO link previously established is broken. The MGW should not report transient TFO status change.
  - Type: Boolean
  - Possible Values:

o "TFO\_On": TFO has been established.

o "TFO Off": TFO is no more established.

### 15.2.2.3 Signals

None.

#### 15.2.2.4 Statistics

None.

### 15.2.2.5 Procedures

For the procedures for TFO see 3GPP TS 28.062 [5].

To enable TFO, the MSC Server shall configure the properties of this package on a MGW Termination with the media stream property for Codec Type set to ITU-T Recommendation G.711 [25] (see annex C of ITU-T Recommendation H.248 [10]) or Bearer Service Characteristics set to "Speech" or "3.1 kHz Audio" in TMR or USI due to Reserve Circuit Procedure, see in ITU-T Recommendation Q.1950 (see 3GPP TS 29.205 [7]).

The TFO protocol shall be disabled if the call configuration becomes no longer TFO compatible or if the Codec Type property of the media stream at the opposing termination in the Context is reconfigured to G.711 or if the Bearer Service Characteristics of the opposing Termination is reconfigured to "Speech" or "3.1 kHz Audio". The TFO protocol may be disabled either by the MSC Server by using the TFO Activity Control property of this package or by the MGW in accordance with the TFO rules as described in [5] when it detects that TFO operation is no longer possible (for example it has G.711 encoding at opposing Terminations).

## 15.2.3 3G Expanded Call Progress Tones Generator Package

PackageID: threegxcg(0x0032)

Version: 1

Extends: xcg version1

This package extends "Expanded Call Progress Tones Generator Package", as defined in ITU-T Recommendation Q.1950 [23] (see 3GPP TS 29.205 [7]). The package adds a new toneId for CAMEL prepaid warning tone.

15.2.3.1 Properties

None.

15.2.3.2 Events

None.

## 15.2.3.3 Signals

**CAMEL Prepaid Warning Tone:** 

SignalID: cpwt (0x004f).

Description: Generate CAMEL prepaid warning tone to inform the party that the Max Call Period Duration is about to expire. CAMEL prepaid warning tone is defined in 3GPP TS 23.078 [22]. The physical characteristic of CAMEL prepaid warning tone is available in the gateway.

Signal type: Brief.

Duration: Provisioned, Not Auditable.

Additional parameters:

- Tone Direction.
- ParameterID: td (0x0010).
- Type: Enumeration.
- Values:
  - "Ext" (0x01): external.
  - "Int" (0x02): internal.
  - "Both" (0x03): Both.
- Default: "Ext".

## 15.2.3.4 Statistics

None.

## 15.2.3.5 Procedures

None.

## 15.2.4 Modification Of Link Characteristics Bearer Capability

PackageName: Modification of Link Characteristics Bearer Capability

PackageID: threegmlc(0x0046)

Description: This package contains an event that when requested by the MGC will cause the MG to notify the

MGC that modification of the link characteristics is allowed. This notification is typically

generated when the bearer has been established.

Version: 1

Extends: None

## 15.2.4.1 Properties

None.

### 15.2.4.2 Events

Bearer Modification Support Event.

EventID: mod\_link\_supp (0x0001).

Description: The event is used to notify the MGC that modification of the link characteristics of the current bearer connection is permitted.

EventsDescriptor Parameters: None.

ObservedEventsDescriptor Parameters: None.

## 15.2.4.3 Signals

None.

### 15.2.4.4 Statistics

None.

#### 15.2.4.5 Procedures

If the MGC is interested in determining whether or not the bearer associated with a termination supports modification of its link characteristics it shall send a request (Add/Modify/Move) with the Bearer Modification Support Event. When the bearer is established the MG will indicate in a Notify request to the MGC if modification of link characteristics is supported. A notify will NOT be generated if modification is NOT supported on the bearer.

# 15.2.5 Enhanced Circuit Switched Data package

PackageID: threegesden (0x0082)

Version: 1

Extends: threegesd (0x030) Version 1

This package extends "Circuit Switched Data Package", as defined in subclause 15.1.2. This package adds a new property to define the user bitrate at a Iu termination.

## 15.2.5.1 Properties

**Bitrate** 

PropertyID: bitrate (0x0003).

Description: user bitrate.

Type: Integer.

Possible Values: transmission rate in bits per second, rounded to the nearest integer value. The value shall be a valid bitrate; one of the following rates: 2400, 4800, 9600, 14400, 28800, 57600, 64000.

Defined in: Local Control Descriptor.

Characteristics: Read/Write.

15.2.5.2 Events

None.

15.2.5.3 Signals

None.

15.2.5.4 Statistics

None.

#### 15.2.5.5 Procedures

This package is used in addition to the 3GCSD package for CS data calls. It is used for indicating the user data rates for Inter-MSC SRNS Relocation and handover cases. If the Bitrate is not 64 kb/s at one termination in the MGW but its opposing termination has properties that define its bitrate to be 64 kb/s (e.g. TMR=UDI) then A-TRAU' protocol shall be applied by the MGW. For further details see 3GPP TS 29.007 [6].

## 15.2.6 Cellular Text telephone Modem Text Transport

PackageName: CTM Text Transport

PackageID: threegctm (0x0068)

Description: The CTM text transport package is intended for enabling robust real time text conversation

through a voice channel primarily intended for communication over mobile networks. This package includes the mechanisms needed to transport T.140 text conversation streams [19] in a voice channel environment, using the CTM Cellular Text Telephone Modem specified in 3GPP TS 26.226 [18]. The transport mechanism allows for alternating transport of voice and text.

Version: 1

Extends: None

## 15.2.6.1 Properties

Text termination connection state:

PropertyID: connstate (0x0001).

Description: The connection state property is used to reflect details of the achieved text connection. For each new session connstate should be reset to "Prepare".

Type: Enumeration.

Possible values:

- "Idle" (0x0001) meaning that CTM availability negotiation has failed; CTM is disabled except for monitoring the incoming line for CTM signals.
- "Prepare" (0x0002) for CTM being enabled, monitoring for CTM signals and ready to send CTM signals.
- "Connected" (0x0006) for CTM being enabled and to have detected CTM availability in the current session.

Defined in: TerminationState.

Characteristics: Read/Write.

Text Transport:

PropertyID: trpt (0x0002)

Description: The transport parameter reflects the transport mechanism selected for the Text Conversation termination. In 3GPP, one possible transport mechanism is the Cellular Text Telephone Modem as in 3GPP TS 26.226 [18]. It is used when it is desired to transport the text conversation in a voice channel. CTM enables alternating use of the voice channel for voice and text during the call.

Type: Enumeration.

Possible values:

- "ctm" (0x0008) for text transport in mobile voice channel as in 3GPP TS 26.226 [18].

Defined in: LocalControl.

Characteristics: Read/Write.

Text Protocol Version:

PropertyID: textproto (0x0003).

Description: The version of the ITU-T Recommendation T.140 [19] protocol used in the connection.

Type: Integer.

Possible values:

- Any integer corresponding to a T.140 version number (currently 1) as in ITU-T Recommendation H.248 .2 [17].

Defined in: LocalControl.

Characteristics: Read/Write.

## 15.2.6.2 Events

Connection State Change:

EventID: connchange (0x0001).

Description:

- This event will occur when the text connection state for the termination has changed.
- The parameter values are the same as the Connection State property.
- If a CTM availability request timed out, the state is returned to Idle.

EventDescriptorParameters:

None.

ObservedEventDescriptorParameters:

ParameterName: Connection Change.

ParameterID: connchng (0x0001).

Type: Enumeration.

Possible Values: As property threegctm/connstate.

## 15.2.6.3 Signals

None.

### 15.2.6.4 Statistics

Characters Transferred:

StatisticsID: chartrans (0x0001).

Description: Number of bytes of ITU-T Recommendation T.140 [19] data transferred through the termination.

Units: count.

#### 15.2.6.5 Procedures

If the MGC detects a CTM indication it shall send a request (Add/Modify/Move) with the CTM Transport property. Upon receivable of it, the MGW shall allocate a termination with CTM capabilities. Normal usage is that the CTM enabled termination handles one text stream and one voice stream and alternates between transporting voice and text in the voice channel according to the functionality of CTM. This termination could for example be combined in a context with a termination with the txp and ctyp packages for gateway functionality between PSTN text telephony and mobile CTM based text telephony. These packages are described in ITU-T Recommendation H.248.2 [17].

The CTM algorithm has states. The states defined in the text termination connection state property are mapped into CTM states in the following way:

- Idle: CTM disabled because of an unsuccessful CTM availability negotiation.
- Prepare: normal initial state with CTM monitoring active.
- Connected: CTM negotiation is completed.

For each new call, the CTM termination shall be put in the Prepare state.

When the CTM availability negotiation is completed, the state is Connected.

The state transitions are automatic, except for setting Prepare state as described above.

## 15.2.7 IP transport package

PackageID: threegiptra (0x0083)

Version: 1

Extends: None

This package contains the information needed to be able to support IP transport from RAN to the media gateway.

### 15.2.7.1 Properties

IP transport address:

PropertyID: ipv4trans (0x0001).

Description: IP V4 transport address.

Type: Octet String.

Possible values:

- Specified as Transport Layer Address in 3GPP TS 25.413 [20].

Defined in: Local Control Descriptor.

Characteristics: Read/Write.

PropertyID: ipv6trans (0x0002).

Description: IP V6 transport address.

Type: Octet String.

Possible values:

- Specified as Transport Layer Address in 3GPP TS 25.413 [20].

Defined in: Local Control Descriptor.

Characteristics: Read/Write.

UDP port:

PropertyID: UDport (0x0003).

Description: UDP port.

Type: Unsigned integer.

Possible values: 0...65535.

- Specified as Iu transport Association in 3GPP TS 25.413 [20].

Defined in: Local Control Descriptor.

Characteristics: Read/Write.

15.2.7.2 Events

None.

15.2.7.3 Signals

None.

15.2.7.4 Statistics

None3

### 15.2.7.5 Procedures

When the MSC Server knows that it shall apply the set up procedure in accordance with 3GPP TS 25.414 [21], this package is used to set up an IP transport between the RAN and the CN.

When the Media Gateway Controller initiates the "prepare IP bearer transport" procedure towards the RAN side, it shall request the IP transport address and the UDP port from the MGW. The MGW shall provide the MSC Server with the IP transport address of the MGW and an UDP Port. At the receipt of these information elements the MSC Server shall insert the information elements in the RAB Assignment/ Relocation message.

When the MSC Server receives the RAB assignment acknowledge or Iu relocation request response, (which includes the IP transport address of the RNC and the UDP port) and the User Plane mode is Transparent, it shall initiate the Modify IP transport address procedure towards the MGW before the first data packet is to be sent from the MGW.

The MGW shall use the IP address and UDP port if received from the MSC Server to route the user data to the RNC regardless if IP addresses and UDP ports were previously exchanged in the User Plane.

## 15.2.8 Flexible Tone Generator Package

PackageID: threegflex (0x0084)

Version: 1

Extends: threegxcg version 1

This package extends "3G Expanded Call Progress Tones Generator Package", as defined in chapter 15.1.4 above. This package adds a new tone for call duration control in CAMEL phase 4, supporting variable sequence of tones and burst list.

15.2.8.1 Properties

None.

15.2.8.2 Events

None.

## 15.2.8.3 Signals

Signal Name: Flexible Tone.

SignalID: ft (0x0050).

Description: Generate flexible 900 Hz tone. The physical characteristics of Flexible Tone is not described in the additional parameters. It shall be available in the Media Gateway.

SignalType: Brief.

Duration: Provisioned.

Additional Parameters:

- Parameter Name: Burst List Direction

Description: Used to indicate the direction the tone is to be sent. External indicates that the tone is sent from the MG to an external point. Internal indicates that the tone is played into the Context to the other terminations. Both way indicates both internal and external behaviour.

ParameterID: bld (0x0001).

Type: Enumeration.

Possible Values:

- "Ext" (0x01): External.
- "Int" (0x02): Internal.
- "Both" (0x03): Both way.
- Default: "Ext" (0x01).

Parameter Name: numberOfBursts.

Description: Number of bursts in the burst list.

ParameterID: nob (0x0002).

Type: Integer.

Possible values: 1 to 3.

Default: 1.

Parameter Name: burstInterval.

Description: Time interval between two consecutive bursts expressed in amount of 100 ms units.

ParameterID: bi (0x0003).

Type: Integer.

Possible values: 1 to 1200.

Default: 2.

Parameter Name: numberOfTonesInBurst.

Description: Number of tones to be played in each burst.

ParameterID: notib (0x0004).

Type: Integer.

Possible values: 1 to 3.

Default: 3.

Parameter Name: toneDuration.

Description: Duration of each tone in a burst expressed in amount of 100 ms units.

ParameterID: td (0x0005).

Type: Integer.

Possible values: 1 to 20.

Default: 2.

Parameter Name: toneInterval.

Description: Time interval between two consecutive tones in a burst expressed in amount of 100 ms units.

ParameterID: ti (0x0006).

Type: Integer.

Possible values: 1 to 20.

Default: 2.

### 15.2.8.4 Statistics

None.

### 15.2.8.5 Procedures

The MGW should generate the tones using the above mentioned parameters as specified in 3GPP TS 23.078 [22] subclause 4.5.7.1.2

In case MGC requests to generate a flexible tone specifying a signal type "Timeout" and a "Duration" longer than the time needed to play the whole Burst List no action will be taken on the incoming stream to fill the gap. I.e. if any user plane stream is received on one side of the termination after the end of the burst list, it will be present, unchanged, on the other side of the termination as well (transparent mode).

# 15.2.9 Trace Package

PackageID: calltrace (0x0097)

Version: 1

Extends: None

This package defines properties for subscriber and equipment trace activation and deactivation properties to be attached to the trace record generated by MGW.

## 15.2.9.1 Properties

Trace Activation Control

PropertyID: traceactivityrequest(0x0001)

Description: Defines if trace is activated or deactivated.

Type: Bool

Possible Values:

"on" (true): Trace Session is activated in MGW

"off" (false): Trace Session is deactivated in MGW

Defined in: Local Control descriptor

Characteristics: Read/Write

**IMSI** 

PropertyID: imsi(0x0002)

Description: IMSI number of the traced subscriber to be attached to the trace record. Used for record identification like trace reference.

Type: Octet string

Possible Values: The IMSI is coded as defined in 3GPP TS 23.003 [43]. The IMSI is TBCD-coded with a fixed length of 8 octets. Two digits are encoded per octet, each digit is encoded 0000 to 1001 (0 to 9). Bits 8765 of octet n encodes digit 2n, bits 4321 of octet n encodes digit 2(n-1) +1 (i.e the order of digits is swapped in each octet compared to the digit order defined in 3GPP TS 23.003 [43]). 1111 is used as filler when there is an odd number of digits. Digits are packed contiguously with no internal padding.

Defined in: Local Control descriptor

Characteristics: Read/Write

IMEI(SV)

PropertyID: imei\_sv(0x0003)

Description: IMEI(SV) number of the traced equipment to be attached to the trace record. Used for record identification like trace reference.

identification like trace i

Type: Octet string

Possible Values: The IMEI(SV) is coded as defined in 3GPP TS 23.003 [43]. The IMEI(SV) is TBCD encoded. Two digits are encoded per octet, each digit is encoded 0000 to 1001 (0 to 9). Bits 8765 of octet n encodes digit 2n, bits 4321 of octet n encodes digit 2(n-1) +1 (i.e the order of digits is swapped in each octet compared to the digit order defined in 3GPP TS 23.003 [43]). 1111 is used as filler when there is an odd number of digits. Digits are packed contiguously with no internal padding.

Defined in: Local Control descriptor

Characteristics: Read/Write

Trace Reference

PropertyID: tracereference(0x0004)

Description: Reference number to identify different Trace Session in OSS as defined in 3GPP TS 32.421 [29] and

3GPP TS 32.422 [30].

Type: Octet string

Possible Values: OSS (EM) defines when activating a Trace Session

Defined in: Local Control descriptor

Characteristics: Read/Write

Trace Recording Session Reference

PropertyID: tracerecsessionref(0x0005)

Description: A unique identifier within the Trace Session for identifying the Trace Recording sessions. Defined in

3GPP TS 32.421 [29] and in 3GPP TS 32.422 [30].

Type: Octet string

Possible Values: Described in 3GPP 32.422 [30]

Defined in: Local Control descriptor

Characteristics: Read/Write

Trace Depth

PropertyID: tracedepth(0x0006)

Description: Trace Depth as defined in 3GPP TS 32.421 [29]

Type: Enumaration

Possible Values: Defined in 3GPP TS 32.422 [30]

Defined in: Local Control descriptor

Characteristics: Read/Write

**Triggrering Events** 

PropertyID: triggeringevent(0x0007)

Description: Triggrering Events as defined in 3GPP TS 32.422 [30].

Type: Octet string

Possible Values: Defined in 3GPP TS 32.422 [30].

Defined in: Local Control descriptor

Characteristics: Read/Write

List of interfaces

PropertyID: listofinterfaces(0x0008)

Description: List of interfaces to trace as defined in 3GPP TS 32.422 [30]

Type: Octet string

Possible Values: Defined in 3GPP TS 32.422 [30]

Defined in: Local Control descriptor

Characteristics: Read/Write

15.2.9.2 Events

Trace result

EventID: tracact (0x0001)

Description: Notification to the MSC Server if trace activation was successful/unsuccessfull in the MGW.

EventDescriptor parameters: None

ObservedEventsDescriptor parameters:

Result: Trace Activation Result

res (0x0001)

Type: enumeration

Possible values:

success (0x0001): "Trace Succesfully activated"

failure (0x0000): "Failure in trace activation"

15.2.9.3 Signals

None

15.2.9.4 Statistics

None

### 15.2.9.5 Procedures

For the network level procedures of the tracing see 3GPP 32.422 [30].

For the trace records of the MGW see 3GPP 32.423 [31].

In H.248 interface MSC Server uses 'Trace Activity Control' property to indicate MGW that a termination should be placed under trace or should be taken out of trace. In the call establishing phase MSC Server sets trace package information into proper command (Add or Modify) associated to the termination to be traced. Tracing can be activated either by giving IMEI(SV) or IMSI number as a further information. MSC Server shall also provide the values for all other properties described in this package that is IMSI if trace is activated based on IMSI, IMEI(SV) if trace is activated based on IMEI(SV), Trace reference, Trace recording session reference, Trace depth, triggering events in MGW, list of interfaces in MGW. When MSC Server activates the trace, it shall use 'Trace Activation Result' Event to detect if the Trace Activation was successful or not. MGW shall not reject the Add/Modify because of unsuccessful Trace Activation, but only send a Notification with this Event. Tracing is automatically deactivated in MGW when termination is taken out of the context in the end of the call. If the Termination is Moved to another Context, trace is automatically forwarded to new termination.

# 15.2.10 ASCI Group call package

PackageID: threegasci (0x00b2)

Version: 2

Extends: None

This package contains the information needed to be able to support VGCS (3GPP TS 43.068 [39]) and VBS (3GPP TS 43.069 [40]) services.

## 15.2.10.1 Properties

Number of needed conference terminations

PropertyID: nct (0x0001)

Description: Indicates the number of needed conference terminations for the call.

Type: Integer

Defined in Descriptor: Local Control Descriptor

Characteristics: Read/Write

Number of desired listener context terminations

PropertyID: nlct (0x0002)

Description: Indicates the number of desired terminations for a listener context.

Type: Integer

Defined in Descriptor: Local Control Descriptor

Characteristics: Read/Write

15.2.10.2 Events

None.

15.2.10.3 Signals

None.

15.2.10.4 Statistics

None

## 15.2.10.5 Procedures

The MSC server receives the number of needed conference terminations from GCR (see 3GPP TS 43.068 [39]) and 3GPP TS 43.069 [40]) and reserves the requested number of needed Conference terminations for that call. The parameter "Number of needed conference terminations" shall be included when allocating the first termination of an ASCI-conference context. It is optional when adding further terminations. If the MGW is unable to reserve the number of requested terminations for that call, it shall response with error code 510 "insufficien resources".

The parameter "Number of desired listener context terminations" should be included when allocating the first termination of a Listener context.

# Annex A (informative): The Framing protocol Interworking Function (FPIF)

### A.1 Introduction

SDUs transmitted over an Iu or Nb interface and received at a MGW whose outgoing UP is also Iu or Nb shall be relayed to the outgoing UP MGW termination. If no interworking function (other than the FPIF) or transcoder device is inserted by the MGW, and if UP terminations are present, then PDUs and control procedures are passed between MGW terminations by the FPIF. The FPIF is the functional entity responsible for aligning or mapping control procedures (including RFCIs, frame numbers etc) on the separate UP interfaces according to the package procedures described in the main text. The FPIF determines if the two UP configurations are identical and thus the UP PDUs may be passed transparently. If the FPIF determines that the two UP configurations are not identical it applies the required mapping. The relaying of PDUs transparently can also be considered as FPIF bypass.

NOTE: the implementation in the MGW can perform a more efficient processing of the PDUs in this case. The MGW switching and bypassing of the protocol functions during TrFO is left to the manufacturer's implementation.

UP initialisations are not handled by the FPIF, only receipt of the Subflow combinations and the RFCI allocations are received by the FPIF for each UP.

The RFCIs are relayed by the FPIF as described in main text for the UP package procedures.

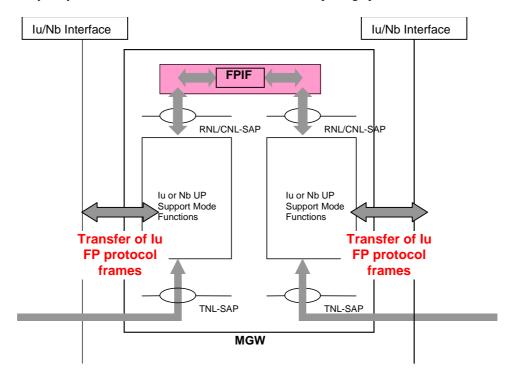


Figure A.1: The Framing Protocol Interworking Function

# A.2 FPIF procedures with respect to lu framing protocol

This clause handles relay of user data indicated to the FPIF in a Nb- or Iu-UP-data-indication message and transmitted between peer UP layer entities in PDU types 0 and 1. The FPIF passes this information to the UP layer on the sending side in a Nb- or Iu-UP-data-request message.

### A.2.1 Payload

Received SDUs shall be forwarded unmodified to the next MGW. Note that if "delivery of erroneous SDUs" is set to 'no', faulty SDUs are already discarded by the Iu or Nb support mode functions and, hence, not delivered to the FPIF.

#### A.2.2 RFCIs

If the RFCI values on the outgoing UP interface match those initialised on the incoming UP interface then the RFCI indicated by the lower layer (i.e. Iu or Nb) on the receiving side shall be forwarded unmodified to lower layer on the sending side.

If the RFCI sets on the outgoing UP interface do not match those initialised on the incoming UP interface then the FPIF performs mapping between the RFCIs on each UP for the same initialised Subflow Combination.

The FPIF is the entity that may perform the RFCI value correction procedure as described in the main text, after this procedure then relaying of the received RFCI shall be performed.

### A.2.3 FQC

The FQC indicated by the lower layer (i.e. Iu or Nb) on the receiving side shall be forwarded unmodified to lower layer on the sending side.

#### A.2.4 Frame number

The frame number indicated by the lower layer (i.e. Iu or Nb) on the receiving side shall be forwarded unmodified to lower layer on the sending side.

A discontinuity in framing protocol support mode frame numbers is allowed at the end of the TrFO break.

# A.3 Relay of status information

This clause handles relay of status information indicated to the FPIF in a Nb- or Iu-UP-status-indication message and transmitted between peer UP layer entities in PDU type 14. The FPIF in general passes this information to the UP layer on the sending side.

#### A.3.1 Void

#### A.3.2 Rate Control Frames

The FPIF shall pass rate control request and rate control acknowledgement frames transparently between incoming UP interface and outgoing UP interface.

Before a MGW reverts from TrFO break operation (for example during handover or relocation where the rate control procedures may have been operating independently between each UP interface) the FPIF may perform rate control procedures to each UP peer. It shall then use the Maximum rate and Current rate settings from the opposite UP configurations. This is performed to align the UP's on each side of the MGW to enable relaying of all subsequent PDUs as described above.

Optionally, the UP layer protocol entity on the sending side may substitute the frame number received in a status request by another number, but shall then substitute the initial number back in the status indication containing the acknowledgement. Figure A.2 shows an example of the relay of the rate control procedure.

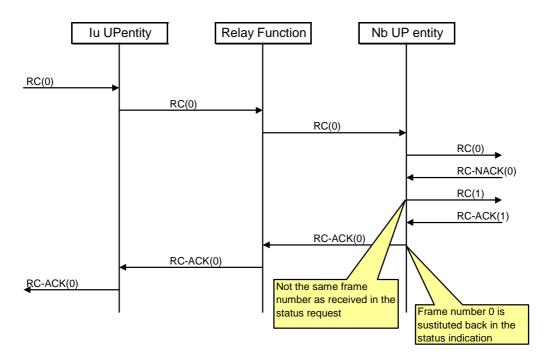


Figure A.2: Relay of a control procedure

# A.3.2 Time Alignment

Time alignment frames shall be relayed unmodified.

# Annex B (informative):

# Examples for Usage of the 3GUP Package "Initialization Direction" Property




Figure B.1: Mobile to Mobile Call (A to B)




Figure B.2: Mobile Originating Call

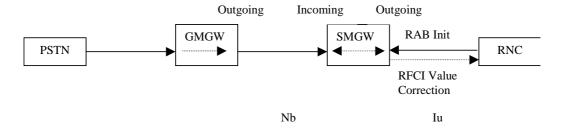


Figure B.3: Mobile Terminating Call

# Annex C (Normative): Profile description

#### C.1 Profile Identification

Profile name:	Threegbicsn
Version:	3

The name and version of the profile that is sent in the service change command.

### C.2 Summary

This Profile describes the minimum mandatory settings and procedures required to fulfil the requirements of the Mc interface media gateway control. In addition optional settings and procedures are described which fulfil optional features and where supported, the minimum mandatory settings within the optional procedures and packages are identified that must be supported in order to support that feature.

"Optional" or "O" means that it is optional for either the sender or the receiver to implement an element. If the receiving entity receives an optional element that it has not implemented it should send an Error Code (e.g. 445" Unsupported or Unknown Property", 501"Not Implemented", etc.) . "Mandatory" or "M" means that it is mandatory for the receiver to implement an element. Whether it is mandatory for the sender to implement depends on specific functions; detail of whether elements of the core protocol are manadatory to be sent are defined in the stage 2 procedures, stage 3 procedures and/or the descriptions of individual packages.

The setting or modification of elements described in the profile under the heading "Used in Command" has the meaning that the property can be set/modified with that command. The property may be present in other commands (in order to preserve its value in accordance with ITU-T H.248.1[10]) when those commands are used for other procedures that affect the same descriptor.

### C.3 Gateway Control Protocol Version

#### ITU Recommendation H.248.1 Version 2

The minimum H.248 version required to support the profile. This should be based upon base syntax support and not an arbitrary version assignment. This is related to the ServiceChangeVersion in clause C.8.8.

### C.4 Connection Model

**Table C.4: Connection Model** 

Maximum number of contexts:	No restriction
Maximum number of terminations per context:	32
Allowed termination type combinations in a context:	All

### C.5 Context Attributes

Table C.5/1: Context attributes

Context Attribute	Supported	Values Supported

Topology	Yes (NOTE 1)	See clause C.7.8 Topology Descriptor
Priority Indicator	No	NA
<b>Emergency Indicator</b>	Yes	NA
IEPS Indicator (NOTE 2)	No	NA
ContextAttribute Descriptor (NOTE 2)	No	NA
ContextIDList Parameter (NOTE 2)	No	NA
NOTE 1: Stream ID in Topology Descr NOTE 2: This field requires at least ve		,

#### Table C.5/2: AND/OR Context attributes

AND/OR Context Attribute	No	NA
NOTE: This field requires at least version 3 of the H.248.1 protocol.		

### C.6 Terminations

#### C.6.1 Termination Names

#### C.6.1.1 General

The Termination ID structure shall follow the guidelines of H.248 and the structure is either relevant or irrelevant for MGC and MGW.

The relevance depends on the utilized bearer type for termination. With ephemeral ATM/AAL2 and IP endpoint bearer types the internal structure of Termination ID is irrelevant for MGW and MGC and therefore Termination ID is only numeric identifier for termination. When bearer type is physical timeslot within TDM circuit the Termination ID structure shall follow the Termination naming convention for TDM circuit bearer.

Ephemeral terminations are further denoted in the profile by the following:

- BICC (meaning applies to terminations towards BICC)
- BICC ATM (meaning applies to terminations towards BICC with ATM transport)
- BICC IP (meaning applies to terminations towards BICC with IP transport)
- Iu (meaning applies to terminations towards Iu interface)

### C.6.1.2 ASN.1 Coding

#### C.6.1.2.1 General Structure

The following general structure of termination ID shall be used:

4 octets shall be used for the termination ID. The following defines the general structure for the termination ID:

Table C.6.1.2.1: ASN.1 coding

Termination	
type	X

Termination type:

Length 3 bits

Values:

000 Reserved

001 Ephemeral termination

010 TDM termination

011 - 110 Reserved

111 Reserved for ROOT termination Id (ROOT Termination ID = 0xFFFFFFFF)

X:

Length 29 bits.

Usage dependent on Termination type. TDM terminations specified below in subclause C.6.1.2.2. Other usage un-specified.

#### C.6.1.2.2 Termination naming convention for TDM terminations

Table C.6.1.2.2 ASN.1 coding

Termination	PCM system	Individual
type (=010)	·	

PCM system:

Length 24 bits

Usage unspecified. Uniquely identifies PCM interface in MGW

Individual:

Length: 5 bits

Max. of 32 individuals (timeslots) per PCM system (max. 24 for a 24 channel system)

### C.6.1.3 ABNF Coding

#### C.6.1.3.1 General Structure

The following general structure of termination ID shall be used:

TerminationID = "ROOT" / pathName / "\$" / "\*" ; According to H.248.1 annex B

### C.6.1.3.2 Termination naming convention for TDM terminations

```
pathName = TDMToken UNDERSCORE ((PCMsystem / "*") SLASH (Individual / "*"))

TDMToken = "TDM"

UNDERSCORE = %x5F ;"_"
```

PCMsystem : Usage not specified

Individual = 1 \* 2 (DIGIT) ; 0-31

### C.6.1.3.3 Termination naming convention for Ephemeral terminations

pathName = EphTokenUNDERSCORE(EPHsystem/"\*")

EphToken = "Ephemeral"

UNDERSCORE = %x5F ;"\_"

EPHsystem: Usage is not specified

### C.6.2 Multiplexed terminations

#### **Table C.6.2: Multiplexed terminations**

Multiplex terminations supported?	No

# C.7 Descriptors

### C.7.1 Stream Descriptor

#### Table C.7.1: Stream descriptors

Maximum number of streams per termination type	All	1

#### C.7.1.1 LocalControl Descriptor

#### Table C.7.1.1/1: Local Control Descriptor

If not generic list appropriate t stream types.	ermination and	Termination Type	Stream Type
ReserveGroup used:	No	-	-
ReserveValue used:	Yes	BICC (NOTE)	Not Applicable
NOTE: The support is needed for the optional procedures Modify Char (see 14.2.27) and Reserve Char (see 14.2.28). These procedures use Q.1950 procedures which define the use of the Reserve Value.			

#### Table C.7.1.1/2: Allowed Stream Modes

Termination Type	Stream Type	Allowed StreamMode Values
All	Not Applicable	SendOnly, RecvOnly, SendRecv, Inactive

### C.7.2 Events Descriptor

All events contained in this profile may be set on any termination/stream with the following exceptions.

Table C.7.2/1: Events Descriptor

Events settable on termination types and stream types:	Yes		
If yes	EventID	Termination Type	Stream Type
		All except ROOT	Not Applicable
	Cause (g/cause, 0x0001/0x0001)		
	Signal Completion (g/sc, 0x0001/0x0002)	All except ROOT	Not Applicable
	Start tone detected (tonedet/std, 0x0004/0x0001)	All except ROOT	Not Applicable
	End Tone detected (tonedet/etd, 0x0004/0x0002)	All except ROOT	Not Applicable
	DTMF character 0	All except ROOT	Not Applicable
	(dd/d0, 0x0006/0x0010)		
	to DTMF character D		
	(dd/dd, 0x0006/0x001d)		
	Completion (ct/cmp, 0x000a/0x0005)	TDM	Not Applicable
	BNC Change (GB/BNCChange, 0x0021/0x01)	BICC, Iu	Not Applicable
	Tunnel Indication (BT/TIND, 0x0022/0x01)	BICC IP	Not Applicable
	MGCon (chp/mgcon, 0x0029/0x0001)	ROOT	Not Applicable
	Termination Heartbeat (hangterm/thb, 0x0098/0x0001)	All except ROOT	Not Applicable
	Protocol Negotiation Result: (threegcsd/protres, 0x0030/0x0001)	All except ROOT	Not Applicable
	Rate Change (threegcsd/ratechg, 0x0030/0x0002)	All except ROOT	Not Applicable
	Optimal Codec Event (threegtfoc/codec_modify, 0x0031/0x0010)	All except ROOT	Not Applicable
	Codec List Event (threegtfoc/distant_codec_list, 0x0031/0x0012)	All except ROOT	Not Applicable
	TFO Status Event (threegtfoc/TFO_status, 0x0031/0x0014)	All except ROOT	Not Applicable

	Bearer Modification Support Event (threegmlc/mod_link_supp, 0x0046/0x0001)	Iu	Not Applicable
	Connection State Change (threegctm/connchange, 0x0068/0x0001)	All except ROOT	Not Applicable
	Trace result (calltrace/ tracact, 0x0097/0x0001)	All except ROOT	Not Applicable
	Inactivity Timeout (it/ito, 0x0045/0x0001)	ROOT	Not Applicable
NOTE: Stream ID ma	ay be ignored in Events Descriptor		

#### **Table C.7.2/2: Event Buffer Control**

EventBuffer Control used:	No

#### Table C.7.2/3: Keep active

KeepActive used on events:	Yes	

#### Table C.7.2/4: Embedded events and signals

Embedded events in an Events Descriptor:	No
Embedded signals in an Events Descriptor:	No

#### Table C.7.2/5: Regulated Embedded events

Regulat	ed Embedded events are triggered on:	None
NOTE:	This field requires at least version 3 of the H.248.1	protocol.

#### Table C.7.2/6: ResetEventsDescriptor

ResetEventsDescriptor used with events:		None
NOTE:	This field requires at least version 3 of the H.248.1	protocol.

#### Table C.7.2/7: Notification Behaviour

NotifyImmediate:	ALL Events
NotifyRegulated:	None
NeverNotify:	None
NOTE: This field requires at least version 3 of the H.248.1 protocol.	

# C.7.3 EventBuffer Descriptor

### **Table C.7.3: Event Buffer Descriptor**

EventBuffer Descriptor used:	No

# C.7.4 Signals Descriptor

Table C.7.4/1: Signals Descriptor

The setting of signals is dependant on	Yes		
termination or streams types:	NOTE – "No" means that all signals can be played on any termination or If "Yes", any signal not listed below may be played on any termination or except Signals on ROOT termination shall not be supported.		
If yes	SignalID	Termination Type	Stream Type / ID
		BICC	
	Establish BNC (GB/EstBNC, 0x0021/0x01)		Not Applicable
	Modify BNC (GB/ModBNC, 0x0021/0x02)	BICC	Not Applicable
	Release BNC (GB/RelBNC, 0x0021/0x03)	BICC ATM	Not Applicable
	Bearer Information Transport (BT/BIT, 0x0022/0x01)	BICC IP	Not Applicable
	Continuity Test (ct/ct, 0x000a/0x0003)	TDM	Not Applicable
	Respond (ct/rsp, 0x000a/0x0004)	TDM	Not Applicable
NOTE: Stream ID may b	e ignored for Signals Descriptor	l	I

### Table C.7.4/2: Signal Lists

Signals Lists supported:	Yes		
If yes	Termination Type Supporting Lists: ALL except ROOT		
	Stream Type Supporting lists:	ALL	
	Maximum number of signals to a signal list:	FFS <integer></integer>	
	Intersignal delay parameter supported: (NOTE)	No	
NOTE: This field requires a	This field requires at least version 3 of the H.248.1 protocol.		

### Table C.7.4/3: Overriding Signal type and duration

Signal type and duration	Yes
supported:	

If yes	SignalID	Type or duration override
	All Tones, Announcements and DTMFs	Both

#### Table C.7.4/4: Signal Direction

Signal D	irection supported:	No
NOTE: This field requires at least version 3 of the H.248.1 protocol.		

### Table C.7.4/5: Notify completion

<b>NotifyCompletion supported:</b>	Yes	
If yes	SignalID	Type of completion supported
	All Tones and Announcements	TO, EV, SD, NC
RequestID Parameter supported: (NOTE)	No	
NOTE: This field requires at least version 3 of the H.248.1 protocol.		

### Table C.7.4/6: Signals played simultaneously

Signals played	No
simultaneously:	

#### Table C.7.4/7: Keep active

KeepActive used on signals:	Yes

### C.7.5 DigitMap Descriptor

### Table C.7.5: DigitMap Descriptor

DigitMaps supported:	No

## C.7.6 Statistics Descriptor

#### Table C.7.6/1: Statistics Descriptor support

Statistics supported on:	Termination

#### Table C.7.6/2: Statistics Report on Subtract

Statistics reported on	Yes
Subtract:	

If yes	StatisticIDs reported:	If Global Text Telephony used:
		Characters Transferred (threegctm/chartrans, 0x0068/0x0001)

# C.7.7 ObservedEvents Descriptor

#### Table C.7.7: ObservedEvents Descriptor

Event detection time supported:	No

# C.7.8 Topology Descriptor

#### **Table C.7.8: Topology Descriptor**

Allowed	triples:	(T1, T2, isolate) (T1, T2, oneway) (T1, T2, bothway)
NOTE:	The Topology Descriptor shall be supported by the MGW and MGC for VGCS, VBS, handover and lawful	
	interception. It can also be used for sending tones and playing announcements.	

### C.7.9 Error Descriptor

Which H.248.8 and package defined error codes are supported?

### Table C.7.9/1: Error Codes Sent by MGC

Supported H.248.8 Error Codes:	ALL H.248.8, list of individual numbers>
Supported Error Codes defined in packages:	For a list of error codes see clauses 5.14.x <reference 5.14="" appropriate="" below="" clause="" in="" the="" to=""></reference>

### Table C.7.9/2: Error Codes Sent by MGW:

Supported H.248.8 Error Codes:	<all h.248.8,="" individual="" list="" numbers="" of=""></all>
Supported Error Codes defined in packages:	For a list of error codes see clauses 5.14.x <reference 5.14="" appropriate="" below="" clause="" in="" the="" to=""></reference>

# C.7.10 TerminationState Descriptor

#### Table C.7.10/1: TerminationState Descriptor

TerminationState: ServiceStates:	InService/OutofService
TerminationState: EventBufferControl:	OFF

### C.8 Command API

NOTE – It is assumed that an Error Descriptor may be returned in any command reply.

### C.8.1 Add

Table C.8.1/1: Descriptors used by Command Add Request

Descriptors used by Add request:	Events, Signals, Media (LocalControl, Local And Remote), Audit
Table C.8.1/2: Descriptors u	sed by Command Add Reply
Descriptors used by Add reply:	Media (LocalControl, Local And Remote), Error
	When ADD commands exclude an Audit Descriptor, the MGW response shall only include descriptors which contained underspecified or overspecified properties in the command request, with the exception of the Error Descriptor. Furthermore, only those properties that were underspecified or overspecified in the request shall be sent in the reply.  The applicability of this restriction for text encoding is FFS.

## C.8.2 Modify

Table C.8.2/1: Descriptors used by Command Modify Request

Descriptors used by Modify request:	Events, Signals, Media (LocalControl, Local And Remote), Audit
Table C.8.2/2: Descriptors used by Command Modify Reply	
Descriptors used by Modify reply:	Media (LocalControl, Local And Remote), Error
	When MOD commands exclude an Audit Descriptor, the MGW response shall only include descriptors which contained underspecified or overspecified properties in the command request, with the exception of the Error Descriptor. Furthermore, only those properties that were underspecified or overspecified in the request shall be sent in the reply.  The applicability of this restriction for text encoding is FFS.

### C.8.3 Subtract

Table C.8.3/1: Descriptor used by Command Subtract Request

Descriptors used by Subtract request:	None	
Table C.8.3/2: Descriptor used by Command Subtract Reply		
Descriptors used by Subtract reply:	None or Statistics	
	Ctmbits statistics are returned in the Subtract reply when related to a termination with CTM capabilities. Otherwise	

no statistics are returned.

#### C.8.4 Move

#### Table C.8.4/1: Command Move

Move command used:	Yes
Table C.8.4/2: Descriptors used by Move Request	
Descriptors used by Move request:	Events, Signals, Media (LocalControl, Local And Remote), Audit

#### Table C.8.4/3: Descriptors used by Move Reply

Descriptors used by Move reply:	Media (LocalControl, Local And Remote), Error
	When MOVE commands exclude an Audit Descriptor, the MGW response shall only include descriptors which contained underspecified or overspecified properties in the command request, with the exception of the Error Descriptor. Furthermore, only those properties that were underspecified or overspecified in the request shall be sent in the reply.
	The applicability of this restriction for text encoding is FFS.

### C.8.5 AuditValue

#### Table C.8.5: Auditvalue

Audited Properties:	Property Name and Identity	Descriptor
Termination ID	TerminationState:	TerminationState Descriptor
	- TDM: ALL (indicating 1 TDM group)	
	<ul> <li>ATM/IP: individual termination</li> </ul>	
	- Root (MGW Audit)	
Termination ID	For Packages:	Packages Descriptor (NOTE1)
	- Root	
	<ul> <li>TDM/ATM/IP: individual terminaition</li> </ul>	
	(NOTE2)	
Termination ID	None (MGW Audit):	Audit (empty) Descriptor
	- Root	
Audited Statistics:	None	
Audited Signals:	None	
Audited Events:	None	
Packages Audit	Yes	
Possible		
NOTE1: Support of this car	pability is optional.	

NOTE2: The purpose to audit an individual Termination is to determine whether the Hanging Termination Detection package is supported.

## C.8.6 AuditCapability

#### Table C.8.6/1: Auditcapability

Audited Properties:	Property Name and Identity Descriptor	
	FFS	FFS
Audited Statistics:	None	
Audited Signals:	None	
Audited Events:	None	

#### Table C.8.6/2: Scoped Auditing

Audited Properties / ContextAttributes used for a scoped audit :	None
NOTE: This field requires at least version 3 of the H.248.1 protocol.	

# C.8.7 Notify

#### **Table C.8.7: Descriptors Used Notify**

Descriptors used by Notify Request or Reply:	ObservedEvents, Error
NOTE: The Error Descriptor shall not be used in Notify Request.	

# C.8.8 ServiceChange

#### Table C.8.8/1: ServiceChangeMethods and ServiceChangeReasons sent by MGC:

Service C	Change Methods Supported:	ServiceChange Reasons supported:	
Restart (NOTE1)		"901 Cold Boot" (Optional)	
-	·	"902 Warm Boot" (Optional)	
Handoff (	NOTE 1, NOTE 2)	"903 MGC Directed Change" (Mandatory)	
Forced (N	IOTE1)	"905 Termination Taken Out Of Service" (Optional) NOTE 3	
Graceful	(NOTE1)	"905 Termination Taken Out Of Service" (Optional) NOTE 3	
NOTE:	When a Service Change command on the Root	termination with a method other than Graceful is sent, the	
	command shall always be sent as the only command in a message. The sending node shall always wait for		
	the reply to a Service Change command on the Root termination with a method other than Graceful before		
	sending further command requests. A Service Change command on the Root termination with method		
	Graceful may be combined with other commands in a single message.		
NOTE1:	I: ROOT Only.		
NOTE2:	Not involving more than 1 MSC-S. This does not preclude the use of the MGCld in a		
	ServiceChange (Handoff) scenario, nor does it change the expected MG behaviour upon receipt of such a		
	message, as the MGW has actually no means to differentiate whether the ServiceChangeMgcId parameter		
	that may be received in a ServiceChange (handoff) message relates to a logical MGC inside the same MSC		
	server or is part of another MSC-Server.		
NOTE3:			
	defined in the procedure (908 is not valid from the MGC)		

### Table C.8.8/2: ServiceChangeMethods and ServiceChangeReasons sent by MG:

Service Change Methods Supported:	ServiceChange Reasons supported:

Restart	Ι.	'900 Service Restored" (Mandatory)
Nestait		'900 Service Restored" (Mandatory) '901 Cold Boot" (Mandatory) (NOTE1)
		'902 Warm Boot" (Mandatory) (NOTE1)
		'910 Media Capability Failure " ALL except ROOT (Optional)
		'913 Signal Capability Failure " ALL except ROOT
		(Optional) "914 Event Capability Failure " ALL except ROOT
		(Optional)
		'916 Packages Change" (Optional)
		'917 Capability Change "(Optional)
Graceful		'904 Termination Malfunction", ALL except
		ROOT,(Mandatory)
	'	'905 Termination Taken Out Of Service", ALL,(Mandatory)
		'906 Loss Of Lower Layer Connectivity", ALL except
		ROOT,(Mandatory)
		'907 Transmission Failure", ALL except ROOT,(Mandatory)
	•	'908 MG Impending Failure" ROOT only (Mandatory)
Forced	'	'904 Termination Malfunction", ALL except ROOT
		(Mandatory)
		'905 Termination Taken Out Of Service" , Mandatory)
		'906 Loss Of Lower Layer Connectivity", ALL except ROOT
		(Mandatory)
		'907 Transmission Failure", ALL except ROOT (Mandatory)
		'908 MG Impending Failure" ROOT only (Mandatory)
Handoff (NOTE 1, NOTE 2)		'903 MGC Directed Change" (Mandatory)
Disconnected (NOTE 1)		'900 Service Restored" (Mandatory)
		'916 Packages Change" (Optional)
		'917 Capability Change" (Optional)
command shall always be set the reply to a Service Change	nt as the only comma e command on the Re quests. A Service Ch ith other commands	rmination with a method other than Graceful is sent, the and in a message. The sending node shall always wait for cot termination with a method other than Graceful before lange command on the Root termination with method in a single message.
Table C.8.8/3: Service Change Address		
ServiceChangeAddress used:		No
		<u> </u>
Table C.8.8/4: Service Change Delay		
ServiceChangeDelay used: No		
Table C.8.8/5: Service Change Incomplete Flag		
ServiceChange Incomplete Flag used:  No		
NOTE: This field requires at least ver	rsion 3 of the H.248.1	l protocol.

### Table C.8.8/6: Service Change Version

Version used in ServiceChangeVersion:	2
---------------------------------------	---

#### Table C.8.8/7: Service Change Profile

ServiceChangeProfile mandatory:	Yes

#### Table C.8.8/8: Profile negotiation

Profile negotiation as per H.248.18:	No

### C.8.9 Manipulating and auditing context attributes

#### Table C.8.9: Manipulating and auditing context attributes

Context Attributes Manipulated:	Topology, Emergency
Context Attributes Audited:	None

# C.9 Generic command syntax and encoding

#### Table C.9.1: Encodings

Supported Encodings:	Binary (optional) (NOTE 2) Text (optional) (NOTE 1)
If binary encoding, is indefinite length encoding supported:	Yes (NOTE 3)
H.248.1 [10] on the usage of CR (ASCII carriage in SDP these Characters are missing when using NOTE 2: Binary encoding is strongly recommended if only NOTE 3: The binary encoding rules which are applicable to Rules for Abstract Syntax Notation One, defined in accordance with ITU-T Recommendation X.690 [4]	U has resolved the contradiction in RFC2327 [34] and return 0x0d) and/or LF (ASCII newline 0x0a) characters e.g. the currently specified "quotedString" type. one encoding is selected to ensure interoperability.

### C.10 Transactions

#### Table C.10/1: Transactions per Message

Maximum number of TransactionRequests /	10
TransactionReplies / TransResponseAcks / Segment	
Replies per message:	

#### Table C.10/2: Commands per Transaction Requests

Maximum number of commands per	Unspecified
TransactionRequest:	

#### Table C.10/3: Commands per Transaction Reply

	m number of commands per tionReply:	Unspecified
NOTE:	OTE: For auditing with wildcarded requests (e.g TDM E1) then the reply may include up to 32 commands to indicate the termination state)	

#### **Table C.10/4: Optional Commands**

Commands able to be marked "Optional":	ALL

#### Table C.10/5: Commands for Wildcarded Responses

Wildcarded responses may be requested for:	Modify, Subtract, AuditValue
--	------------------------------

#### Table C.10/6: Procedures for Wildcarded Responses

Procedu	res that make use of wildcarded responses:	Release Bearer, Release Termination, Audit Value
NOTE:	Used when multiple terminations are released wit	n one command and in audit responses where multiple
	terminations are implied by the audit request.	

#### **Table C.10/7: Transaction Timers**

Transaction Timer:	Value
normalMGExecutionTime	Provisioned
normalMGCExecutionTime	Provisioned
MGOriginatedPendingLimit	Provisioned
MGCOriginatedPendingLimit	Provisioned
MGProvisionalResponseTimerValue	Provisioned
MGCProvisionalResponseTimerValue	Provisioned


# C.11 Messages

The MGC/MGW shall be named according to the naming structure of the underlying transport protocol which carries the H.248 protocol.

# C.12 Transport

#### Table C.12/1: Transport

Supported Transports:	
	For pure IP connections, H.248/SCTP/IP should be used. In addition, to allow for flexible implementations of gateways and controllers in order to offer efficient use of

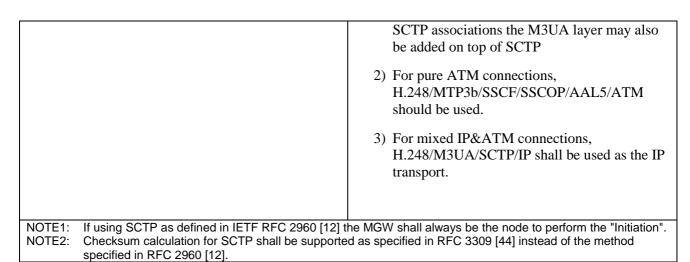

#### Table C.12/2: Segmentation

Segmentation Supported:		No
NOTE:	This field requires at least version 3 of the H.248.1	protocol.

#### Table C.12/3: Support of Control Association Monitoring

<b>Control Association Monitoring Supported:</b>	1) Inherent in Transport
	2) H.248.14 (optional MGW-driven monitoring)
	Empty AuditValue on Root (MGC-driven monitoring

# C.13 Security

#### **Table C.13: Security**

Supported Security:	None

# C.14 Packages

#### Table C.14/1: Mandatory packages

Mandatory Packages:					
Package Name	PackageID	Version			
Generic (see ITU-T Recommendation H.248.1 [10] annex E.1)	g, (0x0001)	v1			
Base Root Package (see ITU-T Recommendation H.248.1 [10] annex E.2)	root, (0x0002)	v2			
Tone Detection Package (see ITU-T Recommendation H.248.1 [10] annex E.4)	tonedet, (0x0004) (NOTE)	v1			

Basic DTMF Generator Package (see ITU-T	dg, (0x0005)	v1
Recommendation H.248.1 [10] annex E.5)		
DTMF Detection Package (see ITU-T Recommendation	dd, (0x0006)	v1
H.248.1 [10] annex E.6)		
Generic Announcement Package (see ITU-T	an, (0x001d)	v1
Recommendation H.248.7 [28]) – Fixed Announcements.		
Affilouncements.		
TDM Circuit Package (see ITU-T Recommendation	tdmc, (0x000d)	v1
H.248.1 [10] annex E.13)		
NOTE1		
Media Gateway Resource Congestion Handling Package	chp, (0x0029)	v1
(see ITU-T Recommendation H.248.10 [15])		
Bearer Characteristics Package (see ITU-T	bcp, (0x001e)	v2
Recommendation Q.1950 [23] annex A.3)		
Generic Bearer Connection Package (see ITU-T	Gb, (0x0021)	v1
Recommendation Q.1950 [23] annex A.6)		
3GUP (User Plane) package (see subclause 15.1.1)	threegup, (0x002f)	v1
NOTE: This package is "for extension only" and shall no	t be published over the Mc interfa	ce.

IOTE: This package is "for extension only" and shall not be published over the Mc interface.

NOTE1: Network Package is not supported.

Table C.14/2: Optional packages

Optional Packages:					
Package Name	PackageID	Version	Support dependent on:		
Basic Call Progress Tones Generator with Directionality, (see ITU-T Recommendation Q.1950 [23] annex A.8)	bcg, (0x0023)	v1	Services provided by network		
Expanded Call Progress tones Generator Package (see ITU-T Recommendation Q.1950 [23] annex A.9)	xcg, (0x0024)	v1	Services provided by network		
Basic Services Tones Generation Package (see ITU-T Recommendation Q.1950 [23] annex A.10)	srvtn, (0x0025)	v1	Services provided by network		
Bearer Control Tunnelling Package (see ITU-T Recommendation Q.1950 [23] annex A.7)	Bt, (0x0022)	v1	Interworking with BICC and IP transport		

Expanded Services Tones Generation Package (see ITU-T Recommendation Q.1950 [23] annex A.11)	xsrvtn, (0x0026)	v1	Services provided by network
Intrusion Tones Generation Package (see ITU-T Recommendation Q.1950 [23] annex A.12)	Int, (0x0027)	v1	Services provided by network
Business Tones Generation Package (see ITU-T Recommendation Q.1950 [23] annex A.13)	BIZTN, (0x0028)	v1	Services provided by network
Tone Generator Package (see ITU-T Recommendation H.248.1 [10] annex E.3)	tongen, (0x0003)	v1	(NOTE)
Generic Announcement Package (see ITU-T Recommendation H.248.7 [28]) – Variable Announcements	an, (0x001d)	v1	Variable Announcements
Text Telephony Package (see ITU-T Recommendation H.248.2 [17]).	txp, (0x0010)	v1	Global text telephony support
Call Discrimination package (see ITU-T Recommendation H.248.2 [17]).	ctyp, (0x0011)	v2	Global text telephony support
Basic Continuity Package (see ITU-T Recommendation H.248.1 [10] annex E.10).	ct, (0x000a)	v1	Only required for TDM side terminations
Hanging Termination Detection package (see ITU-T Recommendation H.248.36 [36]).	hangterm, (0x0098)	v1	
Circuit Switched Data package (see subclause 15.2.1);	threegcsd, (0x0030)	v1	Circuit Switched Data support
TFO package (see subclause 15.2.2);	threegtfoc, (0x0031)	v2	TFO support
3G Expanded Call Progress Tones Generator package (see subclause 15.2.3);	threegxcg, (0x0032)	v1	Services provided by network

Modification of Link Characteristics Bearer Capability package (see subclause 15.2.4);	threegmlc, (0x0046)	v1			
Enhanced Circuit Switched Data package (see subclause 15.2.5);	threegcsden,(0x0082)	v1	Circuit Switched Data support		
Cellular Text telephone Modem Text Transport package (see subclause 15.2.6);	threegetm, (0x0068)	v1	Global text telephony support		
IP transport package (see subclause 15.2.7);	threegiptra, (0x0083)	v1	Iu over IP interface support		
Flexible Tone Generator Package (see subclause 15.2.8).	threegflex, (0x0084)	v1	Services provided by network		
Trace Package (see subclause 15.2.9)	calltrace, (0x0097)	v1			
ASCI Group call package (see subclause 15.2.10)	threegasci, (0x00b2)	v2	VGCS and VBS services supported		
IP Domain connection package (see ITU-T Recommendation H.248.41 [42])	ipdc, (0x009d)	v1	Multiple IP realms supported		
Inactivity (see ITU-T Recommendation. H248.14 [29])	it, (0x0045)	v1			
NOTE: This package is "for extension only" and shall not be published over the Mc interface.					

### Package Usage Information

This table specifies how the packages above will be used. For example:

- it lists whether the properties/signals/events/statistics are optional or mandatory
- if the value of the property/signal/event provisioned the provisioned value should be specified. (e.g. names and number of cycles for an H.248.7 announcement).

Specifies the values of properties which are specified as provisioned

Package Usage Information:

### C.14.1 Generic Package

Table C.14.1: Package Usage Information For Generic Package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
None	-	-	-	-

Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
None	-	-		
	Signal Parameters	Mandatory/	Supported Values:	Duration
		Optional		Provisioned Value:
	-	-	-	-
Events	Mandatory/	Used in command:		
	Optional			
Cause (g/cause, 0x0001/0x0001)	M	ADD, MOD, NOTI	FY	
0x0001/0x0001)	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	None	-	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	General Cause (GeneralCause, 0x0001)  Failure Cause (FailureCause, 0x0002)	M O	"NR" (0x0001) Normal Release "UR" (0x0002) Unavailable Resources "FT" (0x0003) Failure, Temporary "FP" (0x0004) Failure, Permanent "IW" (0x0005) Interworking Error "UN" (0x0006) Unsupported Octet String	Not Applicable  Not Applicable
Events	Mandatory/	Used in command:		
2,000	Optional			
Signal	M		ADD, MOD, MOVE, NO	OTIFY
Completion. (g/sc, 0x0001/0x0002)	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	None	-	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	Signal Identity (SIgID, 0x0001)	M	pkgdName syntax	Not Applicable

	Termination	M	"TO" (0x0001)	Not Applicable
	Method		Signal timed out or	
	(Meth,0x0002)		otherwise completed	
			on its own	
			"EV" (0x0002) Interrupted by event "SD" (0x0003) Halted by new Signals descriptor "NC" (0x0004) Not completed, other cause	
	Signal List Id	0	Integer	Not Applicable
Statistics	Mandatory/	Used in command:	Supported	Values:
	Optional			
None	-	-		-
Error Codes	Mandatory/ Optional	1	1	
None			-	

# C.14.2 Base Root Package

Table C.14.2: Package Usage Information For Base Root Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
MaxNrOfContexts (root/maxNumberOfContexts, 0x0002/0x0001)	0	Not used in command	1 and up	Not Applicable
MaxTerminationsPerContext (root/maxTerminationPerContext, 0x0002/0x0002)	0	Not used in command	See C.4	Not Applicable
normalMGExecutionTime (root/normalMGExecutionTime, 0x0002/0x0003)	0	Not used in command	Integer	Operator Defined
normalMGCExecutionTime (root/normalMGCExecutionTime, 0x0002/0x0004)	0	Not used in command	Integer	Operator Defined
MGProvisionalResponsetimerValue (root/MGProvisionalResponseTimerValu e, 0x0002/0x0005)	0	Not used in command	Integer (initially NormalMGE xecutionTime + networkdelay )	Operator Defined

MGCOriginatedPendingLimit (root/MGCOriginatedPendingLimit (not/MGCOriginatedPendingLimit (not/MGCOriginatedPendingLimit (not/MGCOriginatedPendingLimit (not/MGOriginatedPendingLimit (no	MGCProvisionalResponseTimerValue (root/MGCProvisionalResponseTimerValue, 0x0002/0x0006)	O	Not used in command	Integer (initially NormalMGC ExecutionTi me + networkdelay )	Operator Defined
Croot/MGÖriginatedPendingLimit, 0x0002/0x0008)   Defined   Defined	(root/MGCOriginatedPendingLimit,	0	Not used in command	Integer	
None    Signal	(root/MGOriginatedPendingLimit,	0	Not used in command	Integer	
Signal Parameters   Mandatory/ Optional   Supported Values:   Duration Provisioned Value:	Signals		Used in command:		Provisioned
Parameters Optional Values: Provisioned Value:	None	-	-		-
Optional   Values:   Value:			Mandatory/	Supported	
None  Feent Mandatory/ Supported Value:  Parameters Optional Values:  ObservedEvent Mandatory/ Supported Value:  ObservedEvent Mandatory/ Supported Value:  Parameters Optional Values:  Statistics  Mandatory/ Used in command: Supported Values:  None  None  Mandatory/ Optional  None  Mandatory/ Optional		Parameters	Optional	Values:	
None  Fevent Mandatory/ Supported Value:  Parameters Optional Values:  ObservedEvent Mandatory/ Supported Value:  ObservedEvent Mandatory/ Supported Value:  Parameters Optional Values:  Statistics  Mandatory/ Used in command: Supported Values:  None  None  Mandatory/ Optional  None  Mandatory/ Optional		-	-	-	-
None  Event Mandatory/ Supported Value:  Parameters Optional Values:  ObservedEvent Mandatory/ Supported Value:  ObservedEvent Mandatory/ Supported Value:  Parameters Optional Values:  Statistics Mandatory/ Used in command: Supported Values:  None  Error Codes Mandatory/ Optional	Events	Mandatory/	Used in command:		
Event Mandatory/ Supported Value:  Parameters Optional Values:		Optional			
Parameters Optional Values:  Optional Values:  ObservedEvent Mandatory/ Supported Value:  Parameters Optional Values:  Optional Values:  Statistics Mandatory/ Used in command: Supported Values:  None  Error Codes Mandatory/ Optional	None	-		-	
Parameters Optional Values:		Event	Mandatory/	Supported	
ObservedEvent Parameters Optional Values:  Parameters Optional Values:  Statistics Mandatory/ Used in command: Supported Values:  None		Parameters	Optional	Values:	Value:
Parameters Optional Values:  Value:  Value:  Value:  Value:  Value:  Value:  Value:   None  Mandatory/ Optional  Values:  Values:  Supported Values:  Values:  Supported Values:  Values:		-	-	-	-
Parameters Optional Values:		ObservedEvent	Mandatory/	Supported	
Statistics Mandatory/ Used in command: Supported Values:  None  Error Codes Mandatory/ Optional		Parameters	Optional	Values:	Value:
Optional  None   Error Codes  Mandatory/ Optional		-	-	-	-
Optional  None   Error Codes  Mandatory/ Optional	Statistics	Mandatory/	Used in command:		
Error Codes Mandatory/ Optional		Optional			Values:
	None	-	-		-
None	Error Codes	Mandatory/ Option	nal		
None -	None		-		

# C.14.3 Tone Generator Package

Table C.14.3: Package Usage Information For Tone Generator Package

Properties	Mandatory/ Optional	Used in command:	Support Values:	ed	Provisioned Value:
None	-	-		=	-
Signals	Mandatory/ Optional	Used in command:	:		Duration Provisioned Value:
Play Tone (tonegen/pt,0x0003/0x0001)	Not Used		=		-
(tollegell/pt,0x00003/0x0001)	Signal Parameters	Mandatory/	Suppor	ted	Duration
		Optional	Values:		Provisioned Value:
	-	-		-	-
Events	Mandatory/	Used in command:	:		
	Optional				
None	-			-	
	Event	Mandatory/	Support	ed	Provisioned Value:
	Parameters	Optional	Values:		
	-	-		-	-
	ObservedEvent	Mandatory/	Support	ed	Provisioned Value:
	Parameters	Optional	Values:		
	-	-		-	-
Statistics	Mandatory/	Used in command:	•	Supporte	ed Values:
	Optional				
None	-	-			-
Error Codes	Mandatory/ Optional	<u> I</u>		<u> </u>	
None			-		

# C.14.4 Tone Detection Package

Table C.14.4: Package Usage Information For Tone Detection Package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
None	-	-	-	-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:

None	-		-	-		
	Signal Parameters	Mandatory/	Supported Values:	Duration		
		Optional		Provisioned Value:		
	-	-	-	-		
Events	Mandatory/	Used in command:				
	Optional					
Start tone detected (tonedet/std,	О		ADD, MOD, MOVE, N	IOTIFY		
0x0004/0x0001)	Event	Mandatory/	Supported	Provisioned Value:		
	Parameters	Optional	Values:			
	Tone ID List (tl,0x0001)	M	wildcard	Not Applicable		
	ObservedEvent	Mandatory/	Supported	Provisioned Value:		
	Parameters	Optional	Values:			
	Tone ID (tid,0x0003)	M	Value	Not Applicable		
Events	Mandatory/	Used in command:				
	Optional					
End Tone detected (tonedet/etd,	M	ADD, MOD, MOVE, NOTIFY				
0x0004/0x0002)	Event	Mandatory/	Supported	Provisioned Value:		
	Parameters	Optional	Values:			
	Tone ID List (tl,0x0001)	M	wildcard	Not Applicable		
	ObservedEvent	Mandatory/	Supported	Provisioned Value:		
	Parameters	Optional	Values:			
	Tone ID (tid,0x0003)	M	Value	Not Applicable		
	Duration (dur,0x0002)	0	Value	Not Applicable		
Events	Mandatory/	Used in command:				
	Optional					
Long Tone detected (tonedet/ltd,	Not Used		-			
	Event	Mandatory/	Supported	Provisioned Value:		
0x0004/0x0003)	Parameters	Optional	Values:			
	-	-	-	-		
Ĺ						

	ObservedEvent	Mandatory/	Supported		Provisioned Value:
	Parameters	Optional	Values:		
	-	-	-	-	-
Statistics	Mandatory/ Optional	Used in command:		Supported '	Values:
None	-	-			-
Error Codes	Mandatory/ Optional				
None			-		

# C.14.5 Basic DTMF Generator Package

Table C.14.5: Package Usage Information For Basic DTMF Generator Package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
None	-	-	-	-
Signals	Mandatory/	Used in command:		Duration Provisioned
	Optional			Value:
DTMF character 0	M	ADD, MO	D, MOVE	
(dg/d0,0x0005/0x0010)	Signal Parameters	Mandatory/	Supported	Duration Provisioned
DTMF character 1		Optional	Values:	Value:

(dg/d1,0x0005/0x0011)	None	-	-	-
DTMF character 2				
(dg/d2,0x0005/0x0012)				
DTMF character 3				
(dg/d3,0x0005/0x0013)				
DTMF character 4				
(dg/d4,0x0005/0x0014)				
DTMF character 5				
(dg/d5,0x0005/0x0015)				
DTMF character 6				
(dg/d6,0x0005/0x0016)				
DTMF character 7				
(dg/d7,0x0005/0x0017)				
DTMF character 8				
(dg/d8,0x0005/0x0018)				
DTMF character 9				
(dg/d9,0x0005/0x0019)				
DTMF character *				
(dg/ds,0x0005/0x0020)				
DTMF character #				
(dg/do,0x0005/0x0021)				
DTMF character A				
(dg/da,0x0005/0x001a)				
DTMF character B				
(dg/db,0x0005/0x001b)				
DTMF character C				
(dg/dc,0x0005/0x001c)				
DTMF character D				
(dg/dd,0x0005/0x001d)				
Events 1	Mandatory/	Used in command:		
	Optional			
None	-		-	
	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	

	-	-		-	-
	ObservedEvent	Mandatory/	Supporte	ed	Provisioned Value:
	Parameters	Optional	Values:		
	-	-		-	-
Statistics	Mandatory/	Used in command:		Supported	Values:
	Optional				
None	-	-			-
Error Codes	Mandatory/ Optiona	al		1	
None			-		

# C.14.6 Basic DTMF Detection Package

Table C.14.6: Package Usage Information For Basic DTMF Generator Package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
None	-	-	-	-
Signals	Mandatory/	Used in command:	1	Duration Provisioned
	Optional			Value:
None	-		-	-
	Signal Parameters	Mandatory/	Supported	Duration Provisioned
		Optional	Values:	Value:
	-	-	-	-
Events	Mandatory/	Used in command:		
	Optional			
DTMF character 0	M		ADD, MOD, NOTI	FY
(dd/d0,0x0006/0x0010)	Event	Mandatory/	Supported	Provisioned Value:
DTMF character 1	Parameters	Optional	Values:	
(dd/d1,0x0006/0x0011)	None	-	-	-
DTMF character 2	ObservedEvent	Mandatory/	Supported	Provisioned Value:
(dd/d2,0x0006/0x0012)	Parameters	Optional	Values:	

DTMF character 3	None	-	-	-
(dd/d3,0x0006/0x0013)				
DTMF character 4				
(dd/d4,0x0006/0x0014)				
DTMF character 5				
(dd/d5,0x0006/0x0015)				
DTMF character 6				
(dd/d6,0x0006/0x0016)				
DTMF character 7				
(dd/d7,0x0006/0x0017)				
DTMF character 8				
(dd/d8,0x0006/0x0018)				
DTMF character 9				
(dd/d9,0x0006/0x0019)				
DTMF character *				
(dd/ds,0x0006/0x0020)				
DTMF character #				
(dd/do,0x0006/0x0021)				
DTMF character A				
(dd/da,0x0006/0x001a)				
DTMF character B				
(dd/db,0x0006/0x001b)				
DTMF character C				
(dd/dc,0x0006/0x001c)				
DTMF character D				
(dd/dd,0x0006/0x001d)				
Events	Mandatory/	Used in command:		
	Optional			
DigitMap Completion Event	Not used		-	
(dd/ce,0x0006/0x0004)	Event	Mandatory/	Supported	Provisioned Value:
(44/00,00000/00004)	Parameters	Optional	Values:	
	-	-	-	-
L		<u> </u>	I.	ı

	ObservedEvent	Mandatory/	Supporte	d	Provisioned Value:
	Parameters	Optional	Values:		
	-	-		-	-
Statistics	Mandatory/	Used in command:		Supported	Values:
	Optional				
None	-	-			-
Error Codes	Mandatory/ Optional				
None			-		

# C.14.7 Continuity Package

Table C.14.7: Package Usage Information For Basic Continuity Package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
None	-	-	-	-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
Continuity Test	M	ADD, MO	DD, MOVE	Default
(ct/ct, 0x000a/0x0003) Respond	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
(ct/rsp, 0x000a/0x0004)	None	-	-	-
Events	Mandatory/ Optional	Used in command:		
Completion, (ct/cmp,	M	ADD, NOTIFY		
0x000a/0x0005)	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	None	-	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	Result (res,0x0008)	M	success, failure	Not Applicable
Statistics	Mandatory/	Used in command: Supported Values:		
	Optional			
None	-	-		-

Error Codes	Mandatory/ Optional
None	-

# C.14.8 TDM Circuit Package

Table C.14.8: Package Usage Information For TDM Circuit Package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
Echo Cancellation (tdmc/ec,0x000d/0x0008)	M	ADD, MOD, MOVE	ALL	Default=off (False)
Gain Control (tdmc/gain,0x000d/0x000a)	Not Used	-	-	-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
None	-		-	-
	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
	-	-	-	-
Events	Mandatory/	Used in command:	L	<u> </u>
	Optional			
None	-		-	
	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	-	-	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	-	-	-	-
Statistics	Mandatory/	Used in command:	Supported	l Values:
	Optional			
None	-	-		-
Error Codes	Mandatory/ Optiona	1		
None			-	

# C.14.9 Text Telephony Package

Table C.14.9: Package Usage Information For Text Telephony Package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
Conversation mode (txp/convmode, 0x0010/0x0001)	0	ADD, MOD, MOVE	ALL	None
Communication Mode (txp/commode, 0x0010/0x0002)	0	ADD, MOD, MOVE	ALL	None
Connection Mode (txp/connmode, 0x0010/0x0003)	0	ADD, MOD, MOVE	ALL	None
Action at Loss of Connection (txp/lossconnection, 0x0010/0x0006)	0	ADD, MOD, MOVE	ALL	None
V18 Options (txp/v18opt, 0x0010/0x0007)	0	ADD, MOD, MOVE	ALL	None
Character Set (txp/characterset, 0x0010/0x0008)	O	ADD, MOD, MOVE	ALL	None
Signals	Mandatory/ Optional	Used in command:	<u>I</u>	Duration Provisioned Value:
None	-	-		-
	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
	-	-	-	-
Events	Mandatory/	Used in command:	<u> </u>	1
	Optional			
Connection Mode Changed	0	ADD, MOD, MOVE,	NOTIFY	
(txp/connchng,	Event	Mandatory/	Supported	Provisioned Value:
0x0010/0x0001)	Parameters	Optional	Values:	
	None	-	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	

	Communication Mode (commode, 0x0002)	0	As property commode	-
Statistics	Mandatory/ Optional	Used in command:	Supported	Values:
Number of Characters Transferred (txp/chartrans, 0x0010/0x0001)	0	SUBTRACT		
Number of Alternating Turns (txp/altturns, 0x0010/0x0002)	0	SUBTRACT		
Error Codes	Mandatory/ Optional			
None			-	

# C.14.10 Call Discrimination Package

Table C.14.10: Package Usage Information For Call Discrimination Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
Call Types (ctyp/calltyp, 0x0011/0x0001)	0	ADD, MOD, MOVE	ALL	None
Text Call Types (ctyp/ttyp, 0x0011/0x0002)	0	ADD, MOD, MOVE	ALL	None
V8bis Support (ctyp/v8bsup, 0x0011/0x0003)	0	ADD, MOD, MOVE	ALL	None
Probe Message (ctyp/probemsg, 0x0011/0x0004)	0	ADD, MOD, MOVE	ALL	None
Probe Order (ctyp/probeorder, 0x0011/0x0005)	0	ADD, MOD, MOVE	ALL	None
Phase Reversal Detect (ctyp/phrevdet, 0x0011/0x0006)	О	ADD, MOD, MOVE	ALL	None
MG Responsible for Call Discrimination Signalling (ctyp/MGCallSig, 0x0011/0x0007)	O	ADD, MOD, MOVE	ALL	None

$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$
$ \frac{(\text{ctyp/v8sig,}}{0x0011/0x0001)} \\ \frac{\text{Signal Parameters}}{\text{Parameters}} & \frac{\text{Mandatory/}}{\text{Optional}} & \frac{\text{Supported}}{\text{Values:}} \\ \frac{\text{Provisioned}}{\text{Provisioned}} \\ \\ \frac{\text{V.8 Signal Type}}{(\text{ctyp/v8styp,}} \\ 0x0011/0x0001) \\ \\ \frac{\text{V8Sig Cont}}{\text{V8Sig Cont}} & \text{O} \\ \text{(ctyp/v8scont,}} \\ 0x0011/0x0002) \\ \\ \frac{\text{Ctyp/v8scont,}}{\text{Ox0011/0x0003}} & \text{O} \\ \\ \frac{\text{ALL}}{\text{O}} & -\frac{\text{ALL}}{\text{Ctyp/ans,}} \\ 0x0011/0x0003) \\ \\ \frac{\text{Signal}}{\text{Parameters}} & \frac{\text{Mandatory/}}{\text{Optional}} & \frac{\text{Supported}}{\text{Values:}} \\ \\ \frac{\text{Provisioned}}{\text{Provisioned}} \\ \\ \frac{\text{ANS Type}}{\text{Ox0011/0x00001}} & \text{O} \\ \\ \frac{\text{ALL}}{\text{Optional}} & -\frac{\text{Calling Signal}}{\text{Ctyp/callsig,}} \\ 0x0011/0x00003) \\ \\ \frac{\text{Signal}}{\text{Parameters}} & \frac{\text{Mandatory/}}{\text{Optional}} & \frac{\text{Supported}}{\text{Values:}} \\ \\ \frac{\text{Call Signal}}{\text{Parameters}} & \frac{\text{O}}{\text{Optional}} & \frac{\text{Supported}}{\text{Values:}} \\ \\ \frac{\text{Call Signal}}{\text{Parameters}} & \frac{\text{O}}{\text{Optional}} & \frac{\text{Supported}}{\text{Values:}} \\ \\ \frac{\text{Call Signal Name}}{\text{Call Signal Name}} & \text{O} \\ \\ \frac{\text{Call Signal Name}}{\text{Ctyp/csn,}} & \frac{\text{O}}{\text{ALL}} & -\frac{\text{Call Signal Name}}{\text{Call Signal Name}} \\ \\ \frac{\text{Call Signal Name}}{\text{Cotall Signal Name}} & \frac{\text{O}}{\text{ALL}} & -\frac{\text{Call Signal Name}}{\text{Call Signal Name}} \\ \\ \frac{\text{Call Signal Name}}{\text{Call Signal Name}} & \frac{\text{O}}{\text{Call Signal Name}} & \frac{\text{O}}{\text{ALL}} & -\frac{\text{Call Signal Name}}{\text{Call Signal Name}} \\ \\ \frac{\text{Call Signal Name}}{\text{Call Signal Name}} & \frac{\text{O}}{\text{Call Signal Name}} & \frac{\text{O}}{\text{ALL}} & -\frac{\text{Call Signal}}{\text{Call Signal Name}}} \\ \\ \frac{\text{Call Signal Name}}{\text{Call Signal Name}} & \frac{\text{O}}{\text{Call Signal Name}} & \frac{\text{O}}{\text{Call Signal Name}} & \frac{\text{Call Signal Name}}{\text{Call Signal Name}} & \frac{\text{Call Signal Name}}{Call Signal$
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$
V.8 Signal Type
Calling Signal (ctyp/callsig, 0x0011/0x0003)
$\frac{(\text{ctyp/v8scont, } 0x0011/0x0002)}{\text{V18 XCI Enable } (\text{ctyp/v18xcien, } 0x0011/0x0003)} = O - ALL - \frac{(\text{ctyp/v18xcien, } 0x0011/0x0003)}{\text{Answer Signal } (\text{ctyp/ans, } 0x0011/0x0002)} = O - \frac{\text{MOD}}{\text{Parameters}} = O - \frac{\text{Modotherical } 0x0011/0x0002)}{\text{Parameters}} = O - \frac{\text{Modotherical } 0x0011/0x0001)}{\text{Povisioned}} = O - \frac{\text{Modotherical } 0x0011/0x0001)}{\text{Parameters}} = O - \frac{\text{Modotherical } 0x0011/0x0001)}{\text{Parameters}} = O - \frac{\text{Modotherical } 0x0011/0x0001)}{\text{Parameters}} = O - \frac{\text{Modotherical } 0x0011/0x0002)}{\text{Parameters}} = O - \frac{\text{Modotherical } 0x0011/0x0002)}{\text{Povisioned}} = O - \frac{\text{Modotherical } 0x0011/0x002)}{\text{Povisioned}} = O - \frac{\text{Modotherical } 0x0011/0x002)}{\text$
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$
Ox0011/0x0002)    Signal Parameters   Mandatory/ Optional   Supported Values:   Provisioned
$\begin{array}{c ccccccccccccccccccccccccccccccccccc$
$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$
Signal Parameters     Mandatory/ Optional     Supported Values:     Duration       Call Signal Name (ctyp/csn,     O     ALL     -
Ox0011/0x0003)  Parameters  Optional  Ox10011/0x0003  Call Signal Name (ctyp/csn, O)  Ox10011/0x0003  Ox10011/0x0003  Supported Values:  Provisioned  ALL  -
Call Signal Name O ALL - (ctyp/csn,
(ctyp/csn,
UAUU11/UAUUU1)
V8bis Signal O MOD -
Signal Mandatory/ Supported Duration
Parameters Optional Values: Provisioned
V8bisSigname O ALL - (ctyp/V8bsn, 0x0011/0x0001)
V8bis Signal O ALL - Contents (ctyp/V8bscont, 0x0011/0x0002)
V18 Probe O MOD -
None
None Events Mandatory/ Used in command:

Discriminating	О		ADD, MOD, NOT		TFY
Tone Detected (ctyp/dtone,	Event	Mandatory/	Sup	ported	Provisioned Value:
0x0011/0x0001	Parameters	Optional	Va	lues:	
	None	-		-	-
	ObservedEvent	Mandatory/	Sup	ported	Provisioned Value:
	Parameters	Optional	Va	lues:	
	Discriminating Tone Type (dtt,0x0001)	О	A	LL	-
	Discriminating Tone Value (dtvalue, 0x0002)	O	A	LL	-
	V8bis Type (v8bist, 0x0003)	О	A	LL	-
Call Type	О	ADD, MOD, NOTIFY			
Discrimination Result	Event	Mandatory/	Sup	ported	Provisioned Value:
(ctyp/calldisres,	Parameters	Optional	Va	lues:	
0x0011/0x0002)	None	-		-	-
	ObservedEvent	Mandatory/	Sup	ported	Provisioned Value:
	Parameters	Optional	Va	lues:	
	Discriminated Call Type (dct,0x0001)	О	A	LL	-
Statistics	Mandatory/	Used in comma	and:	S	Supported Values:
	Optional				
None	-	-			-
Error Codes		Mandat	tory/ Opti	onal	
None			-		

#### C.14.11 Announcement Package

Table C.14.11: Package Usage Information For Announcement Package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
None	-	-	-	-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
Fixed	M	ADD, MOD, MOVE		<value applicable<="" not="" td=""></value>

Play (an/apf, 0x001d/0x0001)	Announcement	Signal Parameters	Mandatory/	Supported	Duration Provisioned
(an,0x0001)	Play (an/apf,		·		
Choc,0x0002   Announcement Variant (av,0x0003)   Announcement Direction (di,0x0004)   Announcement Direction (di,0x0004)   Announcement Play (an/apv, 0x001d/0x0002)   Signal Parameters   Announcement Play (an/apv, 0x001d/0x0002)   Signal Parameters   Announcement name (an,0x0001)   Announcement name (an,0x0001)   Number of Cycles (noc,0x0002)   Announcement Variant (av,0x0002)   Announcement Variant (av,0x0003)   Number   O integer   - (num,0x0004)   Specific parameters interpretation (spi, 0x0005)   Specific parameters (sp,0x0006)   Announcement Direction (di,0x0006)   Used in command:   Default=External Direction (di,0x0006)   Events   Mandatory/ Optional   Values:   Provisioned Values   P			M	enumeration	Not Applicable
Announcement   Direction   (di,0x0004)     Announcement   Direction   (di,0x0004)     Announcement   Direction   (di,0x0004)     Announcement   Play (an/apv, 0x001d/0x0002)   Signal Parameters   Mandatory/ Optional   Values:   Duration Provision   Values:   Announcement name   Announcement name   Announcement name   Announcement name   M	l		M	Any Integer	-
Direction (di,0x0004)   Direction (di,0x0004)   Direction (di,0x0004)   Direction (di,0x0004)   Direction (di,0x0001)   Direction (di,0x0001)   Direction (di,0x0005)   Direction (di,0x0006)   Dire			0	string	-
Variable Announcement Play (an/apv, 0x001d/0x0002)			M	Internal, External	Default=External
Announcement Play (an/apv, 0x001d/0x0002)    Signal Parameters   Signal Parameters   Mandatory/ Optional   Values:   Signal Parameters   Mandatory/ Optional   Values:   Not Applicate (noc,0x0002)   Mandatory/ Optional   Not Applicate (noc,0x0002)   Mandatory/ Optional   String		(di,0x0004)			
Signal Parameters	Announcement	0	ADD, M	IOD, MOVE	<value not<br="">Applicable&gt;</value>
Announcement name (an,0x0001)		Signal Parameters	Mandatory/	Supported	Duration Provisioned
(an,0x0001)			Optional	Values:	Value:
Announcement Variant (av,0x0003)	l		M	enumeration	Not Applicable
(av,0x0003)			M	Any Integer	-
(num,0x0004)			0	string	-
Specific parameters interpretation (spi, 0x0005)		Number	O	integer	-
interpretation (spi, 0x0005)  Specific parameters (sp,0x0006)  Announcement Direction (di,0x0006)  Events  Mandatory/ Optional  None  -  Event Mandatory/ Supported Parameters Optional  Values:  -  -  -  -  -  -  -  -  -  -  -  -  -		(num,0x0004)			
Specific parameters (sp,0x0006)  Announcement Direction (di,0x0006)  Events Mandatory/ Optional  None			0	enumeration	-
Sp,0x0006)   Announcement Direction (di,0x0006)   Default=Extension (di,0x0006)   Default=Ex		(spi, 0x0005)			
Direction (di,0x0006)  Events  Mandatory/ Optional  None  -  Event  Mandatory/ Supported Parameters  Optional  Values:  -  -  -  -  -  -  -  -  -  -  -  -  -			0	string	-
Events Mandatory/ Used in command:  Optional  None			M	Internal, External	Default=External
Optional  None  Event  Parameters  Optional  Optional  Values:		(di,0x0006)			
None - Grand -	Events	Mandatory/	Used in command:	- 1	1
Event Mandatory/ Supported Provisioned Value Parameters Optional Values:		Optional			
Parameters Optional Values:	None	-		-	
		Event	Mandatory/	Supported	Provisioned Value:
		Parameters	Optional	Values:	
		-	-	-	-
ObservedEvent   Mandatory/   Supported   Provisioned Value		ObservedEvent	Mandatory/	Supported	Provisioned Value:
Parameters Optional Values:		Parameters	Optional	Values:	

	-	-		-	-
Statistics	Mandatory/	Used in command:		Supported '	Values:
	Optional				
None	-	-			-
Error Codes	Mandatory/ Optional				
None			-		

# C.14.12 Media Gateway Resource Congestion handling Package

Table C.14.12: Package Usage Information For Media Gateway Resource Congestion handling Package

Properties	Mandatory/	Used in command:	Supported Va	alues:	Provisioned Value:
	Optional				
None	-	-	-		-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:	
None	-		-		-
	Signal Parameters	Mandatory/ Optional	Supported Values:		Duration Provisioned Value:
	-	-	-		-
Events	Mandatory/ Optional	Used in command:			
MGCon	M		MOD, N	NOTIFY	
(chp/mgcon, 0x0029/0x0001)	Event	Mandatory/	Supported		Provisioned Value:
	Parameters	Optional	Values:		
	None	-	-		-
	ObservedEvent	Mandatory/	Supported		Provisioned Value:
	Parameters	Optional	Values:		
	Reduction (reduction,0x0001)	M	0-100	)	Not Applicable
Statistics	Mandatory/	Used in command:	in command: Supported		Values:
	Optional				
None	-	-			-
Error Codes	Mandatory/ Optional	1	I		
None			-		

#### C.14.13 Hanging Termination Detection Package

Table C.14.13: Package Usage Information For Hanging Termination Detection Package

Properties	Mandatory/	Used in command:	Supported	l Values:	Provisioned Value:
	Optional				
None	-	-		-	-
Signals	Mandatory/ Optional	Used in command:	nand:		Duration Provisioned Value:
None	-		-		-
	Signal Parameters	Mandatory/ Optional	Supported Values:	1	Duration Provisioned Value:
	-	-		-	-
Events	Mandatory/	Used in command:			
	Optional				
Termination Heartbeat	M	ADD, MOD, MOVE, AUDITVALUE, NOTIFY			
(hangterm/thb,	Event	Mandatory/	Supported		Provisioned Value:
0x0098/0x0001)	Parameters	Optional	Values:		
	Timer X (timerx,0x0001)	М	A	LL	0 (no heartbeat message)
	ObservedEvent	Mandatory/	Supported	l	Provisioned Value:
	Parameters	Optional	Values:		
	None	-		-	-
Statistics	Mandatory/	Used in command:		Supported	Values:
	Optional				
None	-	-			-
Error Codes	Mandatory/ Optional			<u> </u>	
None			-		

#### C.14.14 Bearer Characteristics Package

Table C.14.14: Package Usage Information For Bearer Characteristics Package

Properties	Mandatory/	Used in	Supported	Provisioned
	Optional	command:	Values:	Value:

BNC Characteristics (BCP/BNCChar,0x001e/0x01)	M	ADD		type 2 / RTP	Not Applicable
Signals	Mandatory/ Optional	Used in command:		command: Du Pro V	
None	- Signal Parameters -	Mandatory/ Optional	Supported Values:		- Duration Provisioned Value:
Events	Mandatory/ Optional	Used in comman			ıd:
None	Event Parameters	Mandatory/ Optional		oorted lues:	Provisioned Value:
	- ObservedEvent Parameters	- Mandatory/ Optional	- Supported Values:		- Provisioned Value:
Statistics	- Mandatory/ Optional	Used in command: Suj		- oported Values:	
None	-	-			-
Error Codes	Mandatory/ Optional				
None			-	-	

# C.14.15 Generic Bearer Connection Package

Table C.14.15: Package Usage Information For Generic Bearer Connection Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
None	-	-	-	-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
Establish BNC	M	ADD, MOD		Not Applicable
(GB/EstBNC, 0x0021/0x01)	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
	Not Applicable	-	-	Not Applicable
Modify BNC	0	MO	OD	Not Applicable
(GB/ModBNC, 0x0021/0x02)	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
	Not Applicable	-	-	Not Applicable

Release BNC	M (NOTE)	M	MOD		Not Applicable
(GB/RelBNC, 0x0021/0x03)	Signal Parameters	Mandatory/ Optional	Suppo Value		Duration Provisioned Value:
	General cause (Generalcause,0x01)	O	Norn Relea Unavail Resour Failu Tempor Failu Perman	se/ lable rces/ re rary/ re	Not Applicable
	Failure Cause	0	Interword Erro Unsuppe	r/ orted ET	Not Applicable
	(Failurecause,0x02) Reset (Reset,0x03)	0	STRIN 0/ 1		Not Applicable
Events	Mandatory/	<u> </u>	Used in c		• •
Events	Optional		Oseu III O	Ullillall	u•
BNC Change	M		ADD, MOI	D. NOTI	FY
(GB/BNCChange, 0x0021/0x01)	Event	Mandatory/	Supported		Provisioned
0.0021/0.01)	Parameters	Optional	Value	es:	Value:
	Type (Type ,0x01)	M	Bear Establis Bear	hed/	Not Applicable
			Modifi Bear Mofifica Failu	ied/ er ation	
	ObservedEvent	Mandatory/	Modifi Bear Mofifica	ied/ er ation re	Provisioned
		•	Modifi Bear Mofifica Failu Suppor	ied/ er ation re rted	Provisioned Value:
	ObservedEvent Parameters Type (Type,0x01)	Mandatory/ Optional M	Modifi Bear Mofifica Failu	ied/ er ation re rted es: er hed / er ied/ er ation	Value:
Statistics	Parameters	Optional	Modification Modification Modification Modification Modification Modification Failu	ied/ er ation re rted es: er hed / er ied/ er ation re	
Statistics	Parameters Type (Type,0x01)  Mandatory/	Optional M	Modification Modification Modification Modification Modification Modification Failu	ied/ er ation re rted es: er hed / er ied/ er ation re	Value:  Not Applicable
Statistics	Parameters Type (Type,0x01)	Optional M	Modification Modification Modification Modification Modification Modification Failu	ied/ er ation re rted es: er hed / er ied/ er ation re	Value:  Not Applicable
	Parameters Type (Type,0x01)  Mandatory/	Optional M	Modification Bear Mofification Bear Modification Bear Modification Bear Modification Bear Mofification Bear Mofification Bear Modification Bear Modification Bear Mofification	ied/ er ation re rted es: er hed / er ied/ er ation re	Value:  Not Applicable

#### C.14.16 Bearer Control Tunnelling Package

Table C.14.16: Package Usage Information For Bearer Control Tunnelling Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
Tunneling Options (BT/TunOpt, 0x0022/0x01)	M	ADD	1 /2	Not Applicable
Signals	Mandatory/ Optional	Used in co	ommand:	Duration Provisioned Value:
Bearer	M	ADD,	MOD	Not Applicable
Information				Duration Provisioned
Transport (BT/BIT,	Signal Parameters	Mandatory/ Optional	Supported Values:	Value:
0x0022/0x01)	Bearer Information Tunnel (BIT,0x01)	М	Octet String	Not Applicable
Events	Mandatory/		Used in comm	and:
	Optional			
Tunnel	M		ADD, MOD, NO	TIFY
Indication (BT/TIND,	Event	Mandatory/	Supported	Provisioned Value:
0x0022/0x01)	Parameters	Optional	Values:	
	Not applicable	-	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	Bearer Information transport (BIT,0x01)	M	Octet String	Not Applicable
Statistics	Mandatory/	Used in comma	and:	Supported Values:
	Optional			
None	-	-		-
Error Codes		Mandat	ory/ Optional	
None			-	

#### C.14.17 Basic Call Progress Tones Generator with Directionality

Table C.14.17: Package Usage Information For Basic Call Progress Tones Generator with Directionality Package

Properties	Mandatory/	Used in	Supported	Provisioned Value:
	Optional	command:	Values:	

None				
None Signals	- Mandatory/	Used in command:	-	- Duration Provisioned
Signais	•	oscu in command.		Value:
	Optional			
Dial Tone (bcg/bdt,	О	ADD, MO	D, MOVE	Value
0x0023/0x0040)	Signal Parameters	Mandatory/	Supported	Duration Provisioned
Ringing Tone		Optional	Values:	Value:
(bcg/brt,0x0023/0x0041)		Орионаг	values.	
Busy Tone (bcg/bbt,0x0023/0x0042)	Tone Direction	M	Internal /	Default=External
Congestion Tone	(btd, 0x0001)		External	
(bcg/bct,0x0023/0x0043)				
Special Information Tone				
(bcg/bsit,0x0023/0x0044)				
Warning Tone				
(bcg/bwt,0x0023/0x0045) Payphone Recognition				
Tone				
(bcg/bpt,0x0023/0x0046)				
Call Waiting Tone				
(bcg/bcw,0x0023/0x0047)				
Caller Waiting Tone				
(bcg/bcr, 0x0023/0x0048)				
Pay Tone (bcg/bpy, 0x0023/0x0049)				
Events	Mandatory/	Used in command:	<u> </u>	
	Optional			
N	- <b>F</b> · · · ·			
None	- Event	Mandatory/	Supported	Provisioned Value:
		•		1 Tovisioned value.
	Parameters	Optional	Values:	
	- ObservedEvent	- Mandatory/	- Cupported	Provisioned Value:
		,	Supported	riovisioned value.
	Parameters	Optional	Values:	
Statistics	- Mandatory/	- Used in command:	- Suppor	-ted Values:
	•	2 See III Sommand.	Suppor	
	Optional			
None	-	-		-
Error Codes	Mandatory/ Optiona	1	<u> </u>	
None				

# C.14.18 Expanded Call Progress Tones Generator Package

#### Table C.14.18: Package Usage Information For Expanded Call Progress Tones Generator Package

Properties	Mandatory/	Used in	Supported	Provisioned Value:
	Optional	command:	Values:	

None	-	-	-	-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
Comfort Tone	0	ADD, MO	D, MOVE	Value
(xcg/cmft,0x0024/0x004a) Off-hook warning Tone (xcg/roh, 0x0024/0x004b)	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
Negative Acknowledgement (xcg/nack,0x0024/0x004c) Vacant Number Tone (xcg/vac, 0x0024/0x004d) Special Conditions Dial Tone (xcg/spec,0x0024/0x004e)	Tone Direction (btd, 0x0001)	M	Internal / External	Default=External
Events	Mandatory/	Used in command:		<u> </u>
	Optional			
None	-		-	
	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	-	-	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	-	-	-	-
Statistics	Mandatory/	Used in command:	Suppo	orted Values:
	Optional			
None	-	-		-
Error Codes	Mandatory/ Optiona	il		
None			-	

# C.14.19 Basic Services Tones Generation Package

Table C.14.19: Package Usage Information For Basic Services Tones Generation Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
None	-	-	-	-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
Recall Dial Tone	0	ADD, MOD, MOVE		Value
(srvtn/rdt,0x0025/0x004f)	Signal Parameters	Mandatory/	Supported	Duration Provisioned
Confirmation Tone (srvtn/conf,0x0025/0x0050)		Optional	Values:	Value:

Held Tone	Tone Direction	M	Internal /	Default=External
(srvtn/ht,0x0025/0x0051)	(btd, 0x0001)		External	
Message Waiting Tone				
(srvtn/mwt,0x0025/0x0052)				
Events	Mandatory/	Used in command:		
	Optional			
None	-		-	
	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	-	-	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	-	-	-	-
Statistics	Mandatory/	Used in command:	Supporte	ed Values:
	Optional			
None	-	-		-
Error Codes	Mandatory/ Optiona	al	,	
None			-	

#### C.14.20 Expanded Services Tones Generation Package

Table C.14.20: Package Usage Information For Expanded Services Tones Generation Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
None	-	-	-	-
Signals	Mandatory/ Optional	Used in command	:	Duration Provisioned Value:
Call Transfer Dial Tone	0	ADD, MO	D, MOVE	Value
(xsrvtn/xferdt,0x0026/0x0053) Call Forward Tone (xsrvtn/cft,0x0026/0x0054)	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
Credit Card service Tone (xsrvtn/ccst,0x0026/0x0055) Special Recall Dial Tone (xsrvtn/srdt,0x0026/0x0056)	Tone Direction (btd, 0x0001)	M	Internal / External	Default=External
Events	Mandatory/ Optional	Used in command	:	1
None	-		-	
	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	-	-	-	-

	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	-	-	-	-
Statistics	Mandatory/	Used in command	: Supp	oorted Values:
	Optional			
None	-	-		-
Error Codes	Mandatory/ Option	al		
None			-	

# C.14.21 Intrusion Tones Generation Package

Table C.14.21: Package Usage Information For Intrusion Tones Generation Package

Properties None	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
Intrusion Pending Tone (int/pend,0x0027/0x0057) Intrusion Tone (int/int,0x0027/0x0058)	O Signal Parameters	ADD, MO Mandatory/ Optional	D, MOVE Supported Values:	Value  Duration Provisioned  Value:
Intrusion Reminder Tone (int/rem,0x0027/0x0059) Toll Break-In Tone (int/tbi,0x0027/0x005a) Intrusion Queue Tone (int/intque,0x0027/0x005b) Busy Verification Tone (int/bv,0x0027/0x005c)	Tone Direction (btd, 0x0001)	M	Internal Externa	
Events	Mandatory/ Optional	Used in command:		,
None	- Event Parameters - ObservedEvent Parameters	Mandatory/ Optional  - Mandatory/ Optional	Supported Values:  Supported Values:	Provisioned Value:  - Provisioned Value:
Statistics	Mandatory/ Optional	Used in command:	Sup	pported Values:

None	-	-	-		
Error Codes	Mandatory/ Optiona	Mandatory/ Optional			
None		-			

# C.14.22 Business Tones Generation Package

Table C.14.22: Package Usage Information For Business Tones Generation Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
None	-	-	-	-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
Off-Hook Queuing Tone	O	ADD, MO		Value
(biztn/ofque,0x0028/0x005d) Expensive Route Warning Tone	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
(biztn/erwt,0x0028/0x005e) Distinctive Dial Tone (biztn/ddt,0x0028/0x005f) Internal Dial Tone (biztn/idt,0x0028/0x0060)	Tone Direction (btd, 0x0001)	М	Internal / External	Default=External
Events	Mandatory/ Optional	Used in command:		
None	-		-	
	Event	Mandatory/	Supported	Provisioned Value:
 	Parameters	Optional	Values:	
	-	-	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	-	-	-	-
Statistics	Mandatory/	Used in command: Supported Values:		ted Values:
	Optional			
None	-	-		-
Error Codes	Mandatory/ Optional			
None			-	

# C.14.23 3GUP Package

Table C.14.23: Package Usage Information For 3GUP Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
UP Mode of operation (threegup/mode, 0x002f/0x0001)	M	ADD, MOD, MOVE	ALL	Default=1 (transparent)
UP versions (threegup/ upversions, 0x002f/0x0002)	М	ADD, MOD, MOVE	1, 2	Default = 1
Delivery of erroneous SDUs (threegup/ delerrsdu, 0x002f/0x0003)	М	ADD, MOD, MOVE	ALL	Default = 3 (NA)
Interface (threegup/ interface, 0x002f/0x0004)	М	ADD, MOD, MOVE	ALL	None
Initialisation Direction (threegup/ initdir, 0x002f/0x0005)	М	ADD, MOD, MOVE	ALL	None
Signals	Mandatory/ Optional	Used in c	ommand:	Duration Provisioned Value:
None	-		_	-
	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
Events	Mandatory/ Optional	-	Used in comman	d:
None	Event Parameters	Mandatory/ Optional	Supported Values:	Provisioned Value:
	ObservedEvent Parameters	Mandatory/ Optional	Supported Values:	Provisioned Value:
Statistics	Mandatory/ Optional	Used in comma	ind:	Supported Values:
None	-	-		-
Error Codes	-	Manda	tory/ Optional	
None			-	

# C.14.24 Modification of Link Characteristics Bearer Capability

Table C.14.24: Package Usage Information For Modification of Link Characteristics Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
None	-	-	-	-
Signals	Mandatory/ Optional	Used in c	Duration Provisioned Value:	
None	-	-	•	-
	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
	-	-	-	-

Events	Mandatory/ Optional	Used in command:			
Bearer	M	ADD, MOD, MOVE NOTIFY			
Modification	Event	Mandatory/	Supported	Provisioned Value:	
Support Event.(	Parameters	Optional	Values:		
threegmlc/	None	-	-	-	
mod_link_supp,	ObservedEvent	Mandatory/	Supported	Provisioned Value:	
0x0046/0x0001)	Parameters	Optional	Values:		
	None	-	-	-	
Statistics	Mandatory/ Optional	Used in command: Su		Supported Values:	
None	-	-		-	
Error Codes		Mand	atory/ Optional		
None		-			

# C.14.25 TFO package

Table C.14.25: Package Usage Information For TFO

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
TFO Activity Control (threegtfoc /tfoenable, (0x0031/0x0001)	M	ADD, MOD, MOVE	ALL	None (default =Off)
TFO Codec List (threegtfoc / codeclist, (0x0031/0x0002)	M	ADD, MOD, MOVE	See 3GPP TS 29.232 §15.2.2	None
Signals	Mandatory/ Optional	Used in c	ommand:	Duration Provisioned Value:
None	-		-	-
	Signal Parameters	Mandatory/	Supported	<b>Duration Provisioned</b>
		Optional	Values:	Value:
	-	•	-	-
Events	Mandatory/ Optional		Used in command	:
Optimal Codec	0		ADD, MOD, MOVE, NO	TIFY
Event	Event	Mandatory/	Supported	Provisioned Value:
(threegtfoc /	Parameters	Optional	Values:	
codec_modify,	None	-		
(0x0031/0x0010)	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	Optimal Codec	M	See 3GPP TS	None
	Type (optimalcodec 0x0011)		29.232 §15.2.2	
Codec List Event	0		ADD, MOD, MOVE, NO	TIFY
(threegtfoc	Event	Mandatory/	Supported	Provisioned Value:
/distant_codec_list,	Parameters	Optional	Values:	
(0x0031/0x0012)	None			
	ObservedEvent Parameters	Mandatory/ Optional	Supported Values:	Provisioned Value:
	Distant Codec List	M	See 3GPP TS	None
	(distlist 0x0013)		29.232 §15.2.2	
TFO Status Event	0		ADD, MOD, MOVE, NO	TIFY
(threegtfoc /	Event	Mandatory/	Supported	Provisioned Value:
TFO_status)	Parameters	Optional	Values:	
(0x0031/0x0014)	None	•	-	-
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	TFO Status	M	ALL	None
	(tfo_status 0x0015)			

Statistics	Mandatory/ Optional	Used in command:	Supported Values:		
None	-	-	-		
Error Codes	Mandatory/ Optional				
		-			

# C.14.26 Circuit Switched Data package

Table C.14.26: Package Usage Information For CSD

Properties	Mandatory/ Optional	Used in command:	Support	ed Values:	Provisioned Value:	
PLMNBC (threegcsd /plmnbc, 0x0030/0x0001)	M	ADD, MOD, MOVE	subclaus capability TS 24	ed in the se "Bearer y" in 3GPP .008 [3].	None	
GSM Channel Coding (threegcsd / gsmchancod, 0x0030/0x0002)	M	ADD, MOD, MOVE	Chosen ( specifi subclaus Channe TS 48	ond octet of Channel as ed in the ee "Chosen I" in 3GPP .008 [9].	None	
Signals	Mandatory/ Optional		ommand:		Duration Provisioned Value:	
Activate Protocol	M	M	OD		-	
(threegcsd/ actprot,	Signal Parameters	Mandatory/ Optional		ported lues:	Duration Provisioned Value:	
0x0030/0x0001)	Local Peer Role (Localpeer 0x0001)	0		<b>LL</b>	None	
Events	Mandatory/ Optional			in command		
Protocol	М		ADD, I	MOD, NOTIF		
Negotiation Result	Event	Mandatory/		ported	Provisioned Value:	
(threegcsd /	Parameters	Optional	Va	lues:		
protres,	None	-		-	-	
(0x0030/0x0001)	ObservedEvent	Mandatory/	Sup	ported	Provisioned Value:	
	Parameters	Optional	Va	lues:		
	Negotiation Result (result 0x0001)	М	P	<b>LL</b>	None	
	Possible Failure Cause (cause 0x0002)	0	P	ALL	None	
Rate Change	M		ADD, I	MOD, NOTIF	Y	
(threegcsd / ratechg,	Event Parameters	Mandatory/ Optional		ported lues:	Provisioned Value:	
(0x0030/0x0002)	None	-		-	-	
	ObservedEvent Parameters	Mandatory/ Optional	Va	ported lues:	Provisioned Value:	
	New Rate (rate 0x0001)	М	2400, 4800, 9600, 14400, 28800, 57600		None	
Statistics	Mandatory/ Optional	Used in comma			Supported Values:	
None	-	-			-	
Error Codes		Manda	tory/ Optio	nal		
None			-	·		

#### C.14.27 Enhanced Circuit Switched Data package

Table C.14.27: Package Usage Information For Enhanced CSD

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
Bitrate (threegcsden /bitrate, 0x0082/0x0003)	М	ADD, MOD, MOVE	2400, 4800, 9600, 14400, 28800, 57600, 64000	None
Signals	Mandatory/ Optional	Used in c	ommand:	Duration Provisioned Value:
None	-		-	-
	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
	-	-	-	-
Events	Mandatory/ Optional	Used in command:		
None	-		-	
	Event Parameters	Mandatory/ Optional	Supported Values:	Provisioned Value:
	-	•	-	-
	ObservedEvent Parameters	Mandatory/ Optional	Supported Values:	Provisioned Value:
	-	-	-	-
Statistics	Mandatory/ Optional	Used in command: So		upported Values:
None	-	-		-
Error Codes		Manda	tory/ Optional	
None			-	

#### C.14.28 3G Expanded Call Progress Tones package

Table C.14.28: Package Usage Information For 3G Expanded Call Progress Tones

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:		
None						
Signals	Mandatory/ Optional	Used in c	Duration Provisioned Value:			
CAMEL Prepaid	М	ADD, MO	D, MOVE	-		
Warning Tone (threegxcg/cpwt,	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:		
0x0032/0x004f)	ToneDirection(td, 0x0010)	M	Ext, Int	Default=Ext		
Events	Mandatory/ Optional	Used in command:				
None	-		-			
	Event Parameters	Mandatory/ Optional	Supported Values:	Provisioned Value:		
	-	-	-	-		
	ObservedEvent Parameters	Mandatory/ Optional	Supported Values:	Provisioned Value:		
		-	-	-		
Statistics	Mandatory/ Optional	Used in command:		upported Values:		
None	-	-		-		
Error Codes		Manda	Mandatory/ Optional			
None			-			

# C.14.29 Cellular Text Telephone Modem Text Transport Package

Table C.14.29: Package Usage Information For CTM

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:		
Termination connection state(threegctm/ connstate,	М	ADD, MOD, MOVE	ALL			
0x0068/0x0001)						
Text Transport (threegctm/ trpt (0x0068/0x0002	M	ADD, MOD, MOVE	СТМ			
Text Protocol Version (threegctm/ textproto 0x0068/0x0003)	M	ADD, MOD, MOVE	ALL	Default=Idle		
Signals	Mandatory/ Optional	Used in c	ommand:	Duration Provisioned Value:		
None	-	•	-	-		
	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:		
	-	-		-		
		Used in command:				
Events	Mandatory/ Optional					
Connection State	Optional M		ADD, MOD, MOVE, NO	OTIFY		
Connection State Change (threegctm/ connchange	Optional  M Event Parameters	Mandatory/ Optional				
Connection State Change (threegctm/	Optional  M Event Parameters None	Optional -	ADD, MOD, MOVE, NO Supported Values:	OTIFY Provisioned Value:		
Connection State Change (threegctm/ connchange	Optional  M Event Parameters		ADD, MOD, MOVE, No	OTIFY		
Connection State Change (threegctm/ connchange	Optional  M Event Parameters None ObservedEvent	Optional - Mandatory/ Optional M	ADD, MOD, MOVE, No Supported Values: - Supported Values: As property connstate	OTIFY Provisioned Value:		
Connection State Change (threegctm/ connchange	Optional  M Event Parameters None ObservedEvent Parameters	Optional - Mandatory/ Optional	ADD, MOD, MOVE, No Supported Values: - Supported Values: As property connstate	OTIFY Provisioned Value:		
Connection State Change (threegctm/ connchange 0x0068/0x0001)	Optional  M Event Parameters None ObservedEvent Parameters Connchng Mandatory/	Optional - Mandatory/ Optional M	ADD, MOD, MOVE, No Supported Values: - Supported Values: As property connstate	OTIFY Provisioned Value: - Provisioned Value: -		
Connection State Change (threegctm/ connchange 0x0068/0x0001)  Statistics  Number of Characters Transferred (threegctm/ chartrans	Optional  M Event Parameters None ObservedEvent Parameters Connchng  Mandatory/ Optional	Optional  - Mandatory/ Optional  M Used in comma	ADD, MOD, MOVE, No Supported Values: - Supported Values: As property connstate	OTIFY Provisioned Value: - Provisioned Value: -		

#### C.14.30 IP Transport package

Table C.14.30: Package Usage Information For IP Transport

Properties	Mandatory/ Optional	Used in command:	Supported	d Values:	Provisioned Value:
IP v4 Transport Address (threegiptra/ipv4trans, 0x0083/0x0001)	M	ADD, MOD	Transpo Address i TS 25.4	in 3GPP	
IP v6 Transport Address (threegiptra/ipv6trans, 0x0083/0x0002)	M	ADD, MOD	Transpor Address i TS 25.4	in 3ĠPP	
UDP Port (threegiptra/UDport, 0x0083/0x0003)	M	ADD, MOD	lu tran Associa 3GPP TS [20	ation in S 25.413	
Signals	Mandatory/ Optional	Used in c	ommand:		Duration Provisioned Value:
None	-	•	•		-
	Signal Parameters	Mandatory/ Optional	Suppo Valu		Duration Provisioned Value:
Events	- Mandatory/ Optional	-	Used in	command	-  :
None	•			-	
	Event Parameters	Mandatory/ Optional	Suppo Valu		Provisioned Value:
	-	-	-		-
	ObservedEvent Parameters	Mandatory/ Optional	Supported Values:		Provisioned Value:
	-	-	-		-
Statistics	Mandatory/ Optional	Used in comma	nand: S		upported Values:
None	-	-			-
Error Codes		Mandat	ory/ Option	al	
None		- · · · · · · · · · · · · · · · · · · ·			

#### C.14.31 Flexible Tone Generator package

Table C.14.31: Package Usage Information For Flexible Tone Generator

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
None	-	-	-	-
Signals	Mandatory/	Used in c	ommand:	Duration Provisioned
	Optional			Value:
Flexible Tone	M	ADD, MO	D, MOVE	-
(threegflex/ft, 0x0084/0x0050)	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
	Burst list direction(bld, 0x0001)	М	Int, Ext	Default=Ext
	NumberOfBursts (nob, 0x0002)	M	1-3	Default = 1
	BurstInterval (bi, 0x0003)	М	1-1200	Default = 2
	numberOfTonesInBurst (notib 0x0004)	М	1-3	Default=3
	toneDuration (td 0x0005)	М	1-20	Default=2

	toneInterval (ti 0x0006)	М	1-2	20	Default=2
Events	Mandatory/ Optional		Used in	commar	nd:
None	-	-			
	Event Parameters	Mandatory/ Optional	Suppo Valu		Provisioned Value:
	-	•	-		-
	ObservedEvent	Mandatory/	Suppo		Provisioned Value:
	Parameters	Optional	Valu	es:	
	-	-	-		-
Statistics	Mandatory/ Optional	Used in command:		Supported Values:	
None	-	-			-
Error Codes		Mandatory/ Optional			
None			-		

# C.14.32 Trace Package

Table C.14.32: Package Usage Information For Trace Package

Properties	Mandatory/ Optional	Used in command:	Supported Values:	Provisioned Value:
Trace Activity Control (calltrace/traceactivityrequest, 0x0097/0x0001)	M	ADD, MOD	Trace Session is activated in MGW / Trace Session is deactivated in MGW	Not Applicable
IMSI (calltrace/imsi, 0x0097/0x0002)	M	ADD, MOD	Octet string	Not Applicable
IMEI(SV) (calltrace/imei_sv, 0x0097/0x0003)	M	ADD, MOD	Octet string	Not Applicable
Trace Reference (calltrace/tracereference, 0x0097/0x0004)	M	ADD, MOD	Octet string	Not Applicable
Trace Recording Session Reference (calltrace/tracerecsessionref, 0x0097/0x0005)	М	ADD, MOD	Octet string	Not Applicable
Trace Depth (calltrace/tracedepth, 0x0097/0x0006)	M	ADD, MOD	Octet string	Not Applicable
Triggering Events (calltrace/triggeringevent, 0x0097/0x0007)	M	ADD, MOD	Octet string	Not Applicable
List of interfaces (calltrace/listofinterfaces, 0x0097/0x0008)	M	ADD, MOD	Octet string	Not Applicable
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
None	- Signal Parameters	Mandatory/ Optional	Supported Values:	- Duration Provisioned Value:

	-	-		-	-
Events	Mandatory/		Used in	comman	d:
	Optional				
Trace result	M	P	ADD, M	OD, NOTI	FY
(calltrace/tracact, 0x0097/0x0001)	Event	Mandatory/	Supp	orted	Provisioned
0x0007//0x0001)	Parameters	Optional	Va	lues:	Value:
	None	-		-	-
	ObservedEvent	Mandatory/ Supported			Provisioned
	Parameters	Optional Val		lues:	Value:
	TraceActivation Result (res,0x0001)	M	Succ activ Failure	race esfully vated/ e in trace vation	Not Applicable
Statistics	Mandatory/	Used in comm	and:	Sup	ported Values:
	Optional				
None	-	-			-
Error Codes		Mandator	y/ Optio	nal	
None			-		

# C.14.33 ASCI Group call

Table C.14.33: Package usage information for ASCI Group Call package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
Number of needed conferenceterminations (threegasci/nct,	M	ADD	upto 32	None
0x00b2/0x0001)				
Number of desired listener context terminations (threegasci/nlct, 0x00b2/0x0002)	0	ADD	upto 32	None
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
None	-	-		-
	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
	-	-	-	-

Events	Mandatory/	Used in command:			
	Optional				
None	-	-			
	Event	Mandatory/	Supporte	d	Provisioned Value:
	Parameters	Optional	Values:		
	-	-	-		-
	ObservedEvent	Mandatory/	Supported		Provisioned Value:
	Parameters	Optional	Optional Values:		
	-	-	-		-
Statistics	Mandatory/	Used in command:		Supported Values:	
	Optional				
None	-	-		-	
Error Codes	Mandatory/ Optiona	1		1	
None	-				

#### C.14.34 IP domain connection

Table C.14.34: Package usage information for IP domain connection package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
IP Realm Identifier (ipdc /realm,	M	ADD	String	Operator Defined (NOTE)
0x009d /0x0001)				
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
None	-	-		-
	Signal Parameters	Mandatory/ Optional	Supported Values:	Duration Provisioned Value:
	-	-	-	-
Events	Mandatory/ Optional	Used in command:		
None	-	-		
	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	

	-	-	-		-
	ObservedEvent	Mandatory/	Supported	1	Provisioned Value:
	Parameters	Optional	Values:		
	-	-	-		-
Statistics	Mandatory/	Used in command:	•	Supported	Values:
	Optional				
None	-	-		-	
Error Codes	Mandatory/ Optional				
None	-				
		ured such that if the MG\ s then the default IP real			P realm identifier and the

# C.14.35 Inactivity Timer Package

Table C.14.35: Package Usage Information for Inactivity Timer package

Properties	Mandatory/	Used in command:	Supported Values:	Provisioned Value:
	Optional			
None	-	-	-	-
Signals	Mandatory/ Optional	Used in command:		Duration Provisioned Value:
None	-		-	-
	Signal Parameters	Mandatory/	Supported	Duration Provisioned
		Optional	Values:	Value:
	-	-	-	-
Events	Mandatory/	Used in command:		
	Optional			
Inactivity Timeout (it/ito,	M		MOD, NOTIFY	,
0x0045/0x0001	Event	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	Maximum Inactivity Time (mit,0x0001)	M	Any integer	unspecified
	ObservedEvent	Mandatory/	Supported	Provisioned Value:
	Parameters	Optional	Values:	
	None	-	-	-

Statistics	Mandatory/	Used in command:	Supported Values:
	Optional		
None	-	-	-
Error Codes	Mandatory/ Optional		
None		-	

# C.15 Mandatory support of SDP and Annex C information elements

Mandatory support of SDP and Annex C information elements shall be in accordance with subclause 11.

Table C.15: Mandatory Annex C and SDP information elements

Information Element	Annex C Support	SDP Support
Codec	Acodec	(NOTE1)
Bearer Service Characteristics	TMR	
BNC-Id	BIR (NOTE 2)	
BIWF_Address	NSAP (NOTE 3)	
ISDN BC	USI	

- NOTE 1: When text encoding is used, all the Information Elements shall be supported via their corresponding SDP parameters, as specified in subclause 11. Annex C SDP equivalents shall not be used.
- NOTE 2: The BIR length shall be fixed at 4 Octets.
- NOTE 3: The NSAP length shall be fixed at 20 Octets. The content of the RNC Transport Address or BIWF Address depends on the used transport interface but the principle is that NSAP format is used. See 3GPP TS 25.414 [21] for RNC and for core network see 3GPP TS 29.414 [32]. For IP the IANA ICP IDI format of the NSAP addressing format as specified in X.213 [33] shall be used. For Ipv4 networks the IPv4 format recommended by X.213 shall be adopted.

#### C.16 Optional support of SDP and Annex C information elements

Table C.16: Optional Annex C and SDP information elements

Information Element	Annex C Support	SDP Support

# Annex D (informative): Change history

					Change history		
Date	TSG#	TSG Doc.	CR	R e v	Subject/Comment	Old	New
Sep 2000					Initial draft created after N4#4 based on N4-000620	0.0.1	0.1.0
October 2000					Updated after N4 R2000 Ad Hoc Stockholm based on N4-00823 and N4-000842	0.1.0	0.2.0
Nov 2000					Reference for MTP 3B corrected; RFC reference for SCTP added	0.2.0	0.3.0
Nov 2000					Updated according to N4-000996, N4-000998, N4-000999,	0.3.0	1.0.0
					N4-001000, N4-001021, N4-001028 & N4-001097 as agreed in CN4 #5		
Nov 2000	CN#10				To TSG-CN Plenary #10 for information	1.0.0	1.1.0
Jan 2001					Updated according to NJ-010069, NJ-010030, NJ-010098, NJ-010094, NJ-010033, NJ-010097, NJ-010095, NJ-010112 as agreed in the Joint CN3/CN4 Meeting held during the CN4#6	1.1.0	1.1.1
Jan 2001					References ordered by specification/recommendation number; references to 3GPP specifications include full titles as shown on the title page; literal reference numbers and references to subclauses replaced with fields; all table cells outlined with 0.5pt lines; appropriate 3GPP paragraph styles applied.	1.1.1	1.2.0
Feb 2001					Updated according to N4-010245, N4-010248, N4-010249, N4-010303, N4-010304, N4-010305, agreed in CN4 Release 4 ad hoc, Madrid. References to Q.1902.x replaced by references to 29.205; 3GPP styles applied consistently; form for ITU-T recommendations in text is now "ITU-T Recommendation A.NNNN".	1.2.0	1.3.0
Mar 2001					Updated according to N4-010384, N4-010401 (part) & N4-010472, agreed in CN4 in Sophia Antipolis. References to Q.1950, Q.1970 and Q.1990 replaced by reference to 29.205. Reference to SIP-T deleted. Editor's note in 15.1.2.3 deleted. Editorial clean-up.	1.3.0	2.0.0
Mar 2001					Sent to TSG CN#11 for approval	2.0.0	2.1.0
Mar 2001	CN#11				References updated after comments in TSG CN #11 Approved in CN#11	2.1.0	4.0.0
Jun 2001	CN#12	NP-010284	1	1	Text encoding of codec information on Mc interface	4.0.0	4.1.0
Jun 2001	CN#12	NP-010284	4		ATM-IP signalling transport Interworking	4.0.0	4.1.0
Jun 2001	CN#12	NP-010284	5			4.0.0	4.1.0
Jun 2001	CN#12	NP-010284	6	3	Clarifications in 3GUP package	4.0.0	4.1.0
Jun 2001	CN#12	NP-010284	7	1		4.0.0	4.1.0
Jun 2001	CN#12	NP-010284	8	1	Updates to UP Relay Function, Appendix A	4.0.0	4.1.0
Sep 2001	CN#13				Editorial clean up	4.1.0	4.2.0
Sep 2001	CN#13	NP-010452	009		Addition of package numbers allocated by IANA	4.1.0	4.2.0
Sep 2001		NP-010452	010	1		4.1.0	4.2.0
Dec 2001	CN#14	NP-010619	011	1	Inclusion of H.248 Annex L, "Error Codes and Service Change Reason Description"	4.2.0	4.3.0
Dec 2001		NP-010619	012		Removal of the Reuse Idle Package	4.2.0	4.3.0
Dec 2001	CN#14	NP-010619	014		Correction of Release Procedures	4.2.0	4.3.0
Dec 2001		NP-010619	015		Clarification Of Use Of 3GUP package For PCM	4.2.0	4.3.0
Dec 2001		NP-010619	016		Corrections to ABNF coding of PackageIDs	4.2.0	4.3.0
Dec 2001		NP-010619	017		Correction of BICC packages	4.2.0	4.3.0
Dec 2001		NP-010619	020		Correction of 3GUP package sub-list type	4.2.0	4.3.0
Dec 2001		NP-010631	013		min oddonom or morr congestion manage	4.3.0	5.0.0
Dec 2001	CN#14	NP-010631	019	2	Maintenance locking of MG	4.3.0	5.0.0
Jan 2002					A coverdheet fixed	5.0.0	5.0.1
Mar 2002		NP-020029	025		Naming convention for TDM resources	5.0.1	5.1.0
Mar 2002		NP-020029	027		Correction of Bearer Modification Handling	5.0.1	5.1.0
Jun 2002		NP-020260	030	1	GTT enhancement on Mc	5.1.0	5.2.0
Jun 2002		NP-020260	032		Update to TFO package to explicitly reference TS 26.103 for 3GPP codecs	5.1.0	5.2.0
Jun 2002		NP-020260	033	2		5.1.0	5.2.0
Jun 2002		NP-020260	034		Allow the usage of logical port	5.1.0	5.2.0
Jun 2002		NP-020249	036		Correction subclause 14.1.6 of 3GPP TS 29.332	5.1.0	5.2.0
Sep 2002		NP-020459	037		Telephony	5.2.0	5.3.0
Sep 2002	CN#17	NP-020459	038	1	Alignment of text in TS 29.232 for Global Text Telephony	5.2.0	5.3.0

				_	Change history		
Date	TSG #	TSG Doc.	CR		Subject/Comment	Old	New
				e v			
Sep 2002	CN#17	NP-020459	039	1	Alignment between prepare bearer and reserve bearer in TS	5.2.0	5.3.0
					29.232 for Global Text Telephony.		
Sep 2002	CN#17	NP-020463	044	1	Missing Properties For Circuit Switched Data Calls	5.2.0	5.3.0
Dec 2002		NP-020579	041		Termination ID Correction	5.3.0	5.4.0
Dec 2002		NP-020597	042		New Procedures/Package for handling IP transport for Iu interface	5.3.0	5.4.0
Dec 2002		NP-020578			Updates to support Codec Modification	5.3.0	5.4.0
Dec 2002		NP-020594	052	2	CAMEL4 flexible tone package	5.3.0	5.4.0
Mar 2003		NP-030108	053	_	Update to 3GUP – clarification of IuUP Initialisation handling	5.4.0	5.5.0
Mar 2003	CN#19	NP-030108	054	1	Update to 3GUP – addition of reference to SDU format definition for Nb interface	5.4.0	5.5.0
Jun 2003	CN#20	NP-030211	057	1	Alignment of references after renumbering of H248 by ITU-T	5.5.0	5.6.0
Jun 2003		NP-030211	059		Clarification of handling of DTMF in split architecture – DTMF	5.5.0	5.6.0
Jun 2000	020	5552	000		timing	0.0.0	0.0.0
Mar 2004	CN#23	NP-040052	061		Addition of Package Id for CTM	5.6.0	5.7.0
Mar 2004					Addition of Package Ids allocated by IANA (0082 - 0084)	5.6.0	5.7.0
Sep 2004		NP-040392	063		Correction of Procedure "Activate Voice Processing Function"	5.7.0	5.8.0
Sep 2004		NP-040418	075	2		5.7.0	5.8.0
Sep 2004		NP-040418	064		Provisioning Of Base Root package properties	5.7.0	5.8.0
Sep 2004		NP-040418	065		Service Change Address	5.7.0	5.8.0
Sep 2004		NP-040418	066		Use Of Event Buffers	5.7.0	5.8.0
Sep 2004		NP-040418	067 068		Digit Maps IP secured transport	5.7.0 5.7.0	5.8.0 5.8.0
Sep 2004 Sep 2004		NP-040418 NP-040418	068		Termination Restoration	5.7.0	5.8.0
Sep 2004		NP-040416	074	1	Use Of Statistics	5.7.0	5.8.0
Dec 2004		NP-040592	072		Correction of distant codec list	5.8.0	5.9.0
Dec 2004		NP-040528	079		IP transport package Duplicate property ID in ASN.1 encoding	5.8.0	5.9.0
Dec 2004		NP-040529	080	1	H.248 Scope	5.8.0	5.9.0
Dec 2004	CN#26	NP-040529	081	1	Q.1950 reference	5.8.0	5.9.0
Dec 2004	CN#26	NP-040529	082		Emdedded events	5.8.0	5.9.0
Dec 2004		NP-040529	084		Multiple streams	5.8.0	5.9.0
Dec 2004		NP-040529	085			5.8.0	5.9.0
Dec 2004		NP-040529	088	2	Procedures and Commands – removal of unwanted commands	5.8.0	5.9.0
Dec 2004		NP-040547	092	_	Update of referenced H.248.1 version to version 2	5.9.0	6.0.0
Mar 2005	CN#27	NP-050057	060		Addition of the trace package	6.0.0	6.1.0
		NP-050029	101	1	Requirements for support of H.248 packages		
		NP-050029 NP-050036	104 106	1	Completion of specification of UMTS Packages  Correction of implied option for Embedded Signals and Events		
		NP-050036	108	2	Removal of the "Test" ServiceStates value from the		
		141 -030030	100	_	TerminationState Descriptor		
		NP-050036	111	1	Removal of the usage of the ContextAttributeAuditReq construct	1	
		NP-050036	113		Removal of the Multiplex descriptor		
		NP-050036	115		Removal of the Modem descriptor		
		NP-050133	120		Requirements for support of procedures		
		NP-050034	122	2	Procedure for Emergency Call Indication		
		NP-050036	128		Removal of the Error Descriptor usage in NotifyRequest		
		NP-050036	130		Updating incomplete parameter definition for MGW Resource		
		NP-050055	131		congestion handling procedures Removal of Signals on ROOT		
		NP-050055	132		Removal of usage of Stream ID in Topology descriptor		
		NP-050055	133		H.248.1 version contradiction		
		NP-050036	135		Directionality of tones and announcements		
		NP-050036	138	1			
		NP-050028	139		TFO procedure clarification	1	
		NP-050028	142	1	TFO activation without TFO Codec List	]	
		NP-050036	148	1	Commands on ROOT	]	
		NP-050036	149	1	Use Of Audit Value		
		NP-050036	151		Service Change Reasons Not supported		
		NP-050036	155	1	Descriptors in command replies		
		NP-050036	157	1	Introduction of formal profile name for Mc interface		
		NP-050036	158		Service Change for Failover not defined for Mc Interface	-	
		NP-050029	161		Removal Of VPF type	-	
		NP-050029 NP-050055	164 165	2	Alignment of TFO Actvation Procedure and associated parameters  Continuity Test		
						6.1.0	6.2.0
lun 2005	CT#29	CD_UEUGGE	10/				10 / U
Jun 2005	CT#28	CP-050236	184 187			0.1.0	0.2.0
Jun 2005	CT#28	CP-050236	187	1	Format of IP address	0.1.0	0.2.0
Jun 2005	CT#28			1		0.1.0	0.2.0

Date	TSG#	Change history  TSG Doc.   CR   R   Subject/Comment					
Date	130#	133 000.	CR	e	Subject/Comment	Old	Ne
		CP-050236	200		Removal of Option in Prepare Bearer that the MGW can chose the BNC Characteristics		
		CP-050236	202	1	Clarification Of Use of Wildcarding		
		CP-050080	209	2	Text encoding of IPBCP for IP transport on Mc interface		
		CP-050080		2	Definition of requirement for support of commands		
		CP-050238	213	1	Correction to Profile registration procedures		
Sep 2005	CT#29	CP-050435	218	1	Codec IE and Codec List on the Mc interface	6.2.0	6.3.
		CP-050290	224		Value range for BIR/NSAP		
		CP-050290	229		Clarification of "extended only" packages	_	
		CP-050290	231	1	Correction to Prepare IP Transport procedure		
		CP-050290 CP-050290	233 235	_	Wildcarding of Release Procedures Clarification to use of local peer for CSD		
		CP-050280	238	2	Correction to clarify use of FAX and Channel Mode Modify	_	
		CP-050290	242		Clarification to use of PLMN-BC, GSM-Chanel Coding for CSD		
		CP-050290		+	Clarification to use of Init Dir parameter		
		CP-050290		1	Clarification to Termination Restoration and Termination Out Of Service		
		CP-050290 CP-050290	248 250		Remove provisioning of Resource Congestion Event Remove Priority property		
		CP-050290			Notifications for IP Bearer Establishment	1	
		CP-050290	254	1	Clarification for Use of Stream Mode Property with Announcements	1	
		CP-050290	256	<u> </u>	Removal of Stream Mode Loopback	1	
		CP-050290	258		Correction to IPBCP Tunnel Procedures	1	
		CP-050290	263		Exclusion of use of Signal ID Play Tone for DTMF		
		CP-050290	265	1	Miscellaneous Open Mc corrections		
		CP-050308	266		Use of Individual Audit Token		
		CP-050438	268	1	Restriction of Service Change Address in MGW Restriction		
		CP-050308	271		Removal of BNC-cut-through-capability from Prepare Bearer procedure		
		CP-050308	272		Updating Mc interface profile "threegbicsn" to version 2		
		CP-050290	276		Defining a default value for "Echo cancelling" property		
		CP-050309	278	1	Correction on Burst interval duration	_	
Dec 2005	CT#30	CP-050308		1	Clarification of "Normal Release" parameter	620	6.4.
Jec 2005	C1#30	CP-050603 CP-050607	0261 0288		Correction to clarify TFO Package use Clarification to client/server behaviour with regards to SCTP Initiation	6.3.0	0.4.
		CP-050607	0289	1	Inclusion of Error Code #449 for unsupported parameter value	_	
		CP-050618		_	Correction to Continuity Test Procedure		
		CP-050607			Setting of CN/Outgoing Nb termination prior to bearer establishment		
		CP-050607	0304	2	Correction to use of BITRATE for CSD calls		
		CP-050607		_	Bearer Released Event to Reserve Circuit procedure		
		CP-050607	0322	1	Corrections to use of GSM-Channel Coding for CSD		
		CP-050618	0323		Correct MCC Error in implementing CR #238		
2005-12	CT#30	CP-050629	0302	2	Clean-up of hanging contexts and terminations	6.4.0	7.0.
	OT::::	CP-050629			Clarification of MGW capability change	<b>-</b>	<u> </u>
	CT#31	CP-060078			Clarification of Termination Restoration and Termination Out-of- Service procedures	7.0.0	7.1.
2006-03		CP-060064	0326		Correction To Termination State Handling		
2006-03		OD 22222	~~~~	. 1	Send Tone procedure	-	
2006-03		CP-060064				i	
2006-03		CP-060064	0330	1	ContextID in Change Flow Direction response	1	1
2006-03		CP-060064 CP-060064	0330 0333	1	ContextID in Change Flow Direction response Correction To DTMF Detection		
2006-03		CP-060064 CP-060064 CP-060078	0330 0333 0337	1	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId	- - -	
2006-03		CP-060064 CP-060064	0330 0333 0337 0338	1 1	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId Clarification to cut-through procedure Adding missing termination ID to Acknowledgement part of	- - -	
2006-03		CP-060064 CP-060064 CP-060078 CP-060064	0330 0333 0337 0338 0345	1 1 2	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId Clarification to cut-through procedure Adding missing termination ID to Acknowledgement part of notification procedures	- - - -	
2006-03		CP-060064 CP-060078 CP-060078	0330 0333 0337 0338 0345	1 1 2	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId Clarification to cut-through procedure Adding missing termination ID to Acknowledgement part of		
2006-03		CP-060064 CP-060064 CP-060078 CP-060078 CP-060064 CP-060078 CP-060064	0330 0333 0337 0338 0345 0342 0348	1 1 2	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId Clarification to cut-through procedure Adding missing termination ID to Acknowledgement part of notification procedures Correction to syntax for event descriptions Adding missing Codec, Bearer Characteristics and Bearer Service Characteristics to Prepare IP transport procedure		
		CP-060064 CP-060078 CP-060078 CP-060064 CP-060064 CP-060064 CP-060067	0330 0333 0337 0338 0345 0342 0348	1 1 2 1	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId Clarification to cut-through procedure Adding missing termination ID to Acknowledgement part of notification procedures Correction to syntax for event descriptions Adding missing Codec, Bearer Characteristics and Bearer Service Characteristics to Prepare IP transport procedure Correction on the used descriptor for trace package		
	CT#32	CP-060064 CP-060078 CP-060078 CP-060064 CP-060064 CP-060064 CP-060067 CP-060315	0330 0333 0337 0338 0345 0342 0348 0352 0377	1 1 2 1	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId Clarification to cut-through procedure Adding missing termination ID to Acknowledgement part of notification procedures Correction to syntax for event descriptions Adding missing Codec, Bearer Characteristics and Bearer Service Characteristics to Prepare IP transport procedure Correction on the used descriptor for trace package Introduction of Profile Description Annex to Mc interface	7.1.0	7.2.
	CT#32	CP-060064 CP-060078 CP-060078 CP-060064 CP-060064 CP-060064 CP-060067 CP-060315 CP-060315	0330 0333 0337 0338 0345 0342 0348 0352 0377	1 1 2 1	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId Clarification to cut-through procedure Adding missing termination ID to Acknowledgement part of notification procedures Correction to syntax for event descriptions Adding missing Codec, Bearer Characteristics and Bearer Service Characteristics to Prepare IP transport procedure Correction on the used descriptor for trace package Introduction of Profile Description Annex to Mc interface Corrections to Formats and Codes table	7.1.0	7.2.
	CT#32	CP-060064 CP-060078 CP-060078 CP-060064 CP-060064 CP-060064 CP-060067 CP-060315 CP-060315 CP-060315	0330 0333 0337 0338 0345 0342 0348 0352 0377 0379	1 1 2 1	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId Clarification to cut-through procedure Adding missing termination ID to Acknowledgement part of notification procedures Correction to syntax for event descriptions Adding missing Codec, Bearer Characteristics and Bearer Service Characteristics to Prepare IP transport procedure Correction on the used descriptor for trace package Introduction of Profile Description Annex to Mc interface Corrections to Formats and Codes table Clarification of H.248.2 version in references	7.1.0	7.2.
	CT#32	CP-060064 CP-060078 CP-060078 CP-060064 CP-060064 CP-060064 CP-060067 CP-060315 CP-060315 CP-060315 CP-060315	0330 0333 0337 0338 0345 0342 0348 0352 0377 0379 0382	1 1 2 1	ContextID in Change Flow Direction response  Correction To DTMF Detection  Clarification to use of ServiceChangeMGCId  Clarification to cut-through procedure  Adding missing termination ID to Acknowledgement part of notification procedures  Correction to syntax for event descriptions  Adding missing Codec, Bearer Characteristics and Bearer Service Characteristics to Prepare IP transport procedure  Correction on the used descriptor for trace package  Introduction of Profile Description Annex to Mc interface  Corrections to Formats and Codes table  Clarification of H.248.2 version in references  Correction of the error definition of Flextone	7.1.0	7.2.
	CT#32	CP-060064 CP-060078 CP-060078 CP-060064 CP-060064 CP-060064 CP-060067 CP-060315 CP-060315 CP-060315 CP-060315 CP-060307	0330 0333 0337 0338 0345 0342 0348 0352 0377 0379 0382 0386 0370	1 1 2 1 1	ContextID in Change Flow Direction response Correction To DTMF Detection Clarification to use of ServiceChangeMGCId Clarification to cut-through procedure Adding missing termination ID to Acknowledgement part of notification procedures Correction to syntax for event descriptions Adding missing Codec, Bearer Characteristics and Bearer Service Characteristics to Prepare IP transport procedure Correction on the used descriptor for trace package Introduction of Profile Description Annex to Mc interface Corrections to Formats and Codes table Clarification of H.248.2 version in references Correction of the error definition of Flextone Corrigendum for H.248.1 version 2	7.1.0	7.2.
2006-03	CT#32	CP-060064 CP-060078 CP-060078 CP-060064 CP-060064 CP-060064 CP-060067 CP-060315 CP-060315 CP-060315 CP-060315	0330 0333 0337 0338 0345 0342 0348 0352 0377 0379 0382	1 1 2 1 2 2 2	ContextID in Change Flow Direction response  Correction To DTMF Detection  Clarification to use of ServiceChangeMGCId  Clarification to cut-through procedure  Adding missing termination ID to Acknowledgement part of notification procedures  Correction to syntax for event descriptions  Adding missing Codec, Bearer Characteristics and Bearer Service Characteristics to Prepare IP transport procedure  Correction on the used descriptor for trace package  Introduction of Profile Description Annex to Mc interface  Corrections to Formats and Codes table  Clarification of H.248.2 version in references  Correction of the error definition of Flextone	7.1.0	7.2.

Change history  Date   TSG #   TSG Doc.   CR   R   Subject/Comment   Old							
Date	TSG #	TSG Doc.	CR	R	Subject/Comment	Old	New
				٧			
		CP-060301	0385	1	Clarification of ROOT termination naming		
2006-09	CT#33	CP-060411	0388	1	Profile Description Annex: Connection model and Context Attributes	7.2.0	7.3.0
		CP-060411	0389	2	Profile Description Annex: Terminations	1	
		CP-060411			Profile Description Annex: Descriptors	1	
		CP-060411			Profile Description Annex: Message, Transport and Security		
		CP-060411			Profile Description Annex: Mandatory and optional packages		
		CP-060411			Profile Description Annex: H.248 packages		
		CP-060411			Profile Description Annex: BICC packages		
		CP-060411 CP-060411			Profile Description Annex: Mandatory and optional 3G packages Profile Description Annex: Command API	1	
		CP-060411			Profile Description Annex : Generic command syntax and encoding	1	
		CP-060411			Profile Description Annex: Transactions	1	
		CP-060411	0399		Profile Description Annex: Mandatory support of SDP and Annex C		
		CP-060411	0400	1	information elements Profile Description Annex: Optional support of SDP and Annex C	_	
		01 000411	0400	٠	information elements		
		CP-060411	0401		Encoding of G.711 codec		
		CP-060400	0404	3	Profile registration procedure	4	
		CP-060411	0407	2	Definition of the use of mandatory and optional in Mc Profile Template		
		CP-060402	0409		Trace Package ID	1	
		CP-060400	0412		AuditValue procedure	Ī	
		CP-060400	0415	1	Use of topology for tones and announcements		
		CP-060397	0420		Modification of eventId named distant codec_list in threegtfoc		
		CP-060402	0427		package Wildcarding of Release Termination Response	1	
		CP-060400	0427		Correction to Emergency Call Indication Procedure	1	
		CP-060400		_	Use of IPSec for Mc Interface	1	
		CP-060400	0439				
		CP-060411	0441	2	New Error Code for Temporary Busy		
		CP-060411	0442	1			
		CP-060411	0443		Profile Description Annex: Trace package	1	
2006-12	CT#34	CP-060402	0447 0376	6	Incomplete list of optional UMTS packages Enhancements for VGCS/VBS in SPLIT architecture	7.3.0	7 4 0
2006-12	C1#34	CP-060569 CP-060569	0376	Ö	Correct the initiator of NOT.resp command	7.3.0	7.4.0
		CP-060569	0474	1	Removal of TBD for Number of Commands Per Transaction	1	
		CP-060569	0485	1	Event Tunnel indication for type BICC IP	1	
		CP-060569	0486		Tunnel Option shall be used with Add.Req only		
		CP-060569	0487		IP transport package properties not used within Mov.Req		
		CP-060552	0459		Encoding of PLMN BC	_	
		CP-060561	0461	1	Trace package correction	1	
		CP-060554 CP-060718	0464 0481	3	Commands in Change flow direction procedure  Definite vs Indefinite encoding rules for binary H.248	1	
2007-03	CT#35	CP-070014	0490		IP domain connection indication	7.4.0	7.5.0
2007 00	01,100	CP-070014	0491	Ŭ	Commands Marked Optional	1	7.0.0
		CP-070014	0494	1	Prevention of signalling overload due to Notifications	Ī	
		CP-070009	0497		Exclusion of use of inherited properties from network package		
		CP-070014	0498	1	Changing Profile description Annex C from Informative to Normative		
		CP-070009	0501	1	Signal List ID to Announcement Completed procedure	1	
		CP-070003	0508		Stream ID parameters in Signals and Events	1	
2007-06	CT#36	CP-070314	0511	1	IMSI/IMEI encoding in trace package	7.5.0	7.6.0
		CP-070322	0512		Adding package ID to ASCI package		
		CP-070322	0513		ServiceChangeMGCId parameter		
		CP-070308	0520		RFC 3309 for SCTP checksum	4	
2007.00	CT#27	CP-070322	0522	_	Modification to EventID name difinition	760	770
2007-09	CT#37	CP-070530 CP-070530	0524 0527	3	Service Change Methods and Reasons H.248 Message Encoding	7.6.0	7.7.0
		CP-070530	0528	1		1	
		CP-070530	0531		Mc profile corrections	1	
		CP-070530	0535		Support inactivity timer (H.248.14) for MGWs detecting the failure of MGC		
		CP-070530	0537	1	Completion of Text Telephony and Call Discrimination Packages	1	
2007-12	CT#38	CP-070330 CP-070749	0544		Heartbeat event in Prepare IP Transport, Send Tone and Play	7.7.0	7.8.0
2007-12	0.,,00	3. 3.3143	55-7		Announcement procedures		.5.5
		CP-070749	0550	1			
	1	CP-070749	0552	I	Reference corrections	1	1

Change history								
Date	TSG#	TSG Doc.	CR	R	Subject/Comment	Old	New	
				е				
				٧				
		CP-070749	0554		Number of needed listener context terminations to ASCI package			
		CP-070740	0548	1	Sequencing of Termination Out-of-Service and Termination			
					Restoration procedures			

136

# History

Document history							
V7.6.0	June 2007	Publication					
V7.7.0	October 2007	Publication					
V7.8.0	January 2008	Publication					