## ETSI TS 138 423 V16.2.0 (2020-07)



5G; NG-RAN; Xn Application Protocol (XnAP) (3GPP TS 38.423 version 16.2.0 Release 16)



# Reference RTS/TSGR-0338423vg20 Keywords 5G

#### **ETSI**

650 Route des Lucioles F-06921 Sophia Antipolis Cedex - FRANCE

Tel.: +33 4 92 94 42 00 Fax: +33 4 93 65 47 16

Siret N° 348 623 562 00017 - NAF 742 C Association à but non lucratif enregistrée à la Sous-Préfecture de Grasse (06) N° 7803/88

#### Important notice

The present document can be downloaded from: <u>http://www.etsi.org/standards-search</u>

The present document may be made available in electronic versions and/or in print. The content of any electronic and/or print versions of the present document shall not be modified without the prior written authorization of ETSI. In case of any existing or perceived difference in contents between such versions and/or in print, the prevailing version of an ETSI deliverable is the one made publicly available in PDF format at <a href="https://www.etsi.org/deliver">www.etsi.org/deliver</a>.

Users of the present document should be aware that the document may be subject to revision or change of status.

Information on the current status of this and other ETSI documents is available at

<a href="https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx">https://portal.etsi.org/TB/ETSIDeliverableStatus.aspx</a>

If you find errors in the present document, please send your comment to one of the following services: https://portal.etsi.org/People/CommitteeSupportStaff.aspx

#### **Copyright Notification**

No part may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm except as authorized by written permission of ETSI.

The content of the PDF version shall not be modified without the written authorization of ETSI.

The copyright and the foregoing restriction extend to reproduction in all media.

© ETSI 2020. All rights reserved.

**DECT™**, **PLUGTESTS™**, **UMTS™** and the ETSI logo are trademarks of ETSI registered for the benefit of its Members. **3GPP™** and **LTE™** are trademarks of ETSI registered for the benefit of its Members and of the 3GPP Organizational Partners.

oneM2M<sup>™</sup> logo is a trademark of ETSI registered for the benefit of its Members and of the oneM2M Partners.

GSM® and the GSM logo are trademarks registered and owned by the GSM Association.

## Intellectual Property Rights

#### **Essential patents**

IPRs essential or potentially essential to normative deliverables may have been declared to ETSI. The information pertaining to these essential IPRs, if any, is publicly available for **ETSI members and non-members**, and can be found in ETSI SR 000 314: "Intellectual Property Rights (IPRs); Essential, or potentially Essential, IPRs notified to ETSI in respect of ETSI standards", which is available from the ETSI Secretariat. Latest updates are available on the ETSI Web server (https://ipr.etsi.org/).

Pursuant to the ETSI IPR Policy, no investigation, including IPR searches, has been carried out by ETSI. No guarantee can be given as to the existence of other IPRs not referenced in ETSI SR 000 314 (or the updates on the ETSI Web server) which are, or may be, or may become, essential to the present document.

#### **Trademarks**

The present document may include trademarks and/or tradenames which are asserted and/or registered by their owners. ETSI claims no ownership of these except for any which are indicated as being the property of ETSI, and conveys no right to use or reproduce any trademark and/or tradename. Mention of those trademarks in the present document does not constitute an endorsement by ETSI of products, services or organizations associated with those trademarks.

## **Legal Notice**

This Technical Specification (TS) has been produced by ETSI 3rd Generation Partnership Project (3GPP).

The present document may refer to technical specifications or reports using their 3GPP identities. These shall be interpreted as being references to the corresponding ETSI deliverables.

The cross reference between 3GPP and ETSI identities can be found under http://webapp.etsi.org/key/queryform.asp.

## Modal verbs terminology

In the present document "shall", "shall not", "should", "should not", "may", "need not", "will", "will not", "can" and "cannot" are to be interpreted as described in clause 3.2 of the <u>ETSI Drafting Rules</u> (Verbal forms for the expression of provisions).

"must" and "must not" are NOT allowed in ETSI deliverables except when used in direct citation.

## Contents

Intelle	lectual Property Rights	2
Legal	l Notice	2
Moda	al verbs terminology	2
Forew	word	12
1	Scope	13
2	References	13
3	Definitions, symbols and abbreviations	15
3.1	Definitions	
3.2	Abbreviations	15
4	General	
4.1	Procedure specification principles	
4.2	Forwards and backwards compatibility	
4.3	Specification notations	
5	XnAP services	
5.1	XnAP procedure modules	
5.2	Parallel transactions	17
6	Services expected from signalling transport	17
7	Functions of XnAP	17
8	XnAP procedures	17
8.1	Elementary procedures	17
8.2	Basic mobility procedures	20
8.2.1	Handover Preparation	
8.2.1.1		
8.2.1.2		
8.2.1.3		
8.2.1.4		
8.2.2 8.2.2.1		
8.2.2.1 8.2.2.2		
8.2.2.3 8.2.2.3	1	
8.2.2.2 8.2.2.4	<u>.</u>	
8.2.2 8.2.3	Handover Cancel	
8.2.3.1		
8.2.3.2		
8.2.3.3		
8.2.3.4		
8.2.4		
8.2.4.1	.1 General	28
8.2.4.2	2 Successful Operation	28
8.2.4.3	3 Unsuccessful Operation	29
8.2.4.4	4 Abnormal Conditions	30
8.2.5	RAN Paging	30
8.2.5.1		
8.2.5.2		
8.2.5.3	<u>.</u>	
8.2.5.4		
8.2.6		
8.2.6.1		
8.2.6.2	1	
8.2.6.3 8.2.6.4	1	
0.4.0.4	7 101101 Hita Continuonis	

8.2.7	UE Context Release	32
8.2.7.1	General	
8.2.7.2	Successful Operation	
8.2.7.3	Unsuccessful Operation	
8.2.7.4	Abnormal Conditions	
8.2.8	Handover Success	
8.2.8.1	General	
8.2.8.2	Successful Operation	
8.2.8.3	Unsuccessful Operation	
8.2.8.4	Abnormal Conditions	
8.2.9	Conditional Handover Cancel	
8.2.9.1	General	
8.2.9.2	Successful Operation	
8.2.9.3	Unsuccessful Operation	
8.2.9.4	Abnormal Conditions	
8.2.10	Early Status Transfer	
8.2.10.1	General	
8.2.10.2	Successful Operation	
8.2.10.3	Unsuccessful Operation	
8.2.10.4	Abnormal Conditions	
8.3	Procedures for Dual Connectivity	
8.3.1	S-NG-RAN node Addition Preparation	
8.3.1.1	General	
8.3.1.2	Successful Operation	
8.3.1.3	Unsuccessful Operation	
8.3.1.4	Abnormal Conditions	
8.3.2	S-NG-RAN node Reconfiguration Completion	
8.3.2.1	General	
8.3.2.2		
	Successful Operation	
8.3.2.3	Abnormal Conditions	
8.3.3	M-NG-RAN node initiated S-NG-RAN node Modification Preparation	
8.3.3.1	General	
8.3.3.2	Successful Operation	
8.3.3.3	Unsuccessful Operation	
8.3.3.4	Abnormal Conditions	
8.3.4	S-NG-RAN node initiated S-NG-RAN node Modification	
8.3.4.1	General	
8.3.4.2	Successful Operation	
8.3.4.3	Unsuccessful Operation	
8.3.4.4	Abnormal Conditions	
8.3.5	S-NG-RAN node initiated S-NG-RAN node Change	
8.3.5.1	General	
8.3.5.2	Successful Operation	
8.3.5.3	Unsuccessful Operation	
8.3.5.4	Abnormal Conditions	
8.3.6	M-NG-RAN node initiated S-NG-RAN node Release	
8.3.6.1	General	
8.3.6.2	Successful Operation	
8.3.6.3	Unsuccessful Operation	
8.3.6.4	Abnormal Conditions	
8.3.7	S-NG-RAN node initiated S-NG-RAN node Release	
8.3.7.1	General	
8.3.7.2	Successful Operation	
8.3.7.3	Unsuccessful Operation	
8.3.7.4	Abnormal Conditions	
8.3.8	S-NG-RAN node Counter Check	
8.3.8.1	General	
8.3.8.2	Successful Operation	
8.3.8.3	Unsuccessful Operation	
8.3.8.4	Abnormal Conditions	58
8.3.9	RRC Transfer	
8.3.9.1	General	58

8.3.9.2	Successful Operation	59
8.3.9.3	Unsuccessful Operation	59
8.3.9.4	Abnormal Conditions	59
8.3.10	Notification Control Indication	60
8.3.10.1	General	
8.3.10.2	Successful Operation – M-NG-RAN node initiated	60
8.3.10.3	Successful Operation – S-NG-RAN node initiated	
8.3.10.4	Abnormal Conditions	61
8.3.11	Activity Notification	61
8.3.11.1	General	61
8.3.11.2	Successful Operation	61
8.3.11.3	Abnormal Conditions	
8.3.12	E-UTRA – NR Cell Resource Coordination	62
8.3.12.1	General	62
8.3.12.2	Successful Operation	
8.3.13	Secondary RAT Data Usage Report	63
8.3.13.1	General	
8.3.13.2	Successful Operation	
8.3.13.3	Unsuccessful Operation	
8.3.13.4	Abnormal Conditions	
8.3.14	Trace Start	
8.3.14.1	General	
8.3.14.2	Successful Operation	
8.3.14.3	Abnormal Conditions	
8.3.15	Deactivate Trace	
8.3.15.1	General	
8.3.15.2	Successful Operation	
8.3.15.3	Abnormal Conditions	
8.4	Global procedures	
8.4.1	Xn Setup	
8.4.1.1	General	
8.4.1.2	Successful Operation	
8.4.1.3	Unsuccessful Operation	
8.4.1.4	Abnormal Conditions	
8.4.2	NG-RAN node Configuration Update	
8.4.2.1	General	
8.4.2.2	Successful Operation	
8.4.2.3	Unsuccessful Operation	
8.4.2.4 8.4.3	Abnormal Conditions	
	Cell Activation	
8.4.3.1 8.4.3.2	General	
8.4.3.2 8.4.3.3	•	
8.4.3.4	Unsuccessful Operation	
8.4.4	Reset	
8.4.4.1	General	
8.4.4.2	Successful Operation	
8.4.4.3	Unsuccessful Operation	
8.4.4.4	Abnormal Conditions	
8.4.5	Error Indication.	
8.4.5.1	General	
8.4.5.2	Successful Operation	
8.4.5.3	Unsuccessful Operation	
8.4.5.4	Abnormal Conditions	
8.4.6	Xn Removal	
8.4.6.1	General	
8.4.6.2	Successful Operation.	
8.4.6.3	Unsuccessful Operation	
8.4.6.4	Abnormal Conditions	
8.4.7	Failure Indication.	
8.4.7.1	General	
8.4.7.2	Successful Operation	
	1	

8.4.7.3	Unsuccessful Operation	76
8.4.7.4	Abnormal Conditions	76
8.4.8	Handover Report	76
8.4.8.1	General	76
8.4.8.2	Successful Operation	77
8.4.8.3	Unsuccessful Operation	77
8.4.8.4	Abnormal Conditions	
8.4.9	Mobility Settings Change	
8.4.9.1	General	
8.4.9.2	Successful Operation	
8.4.9.3	Unsuccessful Operation	
8.4.9.4	Abnormal Conditions	
8.4.10	Resource Status Reporting Initiation	
8.4.10.1	General	
8.4.10.1	Successful Operation.	
8.4.10.2	Unsuccessful Operation	
8.4.10.3	Abnormal Conditions	
8.4.11	Resource Status Reporting	
8.4.11.1	General	
8.4.11.2	Successful Operation	
8.4.11.3	Unsuccessful Operation	
8.4.11.4	Abnormal Conditions	
8.4.12	Access And Mobility Indication	
8.4.12.1	General	
8.4.12.2	Successful Operation	
8.4.12.3	Abnormal Conditions	82
9 E	lements for XnAP Communication	92
9.0	General	
9.1	Message Functional Definition and Content	
9.1.1	Messages for Basic Mobility Procedures	
9.1.1.1	HANDOVER REQUEST	
9.1.1.2	HANDOVER REQUEST ACKNOWLEDGE	
9.1.1.3	HANDOVER PREPARATION FAILURE	
9.1.1.4	SN STATUS TRANSFER	
9.1.1.5	UE CONTEXT RELEASE	
9.1.1.6	HANDOVER CANCEL	
9.1.1.7	RAN PAGING	
9.1.1.8	RETRIEVE UE CONTEXT REQUEST	
9.1.1.9	RETRIEVE UE CONTEXT RESPONSE	92
9.1.1.10	RETRIEVE UE CONTEXT FAILURE	92
9.1.1.11	XN-U ADDRESS INDICATION	93
9.1.1.12	HANDOVER SUCCESS	94
9.1.1.13	CONDITIONAL HANDOVER CANCEL	95
9.1.1.14	EARLY STATUS TRANSFER	
9.1.2	Messages for Dual Connectivity Procedures	
9.1.2.1	S-NODE ADDITION REQUEST	
9.1.2.2	S-NODE ADDITION REQUEST ACKNOWLEDGE	
9.1.2.3	S-NODE ADDITION REQUEST REJECT	
9.1.2.4	S-NODE RECONFIGURATION COMPLETE	
9.1.2.4	S-NODE MODIFICATION REQUEST	
	S-NODE MODIFICATION REQUEST ACKNOWLEDGE	103
9.1.2.6		
9.1.2.7	S-NODE MODIFICATION REQUEST REJECT	
9.1.2.8	S-NODE MODIFICATION REQUIRED	
9.1.2.9	S-NODE MODIFICATION CONFIRM	
9.1.2.10	S-NODE MODIFICATION REFUSE	
9.1.2.11	S-NODE CHANGE REQUIRED	
9.1.2.12	S-NODE CHANGE CONFIRM	
9.1.2.13	S-NODE CHANGE REFUSE	
9.1.2.14	S-NODE RELEASE REQUEST	115
9.1.2.15	S-NODE RELEASE REQUEST ACKNOWLEDGE	116
9 1 2 16	S-NODE RELEASE REJECT	116

9.1.2.17	S-NODE RELEASE REQUIRED	
9.1.2.18	S-NODE RELEASE CONFIRM	
9.1.2.19	S-NODE COUNTER CHECK REQUEST	118
9.1.2.20	RRC TRANSFER	
9.1.2.21	NOTIFICATION CONTROL INDICATION	
9.1.2.22	ACTIVITY NOTIFICATION	121
9.1.2.23	E-UTRA – NR CELL RESOURCE COORDINATION REQUEST	
9.1.2.24	E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE	
9.1.2.25	SECONDARY RAT DATA USAGE REPORT	
9.1.2.26	TRACE START	
9.1.2.27	DEACTIVATE TRACE	
9.1.3	Messages for Global Procedures	
9.1.3.1	XN SETUP REQUEST	
9.1.3.2	XN SETUP RESPONSE	
9.1.3.3	XN SETUP FAILURE	
9.1.3.4	NG-RAN NODE CONFIGURATION UPDATE	
9.1.3.5	NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE	
9.1.3.6	NG-RAN NODE CONFIGURATION UPDATE FAILURE	
9.1.3.7	CELL ACTIVATION REQUEST	
9.1.3.8	CELL ACTIVATION RESPONSE	
9.1.3.9	CELL ACTIVATION FAILURE	
9.1.3.10	RESET REQUEST	
9.1.3.11	RESET RESPONSE	
9.1.3.12	ERROR INDICATION	
9.1.3.13	XN REMOVAL REQUEST	
9.1.3.14	XN REMOVAL RESPONSE	
9.1.3.15	XN REMOVAL FAILURE	
9.1.3.16	FAILURE INDICATION	
9.1.3.17	HANDOVER REPORT	
9.1.3.18	RESOURCE STATUS REQUEST	
9.1.3.19	RESOURCE STATUS RESPONSE	
9.1.3.20	RESOURCE STATUS FAILURE	
9.1.3.21	RESOURCE STATUS UPDATE	
9.1.3.22	MOBILITY CHANGE REQUEST	
9.1.3.23	MOBILITY CHANGE ACKNOWLEDGE	
9.1.3.24	MOBILITY CHANGE FAILURE	
9.1.3.25	ACCESS AND MOBILITY INDICATION	
9.2	Information Element definitions	
9.2.0	General	
9.2.1	Container and List IE definitions	
9.2.1.1	PDU Session Resources To Be Setup List	
9.2.1.2	PDU Session Resources Admitted List	
9.2.1.3	PDU Session Resources Not Admitted List	
9.2.1.4	QoS Flow List with Cause	
9.2.1.4a	QoS Flow List	
9.2.1.5	PDU Session Resource Setup Info – SN terminated	
9.2.1.6	PDU Session Resource Setup Response Info – SN terminated	
9.2.1.7	PDU Session Resource Setup Info – MN terminated	
9.2.1.8	PDU Session Resource Setup Response Info – MN terminated	
9.2.1.9 9.2.1.10	PDU Session Resource Modification Info – SN terminated	
9.2.1.10	PDU Session Resource Modification Response Info – SN terminated	
	PDU Session Resource Modification Info – MN terminated	
9.2.1.12 9.2.1.13	PDU Session Resource Modification Response Info – MN terminated	
9.2.1.13	UE Context Information – Retrieve UE Context Response	
9.2.1.14	DRBs Subject To Status Transfer List	
9.2.1.15	DRB to QoS Flow Mapping List  Data Forwarding Info from target NG-RAN node	
9.2.1.10	Data Forwarding and Offloading Info from source NG-RAN node	
9.2.1.17	PDU Session Resource Change Required Info – SN terminated	
9.2.1.18	PDU Session Resource Change Confirm Info – SN terminated	
9.2.1.19	PDU Session Resource Modification Required Info – SN terminated	
9.2.1.20	PDU Session Resource Modification Confirm Info – SN terminated	
1.4.1.41	1 Do bession resource producted Commin mio – 514 terminated	

9.2.1.22	PDU Session Resource Modification Required Info – MN terminated	178
9.2.1.23	PDU Session Resource Modification Confirm Info – MN terminated	178
9.2.1.24	PDU Session List with data forwarding request info	179
9.2.1.25	PDU Session List with data forwarding info from the target node	179
9.2.1.26	PDU Session List with Cause	179
9.2.1.27	PDU Session List	180
9.2.1.28	DRB List with Cause	180
9.2.1.29	DRB List	180
9.2.1.30	PDU Session Resource Setup Complete Info – SN terminated	
9.2.1.31	Secondary Data Forwarding Info from target NG-RAN node List	
9.2.1.32	Additional UL NG-U UP TNL Information at UPF List	
9.2.1.33	DAPS Request Information	
9.2.1.34	DAPS Response Information	
9.2.2	NG-RAN Node and Cell Configuration related IE definitions	
9.2.2.1	Global gNB ID	
9.2.2.2	Global ng-eNB ID	
9.2.2.3	Global NG-RAN Node ID	
9.2.2.4	PLMN Identity	
9.2.2.5	TAC	
9.2.2.6	RAN Area Code	
9.2.2.7	NR CGI	
9.2.2.8	E-UTRA CGI	
9.2.2.9	NG-RAN Cell Identity	
9.2.2.10	NG-RAN Cell PCI	
9.2.2.11	Served Cell Information NR	
9.2.2.12	Served Cell Information E-UTRA	
9.2.2.13	Neighbour Information NR	
9.2.2.14	Neighbour Information E-UTRA	
9.2.2.15	Served Cells To Update NR	
9.2.2.16	Served Cells to Update E-UTRA	
9.2.2.17	Cell Assistance Information NR	
9.2.2.18	SUL Information	
9.2.2.19	NR Frequency Info	
9.2.2.20	NR Transmission Bandwidth	
9.2.2.21	E-UTRA ARFCN	
9.2.2.22	E-UTRA Transmission Bandwidth	
9.2.2.23	Number of Antenna Ports E-UTRA	
9.2.2.24	E-UTRA Multiband Info List	
9.2.2.25	E-UTRA PRACH Configuration	
9.2.2.26	MBSFN Subframe Allocation E-UTRA	
9.2.2.27	Global NG-RAN Cell Identity	
9.2.2.28	Connectivity Support	
9.2.2.29	Protected E-UTRA Resource Indication	
9.2.2.30	Data Traffic Resource Indication	
9.2.2.31	Data Traffic Resources	
9.2.2.32	Reserved Subframe Pattern	
9.2.2.32	MR-DC Resource Coordination Information	
9.2.2.34	E-UTRA Resource Coordination Information	
9.2.2.34	NR Resource Coordination Information	
9.2.2.36	E-UTRA Coordination Assistance Information	
9.2.2.37	NR Coordination Assistance Information	
9.2.2.37	NE-DC TDM Pattern	
9.2.2.39	Interface Instance Indication	
9.2.2.39	Intended TDD DL-UL Configuration NR	
9.2.2.40	<u> </u>	
	Cell and Capacity Assistance Information NR	
9.2.2.42	Cell Assistance Information E-UTRA	
9.2.2.43	Cell Assistance Information E-UTRA	
9.2.2.44	Maximum Cell List Size	
9.2.2.45	Message Oversize Notification	
9.2.2.46	Partial List Indicator	
9.2.2.47	Offset of NB-IoT Channel Number to EARFCN	
9.2.2.48	NB-IoT UL DL Alignment Offset	209

9.2.2.49	TNL Capacity Indicator	
9.2.2.50	Radio Resource Status	
9.2.2.51	Composite Available Capacity Group	
9.2.2.52	Composite Available Capacity	
9.2.2.53	Cell Capacity Class Value	
9.2.2.54	Capacity Value	
9.2.2.55	Slice Available Capacity	
9.2.2.56	RRC Connections	
9.2.2.57	Number of RRC Connections	
9.2.2.58	Available RRC Connection Capacity Value	
9.2.2.63	NR Carrier List	
9.2.2.64	SSB Positions In Burst	
9.2.2.65	NID	
9.2.2.66	CAG-Identifier	
9.2.2.67	Broadcast NID List	
9.2.2.68	Broadcast SNPN ID List	
9.2.2.69 9.2.2.70	Broadcast CAG-Identifier List	
9.2.2.70	NPN Broadcast Information	
9.2.2.71	NPN Support	
9.2.2.72	General IE definitions	
	Message Type	
9.2.3.1 9.2.3.2	Cause	
9.2.3.2	Criticality Diagnostics	
9.2.3.3 9.2.3.4	Bit Rate	
9.2.3.4	QoS Flow Level QoS Parameters	
9.2.3.6	GBR QoS Flow Information	
9.2.3.7	Allocation and Retention Priority	
9.2.3.8	Non dynamic 5QI Descriptor	
9.2.3.9	Dynamic 5QI Descriptor	
9.2.3.10	QoS Flow Identifier	
9.2.3.11	Packet Loss Rate	
9.2.3.12	Packet Delay Budget	
9.2.3.13	Packet Error Rate	
9.2.3.14	Averaging Window	
9.2.3.15	Maximum Data Burst Volume	
9.2.3.16	NG-RAN node UE XnAP ID	230
9.2.3.17	UE Aggregate Maximum Bit Rate	230
9.2.3.18	PDU Session ID	230
9.2.3.19	PDU Session Type	230
9.2.3.20	TAI Support List	230
9.2.3.21	S-NSSAI	231
9.2.3.22	Slice Support List	
9.2.3.23	Index to RAT/Frequency Selection Priority	231
9.2.3.24	GUAMI	
9.2.3.25	Target Cell Global ID	
9.2.3.26	AMF UE NGAP ID	
9.2.3.27	SCG Configuration Query	
9.2.3.28	RLC Mode	
9.2.3.29	Transport Layer Address	
9.2.3.30	UP Transport Layer Information	
9.2.3.31	CP Transport Layer Information	
9.2.3.32	Masked IMEISV	
9.2.3.33	DRB ID	
9.2.3.34	DL Forwarding	
9.2.3.35	Data Forwarding Accepted	
9.2.3.36	COUNT Value for PDCP SN Length 12	
9.2.3.37	COUNT Value for PDCP SN Length 18	
9.2.3.38	RAN Paging Area	
9.2.3.39	RAN Area ID	
9.2.3.40	UE Context ID	
9.2.3.41	Assistance Data for RAN Paging	235

9.2.3.42	RAN Paging Attempt Information	235
9.2.3.43	UE RAN Paging Identity	236
9.2.3.44	Paging Priority	236
9.2.3.45	Delivery Status	236
9.2.3.46	I-RNTI	
9.2.3.47	Location Reporting Information	237
9.2.3.48	Area of Interest Information	
9.2.3.49	UE Security Capabilities	
9.2.3.50	AS Security Information	
9.2.3.51	S-NG-RAN node Security Key	
9.2.3.52	Security Indication	
9.2.3.53	Mobility Restriction List	
9.2.3.54	Xn Benefit Value	
9.2.3.55	Trace Activation	
9.2.3.56	Time To Wait	
9.2.3.57	QoS Flow Notification Control Indication Info	
9.2.3.58	Request Reporting Reference ID	
9.2.3.59	User plane traffic activity report	
9.2.3.60	Lower Layer presence status change	
9.2.3.61	RRC Resume Cause	
9.2.3.62	Priority Level	
9.2.3.63	PDCP SN Length	
9.2.3.64	UE History Information	
9.2.3.65	Last Visited Cell Information	
9.2.3.66	Paging DRX	
9.2.3.67	Security Result	
9.2.3.68	UE Context Kept Indicator	
9.2.3.69	PDU Session Aggregate Maximum Bit Rate	
9.2.3.70	LCID	
9.2.3.71	Duplication Activation	
9.2.3.72	RRC Config Indication	
9.2.3.73	Maximum Integrity Protected Data Rate	
9.2.3.74	PDCP Change Indication	
9.2.3.75	UL Configuration	
9.2.3.76	UP Transport Parameters	
9.2.3.77 9.2.3.78	Desired Activity Notification Level	
9.2.3.78 9.2.3.79	QoS Flow Mapping Indication	
9.2.3.19	RLC Status	
9.2.3.80	Expected UE Behaviour	
9.2.3.82	Expected UE Activity Behaviour	
9.2.3.83	AMF Region Information	
9.2.3.84	TNL Association Usage	
9.2.3.85	Network Instance	
9.2.3.86	PDCP Duplication Configuration	
9.2.3.87	Secondary RAT Usage Information	
9.2.3.88	Volume Timed Report List	
9.2.3.89	Maximum IP Rate	
9.2.3.90	UL Forwarding	
9.2.3.91	UE Radio Capability for Paging	
9.2.3.92	Common Network Instance	
9.2.3.93	Default DRB Allowed	
9.2.3.94	Split Session Indicator	
9.2.3.95	UL Forwarding Proposal	
9.2.3.96	TNL Configuration Info	
9.2.3.97	NG-RAN Trace ID	
9.2.3.98	Non-GBR Resources Offered	
9.2.3.99	Extended RAT Restriction Information	
9.2.3.100	5GC Mobility Restriction List Container	
9.2.3.101	Maximum Number of CHO Preparations	
9.2.3.102	Alternative QoS Parameters Set List	
0 2 3 103	Alternative Oos Parameters Set Index	258

9.2.3.104	Alternative QoS Parameters Set Notify Index			
9.2.3.105	NR V2X Services Authorized			
9.2.3.106	LTE V2X Services Authorized	259		
9.2.3.107	NR UE Sidelink Aggregate Maximum Bit Rate	259		
9.2.3.108	LTE UE Sidelink Aggregate Maximum Bit Rate	259		
9.2.3.109	PC5 QoS Parameters	260		
9.2.3.110	UE History Information from the UE	260		
9.2.3.111	RLC Duplication Information			
9.2.3.112	Redundant PDU Session Information	261		
9.2.3.113	Extended Packet Delay Budget	261		
9.2.3.114	TSC Traffic Characteristics	261		
9.2.3.115	TSC Assistance Information	262		
9.2.3.116	Periodicity	262		
9.2.3.117	Burst Arrival Time	262		
9.2.3.118	Redundant QoS Flow Indicator	262		
9.2.3.119	NPN Mobility Information	262		
9.2.3.120	Allowed PNI-NPN ID List	263		
9.2.3.121	NPN Paging Assistance Information	263		
9.2.3.122	Serving SNPN ID	263		
9.2.3.123	PNI-NPN Restricted Information	263		
9.2.3.124	URI	264		
9.2.3.125	MDT Configuration	264		
9.2.3.126	MDT Configuration-NR	264		
9.2.3.127	MDT Configuration-EUTRA	266		
9.2.3.128	M1 Configuration	267		
9.2.3.129	M4 Configuration	268		
9.2.3.130	M5 Configuration	268		
9.2.3.131	M6 Configuration	269		
9.2.3.132	M7 Configuration			
9.2.3.133	MDT PLMN List	269		
9.2.3.134	Bluetooth Measurement Configuration	269		
9.2.3.135	WLAN Measurement Configuration	270		
9.2.3.136	Sensor Measurement Configuration	270		
9.2.3.137	Logged Event Trigger Config	271		
9.2.3.138	UE Radio Capability ID	271		
9.2.3.139	Extended Slice Support List	272		
9.2.3.140	Area Scope of Neighbour Cells	272		
9.3	Message and Information Element Abstract Syntax (with ASN.1)			
9.3.1	General	273		
9.3.2	Usage of Private Message Mechanism for Non-standard Use	273		
9.3.3	Elementary Procedure Definitions	273		
9.3.4	PDU Definitions	284		
9.3.5	Information Element definitions	329		
9.3.6	Common definitions	427		
9.3.7	Constant definitions	428		
9.3.8	Container definitions	435		
9.4	Message transfer syntax			
9.5	Timers			
10 Ha	ndling of unknown, unforeseen and erroneous protocol data	440		
Annex A	(informative): Change history	441		
History		445		

## **Foreword**

This Technical Specification has been produced by the 3<sup>rd</sup> Generation Partnership Project (3GPP).

The contents of the present document are subject to continuing work within the TSG and may change following formal TSG approval. Should the TSG modify the contents of the present document, it will be re-released by the TSG with an identifying change of release date and an increase in version number as follows:

Version x.y.z

#### where:

- x the first digit:
  - 1 presented to TSG for information;
  - 2 presented to TSG for approval;
  - 3 or greater indicates TSG approved document under change control.
- y the second digit is incremented for all changes of substance, i.e. technical enhancements, corrections, updates, etc.
- z the third digit is incremented when editorial only changes have been incorporated in the document.

## 1 Scope

The present document specifies the radio network layer signalling procedures of the control plane between NG-RAN nodes in NG-RAN. XnAP supports the functions of the Xn interface by signalling procedures defined in this document. XnAP is developed in accordance to the general principles stated in TS 38.401 [2] and TS 38.420 [3].

## 2 References

The following documents contain provisions which, through reference in this text, constitute provisions of the present document.

- References are either specific (identified by date of publication, edition number, version number, etc.) or non-specific.
- For a specific reference, subsequent revisions do not apply.
- For a non-specific reference, the latest version applies. In the case of a reference to a 3GPP document (including a GSM document), a non-specific reference implicitly refers to the latest version of that document *in the same Release as the present document*.

[1]	3GPP TR 21.905: "Vocabulary for 3GPP Specifications".
[2]	3GPP TS 38.401: "NG-RAN; Architecture Description".
[3]	3GPP TS 38.420: "NG-RAN; Xn General Aspects and Principles".
[4]	3GPP TS 38.422: "NG-RAN; Xn Signalling Transport".
[5]	3GPP TS 38.413: "NG-RAN; NG Application Protocol (NGAP) ".
[6]	3GPP TS 25.921: "Guidelines and principles for protocol description and error handling".
[7]	3GPP TS 23.501: "System Architecture for the 5G System".
[8]	3GPP TS 37.340: "Evolved Universal Terrestrial Radio Access (E-UTRA) and NR; Multiconnectivity; Stage 2".
[9]	3GPP TS 38.300: "NR; NR and NG-RAN Overall Description; Stage 2".
[10]	3GPP TS 38.331: "NR; Radio Resource Control (RRC) Protocol specification".
[11]	3GPP TS 38.323: "NR; Packet Data Convergence Protocol (PDCP) specification".
[12]	3GPP TS 36.300: "Evolved Universal Terrestrial Radio Access (E-UTRA) and Evolved Universal Terrestrial Radio Access Network (E-UTRAN); Overall description; Stage 2".
[13]	3GPP TS 23.502: "Procedures for the 5G System; Stage 2".
[14]	3GPP TS 36.331: "Evolved Universal Terrestrial Radio Access (E-UTRA); Radio Resource Control (RRC) protocol specification".
[15]	ITU-T Recommendation X.691 (2002-07): "Information technology - ASN.1 encoding rules - Specification of Packed Encoding Rules (PER) ".
[16]	ITU-T Recommendation X.680 (2002-07): "Information technology – Abstract Syntax Notation One (ASN.1): Specification of basic notation".
[17]	ITU-T Recommendation X.681 (2002-07): "Information technology – Abstract Syntax Notation One (ASN.1): Information object specification".
[18]	3GPP TS 29.281: "General Packet Radio Service (GPRS); Tunnelling Protocol User Plane (GTPv1-U)".
[19]	3GPP TS 38.424: "NG-RAN; Xn data transport".

[45]

[20]	3GPP TS 38.414: "NG-RAN; NG data transport".
[21]	3GPP TS 38.412: "NG-RAN; NG Signalling Transport".
[22]	3GPP TS 23.003: "Numbering, Addressing and Identification".
[23]	3GPP TS 32.422: "Trace control and configuration management".
[24]	3GPP TS 38.104: "NR; Base Station (BS) radio transmission and reception".
[25]	3GPP TS 36.104: "Base Station (BS) radio transmission and reception ".
[26]	3GPP TS 36.211: "Evolved Universal Terrestrial Radio Access (E-UTRA); Physical Channels and Modulation".
[27]	3GPP TS 36.101: "User Equipment (UE) radio transmission and reception".
[28]	3GPP TS 33.501: "Security architecture and procedures for 5G System".
[29]	3GPP TS 33.401: "3GPP System Architecture Evolution (SAE); Security architecture".
[30]	3GPP TS 24.501: "Non-Access-Stratum (NAS) protocol for 5G System (5GS); Stage 3".
[31]	3GPP TS 36.413: "Evolved Universal Terrestrial Radio Access Network (E-UTRAN); S1 Application Protocol (S1AP)".
[32]	3GPP TS 25.413: "UTRAN Iu interface RANAP signalling".
[33]	3GPP TS 38.304: "NR; User Equipment (UE) procedures in Idle mode and RRC Inactive state".
[34]	3GPP TS 36.304: "Evolved Universal Terrestrial Radio Access (E-UTRA); User Equipment (UE) procedures in idle mode".
[35]	3GPP TS 38.321: "NR; Medium Access Control (MAC) protocol specification".
[36]	3GPP TS 36.321: "Evolved Universal Terrestrial Radio Access (E-UTRA); Medium Access Control (MAC) protocol specification".
[37]	IETF RFC 5905: "Network Time Protocol Version 4: Protocol and Algorithms Specification".
[38]	3GPP TS 23.287: "Architecture enhancements for 5G System (5GS) to support Vehicle-to-Everything (V2X) services".
[39]	3GPP TS 38.211: "NR; Physical channels and modulation".
[40]	3GPP TS 38.213: "NR; Physical layer procedures for control".
[41]	3GPP TS 38.473: "NG-RAN; F1 application protocol (F1AP)".
[42]	3GPP TS 38.314: "NR; Layer 2 measurements".
[43]	3GPP TS 37.320: " Radio measurement collection for Minimization of Drive Tests (MDT),"
[44]	3GPP TS 38.104: "NR; Base Station (BS) radio transmission and reception".
[45]	2CDD TC 20 211 "NID DL

3GPP TS 38.211: "NR; Physical channels and modulation".

## 3 Definitions, symbols and abbreviations

#### 3.1 Definitions

For the purposes of the present document, the terms and definitions given in 3GPP TR 21.905 [1] and the following apply. A term defined in the present document takes precedence over the definition of the same term, if any, in 3GPP TR 21.905 [1].

Conditional Handover: As defined in TS 38.300 [9].

Conditional PSCell Change: As defined in TS 37.340 [8].

**DAPS Handover**: As defined in TS 38.300 [9].

**Elementary Procedure:** XnAP protocol consists of Elementary Procedures (EPs). An XnAP Elementary Procedure is a unit of interaction between two NG-RAN nodes. An EP consists of an initiating message and possibly a response message. Two kinds of EPs are used:

- Class 1: Elementary Procedures with response (success or failure),

- Class 2: Elementary Procedures without response.

**Immediate Handover**: Used in the context of Conditional Handover, to refer to a handover that is executed immediately after the UE receives the Handover Command.

NG-RAN node: as defined in TS 38.300 [9].

**PDU Session Resource:** As defined in TS 38.401 [2].

PDU session split: as defined in TS 37.340 [8].

Public Network Integrated NPN: as defined in TS 23.501 [7].

Stand-alone Non-Public Network: as defined in TS 23.501 [7].

#### 3.2 Abbreviations

For the purposes of the present document, the abbreviations given in 3GPP TR 21.905 [1] and the following apply. An abbreviation defined in the present document takes precedence over the definition of the same abbreviation, if any, in 3GPP TR 21.905 [1].

5QI 5G QoS Identifier

AMF Access and Mobility Management Function

CAG Closed Access Group CGI Cell Global Identifier CHO Conditional Handover

CP Control Plane

DAPS Dual Active Protocol Stack

DL Downlink

EN-DC E-UTRA-NR Dual Connectivity
E-RAB E-UTRAN Radio Access Bearer
GUAMI Globally Unique AMF Identifier
IAB Integrated Access and Backhaul

IMEISV International Mobile station Equipment Identity and Software Version number

MCG Master Cell Group
M-NG-RAN node Master NG-RAN node
NGAP NG Application Protocol
NID Network Identifier
NPN Non-Public Network

NSSAI Network Slice Selection Assistance Information

PNI-NPN Public Network Integrated Non-Public Network RANAC RAN Area Code

RSN Redundancy Sequence Number

SCG Secondary Cell Group

SCTP Stream Control Transmission Protocol
SNPN Stand-alone Non-Public Network
S-NG-RAN node Secondary NG-RAN node

S-NSSAI Single Network Slice Selection Assistance Information

SUL Supplementary Uplink
TAC Tracking Area Code
TAI Tracking Area Identity

UL Uplink

UPF User Plane Function V2X Vehicle-to-Everything

## 4 General

## 4.1 Procedure specification principles

The principle for specifying the procedure logic is to specify the functional behaviour of the terminating NG-RAN node exactly and completely. Any rule that specifies the behaviour of the originating NG-RAN node shall be possible to be verified with information that is visible within the system.

The following specification principles have been applied for the procedure text in clause 8:

- The procedure text discriminates between:
  - 1) Functionality which "shall" be executed

The procedure text indicates that the receiving node "shall" perform a certain function Y under a certain condition. If the receiving node supports procedure X but cannot perform functionality Y requested in the initiating message of a Class 1 EP, the receiving node shall respond with the message used to report unsuccessful outcome for this procedure, containing an appropriate cause value.

2) Functionality which "shall, if supported" be executed

The procedure text indicates that the receiving node "shall, if supported," perform a certain function Y under a certain condition. If the receiving node supports procedure X, but does not support functionality Y, the receiving node shall proceed with the execution of the EP, possibly informing the requesting node about the not supported functionality.

- Any required inclusion of an optional IE in a response message is explicitly indicated in the procedure text. If the procedure text does not explicitly indicate that an optional IE shall be included in a response message, the optional IE shall not be included. For requirements on including *Criticality Diagnostics* IE, see section 10.

## 4.2 Forwards and backwards compatibility

The forwards and backwards compatibility of the protocol is assured by a mechanism where all current and future messages, and IEs or groups of related IEs, include ID and criticality fields that are coded in a standard format that will not be changed in the future. These parts can always be decoded regardless of the standard version.

## 4.3 Specification notations

For the purposes of the present document, the following notations apply:

Procedure When referring to an elementary procedure in the specification the Procedure Name is written with

the first letters in each word in upper case characters followed by the word "procedure", e.g.

Handover Preparation procedure.

Message When referring to a message in the specification the MESSAGE NAME is written with all letters

in upper case characters followed by the word "message", e.g. HANDOVER REQUEST message.

IE When referring to an information element (IE) in the specification the *Information Element Name* is written with the first letters in each word in upper case characters and all letters in Italic font

followed by the abbreviation "IE", e.g. PDU Session ID IE.

Value of an IE When referring to the value of an information element (IE) in the specification the "Value" is

written as it is specified in sub clause 9.2 enclosed by quotation marks, e.g. "Value".

## 5 XnAP services

The present clause describes the services an NG-RAN node offers to its neighbours.

## 5.1 XnAP procedure modules

The Xn interface XnAP procedures are divided into two modules as follows:

- 1. XnAP Basic Mobility Procedures;
- 2. XnAP Global Procedures;

The XnAP Basic Mobility Procedures module contains procedures used to handle the UE mobility within E-UTRAN.

The Global Procedures module contains procedures that are not related to a specific UE. The procedures in this module are in contrast to the above module involving two peer NG-RAN nodes.

#### 5.2 Parallel transactions

Unless explicitly indicated in the procedure specification, at any instance in time one protocol peer shall have a maximum of one ongoing XnAP procedure related to a certain UE.

## 6 Services expected from signalling transport

The signalling connection shall provide in sequence delivery of XnAP messages. XnAP shall be notified if the signalling connection breaks.

Xn signalling transport is specified in TS 38.422 [4].

## 7 Functions of XnAP

The functions of XnAP are specified in TS 38.420 [3].

## 8 XnAP procedures

## 8.1 Elementary procedures

In the following tables, all EPs are divided into Class 1 and Class 2 EPs.

**Table 8.1-1: Class 1 Elementary Procedures** 

Elementary	Initiating Message	Successful Outcome	Unsuccessful Outcome
Procedure		Response message	Response message
Handover	HANDOVER	HANDOVER	HANDOVER
Preparation	REQUEST	REQUEST	PREPARATION FAILURE
		ACKNOWLEDGE	
Retrieve UE	RETRIEVE UE	RETRIEVE UE	RETRIEVE UE CONTEXT
Context	CONTEXT REQUEST	CONTEXT	FAILURE
		RESPONSE	
S-NG-RAN node	S-NODE ADDITION	S-NODE ADDITION	S-NODE ADDITION
Addition	REQUEST	REQUEST	REQUEST REJECT
Preparation		ACKNOWLEDGE	
M-NG-RAN node	S-NODE	S-NODE	S-NODE MODIFICATION
initiated S-NG-	MODIFICATION	MODIFICATION	REQUEST REJECT
RAN node	REQUEST	REQUEST	
Modification		ACKNOWLEDGE	
Preparation			
S-NG-RAN node	S-NODE	S-NODE	S-NODE MODIFICATION
initiated S-NG-	MODIFICATION	MODIFICATION	REFUSE
RAN node	REQUIRED	CONFIRM	
Modification			
S-NG-RAN node	S-NODE CHANGE	S-NODE CHANGE	S-NODE CHANGE
initiated S-NG-	REQUIRED	CONFIRM	REFUSE
RAN node			
CHANGE			
M-NG-RAN node	S-NODE RELEASE	S-NODE RELEASE	S-NODE RELEASE
initiated S-NG-	REQUEST	REQUEST	REJECT
RAN node		ACKNOWLEDGE	
Release			
S-NG-RAN node	S-NODE RELEASE	S-NODE RELEASE	
initiated S-NG-	REQUIRED	CONFIRM	
RAN node			
Release			
Xn Setup	XN SETUP REQUEST	XN SETUP	XN SETUP FAILURE
		RESPONSE	
NG-RAN node	NG-RAN NODE	NG-RAN NODE	NG-RAN NODE
Configuration	CONFIGURATION	CONFIGURATION	CONFIGURATION
Update	UPDATE	UPDATE	UPDATE FAILURE
		ACKNOWLEDGE	
Cell Activation	CELL ACTIVATION	CELL ACTIVATION	CELL ACTIVATION
	REQUEST	RESPONSE	FAILURE
Reset	RESET REQUEST	RESET RESPONSE	
Xn Removal	Xn REMOVAL	Xn REMOVAL	Xn REMOVAL FAILURE
	REQUEST	RESPONSE	
E-UTRA - NR Cell	E-UTRA - NR CELL	E-UTRA - NR CELL	
Resource	RESOURCE	RESOURCE	
Coordination	COORDINATION	COORDINATION	
	REQUEST	RESPONSE	
Resource Status	RESOURCE STATUS	RESOURCE STATUS	RESOURCE STATUS
Reporting	REQUEST	RESPONSE	FAILURE
Initiation			
Mobility Settings	MOBILITY CHANGE	MOBILITY CHANGE	MOBILITY CHANGE
Change	REQUEST	ACKNOWLEDGE	FAILURE

**Table 8.1-2: Class 2 Elementary Procedures** 

Elementary Procedure	Initiating Message
Handover Cancel	HANDOVER CANCEL
SN Status Transfer	SN STATUS TRANSFER
RAN Paging	RAN PAGING
Xn-U Address Indication	XN-U ADDRESS INDICATION
S-NG-RAN node Reconfiguration	S-NODE RECONFIGURATION
Completion	COMPLETE
S-NG-RAN node Counter Check	S-NODE COUNTER CHECK
	REQUEST
UE Context Release	UE CONTEXT RELEASE
RRC Transfer	RRC TRANSFER
Error Indication	ERROR INDICATION
Notification Control Indication	NOTIFICATION CONTROL
	INDICATION
Activity Notification	ACTIVITY NOTIFICATION
Secondary RAT Data Usage Report	SECONDARY RAT DATA USAGE
	REPORT
Trace Start	TRACE START
Deactivate Trace	DEACTIVATE TRACE
Handover Success	HANDOVER SUCCESS
Conditional Handover Cancel	CONDITIONAL HANDOVER
	CANCEL
Early Status Transfer	EARLY STATUS TRANSFER
Failure Indication	FAILURE INDICATION
Handover Report	HANDOVER REPORT
Resource Status Reporting	RESOURCE STATUS UPDATE
Access And Mobility Indication	ACCESS AND MOBILITY
	INDICATION

## 8.2 Basic mobility procedures

### 8.2.1 Handover Preparation

#### 8.2.1.1 General

This procedure is used to establish necessary resources in an NG-RAN node for an incoming handover. If the procedure concerns a conditional handover, parallel transactions are allowed. Possible parallel requests are identified by the target cell ID when the source UE AP IDs are the same.

The procedure uses UE-associated signalling.

#### 8.2.1.2 Successful Operation

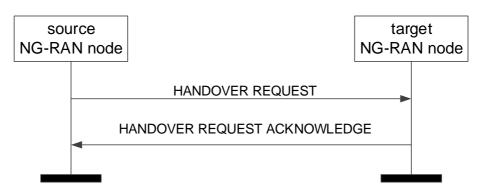


Figure 8.2.1.2-1: Handover Preparation, successful operation

The source NG-RAN node initiates the procedure by sending the HANDOVER REQUEST message to the target NG-RAN node. When the source NG-RAN node sends the HANDOVER REQUEST message, it shall start the timer  $TXn_{RELOCprep.}$ 

If the *Conditional Handover Information* IE is contained in the HANDOVER REQUEST message, the target NG-RAN node shall consider that the request concerns a conditional handover and shall include the *Conditional Handover Information* IE in the HANDOVER REQUEST ACKNOWLEDGE message.

If the *Target NG-RAN node UE XnAP ID* IE is contained in the *Conditional Handover Information* IE included in the HANDOVER REQUEST message, then the target NG-RAN node shall remove the existing prepared conditional HO identified by the *Target NG-RAN node UE XnAP ID* IE and the *Target Cell Global ID* IE. It is up to the implementation of the target NG-RAN node when to remove the HO information.

Upon reception of the HANDOVER REQUEST ACKNOWLEDGE message, the source NG-RAN node shall stop the timer  $TXn_{RELOC_{prep}}$  and terminate the Handover Preparation procedure. If the procedure was initiated for an immediate handover, the source NG-RAN node shall start the timer  $TXn_{RELOC_{overall}}$ . The source NG-RAN node is then defined to have a Prepared Handover for that Xn UE-associated signalling.

For each *E-RAB ID* IE included in the *QoS Flow To Be Setup List* IE in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store the content of the IE in the UE context and use it for subsequent intersystem handover.

If the *Masked IMEISV* IE is contained in the HANDOVER REQUEST message the target NG-RAN node shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

At reception of the HANDOVER REQUEST message the target NG-RAN node shall prepare the configuration of the AS security relation between the UE and the target NG-RAN node by using the information in the *UE Security Capabilities* IE and the *AS Security Information* IE in the *UE Context Information* IE, as specified in TS 33.501 [28].

Upon reception of the *PDU Session Resource Setup List* IE, contained in the HANDOVER REQUEST message, the target NG-RAN node shall behave the same as specified in TS 38.413 [5] for the PDU Session Resource Setup procedure. The target NG-RAN node shall report in the HANDOVER REQUEST ACKNOWLEDGE message the successful establishment of the result for all the requested PDU session resources. When the target NG-RAN node

reports the unsuccessful establishment of a PDU session resource, the cause value should be precise enough to enable the source NG-RAN node to know the reason for the unsuccessful establishment.

For each PDU session if the *PDU Session Aggregate Maximum Bit Rate* IE is included in the *PDU Session Resources To Be Setup List* IE contained in the HANDOVER REQUEST message, the target NG-RAN node shall store the received PDU Session Aggregate Maximum Bit Rate in the UE context and use it when enforcing traffic policing for Non-GBR QoS flows for the concerned UE as specified in TS 23.501 [7].

For each QoS flow for which the source NG-RAN node proposes to perform forwarding of downlink data, the source NG-RAN node shall include the *DL Forwarding* IE set to "DL forwarding proposed" within the *Data Forwarding and Offloading Info from source NG-RAN node* IE in the *PDU Session Resources To Be Setup List* IE in the HANDOVER REQUEST message. The source NG-RAN node shall include the *DL Forwarding* IE set to "DL forwarding proposed" for all the QoS flows mapped to a DRB, if it requests a DAPS handover for that DRB. For each PDU session that the target NG-RAN node decides to admit the data forwarding for at least one QoS flow, the target NG-RAN node includes the *PDU Session level DL data forwarding GTP-U Tunnel Endpoint* IE within the *Data Forwarding Info from target NG-RAN node* IE in the *PDU Session Resource Admitted Info* IE contained in the *PDU Session Resources Admitted List* IE in the HANDOVER REQUEST ACKNOWLEDGE message.

For each QoS flow for which the source NG-RAN node has not yet received the SDAP end marker packet if QoS flow re-mapping happened before handover, the source NG-RAN node shall include the *UL Forwarding Proposal* IE within the *Data Forwarding and Offloading Info from source NG-RAN node* IE in the HANDOVER REQUEST message, and if the target NG-RAN node decides to admit uplink data forwarding for at least one QoS flow, the target NG-RAN node may include the *PDU Session Level UL Data Forwarding UP TNL Information* IE in the *Data Forwarding Info from target NG-RAN node* IE in the *PDU Session Resources Admitted Item* IE contained in the *PDU Session Resources Admitted List* IE in the HANDOVER REQUEST ACKNOWLEDGE message to indicate that it accepts the uplink data forwarding.

For each PDU session resource successfully setup at the target NG-RAN, the target NG-RAN node may allocate resources for additional Xn-U PDU session resource GTP-U tunnels, indicated in the *Secondary Data Forwarding Info from target NG-RAN node List* IE.

For each PDU session in the HANDOVER REQUEST message, if the *Alternative QoS Parameters Sets* IE is included in the *GBR QoS Flow Information* IE in the *PDU Session Resources To Be Setup List* IE of the PDU SESSION RESOURCE SETUP REQUEST message, the NG-RAN node may accept the setup of the involved QoS flow when notification control has been enabled if the requested QoS parameters set or at least one of the alternative QoS parameters sets can be fulfilled at the time of handover as specified in TS 23.501 [7]. In case the target NG-RAN node accepts the handover fulfilling one of the alternative QoS parameters it shall indicate the alternative QoS parameters set which it can currently fulfil in the *Current QoS Parameters Set Index* IE within the *PDU Session Resources Admitted List* IE of the HANDOVER REQUEST ACKNOWLEDGE message while setting the QoS parameters towards the UE according to the requested QoS parameters set as specified in TS 23.501 [7].

For each DRB for which the source NG-RAN node proposes to perform forwarding of downlink data, the source NG-RAN node shall include the *DRB ID* IE and the mapped *QoS Flows List* IE within the *Source DRB to QoS Flow Mapping List* IE contained in the *PDU Session Resources To Be Setup List* IE in the HANDOVER REQUEST message. The source NG-RAN node may include the *QoS Flow Mapping Indication* IE in the *Source DRB to QoS Flow Mapping List* IE to indicate that only the uplink or downlink QoS flow is mapped to the DRB. If the target NG-RAN node decides to use the same DRB configuration and to map the same QoS flows as the source NG-RAN node, the target NG-RAN node includes the *DL Forwarding GTP Tunnel Endpoint* IE within the *Data Forwarding Response DRB List* IE in the HANDOVER REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this DRB.

The target NG-RAN node may additionally include the *Redundant DL Forwarding UP TNL Information* IE if at least one of the QoS flow mapped to the DRB is eligible to redundant transmission feature as indicated in the *Redundant QoS Flow Indicator* IE within the *PDU Session Resource To Be Setup List* IE received in the HANDOVER REQUEST message for the QoS flow.

If the HANDOVER REQUEST ACKNOWLEDGE message contains the *UL Forwarding GTP Tunnel Endpoint* IE for a given DRB in the *Data Forwarding Response DRB List* IE within *Data Forwarding Info from target NG-RAN node* IE in the *PDU Session Resources Admitted List* IE and the source NG-RAN node accepts the data forwarding proposed by the target NG-RAN node, the source NG-RAN node shall perform forwarding of uplink data for the DRB.

If the HANDOVER REQUEST includes PDU session resources for PDU sessions associated to S-NSSAIs not supported by target NG-RAN, the target NG-RAN shall reject such PDU session resources. In this case, and if at least one *PDU Session Resource To Be Setup Item* IE is admitted, the target NG-RAN shall send the HANDOVER

REQUEST ACKNOWLEDGE message including the *PDU Session Resources Not Admitted List* IE listing corresponding PDU sessions rejected at the target NG-RAN.

If the Mobility Restriction List IE is

- contained in the HANDOVER REQUEST message, the target NG-RAN node shall
  - store the information received in the *Mobility Restriction List* IE in the UE context;
  - use this information to determine a target for the UE during subsequent mobility action for which the NG-RAN node provides information about the target of the mobility action towards the UE, except when one of the PDU sessions has a particular ARP value (TS 23.501 [7]) in which case the information shall not apply;
  - use this information to select a proper SCG during dual connectivity operation.
  - use this information to select proper RNA(s) for the UE when moving the UE to RRC\_INACTIVE.
- not contained in the HANDOVER REQUEST message, the target NG-RAN node shall
  - consider that no roaming and no access restriction apply to the UE.

If the *Trace Activation* IE is included in the HANDOVER REQUEST message the target NG-RAN node shall, if supported, initiate the requested trace function as specified in TS 32.422 [23].

If the *Index to RAT/Frequency Selection Priority* IE is contained in the HANDOVER REQUEST message, the target NG-RAN node shall store this information and use it as defined in TS 23.501 [7].

If the *UE Context Reference at the S-NG-RAN* IE is contained in the HANDOVER REQUEST message the target NG-RAN node may use it as specified in TS 37.340 [8]. In this case, the source NG-RAN node may expect the target NG-RAN node to include the *UE Context Kept Indicator* IE set to "True" in the HANDOVER REQUEST ACKNOWLEDGE message, which shall use this information as specified in TS 37.340 [8].

For each PDU session, if the *Network Instance* IE is included in the *PDU Session Resource To Be Setup List* IE and the *Common Network Instance* IE is not present, the target NG-RAN node shall, if supported, use it when selecting transport network resource as specified in TS 23.501 [7].

For each PDU session, if the *Redundant UL NG-U UP TNL Information at UPF* IE is included in the *PDU Session Resource To Be Setup List* IE, the target NG-RAN node shall, if supported, use it as the uplink termination point for the user plane data for the redundant transmission for the concerned PDU session.

For each PDU session, if the *Additional Redundant UL NG-U UP TNL Information at UPF List* IE is included in the *PDU Session Resource To Be Setup List* IE, the target NG-RAN node shall, if supported, use them as the uplink termination points for the user plane data for the redundant transmission for the concerned PDU session.

For each PDU session, if the *Redundant Common Network Instance* IE is included in the *PDU Session Resource To Be Setup List* IE, the target NG-RAN node shall, if supported, use it when selecting transport network resource for the redundant transmission as specified in TS 23.501 [7].

For each PDU session, if the *Redundant PDU Session Information* IE is included in the *PDU Session Resource To Be Setup List* IE contained in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store the received information in the UE context and set up the redundant user plane for the concerned PDU session, as specified in TS 23.501 [7].

If the TSC Traffic Characteristics IE is included in the QoS Flows To Be Setup List in the PDU Session Resource To Be Setup List IE, the target NG-RAN node shall, if supported, use it as specified in TS 23.501 [7].

For each PDU session, if the *Common Network Instance* IE is included in the *PDU Session Resource To Be Setup List* IE, the target NG-RAN node shall, if supported, use it when selecting transport network resource as specified in TS 23.501 [7].

For each PDU session for which the *Security Indication* IE is included in the *PDU Session Resource To Be Setup List* IE and the *Integrity Protection Indication* IE or *Confidentiality Protection Indication* IE is set to "required", the target NG-RAN node shall perform user plane integrity protection or ciphering, respectively. If the NG-RAN node is not able to perform the user plane integrity protection or ciphering, it shall reject the setup of the PDU Session Resources with an appropriate cause value.

If the NG-RAN node is an ng-eNB, it shall reject all PDU sessions for which the *Integrity Protection Indication* IE is set to "required".

For each PDU session for which the *Security Indication* IE is included in the *PDU Session Resource To Be Setup List* IE and the *Integrity Protection Indication* IE or the *Confidentiality Protection Indication* IE is set to "preferred", the target NG-RAN node should, if supported, perform user plane integrity protection or ciphering, respectively and shall notify the SMF whether it succeeded the user plane integrity protection or ciphering or not for the concerned security policy.

For each PDU session for which the *Maximum Integrity Protected Data Rate* IE is included in the *Security Indication* IE in the *PDU Session Resources To Be Setup List* IE, the NG-RAN node shall store the respective information and, if integrity protection is to be performed for the PDU session, it shall enforce the traffic corresponding to the received *Maximum Integrity Protected Data Rate* IE, for the concerned PDU session and concerned UE, as specified in TS 23.501 [7].

For each PDU session for which the *Security Indication* IE is included in the *PDU Session Resource To Be Setup List* IE and the *Integrity Protection Indication* IE or *Confidentiality Protection Indication* IE is set to "not needed", the target NG-RAN node shall not perform user plane integrity protection or ciphering, respectively, for the concerned PDU session.

For each PDU session, if the *Additional UL NG-U UP TNL Information List* IE is included in the *PDU Session Resources To Be Setup List* IE contained in the HANDOVER REQUEST message, the target NG-RAN node may forward the UP transport layer information to the target S-NG-RAN node as the uplink termination point for the user plane data for this PDU session split in different tunnel.

If the *Location Reporting Information* IE is included in the HANDOVER REQUEST message, then the target NG-RAN node should initiate the requested location reporting functionality as defined in TS 38.413 [5].

Upon reception of *UE History Information* IE in the HANDOVER REQUEST message, the target NG-RAN node shall collect the information defined as mandatory in the *UE History Information* IE and shall, if supported, collect the information defined as optional in the *UE History Information* IE, for as long as the UE stays in one of its cells, and store the collected information to be used for future handover preparations.

If the Trace Activation IE is included in the HANDOVER REQUEST message which includes

- the *MDT Activation* IE set to "Immediate MDT and Trace", then the target NG-RAN node shall if supported, initiate the requested trace session and MDT session as described in TS 32.422 [23].
- the *MDT Activation* IE set to "Immediate MDT Only" or "Logged MDT only", the target NG-RAN node shall, if supported, initiate the requested MDT session as described in TS 32.422 [23] and the target NG-RAN node shall ignore the *Interfaces To Trace* IE, and the *Trace Depth* IE.
- the *MDT Location Information* IE, within the *MDT Configuration* IE, the target NG-RAN node shall, if supported, store this information and take it into account in the requested MDT session.
- the *MDT Activation* IE set to "Immediate MDT Only" or "Logged MDT only", and if the *Signalling based MDT PLMN List* IE is included in the *MDT Configuration* IE, the target NG-RAN node may use it to propagate the MDT Configuration as described in TS 37.320 [y].
- the *Bluetooth Measurement Configuration* IE, within the *MDT Configuration* IE, the target NG-RAN node shall, if supported, take it into account for MDT Configuration as described in TS 37.320 [y].
- the WLAN Measurement Configuration IE, within the MDT Configuration IE, the target NG-RAN node shall, if supported, take it into account for MDT Configuration as described in TS 37.320 [y].
- the *Sensor Measurement Configuration* IE, within the *MDT Configuration* IE, the target NG-RAN node shall take it into account for MDT Configuration as described in TS 37.320 [x].
- the *MDT Configuration* IE and if the target NG-RAN Node is a gNB at least *the MDT Configuration-NR* IE shall be present, while if the target NG-RAN Node is an ng-eNB at least the *MDT Configuration-EUTRA* IE shall be present.

If the *Management Based MDT PLMN List* IE is contained in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store the received information in the UE context, and use this information to allow subsequent selection of the UE for management based MDT defined in TS 32.422 [23].

The source NG-RAN node shall, if supported and available in the UE context, include the *Management Based MDT PLMN List* IE in the HANDOVER REQUEST message, except if the source NG-RAN node selects a serving PLMN in the target NG-RAN node which is not included in the Management Based MDT PLMN List.

If the *Mobility Information* IE is provided in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store this information. The target NG-RAN shall, if supported, store the C-RNTI assigned at the source cell as received in the HANDOVER REQUEST message.

Upon reception of the *UE History Information from the UE* IE in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store the collected information and use it for future handover preparations.

For each QoS flow which has been successfully established in the target NG-RAN node, if the *QoS Monitoring Request* IE was included in the *QoS Flow Level QoS Parameters* IE contained in the HANDOVER REQUST message, the target NG-RAN node shall store this information, and, if supported, perform delay measurement and QoS monitoring, as specified in TS 23.501 [7].

If the 5GC Mobility Restriction List Container IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store this information in the UE context and use it as specified in TS 38.300 [9].

If the NR V2X Services Authorized IE is included in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the target NG-RAN node shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *LTE V2X Services Authorized* IE is included in the HANDOVER REQUEST message and it contains one or more IEs set to "authorized", the target NG-RAN node shall, if supported, consider that the UE is authorized for the relevant service(s).

If the NR UE Sidelink Aggregate Maximum Bit Rate IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, use the received value for the concerned UE's sidelink communication in network scheduled mode for NR V2X services.

If the *LTE UE Sidelink Aggregate Maximum Bit Rate* IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, use the received value for the concerned UE's sidelink communication in network scheduled mode for LTE V2X services.

If the *PC5 QoS Parameters* IE is included in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, use it as defined in TS 23.287 [38].

If the *DAPS Request Information* IE is included for a given DRB in the HANDOVER REQUEST message, the target NG-RAN node shall consider that the request concerns a DAPS handover for that DRB, as described in TS 38.300 [9]. Accordingly, the target NG-RAN node shall include the *DAPS Response Information* IE in the HANDOVER REQUEST ACKNOWLEDGE message.

If the *Maximum Number of CHO Preparations* IE is included in the *Conditional Handover Information* IE contained in the HANDOVER REQUEST ACKNOWLEDGE message, then the source NG-RAN node should not initiate more Handover Preparation procedures for a CHO for the same UE towards the target NG-RAN node than the number indicated in the IE.

If the *Estimated Arrival Probability* IE is contained in the *Conditional Handover Information* IE included in the HANDOVER REQUEST message, then the target NG-RAN node may use the information to allocate necessary resources for the incoming CHO.

If the *IAB Node Indication* IE is contained in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, consider that the handover is for an IAB node.

If the *UE Radio Capability ID* IE is contained in the HANDOVER REQUEST message, the target NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [7] and TS 23.502 [13].

#### **Interaction with SN Status Transfer procedure:**

If the *UE Context Kept Indicator* IE set to "True" and the *DRBs transferred to MN* IE are included in the HANDOVER REQUEST ACKNOWLEDGE message, the source NG-RAN node shall, if supported, include the uplink/downlink PDCP SN and HFN status received from the S-NG-RAN node in the SN Status Transfer procedure towards the target NG-RAN node, as specified in TS 37.340 [8].

#### 8.2.1.3 Unsuccessful Operation

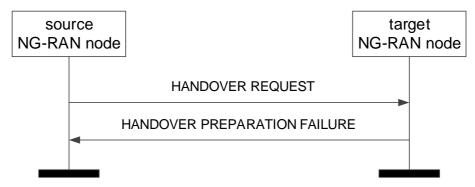


Figure 8.2.1.3-1: Handover Preparation, unsuccessful operation

If the target NG-RAN node does not admit at least one PDU session resource, or a failure occurs during the Handover Preparation, the target NG-RAN node shall send the HANDOVER PREPARATION FAILURE message to the source NG-RAN node. The message shall contain the *Cause* IE with an appropriate value.

If the *Conditional Handover Information* IE is contained in the HANDOVER REQUEST message and the target NG-RAN node rejects the handover or a failure occurs during the Handover Preparation, the target NG-RAN node shall include the *Requested Target Cell ID* IE in the HANDOVER PREPARATION FAILURE message.

#### **Interactions with Handover Cancel procedure:**

If there is no response from the target NG-RAN node to the HANDOVER REQUEST message before timer TXn<sub>RELOCprep</sub> expires in the source NG-RAN node, the source NG-RAN node should cancel the Handover Preparation procedure towards the target NG-RAN node by initiating the Handover Cancel procedure with the appropriate value for the *Cause* IE. The source NG-RAN node shall ignore any HANDOVER REQUEST ACKNOWLEDGE or HANDOVER PREPARATION FAILURE message received after the initiation of the Handover Cancel procedure and remove any reference and release any resources related to the concerned Xn UE-associated signalling.

#### 8.2.1.4 Abnormal Conditions

If the supported algorithms for encryption defined in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of the EEA0 and NEA0 algorithms in all UEs (TS 33.501 [28]), do not match any allowed algorithms defined in the configured list of allowed encryption algorithms in the NG-RAN node (TS 33.501 [28]), the NG-RAN node shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the supported algorithms for integrity defined in the *UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of the EIA0 and NIA0 algorithms in all UEs (TS 33.501 [28]), do not match any allowed algorithms defined in the configured list of allowed integrity protection algorithms in the NG-RAN node (TS 33.501 [28]), the NG-RAN node shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

If the *CHO trigger* IE is set to "CHO-replace" in the HANDOVER REQUEST message, but there is no CHO prepared for the included Target NG-RAN node UE XnAP ID, or the candidate cell in the *Target Cell ID* IE was not prepared using the same UE-associated signaling connection, the NG-RAN node shall reject the procedure using the HANDOVER PREPARATION FAILURE message.

#### 8.2.2 SN Status Transfer

#### 8.2.2.1 General

The purpose of the SN Status Transfer procedure is to transfer the uplink PDCP SN and HFN receiver status and the downlink PDCP SN and HFN transmitter status either, from the source to the target NG-RAN node during an Xn handover, between the NG-RAN nodes involved in dual connectivity, or after retrieval of a UE context for RRC reestablishment, for each respective DRB of the source DRB configuration for which PDCP SN and HFN status preservation applies.

In case that the Xn handover is a DAPS handover, the SN Status Transfer procedure may also be used to transfer the uplink PDCP SN and HFN receiver status, or the downlink PDCP SN and HFN transmitter status for a DRB associated with RLC-UM and configured with DAPS as described in TS 38.300 [9].

If the SN Status Transfer procedure is applied in the course of dual connectivity or RRC connection re-establishment in the subsequent specification text

- the behaviour of the NG-RAN node from which the DRB context is transferred, i.e. the NG-RAN node involved in dual connectivity or RRC connection re-establishment, from which data is forwarded, is specified by the behaviour of the "source NG-RAN node",
- the behaviour of the NG-RAN node to which the DRB context is transferred, i.e., the NG-RAN node involved in dual connectivity or RRC connection re-establishment, to which data is forwarded, is specified by the behaviour of the "target NG-RAN node".

The procedure uses UE-associated signalling.

#### 8.2.2.2 Successful Operation



Figure 8.2.2.2-1: SN Status Transfer, successful operation

The source NG-RAN node initiates the procedure by stop assigning PDCP SNs to downlink SDUs and stop delivering UL SDUs towards the 5GC and sending the SN STATUS TRANSFER message to the target NG-RAN node at the time point when it considers the transmitter/receiver status to be frozen. The target NG-RAN node using full configuration for this handover as per TS 38.300 [9] or for the MR-DC operations as per TS 37.340 [8] shall ignore the information received in this message. In case of MR-DC, if the target NG-RAN node performs PDCP SN length change or RLC mode change for a DRB as specified in TS 37.340 [8], it shall ignore the information received for that DRB in this message.

In case that the Xn handover is a DAPS handover, the source NG-RAN node may continue assigning PDCP SNs to downlink SDUs and delivering uplink SDUs toward the 5GC when initiating this procedure for DRBs not configured with DAPS as in TS 38.300 [9].

For each DRB in the *DRBs Subject to Status Transfer List* IE, the source NG-RAN node shall include the *DRB ID* IE, the *UL COUNT Value* IE and the *DL COUNT Value* IE.

The source NG-RAN node may also include in the SN STATUS TRANSFER message the missing and the received uplink SDUs in the *Receive Status of UL PDCP SDUs* IE for each DRB for which the source NG-RAN node has accepted the request from the target NG-RAN node for uplink forwarding.

For each DRB in the *DRBs Subject to Status Transfer List* IE, the target NG-RAN node shall not deliver any uplink packet which has a PDCP-SN lower than the value contained within the *UL COUNT Value* IE.

For each DRB in the *DRBs Subject to Status Transfer List* IE, the target NG-RAN node shall use the value of the PDCP SN contained within the *DL COUNT Value* IE for the first downlink packet for which there is no PDCP-SN yet assigned.

If the *Receive Status of UL PDCP SDUs* IE is included for at least one DRB in the SN STATUS TRANSFER message, the target NG-RAN node may use it in a Status Report message sent to the UE over the radio interface.

If the SN STATUS TRANSFER message contains in the *DRBs Subject To Status Transfer List* IE the *Old QoS Flow List - UL End Marker expected* IE, the target NG-RAN shall be prepared to receive the SDAP end marker for the QoS flow via the corresponding DRB, as specified in TS 38.300 [8].

#### 8.2.2.3 Unsuccessful Operation

Not applicable.

#### 8.2.2.4 Abnormal Conditions

If the target NG-RAN node receives this message for a UE for which no prepared handover exists at the target NG-RAN node, the target NG-RAN node shall ignore the message.

#### 8.2.3 Handover Cancel

#### 8.2.3.1 General

The Handover Cancel procedure is used to enable a source NG-RAN node to cancel an ongoing handover preparation or an already prepared handover.

The procedure uses UE-associated signalling.

#### 8.2.3.2 Successful Operation



Figure 8.2.3.2-1: Handover Cancel, successful operation

The source NG-RAN node initiates the procedure by sending the HANDOVER CANCEL message to the target NG-RAN node. The source NG-RAN node shall indicate the reason for cancelling the handover by means of an appropriate cause value.

If the *Candidate Cells To Be Cancelled List* IE is included in the HANDOVER CANCEL message, the target NG-RAN node shall consider that the source NG-RAN node is cancelling only the handover associated to the candidate cells identified by the included NG-RAN CGI and associated to the same UE-associated signaling connection identified by the *Source NG-RAN node UE XnAP ID* IE and, if included, also by the *Target NG-RAN node UE XnAP ID* IE.

#### 8.2.3.3 Unsuccessful Operation

Not applicable.

#### 8.2.3.4 Abnormal Conditions

If the HANDOVER CANCEL message refers to a context that does not exist, the target NG-RAN node shall ignore the message.

If the *Candidate Cells To Be Cancelled List* IE is included in the HANDOVER CANCEL message and the handover is not associated to a conditional handover, the target NG-RAN node shall ignore the *Candidate Cells To Be Cancelled List* IE.

If one or more candidate cells in the *Candidate Cells To Be Cancelled List* IE included in the HANDOVER CANCEL message were not prepared using the same UE-associated signaling connection, the target NG-RAN node shall ignore those non-associated candidate cells.

#### 8.2.4 Retrieve UE Context

#### 8.2.4.1 General

The purpose of the Retrieve UE Context procedure is to either retrieve the UE context from the old NG-RAN node and transfer it to the NG-RAN node where the UE RRC Connection has been requested to be established, or to enable the old NG-RAN node to forward an RRC message to the UE via the new NG-RAN node without context transfer.

The procedure uses UE-associated signalling.

#### 8.2.4.2 Successful Operation

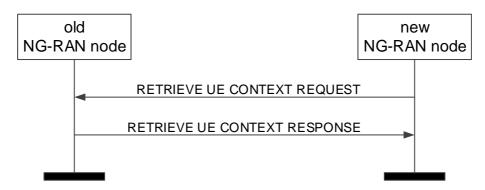


Figure 8.2.4.2-1: Retrieve UE Context, successful operation

The new NG-RAN node initiates the procedure by sending the RETRIEVE UE CONTEXT REQUEST message to the old NG-RAN node.

If the old NG-RAN node is able to identify the UE context by means of the UE Context ID, and to successfully verify the UE by means of the integrity protection contained in the RETRIEVE UE CONTEXT REQUEST message, and decides to provide the UE context to the new NG-RAN node, it shall respond to the new NG-RAN node with the RETRIEVE UE CONTEXT RESPONSE message.

If the *Index to RAT/Frequency Selection Priority* IE is contained in the RETRIEVE UE CONTEXT RESPONSE message, the new NG-RAN node shall store this information and use it as defined in TS 23.501 [7].

If the *Location Reporting Information* IE is included in the RETRIEVE UE CONTEXT RESPONSE message, then the new NG-RAN node should initiate the requested location reporting functionality as defined in TS 38.413 [5].

If the Trace Activation IE is included in the RETRIEVE UE CONTEXT RESPONSE message which includes

- the *MDT Activation* IE set to "Immediate MDT and Trace", then the target NG-RAN node shall if supported, initiate the requested trace session and MDT session as described in TS 32.422 [23].
- the *MDT Activation* IE set to "Immediate MDT Only" or "Logged MDT only", the target NG-RAN node shall, if supported, initiate the requested MDT session as described in TS 32.422 [23] and the target NG-RAN node shall ignore the *Interfaces To Trace* IE, and the *Trace Depth* IE.
- the *MDT Location Information* IE, within the *MDT Configuration* IE, the target NG-RAN node shall, if supported, store this information and take it into account in the requested MDT session.
- the *MDT Activation* IE set to "Immediate MDT Only" or "Logged MDT only", and if the *Signalling based MDT PLMN List* IE is included in the *MDT Configuration* IE, the target NG-RAN node may use it to propagate the MDT Configuration as described in TS 37.320 [y].
- the *Bluetooth Measurement Configuration* IE, within the *MDT Configuration* IE, the target NG-RAN node shall, if supported, take it into account for MDT Configuration as described in TS 37.320 [y].

- the WLAN Measurement Configuration IE, within the MDT Configuration IE, the target NG-RAN node shall, if supported, take it into account for MDT Configuration as described in TS 37.320 [y].
- the *Sensor Measurement Configuration* IE, within the *MDT Configuration* IE, take it into account for MDT Configuration as described in TS 37.320 [x].
- the *MDT Configuration* IE and if the target NG-RAN Node is a gNB at least *the MDT Configuration-NR* IE shall be present, while if the target NG-RAN Node is an ng-eNB at least the *MDT Configuration-EUTRA* IE shall be present.

For each QoS flow in the RETRIEVE UE CONTEXT RESPONSE message, if the *QoS Monitoring Request* IE is included in the *QoS Flow Level QoS Parameters* IE in the *PDU Session Resources To Be Setup List* IE, the new NG-RAN node shall store this information, and, if supported, perform delay measurement and QoS monitoring, as specified in TS 23.501 [7].

If the 5GC Mobility Restriction List Container IE is included in the RETRIEVE UE CONTEXT RESPONSE message, the new NG-RAN node shall, if supported, store this information in the UE context and use it as specified in TS 38.300 [9].

If the NR V2X Services Authorized IE is included in the RETRIEVE UE CONTEXT RESPONSE message and it contains one or more IEs set to "authorized", the new NG-RAN node shall, if supported, consider that the UE is authorized for the relevant service(s).

If the *LTE V2X Services Authorized* IE is included in the RETRIEVE UE CONTEXT RESPONSE message and it contains one or more IEs set to "authorized", the new NG-RAN node shall, if supported, consider that the UE is authorized for the relevant service(s).

If the NR UE Sidelink Aggregate Maximum Bit Rate IE is included in the UE Context Information Retrieve UE Context Response IE in the RETRIEVE UE CONTEXT RESPONSE message, the new NG-RAN node shall, if supported, use the received value for the concerned UE's sidelink communication in network scheduled mode for NR V2X services.

If the LTE UE Sidelink Aggregate Maximum Bit Rate IE is included in the UE Context Information Retrieve UE Context Response IE in the RETRIEVE UE CONTEXT RESPONSE message, the new NG-RAN node shall, if supported, use the received value for the concerned UE's sidelink communication in network scheduled mode for LTE V2X services.

If the *PC5 QoS Parameters* IE is included in the RETRIEVE UE CONTEXT RESPONSE message, the target NG-RAN node shall, if supported, use it as defined in TS 23.287[38].

In case of RRC Re-establishment, the old NG-RAN may include the *UE History Information* IE or the *UE History Information from the UE* IE in the RETRIEVE UE CONTEXT RESPONSE message. Upon reception of the *UE History Information* IE or the *UE History Information from the UE* IE in the RETRIEVE UE CONTEXT RESPONSE message, the new NG-RAN node shall, if supported, store the collected information and use it for future handover preparations.

If the *UE Radio Capability ID* IE is contained in the RETRIEVE UE CONTEXT RESPONSE message, the new NG-RAN node shall, if supported store this information in the UE context and use it as defined in TS 23.501 [7] and TS 23.502 [13].

#### 8.2.4.3 Unsuccessful Operation

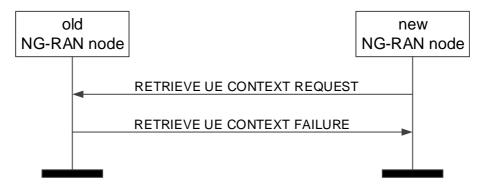


Figure 8.2.4.3-1: Retrieve UE Context, unsuccessful operation

If the old NG-RAN node is not able to identify the UE context by means of the UE Context ID, or if the integrity protection contained in the RETRIEVE UE CONTEXT REQUEST message is not valid, or, if it decides not to provide the UE context to the new NG-RAN node, it shall respond to the new NG-RAN node with the RETRIEVE UE CONTEXT FAILURE message.

If the old NG-RAN node decides to keep the UE context in case of periodic RNAU, it shall store the *Allocated C-RNTI* IE and the *Access PCI* IE in the *UE Context ID* IE, as described in TS 38.300 [9].

If the *Old NG-RAN node to New NG-RAN node Resume Container* IE is included in the RETRIEVE UE CONTEXT FAILURE message, the new NG-RAN node should transparently forward the content of this IE to the UE as described in TS 38.300 [9].

#### 8.2.4.4 Abnormal Conditions

Void.

#### 8.2.5 RAN Paging

#### 8.2.5.1 General

The purpose of the RAN Paging procedure is to enable the NG-RAN node<sub>1</sub> to request paging of a UE in the NG-RAN node<sub>2</sub>.

The procedure uses non UE-associated signalling.

#### 8.2.5.2 Successful operation



Figure 8.2.5.2-1: RAN Paging: successful operation

The RAN Paging procedure is triggered by the NG-RAN node<sub>1</sub> by sending the RAN PAGING message to the NG-RAN node<sub>2</sub>, in which the necessary information e.g. UE RAN Paging Identity should be provided.

If the Paging Priority IE is included in the RAN PAGING message, the NG-RAN node2 may use it to prioritize paging.

If the Assistance Data for RAN Paging IE is included in the RAN PAGING message, the NG-RAN node<sub>2</sub> may use it according to TS 38.300 [9].

If the *UE Radio Capability for Paging* IE is included in the RAN PAGING message, the NG-RAN node<sub>2</sub> may use it to apply specific paging schemes.

#### 8.2.5.3 Unsuccessful Operation

Not applicable.

#### 8.2.5.4 Abnormal Condition

Void.

#### 8.2.6 XN-U Address Indication

#### 8.2.6.1 General

For the retrieval of a UE context, the Xn-U Address Indication procedure is used to provide forwarding addresses from the new NG-RAN node to the old NG-RAN node for all PDU session resources successfully established at the new NG-RAN node for which forwarding was requested.

For MR-DC with 5GC, the Xn-UAddress Indication procedure is used to provide forwarding addresses and Xn-U bearer address information for completion of setup of SN terminated bearers from the M-NG-RAN node to the S-NG-RAN node as specified in TS 37.340 [8],

The procedure uses UE-associated signalling.

#### 8.2.6.2 Successful Operation



Figure 8.2.6.2-1: Xn-U Address Indication, successful operation for UE context retrieval



Figure 8.2.6.2-2: Xn-U Address Indication, successful operation for MR-DC with 5GC

#### **UE Context Retrieval**

The Xn-U Address Indication procedure is initiated by the new NG-RAN node. Sending the XN-U ADDRESS INDICATION message, the new NG-RAN node informs the old NG-RAN node of successfully established PDU Session Resource contexts to which user data pending at the old NG-RAN node can be forwarded.

The new NG-RAN node may include *Secondary Data Forwarding Info from target NG-RAN node List* IE for an additional Xn-U tunnel for data forwarding.

Upon reception of the XN-U ADDRESS INDICATION message, the old NG-RAN node should forward pending user data to the indicated TNL addresses.

#### MR-DC with 5GC

The Xn-U Address Indication procedure is initiated by the M-NG-RAN node.

Upon reception of the XN-U ADDRESS INDICATION message, in case of data forwarding, the S-NG-RAN node should forward pending DL user data to the indicated TNL addresses; in case of completion of Xn-U bearer

establishment for SN terminated bearers, the S-NG-RAN node may start delivery of user data to the indicated TNL address.

If the XN-U ADDRESS INDICATION message includes the *DRB IDs taken into use* IE, the S-NG-RAN node shall, if applicable, act as specified in TS 37.340 [8].

If the XN-U ADDRESS INDICATION message includes the *CHO MR-DC Indicator* IE, the S-NG-RAN node shall, if supported, consider that the XN-U ADDRESS INDICATION message concerns a Conditional Handover, and act as specified in TS 37.340 [8].

#### 8.2.6.3 Unsuccessful Operation

Not applicable.

#### 8.2.6.4 Abnormal Conditions

Void.

#### 8.2.7 UE Context Release

#### 8.2.7.1 General

For handover, the UE Context Release procedure is initiated by the target NG-RAN node to indicate to the source NG-RAN node that radio and control plane resources for the associated UE context are allowed to be released.

For dual connectivity, the UE Context Release procedure is initiated by the M-NG-RAN node to initiate the release the UE context at the S-NG-RAN node. For dual connectivity specific mobility scenarios specified in TS 37.340 [8], where SCG radio resources in the S-NG-RAN node are kept, only resources related to the UE-associated signalling connection between the M-NG-RAN node and the S-NG-RAN node are released.

For UE context retrieval, the UE Context Release procedure is initiated by the new NG-RAN node to indicate to the old NG-RAN node that radio and control plane resources for the associated UE context are allowed to be released.

The procedure uses UE-associated signalling.

#### 8.2.7.2 Successful Operation



Figure 8.2.7.2-1: UE Context Release, successful operation for handover



Figure 8.2.7.2-2: UE Context Release, successful operation for dual connectivity



Figure 8.2.7.2-3: UE Context Release, successful operation for UE context retrieval

#### Handover

The UE Context Release procedure is initiated by the target NG-RAN node. By sending the UE CONTEXT RELEASE message the target NG-RAN node informs the source NG-RAN node of Handover success and triggers the release of resources.

Upon reception of the UE CONTEXT RELEASE message, the source NG-RAN node may release radio and control plane related resources associated to the UE context. If data forwarding has been performed, the source NG-RAN node should continue forwarding of user plane data as long as packets are received at the source NG-RAN node.

#### **Dual Connectivity**

The UE Context Release procedure is initiated by the M-NG-RAN node. By sending the UE CONTEXT RELEASE message the M-NG-RAN node informs the S-NG-RAN node that the UE Context can be removed.

Upon reception of the UE CONTEXT RELEASE message, the S-NG-RAN node may release radio and control plane related resources associated to the UE context. If data forwarding has been performed, the S-NG-RAN node should continue forwarding of user plane data as long as packets are received at the S-NG-RAN node.

#### **UE Context Retrieval**

The UE Context Release procedure is initiated by the new NG-RAN node. By sending the UE CONTEXT RELEASE message the new NG-RAN node informs the old NG-RAN node of RRC connection reestablishment success or RRC connection resumption success and triggers the release of resources.

#### Interaction with the M-NG-RAN node initiated S-NG-RAN node Release procedure:

The S-NG-RAN node may receive the S-NODE RELEASE REQUEST message including the *UE Context Kept Indicator* IE set to "True", upon which the S-NG-RAN node shall, if supported, only release the resources related to the UE-associated signalling connection between the M-NG-RAN node and the S-NG-RAN node, as specified in TS 37.340 [8].

#### 8.2.7.3 Unsuccessful Operation

Not applicable.

#### 8.2.7.4 Abnormal Conditions

If the UE Context Release procedure is not initiated towards the source NG-RAN node from any prepared NG-RAN node before the expiry of the timer  $TXn_{RELOCoverall}$ , the source NG-RAN node shall request the AMF to release the UE context.

If the UE returns to source NG-RAN node before the reception of the UE CONTEXT RELEASE message or the expiry of the timer  $TXn_{RELOCoverall}$ , the source NG-RAN node shall stop the  $TXn_{RELOCoverall}$  and continue to serve the UE.

#### 8.2.8 Handover Success

#### 8.2.8.1 General

The Handover Success procedure is used during a conditional handover or a DAPS handover to enable a target NG-RAN node to inform the source NG-RAN node that the UE has successfully accessed the target NG-RAN node.

The procedure uses UE-associated signalling.

#### 8.2.8.2 Successful Operation



Figure 8.2.8.2-1: Handover Success, successful operation

The target NG-RAN node initiates the procedure by sending the HANDOVER SUCCESS message to the source NG-RAN node.

If late data forwarding was configured for this UE, the source NG-RAN node shall start data forwarding using the tunnel information related to the global target cell ID provided in the HANDOVER SUCCESS message.

When the source NG-RAN node receives the HANDOVER SUCCESS message, it shall consider all other CHO preparations accepted for this UE under the same UE-associated signalling connection in the target NG-RAN node as cancelled.

#### Interactions with other procedures

If a CONDITIONAL HANDOVER CANCEL message was received for this UE prior the reception of the HANDOVER SUCCESS message, the source NG-RAN node shall consider that the UE successfully executed the handover.

The source NG-RAN node may initiate Handover Cancel procedure towards the other signalling connections or other candidate target NG-RAN nodes for this UE, if any.

#### 8.2.8.3 Unsuccessful Operation

Not applicable.

#### 8.2.8.4 Abnormal Conditions

If the HANDOVER SUCCESS message refers to a context that does not exist, the source NG-RAN node shall ignore the message.

#### 8.2.9 Conditional Handover Cancel

#### 8.2.9.1 General

The Conditional Handover Cancel procedure is used to enable a target NG-RAN node to cancel an already prepared conditional handover.

The procedure uses UE-associated signalling.

#### 8.2.9.2 Successful Operation



Figure 8.2.9.2-1: Conditional Handover Cancel, successful operation

The target NG-RAN node initiates the procedure by sending the CONDITIONAL HANDOVER CANCEL message to the source NG-RAN node. The target NG-RAN node shall indicate the reason for cancelling the conditional handover by means of an appropriate cause value.

At the reception of the CONDITIONAL HANDOVER CANCEL message, the source NG-RAN node shall consider that the target NG-RAN node is about to remove any reference to, and release any resources previously reserved for candidate cells associated to the UE-associated signalling identified by the *Source NG-RAN node UE XnAP ID* IE and the *Target NG-RAN node UE XnAP ID* IE. If the *Candidate Cells To Be Cancelled List* IE is included in CONDITIONAL HANDOVER CANCEL message, the source NG-RAN node shall consider that only the resources reserved for the cells identified by the included NG-RAN CGI are about to be released.

#### 8.2.9.3 Unsuccessful Operation

Not applicable.

#### 8.2.9.4 Abnormal Conditions

If the CONDITIONAL HANDOVER CANCEL message refers to a context that does not exist, the source NG-RAN node shall ignore the message.

If one or more candidate cells in the *Candidate Cells To Be Cancelled List* IE included in the CONDITIONAL HANDOVER CANCEL message were not prepared using the same UE-associated signaling connection, the source NG-RAN node shall ignore those non-associated candidate cells.

## 8.2.10 Early Status Transfer

#### 8.2.10.1 General

The purpose of the Early Status Transfer procedure is to transfer the COUNT of the first downlink SDU that the source NG-RAN node forwards to the target NG-RAN node or the COUNT for discarding of already forwarded downlink SDUs for respective DRB during DAPS Handover or Conditional Handover.

The procedure uses UE-associated signalling.

# 8.2.10.2 Successful Operation



Figure 8.2.10.2-1: Early Status Transfer during DAPS Handover or Conditional Handover, successful operation



Figure 8.2.10.2-2: Early Status Transfer during Conditional Handover in MR-DC operation, successful operation

## Between source NG-RAN node and target NG-RAN node

The DRBs Subject To Early Status Transfer List IE included in the EARLY STATUS TRANSFER message contains the DRB ID(s) corresponding to the DRB(s) subject to be simultaneously served by the source and the target NG-RAN nodes during DAPS Handover or the DRB(s) transferred during Conditional Handover.

For each DRB in the *DRBs Subject To Early Status Transfer List* IE, the target NG-RAN node shall use the value of the *FIRST DL COUNT Value* IE as the COUNT of the first downlink SDU that the source NG-RAN node forwards to the target NG-RAN node.

For each DRB in the *DRBs Subject To Early Status Transfer List* IE for which the *DISCARD DL COUNT Value* IE is received in the EARLY STATUS TRANSFER message, the target NG-RAN node does not transmit forwarded downlink SDUs to the UE whose COUNT is less than the provided and discards them if transmission has not been attempted.

#### Between source S-NG-RAN node and source M-NG-RAN node (MR-DC with 5GC)

The *DRBs Subject To Early Status Transfer List* IE included in the EARLY STATUS TRANSFER message contains the DRB ID(s) corresponding to the DRB(s) transferred during Conditional Handover.

For each DRB in the *DRBs Subject To Early Status Transfer List* IE, the source M-NG-RAN node shall forward to the target, the value of the received *FIRST DL COUNT Value* IE or *DISCARD DL COUNT Value* IE.

#### 8.2.10.3 Unsuccessful Operation

Not applicable.

#### 8.2.10.4 Abnormal Conditions

If the target NG-RAN node receives this message for a UE for which no prepared DAPS Handover or Conditional Handover exists at the target NG-RAN node, the target NG-RAN node shall ignore the message.

# 8.3 Procedures for Dual Connectivity

# 8.3.1 S-NG-RAN node Addition Preparation

#### 8.3.1.1 General

The purpose of the S-NG-RAN node Addition Preparation procedure is to request the S-NG-RAN node to allocate resources for dual connectivity operation for a specific UE.

The procedure uses UE-associated signalling.

# 8.3.1.2 Successful Operation

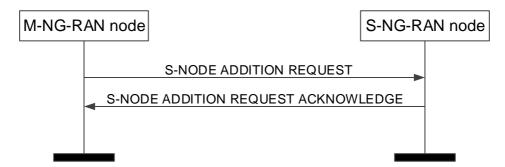


Figure 8.3.1.2-1: S-NG-RAN node Addition Preparation, successful operation

The M-NG-RAN node initiates the procedure by sending the S-NODE ADDITION REQUEST message to the S-NG-RAN node.

When the M-NG-RAN node sends the S-NODE ADDITION REQUEST message, it shall start the timer TXn<sub>DCprep</sub>.

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *QoS Flow Level QoS Parameters* IE for each QoS flow shall follow the principles specified for the PDU Session Resource Setup procedure in TS 38.413 [5].

The S-NG-RAN node shall choose the ciphering algorithm based on the information in the *UE Security Capabilities* IE and locally configured priority list of AS encryption algorithms and apply the key indicated in the *S-NG-RAN node Security Key* IE as specified in TS 33.501 [28].

If the *TSC Traffic Characteristics* IE is included for a QoS flow in the S-NODE ADDITION REQUEST message, the S-NG-RAN node shall behave the same as the NG-RAN node in the PDU Session Resource Setup procedure, specified in TS 38.413 [5].

If the *Additional QoS Flow Information* IE is included for a QoS flow in the S-NODE ADDITION REQUEST message, the S-NG-RAN node shall behave the same as the NG-RAN node in the PDU Session Resource Setup procedure, specified in TS 38.413 [5].

For each PDU session, if the *Network Instance* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE contained in the *PDU Session Resources To Be Added List* IE and the *Common Network Instance* IE is not present, the S-NG-RAN node shall, if supported, use it when selecting transport network resource as specified in TS 23.501 [7].

For each GBR QoS flow, if the *Offered GBR QoS Flow Information* IE is included in the *QoS Flows To Be Setup List* IE contained in the *PDU Session Resource Setup Info – SN terminated* IE, the S-NG-RAN node may request the M-NG-RAN node to configure the DRB to which that QoS flow is mapped with MCG resources.

For each PDU session, if the *Non-GBR Resources Offered* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE contained in the *PDU Session Resources To Be Added List* IE and set to "true", the S-NG-RAN node may request the M-NG-RAN node to configure DRBs to which non-GBR QoS flows of the PDU session are mapped with MCG resources.

For each PDU session, if the *Common Network Instance* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE contained in the *PDU Session Resources To Be Added List* IE, the S-NG-RAN node shall, if supported, use it when selecting transport network resource as specified in TS 23.501 [7].

For each PDU session, if the *Redundant UL NG-U UP TNL Information at UPF* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE, the S-NG-RAN node shall, if supported, use it as the uplink termination point for the user plane data for this PDU session for the redundant transmission and it shall include the *Redundant DL NG-U UP TNL Information at NG-RAN* IE in the *PDU Session Resource Setup Response Info – SN terminated* IE as described in TS 23.501 [9].

For each PDU session, if the *Redundant Common Network Instance* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE the S-NG-RAN node shall, if supported, use it when selecting transport network resource for the redundant transmission as specified in TS 23.501 [7].

For each PDU session for which the *Redundant QoS Flow Indicator* IE is include in *QoS Flows To Be Setup List* IE contained in the *S-NODE ADDITION REQUEST* message, the S-NG-RAN node shall, if supported, store and use it as specified in TS 23.501 [7].

For each PDU session, if the *Redundant PDU Session Information* IE is included in the *PDU Session Resource Setup Info - SN terminated* IE in the S-NODE ADDITION REQUEST message, the S-NODE-RAN node shall, if supported, store the received information in the UE context and setup the redundant user plane resources for the concerned PDU session, as specified in TS 23.501 [7].

For each PDU session resource successfully setup for which the *Redundant PDU Session Information* IE is included in the S-NODE ADDITION REQUEST message, the S-NG-RAN node shall, if supported, include the *Used RSN Information* IE in the *PDU Session Resource Setup Response Info – SN terminated* IE in the S-NODE ADDITION REQUEST ACKNOWLEDGE message.

If the S-NODE ADDITION REQUEST message contains the *Selected PLMN* IE, the S-NG-RAN node may use it for RRM purposes.

If the S-NODE ADDITION REQUEST message contains the *Expected UE Behaviour* IE, the S-NG-RAN node shall, if supported, store this information and may use it to optimize resource allocation.

If the S-NODE ADDITION REQUEST message contains the *Mobility Restriction List* IE, the S-NG-RAN node, if supported, shall store this information and use it to select an appropriate SCG.

If the S-NODE ADDITION REQUEST message contains the *Index to RAT/Frequency Selection Priority* IE, the S-NG-RAN node may use it for RRM purposes.

If the S-NG-RAN node is a gNB and the S-NODE ADDITION REQUEST message contains the *PCell ID* IE, the S-NG-RAN node shall search for the target NR cell among the NR neighbour cells of the PCell indicated, as specified in the TS 37.340 [8].

If the S-NODE ADDITION REQUEST message contains the S-NG-RAN node PDU Session Aggregate Maximum Bit Rate IE, the S-NG-RAN node may use it for RRM purposes.

If the S-NODE ADDITION REQUEST message contains the *MR-DC Resource Coordination Information* IE, the S-NG-RAN node should forward it to lower layers and it may use it for the purpose of resource coordination with the M-NG-RAN node. The S-NG-RAN node shall consider the value of the received *UL Coordination Information* IE valid until reception of a new update of the IE for the same UE. The S-NG-RAN node shall consider the value of the received *DL Coordination Information* IE valid until reception of a new update of the IE for the same UE. If the *E-UTRA Coordination Assistance Information* IE or the *NR Coordination Assistance Information* IE is contained in the *MR-DC Resource Coordination Information* IE, the S-NG-RAN node shall, if supported, use the information to determine further coordination of resource utilisation between the S-NG-RAN node and the M-NG-RAN node.

If the S-NODE ADDITION REQUEST message contains the *NE-DC TDM Pattern* IE, the S-NG-RAN node should forward it to lower layers and use it for the purpose of single uplink transmission. The S-NG-RAN node shall consider the value of the received *NE-DC TDM Pattern* IE valid until reception of a new update of the IE for the same UE.

If the S-NODE ADDITION REQUEST message contains the *QoS Flow Mapping Indication* IE, the S-NG-RAN node may take it into account that only the uplink or downlink QoS flow is mapped to the DRB.

For each bearer for which allocation of the PDCP entity is requested at the S-NG-RAN node:

- the M-NG-RAN node may propose to apply forwarding of downlink data by including the *DL Forwarding* IE within *PDU Session Resource Setup Info SN terminated* IE of the S-NODE ADDITION REQUEST message. For each bearer that it has decided to admit, the S-NG-RAN node may include the *DL Forwarding GTP Tunnel Endpoint* IE within the *PDU Session Resource Setup Response Info SN terminated* IE of the S-NODE ADDITION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer.
- the S-NG-RAN node may include for each bearer in the *PDU Session Resource Setup Response Info SN terminated* IE the *UL Forwarding GTP Tunnel Endpoint* IE to indicates it request data forwarding of uplink packets to be performed for that bearer.
- the M-NG-RAN node shall include *RLC Mode* IE for each bearer offloaded from M-NG-RAN node to S-NG-RAN node in the *DRBs to QoS Flow Mapping List* IE within the *PDU Session Resource Setup Info SN terminated* IE of the S-NODE ADDTION REQUEST message, and the *RLC Mode* IE indicates the mode that the M-NG-RAN used for the DRB when it was hosted at the M-NG-RAN node.

For each bearer for which the PDCP entity is at the M-NG-RAN node:

- the M-NG-RAN node shall include the *RLC mode* IE for each bearer in the *DRBs To Be Setup List* IE within the *PDU Session Resource Setup Info – MN terminated* IE of the S-NODE ADDTION REQUEST message to indicate the RLC mode has been configured at the M-NG-RAN node, so that the S-NG-RAN node shall configure the same RLC mode for this MN terminated split bearer.

The M-NG-RAN node may also propose to apply forwarding of UL data when offloading QoS flows for which in-order delivery is requested by including the *UL Forwarding Proposal* IE in the *Data Forwarding and Offloading Info from source NG-RAN node* IE within the *PDU Session Resource Setup Info – SN terminated* IE of the S-NODE ADDITION REQUEST message. The S-NG-RAN node may include the *PDU Session Level UL Data Forwarding UP TNL Information* IE in the *Data Forwarding Info from target NG-RAN node* IE within the *PDU Session Resource Setup Response Info – SN terminated* IE of the S-NODE ADDITION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding.

If the *Masked IMEISV* IE is contained in the S-NODE ADDITION REQUEST message the S-NG-RAN node shall, if supported, use it to determine the characteristics of the UE for subsequent handling.

If the *UE Radio Capability ID* IE is contained in the S-NODE ADDITION REQUES message, the S-NG-RAN node shall, if supported, store this information in the UE context and use it as defined in TS 23.501 [7] and TS 23.502 [13].

The S-NG-RAN node shall report to the M-NG-RAN node, in the S-NODE ADDITION REQUEST ACKNOWLEDGE message, the result for all the requested PDU session resources in the following way:

- A list of PDU session resources which are successfully established shall be included in the *PDU Session Resources Admitted To Be Added List* IE.
- A list of PDU session resources which failed to be established shall be included in the *PDU Session Resources Not Admitted List* IE.

Upon reception of the S-NODE ADDITION REQUEST ACKNOWLEDGE message the M-NG-RAN node shall stop the timer  $TXn_{DCprep}$ .

If the S-NODE ADDITION REQUEST ACKNOWLEDGE message contains the *MR-DC Resource Coordination Information* IE, the M-NG-RAN node may use it for the purpose of resource coordination with the S-NG-RAN node. The M-NG-RAN node shall consider the value of the received *UL Coordination Information* IE valid until reception of a new update of the IE for the same UE. The M-NG-RAN node shall consider the value of the received *DL Coordination Information* IE valid until reception of a new update of the IE for the same UE. If the *E-UTRA Coordination Assistance Information* IE or the *NR Coordination Assistance Information* IE is contained in the *MR-DC Resource Coordination Information* IE, the M-NG-RAN node shall, if supported, use the information to determine further coordination of resource utilisation between the M-NG-RAN node and the S-NG-RAN node.

The S-NG-RAN node may include for each bearer in the *DRBs To Be Setup List* IE in the S-NODE ADDITION REQUEST ACKNOWLEDGE message the *PDCP SN Length* IE to indicate the PDCP SN length for that DRB.

If the S-NG-RAN node UE XnAP ID IE is contained in the S-NODE ADDITION REQUEST message, the S-NG-RAN node shall, if supported, store this information and use it as defined in TS 37.340 [8].

If the S-NODE ADDITION REQUEST message contains the *PDCP SN Length* IE, the S-NG-RAN node shall, if supported, store this information and use it for lower layer configuration of the concerned MN terminated bearer.

If the S-NODE ADDITION REQUEST message contains the *SN Addition Trigger Indication* IE, the S-NG-RAN node shall include the *RRC config indication* IE in the S-NODE ADDITION REQUEST ACKNOWLEDGE message to inform the M-NG-RAN node if the S-NG-RAN node applied full or delta configuration, as specified in TS 37.340 [8].

If the S-NODE ADDITION REQUEST message contains the S-NG-RAN node Maximum Integrity Protected Data Rate Uplink IE or the S-NG-RAN node Maximum Integrity Protected Data Rate Downlink IE, the S-NG-RAN node shall use the received information when enforcing the maximum integrity protected data rate for the UE.

If the Security Indication IE is included in the PDU Session Resource Setup Info – SN terminated IE of the S-NODE ADDITION REQUEST message, the behaviour of the S-NG-RAN node shall be the same as specified for the same IE in the PDU Session Resources To Be Setup List IE in the Handover Preparation procedure, for the concerned PDU session, and the S-NG-RAN node shall include the Security Result IE in the PDU Session Resource Setup Response Info – SN terminated IE.

If the Security Result IE is included in the PDU Session Resource Setup Info – SN terminated IE of the S-NODE ADDITION REQUEST message, the S-NG-RAN node may take the information into account when deciding whether to perform user plane integrity protection or ciphering for the DRBs that it establishes for the concerned PDU session, except if the Split Session Indicator IE is included in the PDU Session Resource Setup Info – SN terminated IE and set to "split", in which case it shall perform user plane integrity protection or ciphering according to the information in the Security Result IE. If the S-NG-RAN node is an ng-eNB, it shall reject all PDU sessions for which the Integrity Protection Indication IE is set to "required" as specified in TS 33.501 [28]. If either the S-NG-RAN node or the M-NG-RAN node is an ng-eNB, the S-NG-RAN node shall behave according to clause 6.10.4 of TS 33.501 [28] for PDU sessions for which the Integrity Protection Indication IE is set to "preferred".

The S-NG-RAN node may include the *Location Information at S-NODE* IE in the S-NODE ADDITION REQUEST ACKNOWLEDGE message, if respective information is available at the S-NG-RAN node.

If the *Location Information at S-NODE Reporting* IE set to "pscell" is included in the S-NODE ADDITION REQUEST, the S-NG-RAN node shall, start providing information about the current location of the UE. If the *Location Information at S-NODE* IE is included in the S-NODE ADDITION REQUEST ACKNOWLEDGE, the M-NG-RAN node shall store the included information so that it may be transferred towards the AMF.

If the *Default DRB Allowed* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE of the S-NODE ADDITION REQUEST message and set to "true", the S-NG-RAN node may configure the default DRB for the PDU session.

If the S-NODE ADDITION REQUEST ACKNOWLEDGE message includes the *DRB IDs taken into use* IE, the M-NG-RAN node, if applicable, shall act as specified in TS 37.340 [8].

If *Trace Activation* IE has previously been received for this UE, it shall be included in the S-NODE ADDITION REQUEST message. If the *Trace Activation* IE is included in the S-NODE ADDITION REQUEST message, the S-NG-RAN node shall, if supported, initiate the requested trace function as described in TS 32.422 [23].

The M-NG-RAN node may request the S-NG-RAN node to configure the SRB3 by including the *Requested Fast MCG recovery via SRB3* IE in the S-NODE ADDITION REQUEST message. The S-NG-RAN node may include the *Available fast MCG recovery via SRB3* IE in the S-NODE ADDITION REQUEST ACKNOWLEDGE message to indicate that the SRB3 is enabled.

If the *QoS Monitoring Request* IE is included in the *QoS Flow Level QoS Parameters* IE for a QoS flow contained in the *DRBs To Be Setup List* IE of the *PDU Session Resource Setup Info – MN terminated* IE, the S-NG-RAN node shall, if supported, use it to configure lower layers for the purpose of delay measurement and QoS monitoring as specified in TS 23.501 [7].

For each QoS flow which has been successfully established in the S-NG-RAN node, if the *QoS Monitoring Request* IE was included in the *QoS Flow Level QoS Parameters* IE contained in the *PDU Session Resource Setup Info – SN terminated* IE, the S-NG-RAN node shall store this information, and, if supported, perform delay measurement and QoS monitoring as specified in TS 23.501 [7]. In case such a QoS flow is included in the *DRBs To Be Setup List* IE of the

*PDU Session Resource Setup Response Info – SN terminated* IE, the M-NG-RAN node shall, if supported, use it to configure lower layers for the purpose of delay measurement and QoS monitoring.

#### Interactions with the S-NG-RAN node Reconfiguration Completion procedure:

If the S-NG-RAN node admits at least one PDU session resource, the S-NG-RAN node shall start the timer  $TXn_{DCoverall}$  when sending the S-NODE ADDITION REQUEST ACKNOWLEDGE message to the M-NG-RAN node. The reception of the S-NODE RECONFIGURATION COMPLETE message shall stop the timer  $TXn_{DCoverall}$ .

#### Interaction with the Activity Notification procedure

Upon receiving an S-NODE ADDITION REQUEST message containing the *Desired Activity Notification Level* IE, the S-NG-RAN node shall, if supported, use this information to decide whether to trigger subsequent Activation Notification procedures according to the requested notification level.

# 8.3.1.3 Unsuccessful Operation

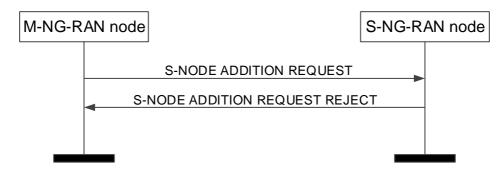


Figure 8.3.1.3-1: S-NG-RAN node Addition Preparation, unsuccessful operation

If the S-NG-RAN node is not able to accept any of the bearers or a failure occurs during the S-NG-RAN node Addition Preparation, the S-NG-RAN node sends the S-NODE ADDITION REQUEST REJECT message with an appropriate cause value to the M-NG-RAN node.

#### 8.3.1.4 Abnormal Conditions

If the S-NG-RAN node receives an S-NODE ADDITION REQUEST message containing in a *PDU Session Resource To Be Added Item* IE neither the *PDU Session Resource Setup Info – SN terminated* IE nor the *PDU Session Resource Setup Info – MN terminated* IE, the S-NG-RAN node shall fail the S-NG-RAN node Addition Preparation procedure indicating an appropriate cause.

If the supported algorithms for encryption defined in the *NR Encryption Algorithms* IE in the *NR UE Security Capabilities* IE, plus the mandated support of NEA0 in all UEs (TS 33.501 [28]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the S-NG-RAN node (TS 33.501 [28]), the S-NG-RAN node shall reject the procedure using the S-NODE ADDITION REQUEST REJECT message.

If the supported algorithms for integrity defined in the *NR Integrity Protection Algorithms* IE in the *NR UE Security Capabilities* IE do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the S-NG-RAN node (TS 33.501 [28]), the S-NG-RAN node shall reject the procedure using the S-NODE ADDITION REQUEST REJECT message.

If the S-NG-RAN node receives an S-NODE ADDITION REQUEST message containing a *NG-RAN node UE XnAP ID* IE that does not match any existing UE Context that has such ID, the S-NG-RAN node shall reject the procedure using the S-NODE ADDITION REQUEST REJECT message.

If the S-NG-RAN node receives an S-NODE ADDITION REQUEST message containing a value for *PDU Session ID* in *PDU Session Resources Admitted List* IE and in *PDU Session Resources Not Admitted List* IE, the M-NG-RAN node shall regard setup of S-NG-RAN node resources of that PDU Session as being failed.

If the S-NG-RAN node receives an S-NODE ADDITION REQUEST message containing, for a PDU session, a *PDU Session Resource Setup Info – SN terminated* IE for which the *Split Session Indicator* IE is included and set to "split", the *Security Result* IE is not included, and either the *Integrity Protection Indication* IE or the *Confidentiality Protection Indication* IE is set to "preferred", it shall reject the PDU session.

#### Interaction with the M-NG-RAN node initiated S-NG-RAN node Release procedure:

If the M-NG-RAN node receives an S-NODE ADDITION REQUEST ACKNOWLEDGE message containing in a *PDU Session Resource Admitted To Be Added Item* IE neither the *PDU Session Resource Setup Response Info – SN terminated* IE nor the *PDU Session Resource Setup Response Info – MN terminated* IE, the M-NG-RAN node shall trigger the M-NG-RAN node initiated S-NG-RAN node Release procedure indicating an appropriate cause.

If the timer TXn<sub>DCprep</sub> expires before the M-NG-RAN node has received the S-NODE ADDITION REQUEST ACKNOWLEDGE message, the M-NG-RAN node shall regard the S-NG-RAN node Addition Preparation procedure as being failed and shall trigger the M-NG-RAN node initiated S-NG-RAN node Release procedure.

# Interactions with the S-NG-RAN node Reconfiguration Completion and S-NG-RAN node initiated S-NG-RAN node Release procedure:

If the timer  $TXn_{DCoverall}$  expires before the S-NG-RAN node has received the S-NODE RECONFIGURATION COMPLETE or the S-NODE RELEASE REQUEST message, the S-NG-RAN node shall regard the requested RRC connection reconfiguration as being not applied by the UE and shall trigger the S-NG-RAN node initiated S-NG-RAN node Release procedure.

# 8.3.2 S-NG-RAN node Reconfiguration Completion

#### 8.3.2.1 General

The purpose of the S-NG-RAN node Reconfiguration Completion procedure is to provide information to the S-NG-RAN node whether the requested configuration was successfully applied by the UE.

The procedure uses UE-associated signalling.

# 8.3.2.2 Successful Operation



Figure 8.3.2.2-1: S-NG-RAN node Reconfiguration Complete procedure, successful operation.

The M-NG-RAN node initiates the procedure by sending the S-NODE RECONFIGURATION COMPLETE message to the S-NG-RAN node.

The S-NODE RECONFIGURATION COMPLETE message may contain information that

- either the UE has successfully applied the configuration requested by the S-NG-RAN node. The M-NG-RAN node may also provide configuration information in the *M-NG-RAN node to S-NG-RAN node Container* IE.
- or the configuration requested by the S-NG-RAN node has been rejected. The M-NG-RAN node shall provide information with sufficient precision in the included *Cause* IE to enable the S-NG-RAN node to know the reason for an unsuccessful reconfiguration. The M-NG-RAN node may also provide configuration information in the *M-NG-RAN node to S-NG-RAN node Container* IE.

Upon reception of the S-NODE RECONFIGURATION COMPLETE message the S-NG-RAN node shall stop the timer  $TXn_{DCoverall}$ . In case of conditional PSCell change, the S-NG-RAN node shall also consider the procedure successful even if the timer  $TXn_{DCoverall}$  has not been initiated when receiving this message.

#### 8.3.2.3 Abnormal Conditions

Void.

# 8.3.3 M-NG-RAN node initiated S-NG-RAN node Modification Preparation

#### 8.3.3.1 General

This procedure is used to enable an M-NG-RAN node to request an S-NG-RAN node to either modify the UE context at the S-NG-RAN node or to query the current SCG configuration for supporting delta signalling in M-NG-RAN node initiated S-NG-RAN node change, or to provide the S-RLF-related information to the S-NG-RAN node.

The procedure uses UE-associated signalling.

# 8.3.3.2 Successful Operation



Figure 8.3.3.2-1: M-NG-RAN node initiated S-NG-RAN node Modification Preparation, successful operation

The M-NG-RAN node initiates the procedure by sending the S-NODE MODIFICATION REQUEST message to the S-NG-RAN node.

When the M-NG-RAN node sends the S-NODE MODIFICATION REQUEST message, it shall start the timer  $TXn_{DCprep}$ .

The S-NODE MODIFICATION REQUEST message may contain

- within the UE Context Information IE;
  - PDU session resources to be added within the PDU Session Resources To Be Added Item IE;
  - PDU session resources to be modified within the PDU Session Resources To Be Modified Item IE;
  - PDU session resources to be released within the PDU Session Resources To Be Released Item IE;
  - the S-NG-RAN node Security Key IE;
  - the S-NG-RAN node UE Aggregate Maximum Bit Rate IE;
- the *M-NG-RAN node to S-NG-RAN node Container* IE;
- the PDCP Change Indication IE;
- the SCG Configuration Query IE;
- the *Requested split SRBs IE*;
- the Requested split SRBs release IE;
- the Requested fast MCG recovery via SRB3 IE;
- the Requested fast MCG recovery via SRB3 Release IE;

- the Additional DRB IDs IE;
- the MR-DC Resource Coordination Information IE.

If the S-NODE MODIFICATION REQUEST message contains the *Selected PLMN* IE, the S-NG-RAN node may use it for RRM purposes.

If the S-NODE MODIFICATION REQUEST message contains the *Mobility Restriction List* IE, the S-NG-RAN node shall

- replace the previously provided Mobility Restriction List by the received Mobility Restriction List in the UE context:
- use this information to select an appropriate SCG.

If the *S-NG-RAN node UE Aggregate Maximum Bit Rate* IE is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall:

- replace the previously provided S-NG-RAN node UE Aggregate Maximum Bit Rate by the received S-NG-RAN node UE Aggregate Maximum Bit Rate in the UE context;
- use the received S-NG-RAN node UE Aggregate Maximum Bit Rate for Non-GBR Bearers for the concerned UE as defined in TS 37.340 [8].

If the S-NODE MODIFICATION REQUEST message contains the *Index to RAT/Frequency Selection Priority* IE, the S-NG-RAN node may use it for RRM purposes.

If the S-NODE MODIFICATION REQUEST message contains the S-NG-RAN node PDU Session Aggregate Maximum Bit Rate IE, the S-NG-RAN node may use it for RRM purposes.

If the S-NODE MODIFICATION REQUEST message contains the *MR-DC Resource Coordination Information* IE, the S-NG-RAN node should forward it to lower layers and it may use it for the purpose of resource coordination with the M-NG-RAN node. The S-NG-RAN node shall consider the value of the received *UL Coordination Information* IE valid until reception of a new update of the IE for the same UE. The S-NG-RAN node shall consider the value of the received *DL Coordination Information* IE valid until reception of a new update of the IE for the same UE. If the *E-UTRA Coordination Assistance Information* IE or the *NR Coordination Assistance Information* IE is contained in the *MR-DC Resource Coordination Information* IE, the S-NG-RAN node shall, if supported, use the information to determine further coordination of resource utilisation between the S-NG-RAN node and the M-NG-RAN node.

If the S-NODE MODIFICATION REQUEST message contains the *NE-DC TDM Pattern* IE, the S-NG-RAN node should forward it to lower layers and use it for the purpose of single uplink transmission. The S-NG-RAN node shall consider the value of the received *NE-DC TDM Pattern* IE valid until reception of a new update of the IE for the same LIE

The allocation of resources according to the values of the *Allocation and Retention Priority* IE included in the *QoS Flow Level QoS Parameters* IE for each QoS flow shall follow the principles specified for the PDU Session Resource Setup procedure in TS 38.413 [5].

If the *Additional QoS Flow Information* IE is included for a QoS flow in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall behave the same as the NG-RAN node in the PDU Session Resource Setup procedure, specified in TS 38.413 [5].

If the *TSC Traffic Characteristics* IE is included for a QoS flow in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall behave the same as the NG-RAN node in the PDU Session Resource Setup procedure, specified in TS 38.413 [5].

For each PDU session, if the *Network Instance* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE and in the *PDU Session Resource Modification Info – SN terminated* IE and the *Common Network Instance* IE is not present, the S-NG-RAN node shall, if supported, use it when selecting transport network resource as specified in TS 23.501 [7].

For each PDU session, if the *Common Network Instance* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE and in the *PDU Session Resource Modification Info – SN terminated* IE, the S-NG-RAN node shall, if supported, use it when selecting transport network resource as specified in TS 23.501 [7].

For each GBR QoS flow, if the *Offered GBR QoS Flow Information* IE is included in the *QoS Flows To Be Setup List* IE contained in the *PDU Session Resource Setup Info – SN terminated* IE, the S-NG-RAN node may request the M-NG-RAN node to configure the DRB to which that QoS flow is mapped with MCG resources.

For each PDU session, if the *Non-GBR Resources Offered* IE is included in the *PDU Session Resource Modification Info – SN terminated* IE contained in the *PDU Session Resources To Be Added List* IE and set to "true", the S-NG-RAN node may request the M-NG-RAN node to configure the DRBs to which non-GBR QoS flows of the PDU session are mapped with MCG resources.

If at least one of the requested modifications is admitted by the S-NG-RAN node, the S-NG-RAN node shall modify the related part of the UE context accordingly and send the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message back to the M-NG-RAN node.

The M-NG-RAN node shall include *RLC Mode* IE for each bearer offloaded from M-NG-RAN node to S-NG-RAN node in the *DRBs to QoS Flow Mapping List* IE within the *PDU Session Resource Setup Info – SN terminated* IE of the S-NODE MODIFICATION REQUEST message, and the *RLC Mode* IE indicates the mode that the M-NG-RAN used for the DRB when it was hosted at the M-NG-RAN node.

The S-NG-RAN node shall include the PDU sessions for which resources have been either added or modified or released at the S-NG-RAN node either in the *PDU Session Resources Admitted To Be Added List* IE or the *PDU Session Resources Admitted To Be Released List* IE. The S-NG-RAN node shall include the PDU sessions that have not been admitted in the *PDU Session Resources Not Admitted List* IE with an appropriate cause value.

If the M-NG-RAN node requests transfer of the PDCP hosting from the S-NG-RAN node to the M-NG-RAN node for a PDU session, in which case the S-NODE MODIFICATION REQUEST message contains an PDU session resource to be released which is configured with the SCG bearer option within the PDU Session Resources To Be Released List IE, the S-NG-RAN node shall include the RLC Mode IE within the DRBs To Be Released List IE in the PDU Session Resources admitted to be released List – SN terminated IE in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message. The the RLC Mode IE indicates the RLC mode that the S-NG-RAN node uses for the DRB.

If the *QoS Flow Mapping Indication* IE is included in the S-NODE MODIFICATION REQUEST message for a QoS flow to be modified, the S-NG-RAN node may replace and take it into account that only the uplink or downlink QoS flow is mapped to the DRB.

If the S-NODE MODIFICATION REQUEST message contains for a PDU session resource to be modified which is configured with the SN terminated bearer option, the *UL NG-U UP TNL Information at UPF* IE the S-NG-RAN node shall use it as the new UL NG-U address.

If the S-NODE MODIFICATION REQUEST message contains for a PDU session resource to be modified which is configured with the MN terminated bearer option, the MN UL PDCP UP TNL Information IE the S-NG-RAN node shall use it as the new UL Xn-U address.

If the S-NODE MODIFICATION REQUEST message contains for a PDU session resource to be modified which is configured with the SN terminated bearer option, the *Redundant UL NG-U UP TNL Information at UPF* IE, the S-NG-RAN node shall, if supported, use it as the new UL NG-U address for the redundant transmission as specified in TS 23.501 [7].

For each PDU session, if the *Redundant Common Network Instance* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE or in the *PDU Session Resource Modification Info – SN terminated* IE, the S-NG-RAN node shall, if supported, use it when selecting transport network resource for the redundant transmission as specified in TS 23.501 [7].

For each PDU session, if the *Redundant QoS Flow Indicator* IE is set to false for all QoS flows, the S-NG-RAN node shall, if supported, stop the redundant transmission and release the redundant tunnel for the concerned PDU Session as specified in TS 23.501 [7].

For each PDU session for which the *Redundant QoS Flow Indicator* IE is included in the *S-NODE MODIFICATION REQUEST* message, the S-NG-RAN node shall, if supported, store and use it as specified in TS 23.501 [7].

For each PDU session, if the *Redundant PDU Session Information* IE is included in the *PDU Session Resource Setup Info - SN terminated* IE in the S-NODE MODIFICATION REQUEST message, the S-NODE-RAN node shall, if

supported, store the received information in the UE context and setup the redundant user plane for the concerned PDU session, as specified in TS 23.501 [7].

For each PDU session resource successfully setup for which the *Redundant PDU Session Information* IE is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall, if supported, include the *Used RSN Information* IE in the *PDU Session Resource Setup Response Info – SN terminated* IE in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message.

If the S-NODE MODIFICATION REQUEST message contains the *QoS flows To Be Released List* within the *PDU Session Resource Modification Info – SN terminated* IE, the S-NG-RAN node may propose to apply forwarding of UL data for the QoS flows for which in-order delivery is requested by including the *UL Forwarding Proposal* IE in the *Data Forwarding and Offloading Info from source NG-RAN node* IE within the *PDU Session Resource Modification Response Info – SN terminated* IE of the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message.

For a PDU session resource to be modified which is configured with the SN terminated bearer option the S-NG-RAN node may include in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message the *DL NG-U UP TNL Information at NG-RAN* IE.

For a PDU session resource to be modified which is configured with the MN terminated bearer option the S-NG-RAN node may include in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message the *SN DL SCG UP TNL Information* IE.

If the *PDCP Change Indication* IE is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall act as specified in TS 37.340 [8].

Upon reception of the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message the M-NG-RAN node shall stop the timer TXn<sub>DCprep</sub>. If the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message has included the *S-NG-RAN node to M-NG-RAN node Container* IE, the M-NG-RAN node is then defined to have a Prepared S-NG-RAN node Modification for that Xn UE-associated signalling.

If the SCG Configuration Query IE is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall provide corresponding radio configuration information within the S-NG-RAN node to M-NG-RAN node Container IE and may provide the corresponding data forwarding related information within the PDU Session Resources with Data Forwarding List IE as specified in TS 37.340 [8].

For each bearer for which allocation of the PDCP entity is requested at the S-NG-RAN node:

- if applicable, the M-NG-RAN node may propose to apply forwarding of downlink data by including the DL Forwarding IE within the PDU Session Resource Setup Info SN terminated IE of the S-NODE MODIFICATION REQUEST message. For each bearer that it has decided to admit, the S-NG-RAN node may include the DL Forwarding GTP Tunnel Endpoint IE within the PDU Session Resource Setup Response Info SN terminated IE of the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding of downlink data for this bearer.
- the S-NG-RAN node may include for each bearer in the PDU Session Resource Setup Response Info SN terminated IE the UL Forwarding GTP Tunnel Endpoint IE to indicate it requests data forwarding of uplink packets to be performed for that bearer.

The M-NG-RAN node may propose to apply forwarding of UL data when offloading QoS flows for which in-order delivery is requested by including the *UL Forwarding Proposal* IE in the *Data Forwarding and Offloading Info from source NG-RAN node* IE within the *PDU Session Resource Setup Info – SN terminated* IE or *PDU Session Resource Modification Info – SN terminated* IE of the S-NODE MODIFICATION REQUEST message. The S-NG-RAN node may include the *PDU Session Level UL Data Forwarding UP TNL Information* IE in the *Data Forwarding Info from target NG-RAN node* IE within the *PDU Session Resource Setup Response Info – SN terminated* IE or *PDU Session Resource Modification Response Info – SN terminated* IE of the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message to indicate that it accepts the proposed forwarding.

If the S-NODE MODIFICATION REQUEST message contains the *Requested Split SRBs* IE, the S-NG-RAN node may use it to add split SRBs. If the S-NODE MODIFICATION REQUEST message contains the *Requested Split SRBs* release IE, the S-NG-RAN node may use it to release split SRBs.

The M-NG-RAN node may request the S-NG-RAN node to configure the SRB3 by including the *Requested Fast MCG recovery via SRB3* IE in the S-NODE MODIFICATION REQUEST message. The M-NG-RAN node may request the S-NG-RAN node to release the SRB3 by including the *Requested Fast MCG recovery via SRB3 Release* IE in the S-

NODE MODIFICATION REQUEST message. The S-NG-RAN node may include the *Available fast MCG recovery via SRB3* or the *Release fast MCG recovery via SRB3* IE in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message to indicate that the SRB3 is enabled or released.

If the *Lower Layer presence status change* IE set to "release lower layers" is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall act as specified in TS 37.340 [8].

If the *Lower Layer presence status change* IE set to "re-establish lower layers" is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall act as specified in TS 37.340 [8].

If the *Lower Layer presence status change* IE set to "suspend lower layers" is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall act as specified in TS 37.340 [8].

If the *Lower Layer presence status change* IE set to "resume lower layers" is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall act as specified in TS 37.340 [8].

The M-NG-RAN node may include for each bearer in the *DRBs To Be Modified List* IE in the S-NODE MODIFICATION REQUEST message the *RLC Status* IE to indicate that RLC has been reestablished at the M-NG-RAN node and the S-NG-RAN node may trigger PDCP data recovery.

If the S-NODE MODIFICATION REQUEST message contains the *PDCP SN Length* IE in the *DRBs To Be Setup List* IE, the S-NG-RAN node shall, if supported, store this information and use it for lower layer configuration of the concerned MN terminated bearer.

If the *PDCP Duplication Configuration* IE in the *PDU Session Resource Modification Info – MN terminated* IE is contained in the S-NODE MODIFICATION REQUEST message and set to "configured", the S-NG-RAN node shall, if supported, add the RLC entity of secondary path and the RLC entity of all additional path(s) for the indicated DRB. And if the S-NODE MODIFICATION REQUEST message contains the *Duplication Activation* IE, the S-NG-RAN node shall, if supported, store this information and use it for the purpose of PDCP duplication.

If the S-NODE MODIFICATION REQUEST message contains the RLC Duplication Information IE, the S-NG-RAN node shall, if supported, store this information and use it for the purpose of PDCP duplication for the indicated DRB with more than two RLC entities.

If the *PDCP Duplication Configuration* IE in the *PDU Session Resource Modification Info – MN terminated* IE is contained in the S-NODE MODIFICATION REQUEST message and set to "de-configured", the S-NG-RAN node shall, if supported, delete the RLC entity of secondary path and the RLC entity of all additional path(s) for the indicated DRB.

The S-NG-RAN node may include for each bearer in the *DRBs To Be Setup List* IE in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message the *PDCP SN Length* IE to indicate the PDCP SN length for that DRB.

The S-NG-RAN node may include the *QoS Flow Mapping Indication* IE for a QoS flow in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message to indicate that only the uplink or downlink QoS flow is mapped to the DRB.

If the *Additional DRB* IDs IE is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall store this information and use it together with previously provided DRB IDs if any, for SN terminated bearers.

If the S-NODE MODIFICATION REQUEST message contains the S-NG-RAN node Maximum Integrity Protected Data Rate Uplink IE or the S-NG-RAN node Maximum Integrity Protected Data Rate Downlink IE, the S-NG-RAN node shall use the received information when enforcing the maximum integrity protected data rate for the UE.

If the Security Indication IE is included in the PDU Session Resource Setup Info – SN terminated IE of the S-NODE MODIFICATION REQUEST message, the behaviour of the S-NG-RAN node shall be the same as specified for the same IE in the PDU Session Resources To Be Setup List IE in the Handover Preparation procedure, for the concerned PDU session, and the S-NG-RAN node shall include the Security Result IE in the PDU Session Resource Setup Response Info – SN terminated IE.

If the Security Result IE is included in the PDU Session Resource Setup Info – SN terminated IE of the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node may take the information into account when deciding whether to perform user plane integrity protection or ciphering for the DRBs that it establishes for the concerned PDU session, except if the Split Session Indicator IE is included in the PDU Session Resource Setup Info – SN terminated IE and set to "split", in which case it shall perform user plane integrity protection or ciphering according to the information in the Security Result IE. If the S-NG-RAN node is an ng-eNB, it shall reject all PDU sessions for which the Integrity

Protection Indication IE is set to "required" as specified in TS 33.501 [28]. If either the S-NG-RAN node or the M-NG-RAN node is an ng-eNB, the S-NG-RAN node shall behave according to clause 6.10.4 of TS 33.501 [28] for PDU sessions for which the *Integrity Protection Indication* IE is set to "preferred".

The S-NG-RAN node may include the *Location Information at S-NODE* IE in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message, if respective information is available at the S-NG-RAN node.

If the *Location Information at S-NODE Reporting* IE set to "pscell" is included in the S-NODE MODIFICATION REQUEST, the S-NG-RAN node shall start providing information about the current location of the UE. If the *Location Information at S-NODE* IE is included in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE, the M-NG-RAN node shall store the included information so that it may be transferred towards the AMF.

If the S-NSSAI IE is included in the PDU Session Resources To Be Modified List IE in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall replace the previously S-NSSAI IE by the received S-NSSAI IE.

If the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message contains the *MR-DC Resource Coordination Information* IE, the M-NG-RAN node may use it for the purpose of resource coordination with the S-NG-RAN node. The M-NG-RAN node shall consider the value of the received *UL Coordination Information* IE valid until reception of a new update of the IE for the same UE. The M-NG-RAN node shall consider the value of the received *DL Coordination Information* IE valid until reception of a new update of the IE for the same UE. If the *E-UTRA Coordination Assistance Information* IE or the *NR Coordination Assistance Information* IE is contained in the *MR-DC Resource Coordination Information* IE, the M-NG-RAN node shall, if supported, use the information to determine further coordination of resource utilisation between the M-NG-RAN node and the S-NG-RAN node.

If the S-NODE MODIFICATION REQUEST message contains the *PCell ID* IE, the S-NG-RAN node may search for the target cell among the neighbour cells of the PCell indicated, as specified in the TS 37.340 [8].

If the S-NG-RAN node applied a full configuration or delta configuration, e.g., as part of mobility procedure involving a change of DU, the S-NG-RAN node shall inform the M-NG-RAN node by including the *RRC config indication* IE in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message.

If the *Default DRB Allowed* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE or *PDU Session Resource Modification Info – SN terminated* IE of the S-NODE MODIFICATION REQUEST message and set to "true", the S-NG-RAN node may configure the default DRB for the PDU session.

If the *Default DRB Allowed* IE is included in the *PDU Session Resource Setup Info – SN terminated* IE or *PDU Session Resource Modification Info – SN terminated* IE of the S-NODE MODIFICATION REQUEST message and set to "false", the S-NG-RAN node shall not configure the default DRB for the PDU session and the S-NG-RAN shall reconfigure the default DRB into a normal DRB if it has configured the default DRB before.

If the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message includes the *DRB IDs taken into use* IE, the M-NG-RAN node, if applicable, shall act as specified in TS 37.340 [8].

If the *QoS Monitoring Request* IE is included in the *QoS Flow Level QoS Parameters* IE for a QoS flow contained in the *DRBs To Be Setup List* IE or the *DRBs To Be Modified List* IE within the *PDU Session Resource Setup Info – MN terminated* IE or the *PDU Session Resource Modification Info – MN terminated* IE, the S-NG-RAN node shall, if supported, use it to configure lower layers for the purpose of delay measurement and QoS monitoring as specified in TS 23.501 [7].

For each QoS flow which has been successfully added or modified in the S-NG-RAN node, if the *QoS Monitoring Request* IE was included in the *QoS Flow Level QoS Parameters* IE contained in the *PDU Session Resource Setup Info – SN terminated* IE or the *PDU Session Resource Modification Info – SN terminated* IE, the S-NG-RAN node shall store this information, and, if supported, perform delay measurement and QoS monitoring as specified in TS 23.501 [7]. In case such a QoS flow is included in the *DRBs To Be Setup List* IE or the *DRBs To Be Modified List* IE within the *PDU Session Resource Setup Response Info – SN terminated* IE or the *PDU Session Resource Modification Response Info – SN terminated* IE, the M-NG-RAN node shall, if supported, use it to configure lower layers for the purpose of delay measurement and QoS monitoring.

#### Interactions with the S-NG-RAN node Reconfiguration Completion procedure:

If the S-NG-RAN node admits a modification of the UE context requiring the M-NG-RAN node to report about the success of the RRC connection reconfiguration procedure, the S-NG-RAN node shall start the timer  $TXn_{DCoverall}$  when sending the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message to the M-NG-RAN node. The reception of the S-NG-RAN node RECONFIGURATION COMPLETE message shall stop the timer  $TXn_{DCoverall}$ .

#### Interaction with the Activity Notification procedure

Upon receiving an S-NODE MODIFICATION REQUEST message containing the *Desired Activity Notification Level* IE, the S-NG-RAN node shall, if supported, use this information to decide whether to trigger subsequent Activity Notification procedures, or stop or modify ongoing triggering of these procedures due to a previous request.

#### Interaction with the Xn-U Address Indication procedure

For QoS flow mapped to DRBs configured with an SN terminated bearer option and removed from the SDAP in the S-NG-RAN node the S-NG-RAN node may provides data forwarding related information in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE within the *Data Forwarding and offloading Info from source NG-RAN node* IE, in which case the M-NG-RAN node may decide to provide data forwarding addresses to the S-NG-RAN node and trigger the Xn-U Address Indication procedure as specified in TS 37.340 [8].

For QoS flow offloading from the S-NG-RAN node to the M-NG-RAN, the S-NG-RAN node may provide the data forwarding related information in the S-NODE MODIFICATION REQUEST ACKNOWLEDGE within the *Data Forwarding and offloading Info from source NG-RAN node* IE, in which case the M-NG-RAN node may decide to provide data forwarding addresses to the S-NG-RAN node and trigger the Xn-U Address Indication procedure as specified in TS 37.340 [8].

#### Interactions with the S-NG-RAN node initiated S-NG-RAN node Modification:

If the *SN triggered* IE is included in the S-NODE MODIFICATION REQUEST message, the S-NG-RAN node shall consider that the procedure has been initiated in response to the previously initiated S-NG-RAN node initiated S-NG-RAN node Modification procedure.

# 8.3.3.3 Unsuccessful Operation

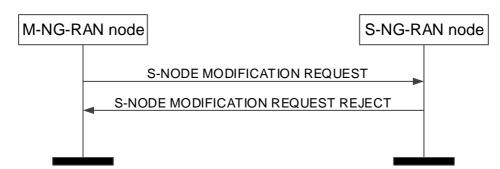


Figure 8.3.3.3-1: M-NG-RAN node initiated S-NG-RAN node Modification Preparation, unsuccessful operation

If the S-NG-RAN node does not admit any modification requested by the M-NG-RAN node, or a failure occurs during the M-NG-RAN node initiated S-NG-RAN node Modification Preparation, the S-NG-RAN node shall send the S-NODE MODIFICATION REQUEST REJECT message to the M-NG-RAN node. The message shall contain the *Cause* IE with an appropriate value.

If the S-NG-RAN node receives a S-NODE MODIFICATION REQUEST message containing the *M-NG-RAN node to S-NG-RAN node Container* IE that does not include required information as specified in TS 37.340 [8], the S-NG-RAN node shall send the S-NODE MODIFICATION REQUEST REJECT message to the M-NG-RAN node.

#### 8.3.3.4 Abnormal Conditions

If the S-NG-RAN node receives an S-NODE MODIFICATION REQUEST message including a *PDU Session Resources To Be Added Item* IE, containing neither the *PDU Session Resource Setup Info – SN terminated* IE nor the *PDU Session Resource Setup Info – MN terminated* IE, the S-NG-RAN node shall fail the S-NG-RAN node Modification Preparation procedure indicating an appropriate cause.

If the S-NG-RAN node receives an S-NODE MODIFICATION REQUEST message including a *PDU Session Resource To Be Modified Item* IE, containing neither the *PDU Session Resource Modification Info – SN terminated* IE nor the *PDU Session Resource Modification Info – MN terminated* IE, the S-NG-RAN node shall fail the S-NG-RAN node Modification Preparation procedure indicating an appropriate cause.

If the S-NG-RAN node receives an S-NODE MODIFICATION REQUEST message containing multiple *PDU Session ID* IEs (in the *PDU Session Resources To Be Released List* IE) set to the same value, the S-NG-RAN node shall initiate the release of one corresponding PDU Session and ignore the duplication of the instances of the selected corresponding PDU Sessions.

If the supported algorithms for encryption defined in the *NR Encryption Algorithms* IE in the *NR UE Security Capabilities* IE in the *UE Context Information* IE, plus the mandated support of NEA0 in all UEs (TS 33.501 [58]), do not match any algorithms defined in the configured list of allowed encryption algorithms in the S-NG-RAN node (TS 33.501 [28]), the S-NG-RAN node shall reject the procedure using the S-NODE MODIFICATION REQUEST REJECT message.

If the supported algorithms for integrity defined in the *NR Integrity Protection Algorithms* IE in the *NR UE Security Capabilities* IE in the *UE Context Information* IE do not match any algorithms defined in the configured list of allowed integrity protection algorithms in the S-NG-RAN node (TS 33.501 [28]), the S-NG-RAN node shall reject the procedure using the S-NODE MODIFICATION REQUEST REJECT message.

If the timer TXn<sub>DCprep</sub> expires before the M-NG-RAN node has received the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message, the M-NG-RAN node shall regard the M-NG-RAN node initiated S-NG-RAN node Modification Preparation procedure as being failed and shall release the UE Context at the S-NG-RAN node.

If the *Lower Layer presence status change* IE set to "re-establish lower layers" is included in the S-NODE MODIFICATION REQUEST message and was not set to "release lower layers" before, the S-NG-RAN node shall ignore the IE.

If the S-NG-RAN node receives an S-NODE MODIFICATION REQUEST message containing, for a PDU session, a *PDU Session Resource Setup Info – SN terminated* IE for which the *Split Session Indicator* IE is included and set to "split", the *Security Result* IE is not included, and either the *Integrity Protection Indication* IE or the *Confidentiality Protection Indication* IE is set to "preferred", it shall reject the PDU session.

# Interactions with the S-NG-RAN node Reconfiguration Completion and S-NG-RAN node initiated S-NG-RAN node Release procedure:

If the timer  $TXn_{DCoverall}$  expires before the S-NG-RAN node has received the S-NODE RECONFIGURATION COMPLETE or the S-NODE RELEASE REQUEST message, the S-NG-RAN node shall regard the requested modification RRC connection reconfiguration as being not applied by the UE and shall trigger the S-NG-RAN node initiated S-NG-RAN node Release procedure.

#### Interaction with the S-NG-RAN node initiated S-NG-RAN node Modification Preparation procedure:

If the M-NG-RAN node, after having initiated the M-NG-RAN node initiated S-NG-RAN node Modification procedure, receives the S-NODE MODIFICATION REQUIRED message, the M-NG-RAN node shall refuse the S-NG-RAN node initiated S-NG-RAN node Modification procedure with an appropriate cause value in the *Cause* IE.

If the M-NG-RAN node has a Prepared S-NG-RAN node Modification and receives the S-NODE MODIFICATION REQUIRED message, the M-NG-RAN node shall respond with the S-NODE MODIFICATION REFUSE message to the S-NG-RAN node with an appropriate cause value in the *Cause* IE.

#### Interaction with the M-NG-RAN node initiated S-NG-RAN node Release procedure:

If the M-NG-RAN node receives an S-NODE MODIFICATION REQUEST ACKNOWLEDGE message including a *PDU Session Resources Admitted To Be Added Item* IE, containing neither the *PDU Session Resource Setup Response Info – SN terminated* IE nor the *PDU Session Resource Setup Response Info – MN terminated* IE, the M-NG-RAN node shall trigger the M-NG-RAN node initiated S-NG-RAN node Release procedure indicating an appropriate cause.

If the M-NG-RAN node receives an S-NODE MODIFICATION REQUEST ACKNOWLEDGE message including a *PDU Session Resources Admitted To Be Modified Item* IE, containing neither the *PDU Session Resource Modification Response Info – SN terminated* IE nor the *PDU Session Resource Modification Response Info – MN terminated* IE, the M-NG-RAN node shall trigger the M-NG-RAN node initiated S-NG-RAN node Release procedure indicating an appropriate cause.

If the timer TXn<sub>DCprep</sub> expires before the M-NG-RAN node has received the S-NODE MODIFICATION REQUEST ACKNOWLEDGE message, the M-NG-RAN node shall regard the S-NG-RAN node Modification Preparation procedure as being failed and may trigger the M-NG-RAN node initiated S-NG-RAN node Release procedure.

# 8.3.4 S-NG-RAN node initiated S-NG-RAN node Modification

#### 8.3.4.1 General

This procedure is used by the S-NG-RAN node to modify the UE context in the S-NG-RAN node.

The procedure uses UE-associated signalling.

# 8.3.4.2 Successful Operation

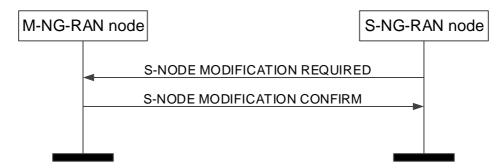


Figure 8.3.4.2-1: S-NG-RAN node initiated S-NG-RAN node Modification, successful operation.

The S-NG-RAN node initiates the procedure by sending the S-NODE MODIFICATION REQUIRED message to the M-NG-RAN node.

When the S-NG-RAN node sends the S-NODE MODIFICATION REQUIRED message, it shall start the timer  $TXn_{DCoverall}$ .

The S-NODE MODIFICATION REQUIRED message may contain

- the S-NG-RAN node to M-NG-RAN node Container IE.
- PDU session resources to be modified within the PDU Session Resources To Be Modified Item IE;
- PDU session resources to be released within the PDU Session Resources To Be Released Item IE;
- the PDCP Change Indication IE;
- the Spare DRB IDs IE;
  - the Required Number of DRB IDs IE;
  - the QoS Flow Mapping Indication IE;
  - the MR-DC Resource Coordination Information IE.

If the M-NG-RAN node receives a S-NODE MODIFICATION REQUIRED message containing the *PDCP Change Indication* IE, the M-NG-RAN node shall act as specified in TS 37.340 [8].

If the S-NODE MODIFICATION REQUIRED message contains the *MR-DC Resource Coordination Information* IE, the M-NG-RAN node may use it for the purpose of resource coordination with the S-NG-RAN node. The M-NG-RAN node shall consider the value of the received *UL Coordination Information* IE valid until reception of a new update of the IE for the same UE. The M-NG-RAN node shall consider the value of the received *DL Coordination Information* IE valid until reception of a new update of the IE for the same UE. If the *E-UTRA Coordination Assistance Information* IE or the *NR Coordination Assistance Information* IE is contained in the *MR-DC Resource Coordination Information* IE, the M-NG-RAN node shall, if supported, use the information to determine further coordination of resource utilisation between the M-NG-RAN node and the S-NG-RAN node.

If the M-NG-RAN node receives an S-NODE MODIFICATION REQUIRED message containing the *Spare DRB IDs* IE, the M-NG-RAN node may take those into consideration to be used for MN-terminated bearers.

If the M-NG-RAN node receives an S-NODE MODIFICATION REQUIRED message containing the *Required Number* of DRB IDs IE, the M-NG-RAN node shall provide new DRB IDs to be used by the S-NG-RAN node for SN-

terminated bearers, if such DRB IDs are available, in the *Additional DRB IDs* IE included in the S-NODE MODIFICATION CONFIRM message.

If the M-NG-RAN node is able to perform the modifications requested by the S-NG-RAN node, the M-NG-RAN node shall send the S-NODE MODIFICATION CONFIRM message to the S-NG-RAN node. The S-NODE MODIFICATION CONFIRM message may contain the *M-NG-RAN node to S-NG-RAN node Container* IE.

If the *PDCP Duplication Configuration* IE in the *PDU Session Resource Modification Required Info – SN terminated* IE is contained in the S-NODE MODIFICATION REQUIRED message and set to "configured", the M-NG-RAN node shall, if supported, add the RLC entity of secondary path and the RLC entity of all additional path(s) for the indicated DRB. And if the S-NODE MODIFICATION REQUIRED message contains the *Duplication Activation* IE, the M-NG-RAN node shall, if supported, store this information and use it for the purpose of PDCP duplication.

If the S-NODE MODIFICATION REQUIRED message contains the *RLC Duplication Information* IE, the S-NG-RAN node shall, if supported, store this information and use it for the purpose of PDCP duplication for the indicated DRB with more than two RLC entities.

If the *PDCP Duplication Configuration* IE in the *PDU Session Resource Modification Required Info – SN terminated* IE is contained in the S-NODE MODIFICATION REQUIRED message and set to "de-configured", the M-NG-RAN node shall, if supported, delete the RLC entity of secondary path and the RLC entity of all additional path(s) for the indicated DRB.

The S-NG-RAN node may include for each DRB in the *DRBs To Be Modified List* IE in the S-NODE MODIFICATION REQUIRED message the *RLC Status* IE to indicate that RLC has been reestablished at the S-NG-RAN node and the M-NG-RAN node may trigger PDCP data recovery.

If the S-NODE MODIFICATION REQUIRED message contains the *QoS flows To Be Released List* within the *PDU Session Resource Modification Info – SN terminated* IE, the S-NG-RAN node may also propose to apply forwarding of UL data for which in-order delivery is requested by including the *UL Forwarding Proposal* IE in the *Data Forwarding and Offloading Info from source NG-RAN node* IE within the *PDU Session Resource Modification Required Info – SN terminated* IE of the S-NODE MODIFICATION REQUIRED message. The M-NG-RAN node may include the *PDU Session Level UL Data Forwarding UP TNL Information* IE in the *Data Forwarding Info from target NG-RAN node* IE within the *PDU Session Resource Modification Confirm Info – SN terminated* IE of the S-NODE MODIFICATION CONFIRM message to indicate that it accepts the proposed forwarding.

Upon reception of the S-NODE MODIFICATION CONFIRM message the S-NG-RAN node shall stop the timer  $TXn_{DCoverall}$ .

If the S-NODE MODIFICATION CONFIRM message contains the *MR-DC Resource Coordination Information* IE, the S-NG-RAN node should forward it to lower layers and it may use it for the purpose of resource coordination with the M-NG-RAN node. The S-NG-RAN node shall consider the value of the received *UL Coordination Information* IE valid until reception of a new update of the IE for the same UE. The S-NG-RAN node shall consider the value of the received *DL Coordination Information* IE valid until reception of a new update of the IE for the same UE. If the *E-UTRA Coordination Assistance Information* IE or the *NR Coordination Assistance Information* IE is contained in the *MR-DC Resource Coordination Information* IE, the S-NG-RAN node shall, if supported, use the information to determine further coordination of resource utilisation between the S-NG-RAN node and the M-NG-RAN node.

If the S-NODE MODIFICATION REQUIRED message contains a PDU session resource to be released which is configured with the SCG bearer option within the *PDU sessions to be released List – SN terminated* IE, the S-NG-RAN node shall include the *RLC Mode* IE within the *DRBs To Be Released List* IE in the *PDU Session to be released List – SN terminated* IE in the S-NODE MODIFICATION REQUIRED message. The *RLC Mode* IE indicates the RLC mode used in the S-NG-RAN node for the DRB.

If the *Location Information at S-NODE* IE is included in the S-NODE MODIFICATION REQUIRED, the M-NG-RAN node shall store the included information so that it may be transferred towards the AMF.

If the *QoS Flows Mapped To DRB List* IE is included in the S-NODE MODIFICATION REQUIRED message for a DRB to be modified, the M-NG-RAN node shall replace any existing QoS flow mapping for that DRB with the one received.

If the S-NG-RAN node applied a full configuration or delta configuration, e.g., as part of mobility procedure involving a change of DU, the S-NG-RAN node shall inform the M-NG-RAN node by including the *RRC config indication* IE in the S-NODE MODIFICATION REQUIRED message.

If the S-NODE MODIFICATION CONFIRM message includes the *DRB IDs taken into use* IE, the S-NG-RAN node shall, if applicable, act as specified in TS 37.340 [8]

#### Interaction with the M-NG-RAN node initiated S-NG-RAN node Modification Preparation procedure:

If applicable, as specified in TS 37.340 [8], the S-NG-RAN node may receive, after having initiated the S-NG-RAN node initiated S-NG-RAN node Modification procedure, the S-NODE MODIFICATION REQUEST message including the *measGapConfig* IE as defined in TS 38.331 [10] within the *M-NG-RAN node to S-NG-RAN node Container* IE.

If applicable, the S-NG-RAN node may receive, after having initiated the S-NG-RAN node initiated S-NG-RAN node Modification procedure, the S-NODE MODIFICATION REQUEST message including the *SN triggered* IE.

# 8.3.4.3 Unsuccessful Operation

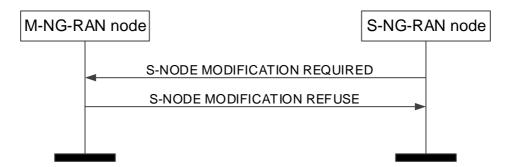


Figure 8.3.4.3-1: S-NG-RAN node initiated S-NG-RAN node Modification, unsuccessful operation.

In case the requested modification cannot be performed successfully the M-NG-RAN node shall respond with the S-NODE MODIFICATION REFUSE message to the S-NG-RAN node with an appropriate cause value in the *Cause* IE.

In case that the *Required Number of DRB IDs* IE was included in the S-NODE MODIFICATION REQUIRED message and if the M-NG-RAN node is not able to provide additional DRB IDs, the M-NG-RAN node shall respond with the S-NODE MODIFICATION REFUSE with an appropriate cause value in the Cause IE.

The M-NG-RAN node may also provide configuration information in the *M-NG-RAN node to S-NG-RAN node Container* IE.

## 8.3.4.4 Abnormal Conditions

If the M-NG-RAN node receives an S-NODE MODIFICATION REQUIRED message including a *PDU Session Resources To Be Modified Item* IE, containing neither the *PDU Session Resource Modification Required Info – SN terminated* IE nor the *PDU Session Resource Modification Required Info – MN terminated* IE, the M-NG-RAN node shall fail the S-NG-RAN node initiated S-NG-RAN node Modification procedure indicating an appropriate cause.

If the timer  $TXn_{DCoverall}$  expires before the S-NG-RAN node has received the S-NODE MODIFICATION CONFIRM or the S-NODE MODIFICATION REFUSE message, the S-NG-RAN node shall regard the requested modification as failed and may take further actions like triggering the S-NG-RAN node initiated S-NG-RAN node Release procedure to release all S-NG-RAN node resources allocated for the UE.

If the value received in the *PDU Session ID* IE of any of the *PDU Sessions Resources To Be Released Items* IE is not known at the M-NG-RAN node, the M-NG-RAN node shall regard the procedure as failed and may take appropriate actions like triggering the M-NG-RAN node initiated S-NG-RAN node Release procedure.

#### Interaction with the S-NG-RAN node initiated S-NG-RAN node Release procedure:

If the S-NG-RAN node receives an S-NODE MODIFICATION CONFIRM message including a *PDU Session Resources Admitted To Be Modified Item* IE, containing neither the *PDU Session Resource Modification Confirm Info – SN terminated* IE nor the *PDU Session Resource Modification Confirm Info – MN terminated* IE, the S-NG-RAN node shall trigger the S-NG-RAN node initiated S-NG-RAN node Release procedure indicating an appropriate cause.

#### Interaction with the M-NG-RAN node initiated S-NG-RAN node Modification Preparation procedure:

If the S-NG-RAN node, after having initiated the S-NG-RAN node initiated S-NG-RAN node Modification procedure, receives the S-NODE MODIFICATION REQUEST message including other IEs than an applicable *S-NG-RAN node Security Key* IE and/or *SN triggered* IE, the S-NG-RAN node shall

- regard the S-NG-RAN node initiated S-NG-RAN node Modification Procedure as being failed;
- stop the TXn<sub>DCoverall</sub>, which was started to supervise the S-NG-RAN node initiated S-NG-RAN node Modification procedure;
- be prepared to receive the S-NODE MODIFICATION REFUSE message from the M-NG-RAN node and;
- continue with the M-NG-RAN node initiated S-NG-RAN node Modification Preparation procedure as specified in section 8.3.

#### Interaction with the M-NG-RAN node initiated handover procedure:

If the M-NG-RAN node, after having initiated the handover procedure, receives the S-NODE MODIFICATION REQUIRED message, the M-NG-RAN node shall refuse the S-NG-RAN node modification procedure with an appropriate cause value in the *Cause* IE.

# 8.3.5 S-NG-RAN node initiated S-NG-RAN node Change

#### 8.3.5.1 General

This procedure is used by the S-NG-RAN node to trigger the change of the S-NG-RAN node.

The procedure uses UE-associated signalling.

# 8.3.5.2 Successful Operation

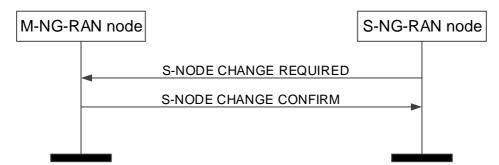


Figure 8.3.5.2-1: S-NG-RAN node initiated S-NG-RAN node Change, successful operation.

The S-NG-RAN node initiates the procedure by sending the S-NODE CHANGE REQUIRED message to the M-NG-RAN node including the *Target S-NG-RAN node ID* IE. When the S-NG-RAN node sends the S-NODE CHANGE REQUIRED message, it shall start the timer TXn<sub>DCoverall</sub>.

The S-NODE CHANGE REQUIRED message may contain

- the S-NG-RAN node to S-NG-RAN node Container IE.

If the M-NG-RAN node is able to perform the change requested by the S-NG-RAN node, the M-NG-RAN node shall send the S-NODE CHANGE CONFIRM message to the S-NG-RAN node. For DRBs configured with the PDCP entity in the S-NG-RAN node, the M-NG-RAN node may include data forwarding related information in the *Data Forwarding Info from target NG-RAN node* IE.

If the S-NODE CHANGE CONFIRM message includes the *DRB IDs taken into use* IE, the S-NG-RAN node shall, if applicable, act as specified in TS 37.340 [8].

The S-NG-RAN node may start data forwarding and stop providing user data to the UE and shall stop the timer  $TXn_{DCoverall}$  upon reception of the S-NODE CHANGE CONFIRM message.

# 8.3.5.3 Unsuccessful Operation

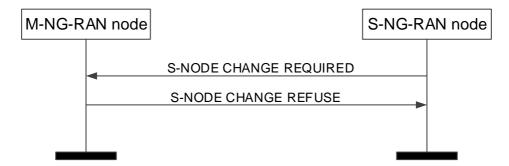


Figure 8.3.5.3-1: S-NG-RAN node initiated S-NG-RAN node Change, unsuccessful operation.

In case the request modification cannot accept the request to change the S-NG-RAN node the M-NG-RAN node shall respond with the S-NODE CHANGE REFUSE message to the S-NG-RAN node with an appropriate cause value in the *Cause* IE.

# 8.3.5.4 Abnormal Conditions

If the timer TXn<sub>DCoverall</sub> expires before the S-NG-RAN node has received the S-NODE CHANGE CONFIRM or the S-NODE CHANGE REFUSE message, the S-NG-RAN node shall regard the requested change as failed and may take further actions like triggering the S-NG-RAN node initiated S-NG-RAN node Release procedure to release all S-NG-RAN node resources allocated for the UE.

If the M-NG-RAN node receives an S-NODE CHANGE REQUIRED message including a *PDU Session SN Change Required Item* IE, not containing the *PDU Session Resource Change Required Info – SN terminated* IE, the M-NG-RAN node shall fail the S-NG-RAN node initiated S-NG-RAN node Change procedure indicating an appropriate cause.

#### Interaction with the M-NG-RAN node initiated Handover Preparation procedure:

If the M-NG-RAN node, after having initiated the Handover Preparation procedure, receives the S-NODE CHANGE REQUIRED message, the M-NG-RAN node shall refuse the S-NG-RAN node initiated S-NG-RAN node Change procedure with an appropriate cause value in the *Cause* IE.

#### Interaction with the S-NG-RAN node initiated S-NG-RAN node Release procedure:

If the S-NG-RAN node receives an S-NODE CHANGE CONFIRM message including a *PDU Session SN Change Confirm Item* IE, not containing the *PDU Session Resource Change Confirm Info – SN terminated* IE, the S-NG-RAN node shall trigger the S-NG-RAN node initiated S-NG-RAN node Release procedure indicating an appropriate cause.

## 8.3.6 M-NG-RAN node initiated S-NG-RAN node Release

#### 8.3.6.1 General

The M-NG-RAN node initiated S-NG-RAN node Release procedure is triggered by the M-NG-RAN node to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

# 8.3.6.2 Successful Operation

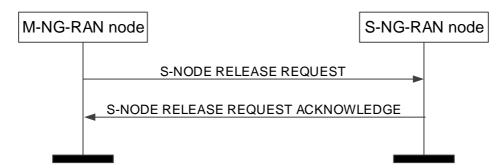


Figure 8.3.6.2-1: M-NG-RAN node initiated S-NG-RAN node Release, successful operation

The M-NG-RAN node initiates the procedure by sending the S-NODE RELEASE REQUEST message. Upon reception of the S-NODE RELEASE REQUEST message the S-NG-RAN node shall stop providing user data to the UE.

The S-NG-RAN node UE XnAP ID IE shall be included if it has been obtained from the S-NG-RAN node. The M-NG-RAN node shall provide appropriate information within the Cause IE. The M-NG-RAN node may also provide appropriate information per PDU session resource within the Cause IE of the PDU Session Resources To Be Released List IE.

Upon reception of the S-NODE RELEASE REQUEST message containing *UE Context Kept Indicator* IE set to "True", the S-NG-RAN node shall, if supported, only initiate the release of the resources related to the UE-associated signalling connection between the M-NG-RAN node and the S-NG-RAN node.

If the S-NG-RAN node confirms the request to release S-NG-RAN node resources, it shall send the S-NODE RELEASE REQUEST ACKNOWLEDGE message to the M-NG-RAN node.

If the S-NODE RELEASE REQUEST message contains a PDU session resource to be released which is configured with the SCG bearer option within the PDU Session Resources To Be Released List IE, the S-NG-RAN node shall include the RLC Mode IE within the DRBs To Be Released List IE in the S-NODE RELEASE REQUEST ACKNOWLEDGE message. The RLC Mode IE indicates the RLC mode used in the S-NG-RAN node for the DRB.

#### Interaction with the Xn-U Address Indication procedure

If the S-NG-RAN node provides data forwarding related information in the S-NODE RELEASE REQUEST ACKNOWLEDGE message for QoS flows mapped to DRBs configured with an SN terminated bearer option in the *PDU Sessions To Be Released List - SN terminated* IE, the M-NG-RAN node may decide to provide data forwarding addresses to the S-NG-RAN node and trigger the Xn-U Address Indication procedure as specified in TS 37.340 [8].

#### Interaction with the SN Status Transfer procedure

If the *UE Context Kept Indicator* IE set to "True" and the *DRBs transferred to MN* IE are included in the S-NODE RELEASE REQUEST message, the S-NG-RAN node shall, if supported, provide the uplink/downlink PDCP SN and HFN status for the listed DRBs, as specified in TS 37.340 [8].

# 8.3.6.3 Unsuccessful Operation

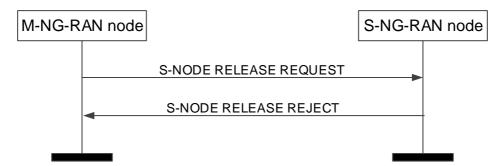


Figure 8.3.6.3-1: M-NG-RAN node initiated S-NG-RAN node Release, unsuccessful operation

If the S-NG-RAN node cannot confirm the request to release S-NG-RAN node resources, it shall send the S-NODE RELEASE REJECT message to the M-NG-RAN node with an appropriate cause indicated in the *Cause* IE.

#### 8.3.6.4 Abnormal Conditions

If the S-NODE RELEASE REQUEST message refer to a context that does not exist, the S-NG-RAN node shall ignore the message.

When the M-NG-RAN node has initiated the procedure and did not include the *S-NG-RAN node UE XnAP ID* IE the M-NG-RAN node shall regard the resources for the UE at the S-NG-RAN node as being fully released.

# Interactions with the UE Context Release procedure:

If the M-NG-RAN node does not receive the reply from the S-NG-RAN node before it has to release the EN-DC connection, or it receives S-NODE RELEASE REQUEST REJECT, it may trigger the UE Context Release procedure. If the S-NG-RAN node received the UE CONTEXT RELEASE right after receiving the S-NODE RELEASE REQUEST (and before or after responding to it), the S-NG-RAN node shall consider the related M-NG-RAN node initiated S-NG-RAN node Release procedure as being the resolution of abnormal conditions and release the related UE context immediately.

# 8.3.7 S-NG-RAN node initiated S-NG-RAN node Release

#### 8.3.7.1 General

This procedure is triggered by the S-NG-RAN node to initiate the release of the resources for a specific UE.

The procedure uses UE-associated signalling.

# 8.3.7.2 Successful Operation

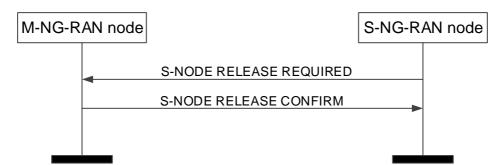


Figure 8.3.7.2-1: S-NG-RAN node initiated S-NG-RAN node Release, successful operation.

The S-NG-RAN node initiates the procedure by sending the S-NODE RELEASE REQUIRED message to the M-NG-RAN node.

Upon reception of the S-NODE RELEASE REQUIRED message, the M-NG-RAN node replies with the S-NODE RELEASE CONFIRM message.

For each SN-terminated PDU session resource, the M-NG-RAN node may include the *DL Forwarding UP Address* IE and the *UL Forwarding UP Address* IE within the *PDU Session Resources To Be Released Item* IE to indicate that it requests data forwarding of uplink and downlink packets to be performed for that bearer.

The S-NG-RAN node may start data forwarding and stop providing user data to the UE upon reception of the S-NODE RELEASE CONFIRM message,

If the S-NODE RELEASE REQUIRED message contains an PDU session resource to be released which is configured with the SCG bearer option within the *PDU sessions to be released List – SN terminated* IE, the S-NG-RAN node shall include the *RLC Mode* IE within the *DRBs To Be Released List* IE in the *PDU Session to be released List – SN terminated* IE in the S-NODE RELEASE REQUIRED message. The *RLC Mode* IE indicates the RLC mode used in the S-NG-RAN node for the DRB.

If the S-NODE RELEASE CONFIRM message includes the *DRB IDs taken into use* IE, the S-NG-RAN node shall, if applicable, act as specified in TS 37.340 [8].

If the *S-NG-RAN node to M-NG-RAN node Container* IE is included in the S-NODE RELEASE REQUIRED message, the M-NG-RAN node may use the contained information to apply delta configuration.

#### 8.3.7.3 Unsuccessful Operation

Not applicable.

#### 8.3.7.4 Abnormal Conditions

Void.

# 8.3.8 S-NG-RAN node Counter Check

#### 8.3.8.1 General

This procedure is initiated by the S-NG-RAN node to request the M-NG-RAN node to execute a counter check procedure to verify the value of the PDCP COUNTs associated with SCG bearers established in the S-NG-RAN node.

The procedure uses UE-associated signalling.

#### 8.3.8.2 Successful Operation

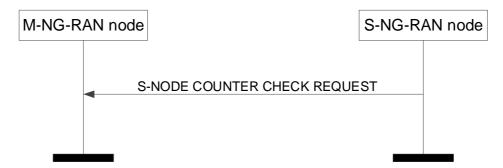


Figure 8.3.8.2-1: S-NG-RAN node Counter Check procedure, successful operation.

The S-NG-RAN node initiates the procedure by sending the S-NODE COUNTER CHECK REQUEST message to the M-NG-RAN node.

Upon reception of the S-NODE COUNTER CHECK REQUEST message, the M-NG-RAN node may perform the RRC counter check procedure as specified in TS 33.401 [29] and 33.501 [28].

#### 8.3.8.3 Unsuccessful Operation

Not applicable.

#### 8.3.8.4 Abnormal Conditions

Void.

## 8.3.9 RRC Transfer

#### 8.3.9.1 General

The purpose of the RRC Transfer procedure is to deliver a PDCP-C PDU encapsulating an LTE RRC message or NR RRC message to the S-NG-RAN-NODE that it may then be forwarded to the UE, or from the S-NG-RAN-NODE, if it

was received from the UE. The delivery status may also be provided from the S-NG-RAN-NODE to the M-NG-RAN-NODE using the RRC Transfer.

The procedure is also used to enable transfer one of the following messages from the M-NG-RAN-NODE to the S-NG-RAN-NODE, when received from the UE:

- the NR RRC message container with the NR measurements;
- the E-UTRA RRC message container with the E-UTRA measurements;
- the NR RRC message container with the NR failure information.

The procedure uses UE-associated signalling.

# 8.3.9.2 Successful Operation



Figure 8.3.9.2-1: RRC Transfer procedure, successful operation.

The M-NG-RAN-NODE initiates the procedure by sending the RRC TRANSFER message to the S-NG-RAN-NODE or the S-NG-RAN-NODE initiates the procedure by sending the RRC TRANSFER message to the M-NG-RAN-NODE.

If the S-NG-RAN-NODE receives an RRC TRANSFER message which does not include the *RRC Container* IE in the *Split SRB* IE, or the RRC Container IE in the NR UE Report IE, or the the *RRC Container* IE in the *Fast MCG Recovery via SRB3 from MN to SN* IE, or the the *RRC Container* IE in the *Fast MCG Recovery via SRB3 from SN to MN* IE, it shall ignore the message. If the S-NG-RAN-NODE receives an RRC TRANSFER message with the *Delivery Status* IE in the *Split SRB* IE, it shall ignore the message. If the S-NG-RAN-NODE receives the *RRC Container* IE in the *Split SRB* IE, it shall deliver the contained PDCP-C PDU encapsulating an RRC message to the UE. If the S-NG-RAN-NODE receives the *RRC Container* IE in the *Fast MCG Recovery via SRB3 from MN to SN* IE, the S-NG-RAN-NODE shall deliver the contained RRC container encapsulating an RRC message to the UE.

If the M-NG-RAN-NODE receives the *Delivery Status* IE in the *Split SRB* IE, the M-NG-RAN-NODE shall consider RRC messages up to the indicated NR PDCP SN as having been successfully delivered to UE by S-NG-RAN-NODE. If the M-NG-RAN-NODE receives the *RRC Container* IE in the *Fast MCG Recovery via SRB3 from SN to MN* IE, the M-NG-RAN-NODE shall consider MCG link failure detected at the UE as specified in TS 37.340 [8].

# 8.3.9.3 Unsuccessful Operation

Not applicable.

# 8.3.9.4 Abnormal Conditions

In case of the split SRBs, the receiving node may ignore the message, if the M-NG-RAN-NODE has not indicated possibility of RRC transfer at the bearer setup.

# 8.3.10 Notification Control Indication

#### 8.3.10.1 General

The purpose of the Notification Control indication procedure is to provide information that for already established GBR QoS flow(s) for which notification control has been requested, the NG-RAN node involved in Dual Connectivity cannot fulfill the GFBR anymore or that it can fulfill the GFBR again.

The procedure uses UE-associated signalling.

# 8.3.10.2 Successful Operation – M-NG-RAN node initiated



Figure 8.3.10.2-1: Notification Control Indication procedure, M-NG-RAN node initiated, successful operation.

The M-NG-RAN node initiates the procedure by sending the NOTIFICATION CONTROL INDICATION message to the S-NG-RAN node.

This procedure is triggered to notify the S-NG-RAN node for SN-terminated bearers, that resources requested from the M-NG-RAN node can either not fulfill the GFBR anymore or that the GFBR can be fulfilled again, as specified in TS 37.340 [8]. For a QoS flow indicated as not fulfilled anymore the M-NG-RAN node may also indicate an alternative QoS parameter set which it can currently fulfil in the *Current QoS Parameters Set Index* IE.

# 8.3.10.3 Successful Operation – S-NG-RAN node initiated



Figure 8.3.10.3-1: Notification Control Indication procedure, S-NG-RAN node initiated, successful operation.

The S-NG-RAN node initiates the procedure by sending the NOTIFICATION CONTROL INDICATION message to the M-NG-RAN node.

This procedure is triggered to notify the M-NG-RAN node that for MN-terminated bearers resources requested from the S-NG-RAN node can either not fulfill the GFBR anymore or that the GFBR can be fulfilled again, as specified in TS 37.340 [8].

This procedure is triggered to notify the M-NG-RAN node that resources requested for SN-terminated bearers can either not fulfill the GFBR anymore or that the GFBR can be fulfilled again, as specified in TS 37.340 [8]. For a QoS

flow indicated as not fulfilled anymore the S-NG-RAN node may also indicate an alternative QoS parameter set which it can currently fulfil in the *Current QoS Parameters Set Index* IE.

#### 8.3.10.4 Abnormal Conditions

Void.

# 8.3.11 Activity Notification

#### 8.3.11.1 General

The purpose of the Activity Notification procedure is to allow an NG-RAN node to send notification to another NG-RAN node concerning:

- user data traffic activity for the UE, or
- user data traffic activity of already established QoS flows or PDU sessions, or
- RAN Paging failure.

The procedure uses UE-associated signalling.

#### 8.3.11.2 Successful Operation



Figure 8.3.11.2-1: Activity Notification

NG-RAN node<sub>1</sub> initiates the procedure by sending the ACTIVITY NOTIFICATION message to NG-RAN node<sub>2</sub>.

The ACTIVITY NOTIFICATION message may contain one or more of the below:

- notification for UE context level user plane activity in the UE Context level user plane activity report IE.
- notification of user plane activity for the already established PDU sessions within the *PDU Session Resource Activity Notify List* IE.
- notification of user plane activity for the already established QoS flows within the *PDU Session Resource* Activity Notify List IE.
- notification of RAN Paging failure.

If the ACTIVITY NOTIFICATION message contains the *RAN Paging Failure* IE, NG-RAN node<sub>2</sub> shall consider that RAN Paging has failed in NG-RAN node<sub>1</sub> for the UE. NG-RAN node<sub>2</sub> may discard the user plane data for that UE and consider that the UE context is unchanged.

NOTE: As specified in TS 37.340 [8], in case of user data activity notification, NG-RAN node<sub>1</sub> acts as a Secondary Node, while in case of RAN Paging failure indication, NG-RAN node<sub>1</sub> acts as a Master Node.

#### 8.3.11.3 Abnormal Conditions

If the *User Plane traffic activity report* IE for a reporting object is reported by NG-RAN node<sub>1</sub> as "re-activated" and the reporting object was not reported as "inactive", the report for the concerned reporting object shall be ignored by NG-RAN node<sub>2</sub>.

## 8.3.12 E-UTRA – NR Cell Resource Coordination

#### 8.3.12.1 General

The purpose of the E-UTRA – NR Cell Resource Coordination procedure is to enable coordination of radio resource allocation between an ng-eNB and a gNB that are sharing spectrum and whose coverage areas are fully or partially overlapping. During the procedure, the ng-eNB and gNB shall exchange their intended resource allocations for data traffic, and, if possible, converge to a shared resource. The procedure is only to be used for the purpose of E-UTRA – NR spectrum sharing.

The procedure uses non-UE-associated signalling.

# 8.3.12.2 Successful Operation

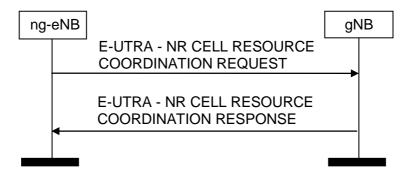


Figure 8.3.12.2-1: ng-eNB-initiated E-UTRA – NR Cell Resource Coordination request, successful operation

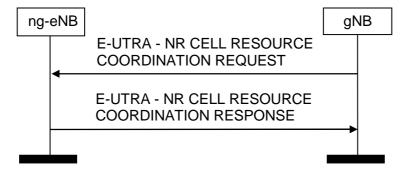


Figure 8.3.12.2-2: gNB-initiated E-UTRA – NR Cell Resource Coordination request, successful operation

If case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message and the E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### ng-eNB initiated E-UTRA - NR Cell Resource Coordination:

An ng-eNB initiates the procedure by sending the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message to an gNB over the Xn interface. The gNB extracts the *Data Traffic Resource Indication* IE and it replies by sending the E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message. The gNB shall calculate the full ng-eNB resource allocation by combining the *Data Traffic Resource Indication* IE and the *Protected E-UTRA Resource Indication* IE that were most recently received from the ng-eNB.

In case of conflict between the most recently received *Data Traffic Resource Indication* IE and the most recently received *Protected E-UTRA Resource Indication* IE, the gNB shall give priority to the *Protected E-UTRA Resource Indication* IE.

#### gNB initiated E-UTRA - NR Cell Resource Coordination:

An gNB initiates the procedure by sending the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST message to an ng-eNB. The ng-eNB replies with the E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE message.

In case of conflict between the most recently received *Data Traffic Resource Indication* IE and the most recently received *Protected E-UTRA Resource Indication* IE, the gNB shall give priority to the *Protected E-UTRA Resource Indication* IE.

# 8.3.13 Secondary RAT Data Usage Report

#### 8.3.13.1 General

This procedure is initiated by the S-NG-RAN node to provide information on the used resources of the secondary RAT (e.g. NR resources during MR-DC operation) as specified in TS 23.501 [7].

The procedure uses UE-associated signalling.

## 8.3.13.2 Successful Operation

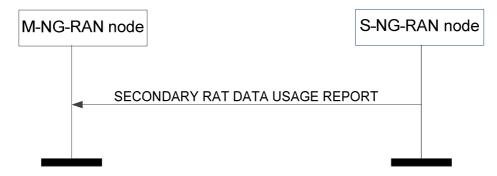


Figure 8.3.13.2-1: Secondary RAT Data Usage Report procedure, successful operation.

The S-NG-RAN node initiates the procedure by sending the SECONDARY RAT DATA USAGE REPORT message to the M-NG-RAN node.

# 8.3.13.3 Unsuccessful Operation

Not applicable.

#### 8.3.13.4 Abnormal Conditions

Not applicable.

# 8.3.14 Trace Start

## 8.3.14.1 General

The purpose of the Trace Start procedure is to allow the M-NG-RAN node to request the S-NG-RAN node to initiate a trace session for a UE. The procedure uses UE-associated signalling.

# 8.3.14.2 Successful Operation



Figure 8.3.14.2-1: Trace Start, successful operation

The Trace Start procedure is initiated by the M-NG-RAN sending the TRACE START message to the S-NG-RAN for that specific UE. Upon reception of the TRACE START message, the S-NG-RAN shall initiate the requested trace session as described in TS 32.422 [23].

If the Trace Activation IE includes

- the *MDT Activation* IE set to "Immediate MDT and Trace", and if the S-NG-RAN node is a gNB, it shall, if supported, initiate the requested trace session and MDT session as described in TS 32.422[23].
- the *MDT Activation* IE set to "Immediate MDT Only" or "Logged MDT only", and if the S-NG-RAN node is a gNB, it shall, if supported, initiate the requested MDT session as described in TS 32.422[x] and the SN gNB shall ignore *Interfaces To Trace* IE and *Trace Depth* IE.
- the *MDT Location Information* IE, within the *MDT Configuration* IE, and if the S-NG-RAN node is a gNB, it shall, if supported, store this information and take it into account in the requested MDT session.
- the *MDT Activation* IE set to "Immediate MDT Only" or "Logged MDT only", and if the *Signalling based MDT PLMN List* IE is included in the *MDT Configuration* IE, and if the S-NG-RAN node is gNB, it may use it to propagate the MDT Configuration as described in TS 37.320 [y].
- the *Bluetooth Measurement Configuration* IE, within the *MDT Configuration* IE, and if the S-NG-RAN node is a gNB, it shall, if supported, take it into account for MDT Configuration as described in TS 37.320 [y].
- the *WLAN Measurement Configuration* IE, within the *MDT Configuration* IE, and if the S-NG-RAN node is a gNB, it shall, if supported, take it into account for MDT Configuration as described in TS 37.320 [y].
- the *Sensor Measurement Configuration* IE, within the *MDT Configuration* IE, the S-NG-RAN node shall take it into account for MDT Configuration as described in TS 37.320 [x].
- the *MDT Configuration* IE, and if the S-NG-RAN Node is a gNB at least *the MDT Configuration-NR* IE shall be present, while if the S-NG-RAN Node is an ng-eNB at least the *MDT Configuration-EUTRA* IE shall be present.

#### 8.3.14.3 Abnormal Conditions

Void.

## 8.3.15 Deactivate Trace

#### 8.3.15.1 General

The purpose of the Deactivate Trace procedure is to allow the M-NG-RAN node to request the S-NG-RAN node to stop the trace session for the indicated trace reference. The procedure uses UE-associated signalling.

# 8.3.15.2 Successful Operation



Figure 8.3.15.2-1: Deactivate Trace, successful opration

The Deactivate Trace procedure is initiated by the M-NG-RAN by sending the DEACTIVATE TRACE to the S-NG-RAN for that specific UE. Upon reception of the DEACTIVATE TRACE message, the S-NG-RAN shall stop the trace session for the indicated trace reference in the *NG-RAN Trace ID IE*.

## 8.3.15.3 Abnormal Conditions

Void.

# 8.4 Global procedures

# 8.4.1 Xn Setup

#### 8.4.1.1 General

The purpose of the Xn Setup procedure is to exchange application level configuration data needed for two NG-RAN nodes to interoperate correctly over the Xn-C interface.

NOTE: If Xn-C signalling transport is shared among multiple Xn-C interface instances, one Xn Setup procedure is issued per Xn-C interface instance to be setup, i.e. several Xn Setup procedures may be issued via the same TNL association after that TNL association has become operational.

NOTE: Exchange of application level configuration data also applies between two NG-RAN nodes in case the SN (i.e. the gNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [8]. How to use this information when this option is used is not explicitly specified.

The procedure uses non UE-associated signalling.

## 8.4.1.2 Successful Operation

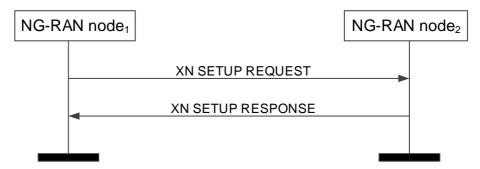


Figure 8.4.1.2: Xn Setup, successful operation

The NG-RAN node<sub>1</sub> initiates the procedure by sending the XN SETUP REQUEST message to the candidate NG-RAN node<sub>2</sub>. The candidate NG-RAN node<sub>2</sub> replies with the XN SETUP RESPONSE message.

The AMF Region Information IE in the XN SETUP REQUEST message shall contain a complete list of Global AMF Region IDs to which the NG-RAN node<sub>1</sub> belongs. The AMF Region Information IE in the XN SETUP RESPONSE message shall contain a complete list of Global AMF Region IDs to which the NG-RAN node<sub>2</sub> belongs.

The List of Served Cells NR IE and the List of Served Cells E-UTRA IE, if contained in the XN SETUP REQUEST message, shall contain a complete list of cells served by NG-RAN node<sub>1</sub> or, if supported, a partial list of served cells together with the Partial List Indicator IE. The List of Served Cells NR IE and the List of Served Cells E-UTRA IE, if contained in the XN SETUP RESPONSE message, shall contain a complete list of cells served by NG-RAN node<sub>2</sub> or, if supported, a partial list of served cells together with the Partial List Indicator IE.

If Supplementary Uplink is configured at the NG-RAN node<sub>1</sub>, the NG-RAN node<sub>1</sub> shall include in the XN SETUP REQUEST message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell where supplementary uplink is configured.

If Supplementary Uplink is configured at the NG-RAN node<sub>2</sub>, the candidate NG-RAN node<sub>2</sub> shall include in the XN SETUP RESPONSE message the *SUL Information* IE and the *Supported SUL band List* IE for each served cell where supplementary uplink is configured.

If the NG-RAN node<sub>1</sub> is an ng-eNB, it may include the *Protected E-UTRA Resource Indication* IE into the XN SETUP REQUEST. If the XN SETUP REQUEST sent by an ng-eNB contains the *Protected E-UTRA Resource Indication* IE, the receiving gNB should take this into account for cell-level resource coordination with the ng-eNB. The gNB shall consider the received *Protected E-UTRA Resource Indication* IE content valid until reception of a new update of the IE for the same ng-eNB.

The protected resource pattern indicated in the *Protected E-UTRA Resource Indication* IE is not valid in subframes indicated by the *Reserved Subframes* IE, as well as in the non-control region of the MBSFN subframes i.e. it is valid only in the control region therein. The size of the control region of MBSFN subframes is indicated in the *Protected E-UTRA Resource Indication* IE.

In case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the XN SETUP REQUEST message and the XN SETUP RESPONSE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

If the *Intended TDD DL-UL Configuration NR* IE is included in the XN SETUP REQUEST or XN SETUP RESPONSE message, the receiving NG-RAN node should take this information into account for cross-link interference management and/or NR-DC power coordination with the sending NG-RAN node. The receiving NG-RAN node shall consider the received *Intended TDD DL-UL Configuration NR* IE content valid until reception of an update of the IE for the same cell(s).

If the *TNL Configuration Info* IE is contained in the XN SETUP REQUEST message, the NG-RAN node<sub>2</sub> shall, if supported, take this IE into account for IPSec establishment.

If the *TNL Configuration Info* IE is contained in the XN SETUP RESPONSE message, the NG-RAN node<sub>1</sub> shall, if supported, take this IE into account for IPSec establishment.

If the *Partial List Indicator NR* IE or the *Partial List Indicator NR* IE is set to "partial" in the XN SETUP REQUEST message the candidate NG-RAN node<sub>2</sub> shall, if supported, assume that the *List of Served Cells NR* IE or the *List of Served Cells E-UTRA* IE in the XN SETUP REQUEST message includes a partial list of cells.

If the *Partial List Indicator NR* IE or the *Partial List Indicator NR* IE is set to "partial" in the XN SETUP RESPONSE message from the candidate NG-RAN node<sub>2</sub>, the NG-RAN node<sub>1</sub> shall, if supported, assume that the *List of Served Cells NR* IE or the *List of Served Cells E-UTRA* IE in the XN SETUP RESPONSE message includes a partial list of cells.

If the *Cell and Capacity Assistance Information NR* IE or the *Cell and Capacity Assistance Information E-UTRA* IE is present in the XN SETUP REQUEST message the candidate NG-RAN node<sub>2</sub> shall, if supported, use it when generating the list of NG-RAN served cell information to include in the XN SETUP RESPONSE message.

If the *Cell and Capacity Assistance Information NR* IE or the *Cell and Capacity Assistance Information E-UTRA* IE is present in the XN SETUP RESPONSE message from the candidate NG-RAN node<sub>2</sub>, the NG-RAN node<sub>1</sub> shall, if supported, store the collected information to be used for future NG-RAN node interface management.

If the *CSI-RS Transmission Indication* IE is contained in the XN SETUP REQUEST message, the NG-RAN node<sub>2</sub> shall, if supported, take this IE into account for neighbour cell's CSI-RS measurement.

If the *CSI-RS Transmission Indication* IE in the XN SETUP RESPONSE message, the NG-RAN node<sub>1</sub> shall, if supported, take this IE into account for neighbour cell's CSI-RS measurement.

The initiating NG-RAN node<sub>1</sub> may include the *PRACH Configuration* IE (for served E-UTRA cells) or the *NR Cell PRACH Configuration* IE (for served NR cells) in the XN SETUP REQUEST message. The candidate NG-RAN node<sub>2</sub> may also include the *PRACH Configuration* IE (for served E-UTRA cells) or *NR Cell PRACH Configuration* IE (for served NR cells) in the XN SETUP RESPONSE message. The NG-RAN node receiving the IE may use this information for RACH optimisation.

The XN SETUP REQUEST message may contain for each cell served by NG-RAN node<sub>1</sub> NPN related broadcast information. The XN SETUP RESPONSE message may contain for each cell served by NG-RAN node<sub>2</sub> NPN related broadcast information.

# 8.4.1.3 Unsuccessful Operation



Figure 8.4.1.3-1: Xn Setup, unsuccessful operation

If the candidate NG-RAN node<sub>2</sub> cannot accept the setup it shall respond with the XN SETUP FAILURE message with appropriate cause value.

If the XN SETUP FAILURE message includes the *Time To Wait* IE, the initiating NG-RAN node<sub>1</sub> shall wait at least for the indicated time before reinitiating the Xn Setup procedure towards the same NG-RAN node<sub>2</sub>.

If case of network sharing with multiple Cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the XN SETUP REQUEST message and the XN SETUP REQUEST FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

If the *Message Oversize Notification* IE is included in the XN SETUP FAILURE, the initiating node shall, if supported, deduce that the failure is due to a too large XN SETUP REQUEST message and ensure that the total number of served cells in following XN SETUP REQUEST message is equal to or lower than the value of the *Maximum Cell List Size* IE.

#### 8.4.1.4 Abnormal Conditions

If the first message received for a specific TNL association is not an XN SETUP REQUEST, XN SETUP RESPONSE, or XN SETUP FAILURE message then this shall be treated as a logical error.

If the initiating NG-RAN node<sub>1</sub> does not receive either XN SETUP RESPONSE message or XN SETUP FAILURE message, the NG-RAN node<sub>1</sub> may reinitiate the Xn Setup procedure towards the same NG-RAN node, provided that the content of the new XN SETUP REQUEST message is identical to the content of the previously unacknowledged XN SETUP REQUEST message.

If the initiating NG-RAN node<sub>1</sub> receives an XN SETUP REQUEST message from the peer entity on the same Xn interface:

- In case the NG-RAN node<sub>1</sub> answers with an XN SETUP RESPONSE message and receives a subsequent Xn SETUP FAILURE message, the NG-RAN node<sub>1</sub> shall consider the Xn interface as non operational and the procedure as unsuccessfully terminated according to sub clause 8.4.1.3.

- In case the NG-RAN node<sub>1</sub> answers with an XN SETUP FAILURE message and receives a subsequent XN SETUP RESPONSE message, the NG-RAN node<sub>1</sub> shall ignore the XN SETUP RESPONSE message and consider the Xn interface as non operational.

# 8.4.2 NG-RAN node Configuration Update

#### 8.4.2.1 General

The purpose of the NG-RAN node Configuration Update procedure is to update application level configuration data needed for two NG-RAN nodes to interoperate correctly over the Xn-C interface.

NOTE: Update of application level configuration data also applies between two NG-RAN nodes in case the SN (i.e. the gNB) does not broadcast system information other than for radio frame timing and SFN, as specified in the TS 37.340 [8]. How to use this information when this option is used is not explicitly specified.

The procedure uses non UE-associated signalling.

## 8.4.2.2 Successful Operation

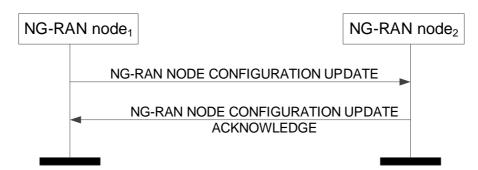


Figure 8.4.2.2-1: NG-RAN node Configuration Update, successful operation

The NG-RAN node<sub>1</sub> initiates the procedure by sending the NG-RAN NODE CONFIGURATION UPDATE message to a peer NG-RAN node<sub>2</sub>.

If Supplementary Uplink is configured at the NG-RAN node<sub>1</sub>, the NG-RAN node<sub>1</sub> shall include in the NG-RAN NODE CONFIGURATION UPDATE message the *SUL Information* IE and the *Supported SUL band List* IE for each cell added in the *Served NR Cells To Add* IE and in the *Served NR Cells To Modify* IE.

If Supplementary Uplink is configured at the NG-RAN node<sub>2</sub>, the NG-RAN node<sub>2</sub> shall include in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message the *SUL Information* IE and the *Supported SUL band List* IE for each cell added in the *Served NR Cells* IE if any.

If the *TAI Support List* IE is included in the NG-RAN NODE CONFIGURATION UPDATE message, the receiving node shall replace the previously provided *TAI Support List* IE by the received *TAI Support List* IE.

If the *Cell Assistance Information NR* IE is present, the NG-RAN node<sub>2</sub> shall, if supported, use it to generate the *Served NR Cells* IE and include the list in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message.

If the *Cell Assistance Information LTE* IE is present, the NG-RAN node<sub>2</sub> shall, if supported, use it to generate the *Served LTE Cells* IE and include the list in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message.

If the *Partial List Indicator NR* IE is included in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message and set to "partial" the NG-RAN node<sub>1</sub> shall, if supported, assume that the *Served NR Cells* IE in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message includes a partial list of NR cells.

If the *Partial List Indicator E-UTRA* IE is included in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message and set to "partial" the NG-RAN node<sub>1</sub> shall, if supported, assume that the *Served E-UTRA* 

Cells IE in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message includes a partial list of NR cells.

If the *Cell and Capacity Assistance Information NR* IE is present in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message from the candidate NG-RAN node<sub>2</sub>, the NG-RAN node<sub>1</sub> shall, if supported, store the collected information to be used for future NG-RAN node interface management.

If the *Cell and Capacity Assistance Information E-UTRA* IE is present in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message from the candidate NG-RAN node<sub>2</sub>, the NG-RAN node<sub>1</sub> shall, if supported, store the collected information to be used for future NG-RAN node interface management.

Upon reception of the NG-RAN NODE CONFIGURATION UPDATE message, NG-RAN node<sub>2</sub> shall update the information for NG-RAN node<sub>1</sub> as follows:

If case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the NG-RAN NODE CONFIGURATION UPDATE message and the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### **Update of Served Cell Information NR:**

- If Served Cells NR To Add IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, NG-RAN node<sub>2</sub> shall add cell information according to the information in the Served Cell Information NR IE.
- If Served Cells NR To Modify IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, NG-RAN node<sub>2</sub> shall modify information of cell indicated by Old NR-CGI IE according to the information in the Served Cell Information NR IE.
- When either served cell information or neighbour information of an existing served cell in NG-RAN node<sub>1</sub> need to be updated, the whole list of neighbouring cells, if any, shall be contained in the *Neighbour Information NR* IE. The NG-RAN node<sub>2</sub> shall overwrite the served cell information and the whole list of neighbour cell information for the affected served cell.
- If the *Deactivation Indication* IE is contained in the *Served Cells NR To Modify* IE, it indicates that the concerned cell was switched off to lower energy consumption.
- If Served Cells NR To Delete IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, NG-RAN node<sub>2</sub> shall delete information of cell indicated by Old NR-CGI IE.
- If the *Intended TDD DL-UL Configuration NR* IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, the NG-RAN node<sub>2</sub> should take this information into account for cross-link interference management and/or NR-DC power coordination with the NG-RAN node<sub>1</sub>. The NG-RAN node<sub>2</sub> shall consider the received *Intended TDD DL-UL Configuration NR* IE content valid until reception of a new update of the IE for the same NG-RAN node<sub>2</sub>.
- If the *NR Cell PRACH Configuration* IE is contained in the *Served Cell Information NR* IE in the NG-RAN NODE CONFIGURATION UPDATE message, the NG-RAN node receiving the IE may use this information for RACH optimisation.

#### **Update of Served Cell Information E-UTRA:**

- If Served Cells E-UTRA To Add IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, NG-RAN node<sub>2</sub> shall add cell information according to the information in the Served Cell Information E-UTRA IF
- If Served Cells E-UTRA To Modify IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, NG-RAN node<sub>2</sub> shall modify information of cell indicated by Old ECGI IE according to the information in the Served Cell Information E-UTRA IE.
- When either served cell information or neighbour information of an existing served cell in NG-RAN node<sub>1</sub> need to be updated, the whole list of neighbouring cells, if any, shall be contained in the *Neighbour Information E-UTRA* IE. The NG-RAN node<sub>2</sub> shall overwrite the served cell information and the whole list of neighbour cell information for the affected served cell.

- If the *Deactivation Indication* IE is contained in the *Served Cells E-UTRA To Modify* IE, it indicates that the concerned cell was switched off to lower energy consumption.
- If the *Served Cells E-UTRA To Delete* IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, NG-RAN node<sub>2</sub> shall delete information of cell indicated by *Old ECGI* IE.
- If the *Protected E-UTRA Resource Indication* IE is included into the NG-RAN NODE CONFIGURATION UPDATE (inside the *Served Cell Information E-UTRA* IE), the receiving gNB should take this into account for cell-level resource coordination with the ng-eNB. The gNB shall consider the received *Protected E-UTRA Resource Indication* IE content valid until reception of a new update of the IE for the same ng-eNB. The protected resource pattern indicated in the *Protected E-UTRA Resource Indication* IE is not valid in subframes indicated by the *Reserved Subframes* IE (contained in E-UTRA NR CELL RESOURCE COORDINATION REQUEST messages), as well as in the non-control region of the MBSFN subframes i.e. it is valid only in the control region therein. The size of the control region of MBSFN subframes is indicated in the *Protected E-UTRA Resource Indication* IE.
- If the *PRACH Configuration* IE is contained in the *Served Cell Information E-UTRA* IE in the NG-RAN NODE CONFIGURATION UPDATE message, the NG-RAN node receiving the IE may use this information for RACH optimisation.

#### Update of TNL addresses for SCTP associations:

If the *TNL Association to Add List* IE is included in the NG-RAN NODE CONFIGURATION UPDATE message, the NG-RAN node<sub>2</sub> shall, if supported, use it to establish the TNL association(s) with the NG-RAN node<sub>1</sub>. The NG-RAN node<sub>2</sub> shall report to the NG-RAN node<sub>1</sub>, in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message, the successful establishment of the TNL association(s) with the NG-RAN node<sub>1</sub> as follows:

- A list of successfully established TNL associations shall be included in the TNL Association Setup List IE;
- A list of TNL associations that failed to be established shall be included in the *TNL Association Failed to Setup List* IE.

If the *TNL Association to Remove List* IE is included in the NG-RAN NODE CONFIGURATION UPDATE message the NG-RAN node<sub>2</sub> shall, if supported, initiate removal of the TNL association(s) indicated by the received Transport Layer information towards the NG-RAN node<sub>1</sub>.

If the *TNL Association to Update List* IE is included in the NG-RAN NODE CONFIGURATION UPDATE message the NG-RAN node<sub>2</sub> shall, if supported, update the TNL association(s) indicated by the received Transport Layer information towards the NG-RAN node<sub>1</sub>.

#### **Update of AMF Region Information:**

- If *AMF Region Information To Add* IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, the NG-RAN node<sub>2</sub> shall add the AMF Regions to its AMF Region List.
- If *AMF Region Information To Delete* IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, the NG-RAN node<sub>2</sub> shall remove the AMF Regions from its AMF Region List.

If the *TNL Configuration Info* IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, the NG-RAN node<sub>2</sub> shall take this IE into account for IPSec establishment.

If the *TNL Configuration Info* IE is contained in the NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message, the NG-RAN node<sub>1</sub> shall take this IE into account for IPSec establishment.

If the CSI-RS Transmission Indication IE is contained in the NG-RAN NODE CONFIGURATION UPDATE message, the NG-RAN node<sub>2</sub> shall take this IE into account for neighbour cell's CSI-RS measurement.

The NG-RAN NODE CONFIGURATION UPDATE message may contain for each cell served by NG-RAN node<sub>1</sub> NPN related broadcast information. The NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message may contain for each cell served by NG-RAN node<sub>2</sub> NPN related broadcast information.

# 8.4.2.3 Unsuccessful Operation

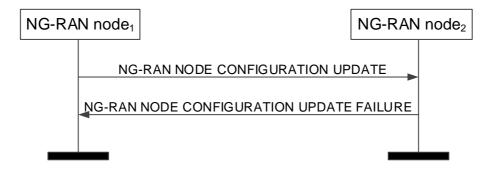


Figure 8.4.2.3-1: NG-RAN node Configuration Update, unsuccessful operation

If the NG-RAN node<sub>2</sub> cannot accept the update it shall respond with the NG-RAN NODE CONFIGURATION UPDATE FAILURE message and appropriate cause value.

If the NG-RAN NODE CONFIGURATION UPDATE FAILURE message includes the *Time To Wait* IE, the NG-RAN node<sub>1</sub> shall wait at least for the indicated time before reinitiating the NG-RAN Node Configuration Update procedure towards the same NG-RAN node<sub>2</sub>. Both nodes shall continue to operate the Xn with their existing configuration data.

If case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the NG-RAN NODE CONFIGURATION UPDATE message and the NG-RAN NODE CONFIGURATION UPDATE FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### 8.4.2.4 Abnormal Conditions

If the NG-RAN node<sub>1</sub> after initiating NG-RAN node Configuration Update procedure receives neither NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE message nor NG-RAN NODE CONFIGURATION UPDATE FAILURE message, the NG-RAN node<sub>1</sub> may reinitiate the NG-RAN node Configuration Update procedure towards the same NG-RAN node<sub>2</sub>, provided that the content of the new NG-RAN NODE CONFIGURATION UPDATE message is identical to the content of the previously unacknowledged NG-RAN NODE CONFIGURATION UPDATE message.

#### 8.4.3 Cell Activation

#### 8.4.3.1 General

The purpose of the Cell Activation procedure is to enable an NG-RAN node to request a neighbouring NG-RAN node to switch on one or more cells, previously reported as inactive due to energy saving.

The procedure uses non UE-associated signalling.

## 8.4.3.2 Successful Operation

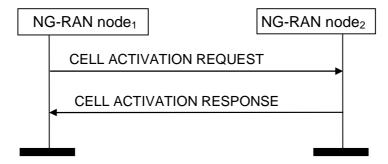


Figure 8.4.3.2-1: Cell Activation, successful operation

The NG-RAN node<sub>1</sub> initiates the procedure by sending the CELL ACTIVATION REQUEST message to the peer NG-RAN node<sub>2</sub>.

Upon receipt of this message, the NG-RAN node<sub>2</sub> should activate the cell/s indicated in the CELL ACTIVATION REQUEST message and shall indicate in the CELL ACTIVATION RESPONSE message for which cells the request was fulfilled.

If case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the CELL ACTIVATION REQUEST message and the CELL ACTIVATION RESPONSE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

### **Interactions with NG-RAN Configuration Update procedure:**

The NG-RAN node<sub>2</sub> shall not send the NG-RAN CONFIGURATION UPDATE message to the NG-RAN node<sub>1</sub> just for the reason of the cell/s indicated in the CELL ACTIVATION REQUEST message changing cell activation state, as the receipt of the CELL ACTIVATION RESPONSE message by the NG-RAN node<sub>1</sub> is used to update the information about the activation state of NG-RAN node<sub>2</sub> cells in the NG-RAN node<sub>1</sub>.

## 8.4.3.3 Unsuccessful Operation

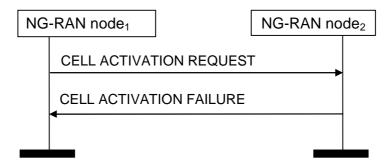


Figure 8.4.3.3-1: Cell Activation, unsuccessful operation

If the NG-RAN node<sub>2</sub> cannot activate any of the cells indicated in the CELL ACTIVATION REQUEST message, it shall respond with the CELL ACTIVATION FAILURE message with an appropriate cause value.

If case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the CELL ACTIVATION REQUEST message and the CELL ACTIVATION FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

### 8.4.3.4 Abnormal Conditions

Void.

### 8.4.4 Reset

### 8.4.4.1 General

The purpose of the Reset procedure is to align the resources in the NG-RAN node<sub>1</sub> and the NG-RAN node<sub>2</sub> in the event of an abnormal failure. The procedure either resets the Xn interface or selected UE contexts. This procedure doesn't affect the application level configuration data exchanged during, e.g., the Xn Setup procedure.

### 8.4.4.2 Successful Operation

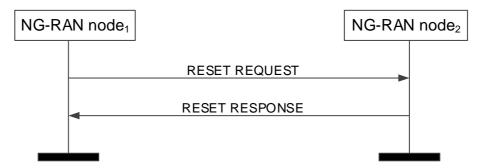


Figure 8.4.4.2-1: Reset, successful operation

The procedure is initiated with the RESET REQUEST message sent from the NG-RAN node<sub>1</sub> to the NG-RAN node<sub>2</sub>. Upon receipt of this message,

- if the RESET REQUEST message indicates full reset the NG-RAN node<sub>2</sub> shall abort any other ongoing procedures over Xn between the NG-RAN node<sub>1</sub> and the NG-RAN node<sub>2</sub>. The NG-RAN node<sub>2</sub> shall delete all the context information related to the NG-RAN node<sub>1</sub>, except the application level configuration data exchanged during the Xn Setup or the NG-RAN node Configuration Update procedures and release the corresponding resources. After completion of release of the resources, the NG-RAN node<sub>2</sub> shall respond with the RESET RESPONSE message.
- if the RESET REQUEST message indicates partial reset, the NG-RAN node<sub>2</sub> shall abort any other ongoing procedures only for the indicated UE associated signalling connections identified either by the NG-RAN node1 UE XnAP ID IE or the NG-RAN node1 UE XnAP ID IE or both, for which the NG-RAN node<sub>2</sub> shall delete all the context information related to the NG-RAN node<sub>1</sub> and release the corresponding resources. After completion of release of the resources, the NG-RAN node<sub>2</sub> shall respond with the RESET RESPONSE message indicating the UE contexts admitted to be released. The NG-RAN node<sub>2</sub> receiving the request for partial reset does not need to wait for the release or reconfiguration of radio resources to be completed before returning the RESET RESPONSE message. The NG-RAN node<sub>2</sub> receiving the request for partial reset shall include in the RESET RESPONSE message, for each UE association to be released, the same list of UE-associated logical Xn-connections over Xn. The list shall be in the same order as received in the RESET REQUEST message and shall include also unknown UE-associated logical Xn-connections.

If case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the RESET REQUEST message and the RESET RESPONSE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### Interactions with other procedures:

If the RESET REQUEST message indicates full reset, the NG-RAN node<sub>2</sub> shall abort any other ongoing procedure (except for a Reset procedures).

If the RESET REQUEST message indicates partial reset, the NG-RAN node<sub>2</sub> shall abort any other ongoing procedure (except for a Reset procedures) on the same Xn interface related to a UE associated signalling connection indicated in the RESET REQUEST message.

### 8.4.4.3 Unsuccessful Operation

Void.

#### 8.4.4.4 Abnormal Conditions

If the RESET REQUEST message is received, any other ongoing procedure (except another Reset procedure) on the same Xn interface shall be aborted.

If the Reset procedure is ongoing and the responding node receives the RESET REQUEST message from the peer entity on the same Xn interface, it shall respond with the RESET RESPONSE message as specified in 8.4.4.2.

If the initiating node does not receive the RESET RESPONSE message, the initiating node may reinitiate the Reset procedure towards the same NG-RAN node, provided that the content of the new RESET REQUEST message is identical to the content of the previously unacknowledged RESET REQUEST message.

## 8.4.5 Error Indication

### 8.4.5.1 General

The Error Indication procedure is initiated by an NG-RAN node to report detected errors in one incoming message, provided they cannot be reported by an appropriate failure message.

If the error situation arises due to reception of a message utilising UE associated signalling, then the Error Indication procedure uses UE-associated signalling. Otherwise the procedure uses non UE-associated signalling.

## 8.4.5.2 Successful Operation

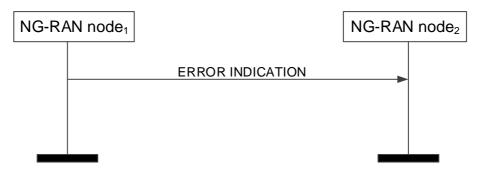


Figure 8.4.5.2-1: Error Indication, successful operation.

When the conditions defined in clause 10 are fulfilled, the Error Indication procedure is initiated by the ERROR INDICATION message sent from the node detecting the error situation.

The ERROR INDICATION message shall contain at least either the Cause IE or the Criticality Diagnostics IE.

In case the Error Indication procedure is triggered by UE associated signalling, in the course of handover signalling and signalling for dual connectivity, the *Old NG-RAN node UE XnAP ID* IE and the *New NG-RAN node UE XnAP ID* IE shall be included in the ERROR INDICATION message. If any of the *Old NG-RAN node UE XnAP ID* IE and the *New NG-RAN node UE XnAP ID* IE is not correct, the cause shall be set to an appropriate value.

If case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the ERROR INDICATION message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

## 8.4.5.3 Unsuccessful Operation

Not applicable.

#### 8.4.5.4 Abnormal Conditions

Void.

### 8.4.6 Xn Removal

#### 8.4.6.1 General

The purpose of the Xn Removal procedure is to remove the signaling connection between two NG-RAN nodes in a controlled manner. If successful, this procedure erases any existing application level configuration data in the two nodes.

NOTE: In case the signalling transport is shared among several Xn-C interface instances, and the TNL association is still used by one or more Xn-C interface instances, the initiating NG-RAN node should not initiate the removal of the TNL association.

The procedure uses non UE-associated signaling.

### 8.4.6.2 Successful Operation



Figure 8.4.6.2-1: Xn Removal, successful operation

An NG-RAN node<sub>1</sub> initiates the procedure by sending the XN REMOVAL REQUEST message to a candidate NG-RAN node<sub>2</sub>. Upon reception of the XN REMOVAL REQUEST message the candidate NG-RAN node<sub>2</sub> shall reply with the XN REMOVAL RESPONSE message. After receiving the XN REMOVAL RESPONSE message, the initiating NG-RAN node<sub>1</sub> shall initiate removal of the TNL association towards NG-RAN node<sub>2</sub> and may remove all resources associated with that signaling connection. The candidate NG-RAN node<sub>2</sub> may then remove all resources associated with that signaling connection.

If the *Xn Removal Threshold* IE is included in the XN REMOVAL REQUEST message, the candidate NG-RAN node<sub>2</sub> shall, if supported, accept to remove the signalling connection with NG-RAN node<sub>1</sub> if the Xn Benefit Value of the signalling connection determined at the candidate NG-RAN node<sub>2</sub> is lower than the value of the *Xn Removal Threshold* IE.

If case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the XN REMOVAL REQUEST message and the XN REMOVAL RESPONSE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

### 8.4.6.3 Unsuccessful Operation



Figure 8.4.6.3-1: Xn Removal, unsuccessful operation

If the candidate NG-RAN node<sub>2</sub> cannot accept to remove the signaling connection with NG-RAN node<sub>1</sub> it shall respond with an XN REMOVAL FAILURE message with an appropriate cause value.

If case of network sharing with multiple cell ID broadcast with shared Xn-C signalling transport, as specified in TS 38.300 [9], the XN REMOVAL REQUEST message and the XN REMOVAL FAILURE message shall include the *Interface Instance Indication* IE to identify the corresponding interface instance.

#### 8.4.6.4 Abnormal Conditions

Void.

### 8.4.7 Failure Indication

### 8.4.7.1 General

The purpose of the Failure Indication procedure is to transfer information regarding RRC re-establishment attempts, or received RLF Reports, between NG-RAN nodes. The signalling takes place from the NG-RAN node at which a re-establishment attempt is made, or an RLF Report is received, to an NG-RAN node to which the UE concerned may have previously been attached prior to the connection failure. This may aid the detection of radio link failure, handover failure cases.

The procedure uses non UE-associated signalling.

### 8.4.7.2 Successful Operation



Figure 8.4.7.2-1: Failure Indication, successful operation

NG-RAN node<sub>2</sub> initiates the procedure by sending the FAILURE INDICATION message to NG-RAN node<sub>1</sub>, following a re-establishment attempt or an RLF Report reception from a UE at NG-RAN node<sub>2</sub>, when NG-RAN node<sub>2</sub> considers that the UE may have previously suffered a connection failure at a cell controlled by NG-RAN node<sub>1</sub>.

If the *UE RLF Report Container* IE is included in the FAILURE INDICATION message, NG-RAN node<sub>1</sub> shall use it to derive failure case information.

### 8.4.7.3 Unsuccessful Operation

Not applicable.

### 8.4.7.4 Abnormal Conditions

Void.

## 8.4.8 Handover Report

## 8.4.8.1 General

The purpose of the Handover Report procedure is to transfer mobility related information between NG-RAN nodes.

### 8.4.8.2 Successful Operation



Figure 8.4.8.2-1: Handover Report, successful operation

NG-RAN node<sub>1</sub> initiates the procedure by sending the HANDOVER REPORT message to NG-RAN node<sub>2</sub>. When receiving the message NG-RAN node<sub>2</sub> shall assume that a mobility-related problem was detected.

If the *Handover Report Type* IE is set to "HO too early" or "HO to wrong cell", then NG-RAN node<sub>1</sub> indicates to NG-RAN node<sub>2</sub> that, following a successful handover from a cell of NG-RAN node<sub>2</sub> to a cell of NG-RAN node<sub>1</sub>, a radio link failure occurred and the UE attempted RRC Re-establishment or re-connected either at the original cell of NG-RAN node<sub>2</sub> (Handover Too Early), or at another cell (Handover to Wrong Cell). The detection of Handover Too Early and Handover to Wrong Cell events is made according to TS 38.300 [9].

The HANDOVER REPORT message may include:

- the Mobility Information IE, if the Mobility Information IE was sent for this handover from NG-RAN node2;
- the Source cell C-RNTI IE.

If received, NG-RAN node<sub>1</sub> uses the above information according to TS 38.300 [9].

If the *Handover Report Type* IE is set to "Inter-system ping-pong", then NG-RAN node<sub>2</sub> shall deduce that a completed handover from a cell of NG-RAN node<sub>2</sub> to a cell in another system might have resulted in an inter-system ping-pong and the UE was successfully handed over to a cell of NG-RAN node<sub>1</sub> (indicated with *Target cell CGI* IE).

## Interaction with the Failure Indication procedure:

If NG-RAN node<sub>1</sub> receives a UE RLF Report from an NG-RAN node via the FAILURE INDICATION message, as described in TS 38.300 [9], the NG-RAN node<sub>1</sub> may also include it in the *UE RLF Report Container* IE included in the HANDOVER REPORT message.

### 8.4.8.3 Unsuccessful Operation

Not applicable.

### 8.4.8.4 Abnormal Conditions

Void.

# 8.4.9 Mobility Settings Change

#### 8.4.9.1 General

This procedure enables an NG-RAN node to negotiate the handover trigger settings with a peer NG-RAN node controlling neighbouring cells.

### 8.4.9.2 Successful Operation

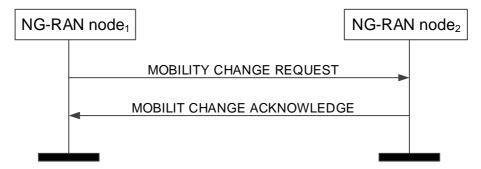


Figure 8.4.9.2-1: Mobility Settings Change, successful operation

NG-RAN node<sub>1</sub> initiates the procedure by sending the MOBILITY CHANGE REQUEST message to NG-RAN node<sub>2</sub>.

Upon receipt, NG-RAN node $_2$  shall evaluate if the proposed NG-RAN node $_2$  handover trigger modification may be accepted. If NG-RAN node $_2$  is able to successfully complete the request it shall reply with MOBILITY CHANGE ACKNOWLEDGE message.

## 8.4.9.3 Unsuccessful Operation

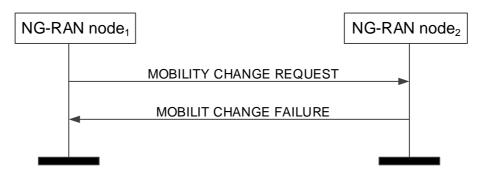


Figure 8.4.9.3-1: Mobility Settings Change, unsuccessful operation

If the requested parameter modification is refused by NG-RAN node<sub>2</sub>, or if NG-RAN node<sub>2</sub> is not able to complete the procedure, NG-RAN node<sub>2</sub> shall send the MOBILITY CHANGE FAILURE message with the *Cause* IE set to an appropriate value. NG-RAN node<sub>2</sub> may include the *Mobility Parameters Modification Range* IE in the MOBILITY CHANGE FAILURE message, for example in cases when the proposed change is out of the permitted range.

### 8.4.9.4 Abnormal Conditions

Void.

# 8.4.10 Resource Status Reporting Initiation

### 8.4.10.1 General

This procedure is used by an NG-RAN node to request the reporting of load measurements to another NG-RAN node.

## 8.4.10.2 Successful Operation

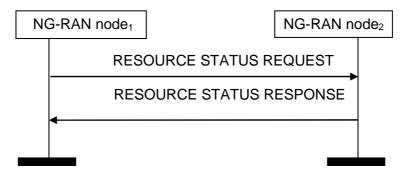


Figure 8.4.10.2-1: Resource Status Reporting Initiation, successful operation

NG-RAN node<sub>1</sub> initiates the procedure by sending the RESOURCE STATUS REQUEST message to NG-RAN node<sub>2</sub> to start a measurement, stop a measurement or add cells to report for a measurement. Upon receipt, NG-RAN node<sub>2</sub>:

- shall initiate the requested measurement according to the parameters given in the request in case the *Registration Request* IE set to "start"; or
- shall stop all cells measurements and terminate the reporting in case the Registration Request IE is set to "stop";
   or
- shall add cells indicated in the *Cell To Report List* IE to the measurements initiated before for the given measurement IDs, in case the *Registration Request* IE is set to "add". If measurements are already initiated for a cell indicated in the *Cell To Report List* IE, this information shall be ignored.

If the *Registration Request* IE is set to "start" in the RESOURCE STATUS REQUEST message and the *Report Characteristics* IE indicates cell specific measurements, the *Cell To Report List* IE shall be included.

If Registration Request IE is set to "add" in the RESOURCE STATUS REQUEST message, the Cell To Report List IE shall be included.

If NG-RAN node<sub>2</sub> is capable to provide all requested resource status information, it shall initiate the measurement as requested by NG-RAN node<sub>1</sub> and respond with the RESOURCE STATUS RESPONSE message.

#### **Interaction with other procedures**

When starting a measurement, the *Report Characteristics* IE in the RESOURCE STATUS REQUEST indicates the type of objects NG-RAN node<sub>2</sub> shall perform measurements on. For each cell, NG-RAN node<sub>2</sub> shall include in the RESOURCE STATUS UPDATE message:

- the Radio Resource Status IE, if the first bit, "PRB Periodic" of the Report Characteristics IE included in the RESOURCE STATUS REQUEST message is set to 1. If NG-RAN node<sub>2</sub> is a gNB and if the cell for which Radio Resource Status IE is requested to be reported supports more than one SSB, the Radio Resource Status IE for such cell shall include the SSB Area Radio Resource Status Item IE for all SSB areas supported by the cell. If the SSB To Report List IE is included for a cell, the Radio Resource Status IE for such cell shall include the requested SSB Area Radio Resource Status List IE;
- the *TNL Capacity Indicator* IE, if the second bit, "TNL Capacity Ind Periodic" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the Composite Available Capacity Group IE, if the third bit, "Composite Available Capacity Periodic" of the Report Characteristics IE included in the RESOURCE STATUS REQUEST message is set to 1. If the Cell Capacity Class Value IE is included within the Composite Available Capacity Group IE, this IE is used to assign weights to the available capacity indicated in the Capacity Value IE. If NG-RAN node<sub>2</sub> is a gNB and if the cell for which Composite Available Capacity Group IE is requested to be reported supports more than one SSB, the Composite Available Capacity Group IE for such cell shall include the SSB Area Capacity Value List for all SSB areas supported by the cell, providing the SSB area capacity with respect to the Cell Capacity Class Value. If the SSB To Report List IE is included for a cell, the Composite Available Capacity Group IE for such cell shall include the requested SSB Area Capacity Value List IE.

If the cell for which *Composite Available Capacity Group* IE is requested to be reported supports more than one slice, and if the *Slice To Report List* IE is included for a cell, the *Slice Available Capacity* IE for such cell shall include the requested *Slice Available Capacity Value Downlink* IE and *Slice Available Capacity Value Uplink* IE, providing the slice capacity with respect to the Cell Capacity Class Value.

- the *Number of Active UEs* IE, if the fourth bit, "Number of Active UEs" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1;
- the *RRC Connections* IE, if the fifth bit, "RRC Connections" of the *Report Characteristics* IE included in the RESOURCE STATUS REQUEST message is set to 1.

If the *Reporting Periodicity* IE in the RESOURCE STATUS REQUEST is present, this indicates the periodicity for the reporting of periodic measurements. If the *Reporting Periodicity* IE is absent, the NG-RAN node<sub>2</sub> shall report only once.

## 8.4.10.3 Unsuccessful Operation

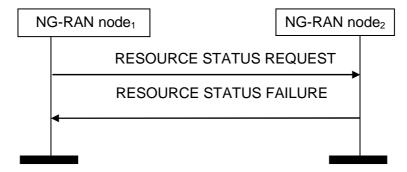


Figure 8.4.10.3-1: Resource Status Reporting Initiation, unsuccessful operation

If any of the requested measurements cannot be initiated, NG-RAN node<sub>2</sub> shall send the RESOURCE STATUS FAILURE message.

### 8.4.10.4 Abnormal Conditions

Void

## 8.4.11 Resource Status Reporting

### 8.4.11.1 General

This procedure is initiated by an NG-RAN node to report the result of measurements admitted by the NG-RAN node following a successful Resource Status Reporting Initiation procedure.

The procedure uses non UE-associated signalling.

### 8.4.11.2 Successful Operation

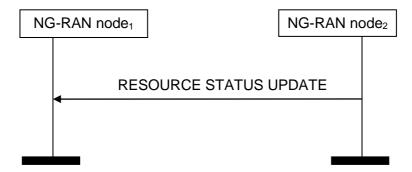


Figure 8.4.11.2-1: Resource Status Reporting, successful operation

NG-RAN node<sub>2</sub> shall report the results of the admitted measurements in RESOURCE STATUS UPDATE message. The admitted measurements are the measurements that were successfully initiated during the preceding Resource Status Reporting Initiation procedure.

### 8.4.11.3 Unsuccessful Operation

Not applicable.

### 8.4.11.4 Abnormal Conditions

Void

# 8.4.12 Access And Mobility Indication

### 8.4.12.1 General

The purpose of the Access and Mobility Indication procedure is to transfer Access and Mobility related information between NG-RAN nodes.

## 8.4.12.2 Successful Operation

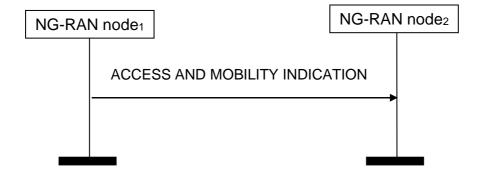


Figure 8.2.12.2-1: Access And Mobility Indication. Successful operation

The Access And Mobility Indication procedure is initiated by ACCESS AND MOBILITY INDICATION message sent from NG-RAN node<sub>1</sub> to NG-RAN node<sub>2</sub>.

### 8.4.12.3 Abnormal Conditions

Not applicable.

# 9 Elements for XnAP Communication

## 9.0 General

Sub clauses 9.1 and 9.2 describe the structure of the messages and information elements required for the XnAP protocol in tabular format. Sub clause 9.3 provides the corresponding ASN.1 definition.

The following attributes are used for the tabular description of the messages and information elements: Presence, Range Criticality and Assigned Criticality. Their definition and use can be found in TS 38.413 [5].

NOTE: The messages have been defined in accordance to the guidelines specified in TR 25.921 [6].

# 9.1 Message Functional Definition and Content

## 9.1.1 Messages for Basic Mobility Procedures

### 9.1.1.1 HANDOVER REQUEST

This message is sent by the source NG-RAN node to the target NG-RAN node to request the preparation of resources for a handover.

Direction: source NG-RAN node  $\rightarrow$  target NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
Source NG-RAN node UE XnAP ID reference	М		NG-RAN	Allocated at the	YES	reject
XNAP ID reference			node UE XnAP ID	source NG-RAN node		
			9.2.3.16	node		
Cause	М		9.2.3.2		YES	reject
Target Cell Global ID	M		9.2.3.25	Includes either an	YES	reject
				E-UTRA CGI or an NR CGI		-
GUAMI	M		9.2.3.24		YES	reject
UE Context Information		1			YES	reject
>NG-C UE associated	M		AMF UE	Allocated at the	_	
Signalling reference			NGAP ID 9.2.3.26	AMF on the source NG-C connection.		
>Signalling TNL association	М		CP	This IE indicates	_	
address at source NG-C			Transport	the AMF's IP		
side			Layer	address of the		
			Information	SCTP association		
			9.2.3.31	used at the source NG-C interface		
				instance.		
				Note: If no UE		
				TNLA binding		
				exists at the source		
				NG-RAN node, the		
				source NG-RAN		
				node indicates the		
				TNL association		
				address it would		
				have selected if it		
				would have had to		
				create a UE TNLA binding.		
>UE Security Capabilities	M		9.2.3.49	- 3	_	
>AS Security Information	M		9.2.3.50		_	
>Index to RAT/Frequency Selection Priority	0		9.2.3.23		_	
>UE Aggregate Maximum Bit Rate	М		9.2.3.17		-	
>PDU Session Resources		1	9.2.1.1	Similar to NG-C	_	
To Be Setup List			0.2	signalling,		
				containing UL		
				tunnel information		
				per PDU Session		
				Resource;		
				and in addition, the		
				source side QoS		
				$flow \Leftrightarrow DRB$		
				mapping		

>RRC Context	M	OCTET STRING	Either includes the HandoverPreparati onInformation message as defined in subclause 10.2.2. of TS 36.331 [14], or the HandoverPreparati onInformation-NB message as defined in subclause 10.6.2 of TS 36.331 [14], if the target NG-RAN node is an ng-eNB, or the HandoverPreparati onInformation message as defined in subclause 11.2.2 of TS 38.331 [10], if the target NG-RAN node is a gNB.	_	
>Location Reporting Information	0	9.2.3.47	Includes the necessary parameters for	_	
			location reporting.		
>Mobility Restriction List	0	9.2.3.53		_	
>Management Based MDT PLMN List	0	MDT PLMN List 9.2.3.133		YES	ignore
>5GC Mobility Restriction List Container	0	9.2.3.100		YES	ignore
> NR UE Sidelink Aggregate Maximum Bit Rate	0	9.2.3.107	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
> LTE UE Sidelink Aggregate Maximum Bit Rate	0	9.2.3.108	This IE applies only if the UE is authorized for LTE V2X services.	YES	ignore
>UE Radio Capability ID	0	9.2.3.138		YES	reject
Trace Activation	0	9.2.3.55		YES	ignore
Masked IMEISV	0	9.2.3.32		YES	ignore
UE History Information	M	9.2.3.64		YES	ignore
UE Context Reference at the S-NG-RAN node	0			YES	ignore
>Global NG-RAN Node ID	M	9.2.2.3			
>S-NG-RAN node UE XnAP ID	M	NG-RAN node UE XnAP ID 9.2.3.16		_	
Conditional Handover Information	0			YES	reject
>CHO Trigger	M	ENUMERAT ED (CHO- initiation, CHO- replace,)			
>Target NG-RAN node UE XnAP ID	C- ifCHOmod	NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the target NG-RAN node		
>Estimated Arrival Probability	0	 INTEGER (1100)			
NR V2X Services Authorized	0	 9.2.3.105		YES	ignore

LTE V2X Services Authorized	0	9.2.3.106		YES	ignore
PC5 QoS Parameters	0	9.2.3.109	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
Mobility Information	0	BIT STRING (SIZE (32))	Information related to the handover; the source NG-RAN node provides it in order to enable later analysis of the conditions that led to a wrong HO.	YES	ignore
UE History Information from the UE	0	9.2.3.110		YES	ignore
IAB Node Indication	0	ENUMERAT ED (true,)		YES	reject

ifCHOmod This repla	IE shall be present if the CHO Trigger IE is present and set to "CHO-ace".

Range bound	Explanation				
maxnoofMDTPLMNs	PLMNs in the Management Based MDT PLMN list. Value is 16.				

## 9.1.1.2 HANDOVER REQUEST ACKNOWLEDGE

This message is sent by the target NG-RAN node to inform the source NG-RAN node about the prepared resources at the target.

Direction: target NG-RAN node  $\rightarrow$  source NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Source NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the source NG-RAN node	YES	ignore
Target NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the target NG-RAN node	YES	ignore
PDU Session Resources Admitted List	M		9.2.1.2		YES	ignore
PDU Session Resources Not Admitted List	0		9.2.1.3		YES	ignore
Target NG-RAN node To Source NG-RAN node Transparent Container	M		OCTET STRING	Either includes the HandoverCommand message as defined in subclause 10.2.2 of TS 36.331 [14], if the target NG-RAN node is an ng-eNB, or the HandoverCommand message as defined in subclause 11.2.2 of TS 38.331 [10], if the target NG-RAN node is a gNB.	YES	ignore
UE Context Kept Indicator	0		9.2.3.68	3	YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore
DRBs transferred to MN	0		DRB List 9.2.1.29	In case of DC, indicates that SN Status is needed for the listed DRBs from the S-NG-RAN node.	YES	ignore
DAPS Response Information	0		9.2.1.34		YES	reject
Conditional Handover Information	0				YES	reject
>Requested Target Cell ID	M		Target Cell Global ID 9.2.3.25	Target cell indicated in the corresponding HANDOVER REQUEST message		
>Maximum Number of CHO Preparations	0		9.2.3.101			

## 9.1.1.3 HANDOVER PREPARATION FAILURE

This message is sent by the target NG-RAN node to inform the source NG-RAN node that the Handover Preparation has failed.

Direction: target NG-RAN node  $\rightarrow$  source NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Source NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the source NG-RAN node	YES	ignore
Cause	М		9.2.3.2		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Requested Target Cell ID	0		Target Cell Global ID 9.2.3.25	Target cell indicated in the correspondin g HANDOVER REQUEST message	YES	reject

### 9.1.1.4 SN STATUS TRANSFER

This message is sent by the source NG-RAN node to the target NG-RAN node to transfer the uplink/downlink PDCP SN and HFN status during a handover or for dual connectivity.

Direction: source NG-RAN node → target NG-RAN node(handover),

NG-RAN node from which the DRB context is transferred  $\rightarrow$  NG-RAN node to which the DRB context is transferred (RRC connection re-establishment or dual connectivity).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	ignore
Source NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated for handover at the source NG-RAN node and for dual connectivity at the NG- RAN node from which the DRB context is transferred.	YES	reject
Target NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated for handover at the target NG-RAN node and for dual connectivity at the NG-RAN node to which the DRB context is transferred.	YES	reject
DRBs Subject To Status Transfer List	M		9.2.1.14		YES	ignore

### 9.1.1.5 UE CONTEXT RELEASE

This message is sent by the target NG-RAN node to the source NG-RAN node to indicate that resources can be released.

Direction: target NG-RAN node  $\rightarrow$  source NG-RAN node, M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Source NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated for handover at the source NG-RAN node or for dual connectivity at the S-NG-RAN node.	YES	reject
Target NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated for handover at the target NG-RAN node or for dual connectivity at the M-NG-RAN node.	YES	reject

## 9.1.1.6 HANDOVER CANCEL

This message is sent by the source NG-RAN node to the target NG-RAN node to cancel an ongoing handover.

Direction: source NG-RAN node  $\rightarrow$  target NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	ignore
Source NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the source NG-RAN node.	YES	reject
Target NG-RAN node UE XnAP ID	0		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the target NG-RAN node.	YES	ignore
Cause	M		9.2.3.2		YES	ignore
Candidate Cells To Be Cancelled List		0 <maxnoof CellsinCH O&gt;</maxnoof 			YES	reject
>Target Cell ID	М		Target Cell Global ID 9.2.3.25		_	

Range bound	Explanation
maxnoofCellsinCHO	Maximum no. cells that can be prepared for a conditional handover.
	Value is 8.

## 9.1.1.7 RAN PAGING

This message is sent by the NG-RAN node1 to NG-RAN node2 to page a UE.

Direction: NG-RAN node<sub>1</sub>  $\rightarrow$  NG-RAN node<sub>2</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
CHOICE UE Identity Index Value	M				YES	reject
>Length-10						
>>Index Length-10	М		BIT STRING (SIZE(10))	Coded as specified in TS 38.304 [33] and TS 36.304 [34].	-	
UE RAN Paging Identity	M		9.2.3.43		YES	ignore
Paging DRX	M		9.2.3.66		YES	ignore
RAN Paging Area	M		9.2.3.38		YES	reject
Paging Priority	0	•	9.2.3.44		YES	ignore
Assistance Data for RAN Paging	0	•	9.2.3.41		YES	ignore
UE Radio Capability for Paging	0	•	9.2.3.91		YES	ignore

## 9.1.1.8 RETRIEVE UE CONTEXT REQUEST

This message is sent by the new NG-RAN node to request the old NG-RAN node to transfer the UE Context to the new NG-RAN.

Direction: new NG-RAN node  $\rightarrow$  old NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
New NG-RAN node UE XnAP ID reference	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the new NG-RAN node	YES	reject
UE Context ID	М		9.2.3.40		YES	reject
Integrity protection	M		BIT STRING (SIZE (16))	RRC Resume: ResumeMAC-I either contained in the RRC ResumeRequest or the RRCResumeRequest1 message as defined in TS 38.331 [10]) or the ShortResumeMAC-I in the RRCConnection ResumeRequest message as defined in TS 36.331 [14]) RRC Reestablishment: ShortMAC-I contained in the RRCReestablishmentRequ est as defined in TS 38.331 [10]) or the ShortMAC-I in the RRCConnection ReestablishmentRequest message as defined in TS 36.331 [14]). RRC Resume for UP CIoT Optimization: ShortResumeMAC-I in the RRCConnection ResumeRequest message or RRCConnection ResumeRequest message or RRCConnection ResumeRequest-NB message as defined in TS 36.331 [14].	YES	reject
New Cell Identifier	M		NG-RAN Cell Identity 9.2.2.9	RRC Resume: Corresponds to the targetCellIdentity within the VarResumeMAC-Input as specified in TS 38.331 [10] or the cellIdentity within the VarShortINACTIVE-MAC-Input as specified in TS 36.331 [14]. RRC Reestablishment: Corresponds to the targetCellIdentity within the VarShortMAC-Input as specified in TS 38.331 [10] or the cellIdentity within the VarShortMAC-Input as specified in TS 36.331 [14]. RRC Resume for UP CloT Optimization: Corresponds to the cellIdentity within the VarShortResumeMAC-Input or VarShortResumeMAC-Input or VarShortResumeMAC-Input-NB as specified in TS 36.331 [14].	YES	reject

RRC Resume Cause	0	9.2.3.61	In case of RNA Update, contains the cause value provided by the UE in the RRCResumeRequest or the RRCResumeRequest1 message, as defined in TS 38.331 [10], or in the RRCConnection	YES	ignore
			2 37		
			as defined in TS 36.331 [14].		

## 9.1.1.9 RETRIEVE UE CONTEXT RESPONSE

This message is sent by the old NG-RAN node to transfer the UE context to the new NG-RAN node.

Direction: old NG-RAN node  $\rightarrow$  new NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
New NG-RAN node UE XnAP ID reference	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the new NG-RAN node	YES	ignore
Old NG-RAN node UE XnAP ID reference	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the old NG-RAN node	YES	ignore
GUAMI	М		9.2.3.24		YES	reject
UE Context Information – Retrieve UE Context Response	М		9.2.1.13		YES	reject
Trace Activation	0		9.2.3.55		YES	ignore
Masked IMEISV	0		9.2.3.32		YES	ignore
Location Reporting Information	0		9.2.3.47	Includes the necessary parameters for location reporting.	YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore
NR V2X Services Authorized	0		9.2.3.105		YES	ignore
LTE V2X Services Authorized	0		9.2.3.106		YES	ignore
PC5 QoS Parameters	0		9.2.3.109	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
UE History Information	0		9.2.3.64		YES	ignore
UE History Information from the UE	0		9.2.3.110		YES	ignore
Management Based MDT PLMN List	0		MDT PLMN List 9.2.3.133		YES	ignore

Range bound	Explanation
maxnoofMDTPLMNs	PLMNs in the Management Based MDT PLMN list. Value is 16.

## 9.1.1.10 RETRIEVE UE CONTEXT FAILURE

This message is sent by the old NG-RAN node to inform the new NG-RAN node that the Retrieve UE Context procedure has failed.

Direction: old NG-RAN node  $\rightarrow$  new NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
New NG-RAN node UE XnAP ID reference	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the new NG-RAN node	YES	ignore
Old NG-RAN node To New NG-RAN node Resume Container	0		OCTET STRING	Includes either the RRCRelease message as defined in TS 38.331 [10], or the RRCConnectionRelease message as defined in TS 36.331 [14], encapsulated in a PDCP-C PDU.	YES	ignore
Cause	M		9.2.3.2		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore

## 9.1.1.11 XN-U ADDRESS INDICATION

This message is either sent by the new NG-RAN node to transfer data forwarding information to the old NG-RAN node, or by the M-NG-RAN node to provide either data forwarding or Xn-U bearer address information for SN terminated bearers to the S-NG-RAN node.

Direction: new NG-RAN node  $\rightarrow$  old NG-RAN node, M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
New NG-RAN node UE XnAP ID reference	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the new NG-RAN node	YES	ignore
Old NG-RAN node UE XnAP ID reference	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the old NG-RAN node	YES	ignore
Xn-U Address Information per PDU Session Resources List		1			YES	reject
>Xn-U Address Information per PDU Session Resources Item		1 <max noofPD USessio ns&gt;</max 			_	
>>PDU Session ID	M		9.2.3.18		_	
>>Data Forwarding Info from target NG- RAN node	0		Data Forwarding Info from target NG-RAN node 9.2.1.16		_	
>>Secondary Data Forwarding Info from target NG-RAN node List	0		9.2.1.31	This IE would be present only when the target M-NG-RAN node decide to split a PDU session between MN and SN	YES	ignore
>>PDU Session Resource Setup Complete Info – SN terminated	0		9.2.1.30		_	
>>DRB IDs taken into use	0		DRB List 9.2.1.29	Indicating the DRB IDs taken into use by the target NG-RAN node, as specified in TS 37.340 [8].	YES	reject
CHO MR-DC Indicator	0		ENUMERATED (true,)	Indicating that the XN-U ADDRESS INDICATION message is for Conditional Handover, as specified in TS 37.340 [8].	YES	reject

Range bound	Explanation
maxnoofPDUSsessions	Maximum no. of PDU sessions. Value is 256

## 9.1.1.12 HANDOVER SUCCESS

This message is sent by the target NG-RAN node to the source NG-RAN node to indicate the successful access of the UE toward the target NG-RAN node.

Direction: target NG-RAN node  $\rightarrow$  source NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	ignore
Source NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the source NG-RAN node.	YES	reject
Target NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the target NG-RAN node.	YES	reject
Requested Target Cell ID	M		Target Cell Global ID 9.2.3.25	Target cell indicated in the corresponding Handover Preparation procedure	YES	reject

## 9.1.1.13 CONDITIONAL HANDOVER CANCEL

This message is sent by the target NG-RAN node to the source NG-RAN node to cancel an already prepared conditional handover.

Direction: target NG-RAN node  $\rightarrow$  source NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	ignore
Source NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the source NG-RAN node.	YES	ignore
Target NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the target NG-RAN node.	YES	reject
Cause	M		9.2.3.2		YES	ignore
Candidate Cells To Be Cancelled List		0 <maxnoof CellsinCH O&gt;</maxnoof 			YES	reject
>Target Cell ID	М		Target Cell Global ID 9.2.3.25		-	-

Range bound	Explanation
maxnoofCellsinCHO	Maximum no. cells that can be prepared for a conditional handover.
	Value is 8.

## 9.1.1.14 EARLY STATUS TRANSFER

This message is sent by the source NG-RAN node to the target NG-RAN node to transfer the COUNT value related to the forwarded downlink SDUs during DAPS Handover or Conditional Handover.

Direction: source NG-RAN node → target NG-RAN node (DAPS Handover or Conditional Handover).

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1	•	YES	ignore
Source NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated for handover at the source NG-RAN node.	YES	reject
Target NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated for handover at the target NG-RAN node.	YES	reject
CHOICE Procedure Stage	M				YES	reject
>First DL COUNT						
>>DRBs Subject To Early Status Transfer List	М	1			_	
>>>DRBs Subject To Early Status Transfer Item		1 <maxnoofd RBs&gt;</maxnoofd 			_	
>>>>DRB ID	M		9.2.3.33		_	
>>>>CHOICE First DL COUNT	М				_	
>>>> 12 bits	NA.		COLINIT	DDCD CN and I lim		
>>>>> FIRST DL COUNT Value	M		COUNT Value for PDCP SN Length 12 9.2.3.36	PDCP-SN and Hyper frame number of the first DL SDU that the source NG-RAN node forwards to the target NG-RAN node in case of 12 bit long PDCP-SN	_	
>>>> 18 bits						
>>>>> FIRST DL COUNT Value	M		COUNT Value for PDCP SN Length 18 9.2.3.37	PDCP-SN and Hyper frame number of the first DL SDU that the source NG-RAN node forwards to the target NG-RAN node in case of 18 bit long PDCP-SN	-	
>DL Discarding	1	4				
>>DRBs Subject To DL Discarding List	М	1			_	
>>>DRBs Subject To DL Discarding Item		1 <maxnoofd RBs&gt;</maxnoofd 			_	
>>>>DRB ID	M		9.2.3.33		_	
>>>>CHOICE DL Discarding	М				_	
>>>> 12 bits	N/I		COLINIT	DDCD CN and Uspar		
>>>>> DISCARD DL COUNT Value	M		COUNT Value for PDCP SN Length 12 9.2.3.36	PDCP-SN and Hyper frame number for which the target NG-RAN node should discard forwarded DL SDUs associated with lower values in case of 12 bit long PDCP-SN	_	
>>>> 18 bits			0011117	DDOD Ctt ttt		
>>>>> DISCARD DL COUNT Value	M		COUNT Value for PDCP SN Length 18 9.2.3.37	PDCP-SN and Hyper frame number for which the target NG-RAN node should discard forwarded DL SDUs associated with lower values in case of 18 bit long PDCP-SN	_	

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.

# 9.1.2 Messages for Dual Connectivity Procedures

## 9.1.2.1 S-NODE ADDITION REQUEST

This message is sent by the M-NG-RAN node to the S-NG-RAN node to request the preparation of resources for dual connectivity operation for a specific UE.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	reject
UE Security Capabilities	M		9.2.3.49		YES	reject
S-NG-RAN node Security Key	М		9.2.3.51		YES	reject
S-NG-RAN node UE Aggregate Maximum Bit Rate	M		UE Aggregate Maximum Bit Rate 9.2.3.17	The UE Aggregate Maximum Bit Rate is split into M-NG-RAN node UE Aggregate Maximum Bit Rate and S-NG-RAN node UE Aggregate Maximum Bit Rate which are enforced by M-NG- RAN node and S-NG- RAN node respectively.	YES	reject
Selected PLMN	0		PLMN Identity 9.2.2.4	The selected PLMN of the SCG in the S-NG-RAN node.	YES	ignore
Mobility Restriction List	0		9.2.3.53		YES	ignore
Index to RAT/Frequency Selection Priority	0		9.2.3.23		YES	reject
PDU Session Resources		1			YES	reject
To Be Added List >PDU Session Resources		1		NOTE: If neither the		
To Be Added Item	M	<maxnoof PDUSess ions&gt;</maxnoof 	0.2.2.19	PDU Session Resource Setup Info – SN terminated IE nor the PDU Session Resource Setup Info – MN terminated IE is present in a PDU Session Resources To Be Added Item IE, abnormal conditions as specified in clause 8.3.1.4 apply.		
>>PDU Session ID	M		9.2.3.18		_	
>>S-NSSAI >>S-NG-RAN node PDU Session Aggregate Maximum Bit Rate	0		9.2.3.21 PDU Session Aggregate Maximum Bit Rate 9.2.3.69		-	
>>PDU Session Resource Setup Info – SN terminated	0		9.2.1.5		_	
>>PDU Session Resource Setup Info – MN terminated	0		9.2.1.7		_	
M-NG-RAN node to S-NG- RAN node Container	M		OCTET STRING	Includes the CG- ConfigInfo message as defined in subclause 11.2.2 of TS 38.331 [10]	YES	reject
S-NG-RAN node UE XnAP ID	0		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	reject
Expected UE Behaviour	0		9.2.3.81		YES	ignore

Requested Split SRBs	0	ENUMERAT ED (srb1, srb2, srb1&2,)	Indicates that resources for Split SRBs are requested.	YES	reject
PCell ID	0	Global NG- RAN Cell Identity 9.2.2.27		YES	reject
Desired Activity Notification Level	0	9.2.3.77		YES	ignore
Available DRB IDs	C- ifSNtermin ated	DRB List 9.2.1.29	Indicates the list of DRB IDs that the S-NG-RAN node may use for SN-terminated bearers.	YES	reject
S-NG-RAN node Maximum Integrity Protected Data Rate Uplink	0	Bit Rate 9.2.3.4	The S-NG-RAN node Maximum Integrity Protected Data Rate Uplink is a portion of the UE's Maximum Integrity Protected Data Rate in the Uplink, which is enforced by the S-NG-RAN node for the UE's SN terminated PDU sessions. If the S-NG-RAN node Maximum Integrity Protected Data Rate Downlink IE is not present, this IE applies to both UL and DL.	YES	reject
S-NG-RAN node Maximum Integrity Protected Data Rate Downlink	0	Bit Rate 9.2.3.4	The S-NG-RAN node Maximum Integrity Protected Data Rate Downlink is a portion of the UE's Maximum Integrity Protected Data Rate in the Downlink, which is enforced by the S-NG-RAN node for the UE's SN terminated PDU sessions.	YES	reject
Location Information at S- NODE reporting	0	ENUMERAT ED (pscell,)	Indicates that the user's Location Information at S-NODE is to be provided.	YES	ignore
MR-DC Resource Coordination Information	0	9.2.2.33	Information used to coordinate resource utilisation between M-NG-RAN node and S-NG-RAN node.	YES	ignore
Masked IMEISV	0	9.2.3.32		YES	ignore
NE-DC TDM Pattern	0	9.2.2.38		YES	ignore
SN Addition Trigger Indication	0	ENUMERAT ED (SN change, inter-MN HO, intra- MN HO,)	This IE indicates the trigger for S-NG-RAN node Addition Preparation procedure	YES	reject
Trace Activation	0	9.2.3.55		YES	ignore
Requested Fast MCG recovery via SRB3	0	ENUMERAT ED (true,)	Indicates that the resources for fast MCG recovery via SRB3 are requested.	YES	ignore
UE Radio Capability ID	0	9.2.3.138		YES	reject

Range bound	Explanation

maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256

Condition	Explanation
ifSNterminated	This IE shall be present if there is at least one PDU Session Resource Setup Info – SN terminated in the PDU Session Resources To Be Added
	List IE.

## 9.1.2.2 S-NODE ADDITION REQUEST ACKNOWLEDGE

This message is sent by the S-NG-RAN node to confirm the M-NG-RAN node about the S-NG-RAN node addition preparation.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M- NG-RAN node	YES	reject
S-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S- NG-RAN node	YES	reject
PDU Session Resources Admitted To Be Added List		1			YES	ignore
>PDU Session Resources Admitted To Be Added Item		1 <maxnoofpd USessions&gt;</maxnoofpd 		NOTE: If neither the PDU Session Resource Setup Response Info – SN terminated IE nor the PDU Session Resource Setup Response Info – MN terminated IE is present in a PDU Session Resources Admitted to be Added Item IE, abnormal conditions as specified in clause 8.3.1.4 apply.	_	
>>PDU Session ID	М		9.2.3.18		_	
>>PDU Session Resource Setup Response Info – SN terminated	Ö		9.2.1.6		_	
>>PDU Session Resource Setup Response Info – MN terminated	0		9.2.1.8		_	
PDU Session Resources Not Admitted List	0				YES	ignore
>PDU Session Resources Not Admitted List – SN terminated	0		PDU Session Resources Not Admitted List 9.2.1.3		-	
>PDU Session Resources Not Admitted List – MN terminated	0		PDU Session Resources Not Admitted List 9.2.1.3		-	
S-NG-RAN node to M-NG- RAN node Container	М		OCTET STRING	Includes the CG- Config message as defined in subclause 11.2.2 of TS 38.331 [10].	YES	reject
Admitted Split SRBs	0		ENUMERATE D (srb1, srb2, srb1&2,)	Indicates admitted SRBs	YES	reject
RRC Config Indication	0		9.2.3.72		YES	reject
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Location Information at S-NODE	0		Target Cell Global ID 9.2.3.25	Contains information to support localisation of the UE	YES	ignore
MR-DC Resource Coordination Information	0		9.2.2.33	Information used to coordinate resource utilisation between M-NG-RAN node and S-NG-RAN node.	YES	ignore

Available fast MCG recovery	0	ENUMERATE	Indicates the fast	YES	ignore
via SRB3		D (true,)	MCG recovery via		
			SRB3 is available.		

Range bound	Explanation		
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256		

## 9.1.2.3 S-NODE ADDITION REQUEST REJECT

This message is sent by the S-NG-RAN node to inform the M-NG-RAN node that the S-NG-RAN node Addition Preparation has failed.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG-RAN node	YES	reject
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG-RAN node	YES	reject
Cause	M		9.2.3.2		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore

## 9.1.2.4 S-NODE RECONFIGURATION COMPLETE

This message is sent by the M-NG-RAN node to the S-NG-RAN node to indicate whether the configuration requested by the S-NG-RAN node was applied by the UE.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M- NG-RAN node	YES	reject
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S- NG-RAN node	YES	reject
Response Information	M				YES	ignore
>CHOICE Response Type	M				_	
>>Configuration successfully applied					_	
>>>M-NG-RAN node to S-NG-RAN node Container	0		OCTET STRING	Includes the RRCReconfiguration Complete message as defined in subclause 6.2.2 of TS 38.331 [10] or the RRCConnectionReconfigurationComplete message as defined in subclause 6.2.2 of TS 36.331 [14].	_	
>>Configuration rejected by the M-NG-RAN node					_	
>>>Cause	M		9.2.3.2		_	
>>>M-NG-RAN node to S-NG-RAN node Container	0		OCTET STRING	Includes the CG- ConfigInfo message as defined in as defined in subclause 11.2.2 of TS 38.331 [10].	-	

## 9.1.2.5 S-NODE MODIFICATION REQUEST

This message is sent by the M-NG-RAN node to the S-NG-RAN node to either request the preparation to modify S-NG-RAN node resources for a specific UE, or to query for the current SCG configuration, or to provide the S-RLF-related information to the S-NG-RAN node.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	reject
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG-RAN node	YES	reject
Cause	M		9.2.3.2		YES	ignore
PDCP Change Indication	0		9.2.3.74		YES	ignore
Selected PLMN	0		PLMN Identity 9.2.2.4	The selected PLMN of the SCG in the S-NG-RAN node.	YES	ignore
Mobility Restriction List	0		9.2.3.53		YES	ignore
SCG Configuration Query	0		9.2.3.27		YES	ignore
UE Context Information		01			YES	reject
>UE Security Capabilities	0		9.2.3.49		_	
>S-NG-RAN node Security Key	0		9.2.3.51		_	
>S-NG-RAN node UE Aggregate Maximum Bit Rate	0		UE Aggregate Maximum Bit Rate 9.2.3.17		_	
>Index to RAT/Frequency Selection Priority	0		9.2.3.23		_	
>Lower Layer presence status change	0		9.2.3.60		_	
>PDU Session Resources To Be Added List		01			_	
>>PDU Session Resources To Be Added Item		1 <maxnoof PDUSess ions&gt;</maxnoof 		NOTE: If neither the PDU Session Resource Setup Info – SN terminated IE nor the PDU Session Resource Setup Info – MN terminated IE is present in a PDU Session Resources To Be Added Item IE, abnormal conditions as specified in clause 8.3.3.4 apply.	-	
>>>PDU Session ID	M		9.2.3.18		_	
>>S-NSSAI	M		9.2.3.21		_	
>>>S-NG-RAN node PDU Session Aggregate Maximum Bit Rate	0		PDU Session Aggregate Maximum Bit Rate 9.2.3.69		_	
>>>PDU Session Resource Setup Info – SN terminated	0		9.2.1.5		_	
>>>PDU Session Resource Setup Info – MN terminated	0		9.2.1.7		_	
>PDU Session Resources To Be Modified List		01			_	

	1	г.	1	T		
>>PDU Session Resources To Be Modified Item		1 <maxnoof PDUSess ions&gt;</maxnoof 		NOTE: If neither the PDU Session Resource Modification Info – SN terminated IE nor the PDU Session Resource Modification Info – MN terminated IE is present in a PDU Session Resources To Be Modified Item IE, abnormal conditions as specified in clause 8.3.3.4 apply.		
>>>PDU Session ID	M		9.2.3.18		_	
>>>S-NG-RAN node PDU Session Aggregate Maximum Bit Rate	0		PDU Session Aggregate Maximum Bit Rate 9.2.3.69		_	
>>>PDU Session Resource Modification Info – SN terminated	0		9.2.1.9		-	
>>>PDU Session Resource Modification Info – MN terminated	0		9.2.1.11		-	
>>>S-NSSAI	0		9.2.3.21		YES	reject
>PDU Session Resources To Be Released List	0		PDU session List with Cause 9.2.1.26		-	
M-NG-RAN node to S-NG- RAN node Container	0		OCTET STRING	Includes the CG- ConfigInfo message as defined in subclause 11.2.2. of TS 38.331 [10].	YES	ignore
Requested Split SRBs	0		ENUMERAT ED (srb1, srb2, srb1&2,)	Indicates that resources for Split SRBs are requested.	YES	ignore
Requested Split SRBs release	0		ENUMERAT ED (srb1, srb2, srb1&2,)	Indicates that resources for Split SRBs are requested to be released.	YES	ignore
Desired Activity Notification Level	0		9.2.3.77		YES	ignore
Additional DRB IDs	0		DRB List 9.2.1.29	Indicates additional list of DRB IDs that the S-NG-RAN node may use for SN-terminated bearers.	YES	reject
S-NG-RAN node Maximum Integrity Protected Data Rate Uplink	O		Bit Rate 9.2.3.4	The S-NG-RAN node Maximum Integrity Protected Data Rate Uplink is a portion of the UE's Maximum Integrity Protected Data Rate in the Uplink, which is enforced by the S-NG-RAN node for the UE's SN terminated PDU sessions. If the S-NG-RAN node Maximum Integrity Protected Data Rate Downlink IE is not present, this IE applies to both UL and DL.	YES	reject

S-NG-RAN node Maximum Integrity Protected Data Rate Downlink	0	Bit Rate 9.2.3.4	The S-NG-RAN node Maximum Integrity Protected Data Rate Downlink is a portion of the UE's Maximum Integrity Protected Data Rate in the Downlink, which is enforced by the S-NG-RAN node for the UE's SN terminated PDU sessions.	YES	reject
Location Information at S- NODE reporting	0	ENUMERAT ED (pscell, )	Indicates that the user's Location Information at S-NODE is to be provided.	YES	ignore
MR-DC Resource Coordination Information	0	9.2.2.33	Information used to coordinate resource utilisation between M-NG-RAN node and S-NG-RAN node.	YES	ignore
PCell ID	0	Global NG- RAN Cell Identity 9.2.2.27		YES	reject
NE-DC TDM Pattern	0	9.2.2.38		YES	ignore
Requested Fast MCG recovery via SRB3	0	ENUMERAT ED (true,)	Indicates that the resources for fast MCG recovery via SRB3 are requested.	YES	ignore
Requested Fast MCG recovery via SRB3 Release	0	ENUMERAT ED (true,)	Indicates that resources for fast MCG recovery via SRB3 are requested to be released.	YES	ignore
SN triggered	0	ENUMERAT ED (TRUE )		YES	ignore

Range bound	Explanation		
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256		

## 9.1.2.6 S-NODE MODIFICATION REQUEST ACKNOWLEDGE

This message is sent by the S-NG-RAN node to confirm the M-NG-RAN node's request to modify the S-NG-RAN node resources for a specific UE.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1	•	YES	reject
M-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	ignore
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG-RAN node	YES	ignore
PDU Session Resources Admitted List		01			YES	ignore
>PDU Session Resources Admitted To Be Added List		01			-	
>>PDU Session Resources Admitted To Be Added Item		1 <maxnoof PDUSess ions&gt;</maxnoof 		NOTE: If neither the PDU Session Resource Setup Response Info – SN terminated IE nor the PDU Session Resource Setup Response Info – MN terminated IE is present in a PDU Session Resources Admitted To Be Added Item IE, abnormal conditions as specified in clause 8.3.3.4 apply.	_	
>>>PDU Session ID	М		9.2.3.18	по вышения выправания выправания выправания выправания выправания выправания выправания выправания выправания в	_	
>>>PDU Session Resource Setup Response Info – SN terminated	0		9.2.1.6		-	
>>>PDU Session Resource Setup Response Info – MN terminated	0		9.2.1.8		_	
>PDU Session Resources Admitted To Be Modified List		01			_	
>>PDU Session Resources Admitted To Be Modified Item		1 <maxnoof PDUSess ions&gt;</maxnoof 		NOTE: If neither the PDU Session Resource Modification Response Info – SN terminated IE nor the PDU Session Resource Modification Response Info – MN terminated IE is present in a PDU Session Resources Admitted To Be Modified Item IE, abnormal conditions as specified in clause 8.3.3.4 apply.	-	
>>>PDU Session ID	M		9.2.3.18		_	
>>>PDU Session Resource Modification Response Info – SN terminated	0		9.2.1.10		-	
>>>PDU Session Resource Modification Response Info – MN terminated	0		9.2.1.12		-	

>PDU Session Resources Admitted To Be Released List		01			-	
>>PDU Session Resources admitted to be released List – SN terminated	0		PDU session List with data forwarding request info 9.2.1.24		-	
>>PDU Session Resources admitted to be released List – MN terminated	0		PDU session List with data Cause 9.2.1.26		-	
PDU Session Resources Not Admitted to be Added List	0		PDU session List 9.2.1.27		YES	ignore
S-NG-RAN node to M-NG- RAN node Container	0		OCTET STRING	Includes the CG-Config message as defined in subclause 11.2.2 of TS 38.331 [10].	YES	ignore
Admitted Split SRBs	0		ENUMERAT ED (srb1, srb2, srb1&2,)	Indicates admitted SRBs	YES	ignore
Admitted Split SRBs release	0		ENUMERAT ED (srb1, srb2, srb1&2,)	Indicates admitted SRBs release	YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Location Information at S- NODE	0		Target Cell Global ID 9.2.3.25	Contains information to support localisation of the UE	YES	ignore
MR-DC Resource Coordination Information	0		9.2.2.33	Information used to coordinate resource utilisation between M-NG-RAN node and S-NG-RAN node.	YES	Ignore
PDU Session Resources with Data Forwarding List		01			YES	ignore
>PDU Session Resources with Data Forwarding List – SN terminated	M		PDU session List with data forwarding request info 9.2.1.24		_	
RRC Config Indication	0		9.2.3.72		YES	reject
Available fast MCG recovery via SRB3	0		ENUMERAT ED {true,}	Indicates the fast MCG recovery via SRB3 is available.	YES	ignore
Release fast MCG recovery via SRB3	0		ENUMERAT ED {true,}	Indicates the fast MCG recovery via SRB3 is released.	YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256

# 9.1.2.7 S-NODE MODIFICATION REQUEST REJECT

This message is sent by the S-NG-RAN node to inform the M-NG-RAN node that the M-NG-RAN node initiated S-NG-RAN node Modification Preparation has failed.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics	Criticality	Assigned
				description		Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG-RAN node	YES	ignore
S-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG-RAN node	YES	ignore
Cause	M		9.2.3.2		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore

## 9.1.2.8 S-NODE MODIFICATION REQUIRED

This message is sent by the S-NG-RAN node to the M-NG-RAN node to request the modification of S-NG-RAN node resources for a specific UE.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	reject
S-NG-RAN node UE XnAP	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	reject
Cause	M		9.2.3.2		YES	ignore
PDCP Change Indication  PDU Session Resources To Be Modified List	0	01	9.2.3.74		YES YES	ignore ignore
>PDU Session Resources		1		NOTE: If neither the	_	
To Be Modified Item		<pre> </pre> <pre> </pre> </pre> <pre> <pre> <pre> <pre> <pre> <pre> <pre> <pre> <pre> </pre> <pre> <p< td=""><td></td><td>PDU Session Resource Modification Required Info – SN terminated IE nor the PDU Session Resource Modification Required Info – MN terminated IE is present in a PDU Session Resources To Be Modified Item IE, abnormal conditions as specified in clause 8.3.4.4 apply.</td><td>_</td><td></td></p<></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre></pre>		PDU Session Resource Modification Required Info – SN terminated IE nor the PDU Session Resource Modification Required Info – MN terminated IE is present in a PDU Session Resources To Be Modified Item IE, abnormal conditions as specified in clause 8.3.4.4 apply.	_	
>>PDU Session ID	M		9.2.3.18	0.0. 1. 1 uppry.	_	
>>PDU Session Resource Modification Required Info - SN terminated	0		9.2.1.20		_	
>>PDU Session Resource Modification Required Info – MN terminated	0		9.2.1.22		-	
PDU Session Resources To Be Released List		01			YES	ignore
>PDU Session Resources To Be Released Item		1 <maxnoof PDUSess ions&gt;</maxnoof 			-	
>PDU sessions to be released List – SN terminated	0		PDU session List with data forwarding request info 9.2.1.24		_	
>PDU sessions to be released List – MN terminated	0		PDU session List with Cause 9.2.1.26		-	
S-NG-RAN node to M-NG- RAN node Container	0		OCTET STRING	Includes the <i>CG-Config</i> message as defined in subclause 11.2.2 of TS 38.331 [10].	YES	ignore
Spare DRB IDs	0		DRB List 9.2.1.29	Indicates the list of unnecessary DRB IDs that had been used by the S-NG-RAN node.	YES	ignore
Required Number of DRB IDs	0		Number of DRBs 9.2.3.78	Indicates the number of DRB IDs that the S-NG-RAN node requests more.	YES	ignore
Location Information at S- NODE	0		Target Cell Global ID 9.2.3.25	Contains information to support localisation of the UE	YES	ignore

MR-DC Resource Coordination Information	0	9.2.2.33	Information used to coordinate resource utilisation between M-NG-RAN node and S-	YES	Ignore
			NG-RAN node.		
RRC Config Indication	0	9.2.3.72		YES	reject

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256

## 9.1.2.9 S-NODE MODIFICATION CONFIRM

This message is sent by the M-NG-RAN node to inform the S-NG-RAN node about the successful modification.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	ignore
S-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	ignore
PDU sessions Admitted To Be Modified List		01			YES	ignore
>PDU sessions Admitted To Be Modified Item		1 <maxnoof PDUsessi ons&gt;</maxnoof 		NOTE: If neither the PDU Session Resource Modification Confirm Info – SN terminated IE nor the PDU Session Resource Modification Confirm Info – MN terminated IE is present in a PDU Session Resources Admitted To Be Modified Item IE, abnormal conditions as specified in clause 8.3.4.4 apply.		
>>PDU Session ID	M		9.2.3.18	1	_	
>>PDU Session Resource Modification Confirm Info - SN terminated >>PDU Session Resource	0		9.2.1.21		-	
Modification Confirm Info  – MN terminated			0.2.1.20			
PDU sessions Released List		01			YES	ignore
>PDU sessions released List – SN terminated	0		PDU Session List with data forwarding info from the target node 9.2.1.25		_	
>PDU sessions released List – MN terminated	0		PDU session List 9.2.1.27		-	
M-NG-RAN node to S-NG- RAN node Container	0		OCTET STRING	Includes the RRCReconfigurationCo mplete message as defined in subclause 6.2.2 of TS 38.331 [10] or the RRCConnectionReconfigurationComplete message as defined in subclause 6.2.2 of TS 36.331 [14].	YES	ignore
Additional DRB IDs	0		DRB List 9.2.1.29	Indicates additional list of DRB IDs that the S-NG-RAN node may use for SN-terminated bearers.	YES	reject
Criticality Diagnostics	0		9.2.3.3	Douroio.	YES	ignore

MR-DC Resource	0	9.2.2.33	Information used to	YES	Ignore
Coordination Information			coordinate resource		
			utilisation between M-		
			NG-RAN node and S-		
			NG-RAN node.		

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256

### 9.1.2.10 S-NODE MODIFICATION REFUSE

This message is sent by the M-NG-RAN node to inform the S-NG-RAN node that the S-NG-RAN node initiated S-NG-RAN node Modification has failed.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	ignore
S-NG-RAN node UE XnAP	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	ignore
Cause	M		9.2.3.2		YES	ignore
M-NG-RAN node to S-NG- RAN node Container	0		OCTET STRING	Includes the CG- ConfigInfo message as defined in subclause 11.2.2 of TS 38.331 [10].	YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore

### 9.1.2.11 S-NODE CHANGE REQUIRED

This message is sent by the S-NG-RAN node to the M-NG-RAN node to trigger the change of the S-NG-RAN node.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	reject
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	reject
Target S-NG-RAN node ID	M		Global NG- RAN Node ID 9.2.2.3		YES	reject
Cause	M		9.2.3.2		YES	ignore
PDU Session SN Change Required List		01			YES	ignore
>PDU Session SN Change Required Item		1 <maxnoo fPDUses sions&gt;</maxnoo 		NOTE: If the PDU Session Resource Change Required Info – SN terminated IE is not present in a PDU Session SN Change Required Item IE, abnormal conditions as specified in clause 8.3.5.4 apply.	_	
>>PDU Session ID	M		9.2.3.18		_	
>>PDU Session Resource Change Required Info – SN terminated	0		9.2.1.18		_	
S-NG-RAN node to M-NG- RAN node Container	М		OCTET STRING	Includes the CG-Config message as defined in subclause 11.2.2 of TS 38.331 [10].	YES	reject

Range bound	Explanation
maxnoofPDUsessions	Maximum no. of PDU sessions. Value is 256

### 9.1.2.12 S-NODE CHANGE CONFIRM

This message is sent by the M-NG-RAN node to inform the S-NG-RAN node that the preparation of the S-NG-RAN node initiated S-NG-RAN node change was successful.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	ignore
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	ignore
PDU Session SN Change Confirm List		01			YES	ignore
>PDU Session SN Change Confirm Item		1 <maxnoof PDUsessi ons&gt;</maxnoof 		NOTE: If the PDU Session Resource Change Confirm Info – SN terminated IE is not present in a PDU Session SN Change Confirm Item IE, abnormal conditions as specified in clause 8.3.5.4 apply.	-	
>>PDU Session ID	M		9.2.3.18		_	
>>PDU Session Resource Change Confirm Info – SN terminated	0		9.2.1.19		_	
Criticality Diagnostics	0		9.2.3.3		YES	ignore

Range bound	Explanation
maxnoofPDUsessions	Maximum no. of PDU sessions. Value is 256

## 9.1.2.13 S-NODE CHANGE REFUSE

This message is sent by the M-NG-RAN node to inform the S-NG-RAN node that the preparation of the S-NG-RAN node initiated S-NG-RAN node change has failed.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID	Allocated at the M-NG- RAN node	YES	ignore
S-NG-RAN node UE XnAP	M		9.2.3.16 NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	ignore
Cause	M		9.2.3.2		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore

## 9.1.2.14 S-NODE RELEASE REQUEST

This message is sent by the M-NG-RAN node to the S-NG-RAN node to request the release of resources.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1	-	YES	reject
M-NG-RAN node UE XnAP	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG-RAN node	YES	reject
S-NG-RAN node UE XnAP ID	0		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG-RAN node	YES	reject
Cause	M		9.2.3.2		YES	ignore
PDU Session Resources To Be Released List	0		PDU session List with Cause 9.2.1.26		YES	ignore
UE Context Kept Indicator	0		9.2.3.68		YES	ignore
M-NG-RAN node to S-NG- RAN node Container	0		OCTET STRING	Includes the CG- ConfigInfo message as defined in subclause 11.2.2 of TS 38.331 [10].	YES	ignore
DRBs transferred to MN	0		DRB List 9.2.1.29	Indicates that the target M-NG- RAN node reconfigured the listed DRBs as MN-terminated bearers.	YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256

### 9.1.2.15 S-NODE RELEASE REQUEST ACKNOWLEDGE

This message is sent by the S-NG-RAN node to the M-NG-RAN node to confirm the request to release S-NG-RAN node resources.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID	Allocated at the M-NG-	YES	reject
			9.2.3.16	RAN node		
S-NG-RAN node UE XnAP ID	0		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG-RAN node	YES	reject
PDU sessions To Be Released List		01			YES	ignore
>PDU Session Resources To Be Released List – SN terminated	0		PDU Session List with data forwarding request info 9.2.1.24			
Criticality Diagnostics	0		9.2.3.3		YES	ignore

## 9.1.2.16 S-NODE RELEASE REJECT

This message is sent by the S-NG-RAN node to the M-NG-RAN node to reject the request to release S-NG-RAN node resources.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	reject
S-NG-RAN node UE XnAP ID	0		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG-RAN node	YES	reject
Cause	M		9.2.3.2		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore

### 9.1.2.17 S-NODE RELEASE REQUIRED

This message is sent by the S-NG-RAN node to request the release of all resources for a specific UE at the S-NG-RAN node.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M- NG-RAN node	YES	reject
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S- NG-RAN node	YES	reject
PDU sessions To Be Released		01			YES	ignore
>PDU Session Resources to be released List – SN terminated	0		PDU session List with data forwarding request info 9.2.1.24		_	
Cause	M		9.2.3.2		YES	ignore
S-NG-RAN node to M-NG- RAN node Container	0		OCTET STRING	Includes the CG- Config message as defined in TS 38.331 [10].	YES	ignore

## 9.1.2.18 S-NODE RELEASE CONFIRM

This message is sent by the M-NG-RAN node to confirm the release of all resources for a specific UE at the S-NG-RAN node.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG-RAN node	YES	ignore
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S- NG-RAN node	YES	ignore
PDU Session Resources Released		01			YES	ignore
>PDU sessions released List – SN terminated	0		PDU Session List with data forwarding info from the target node 9.2.1.25		-	
Criticality Diagnostics	0		9.2.3.3		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256

## 9.1.2.19 S-NODE COUNTER CHECK REQUEST

This message is sent by the S-NG-RAN node to request the verification of the value of the PDCP COUNTs associated with SN terminated bearers established in the S-NG-RAN node.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	ignore
S-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	ignore
Bearers Subject to Counter Check List		1			YES	ignore
>Bearers Subject to Counter Check Item		1 <maxnoofdrbs></maxnoofdrbs>			-	
>>DRB ID	M		9.2.3.33		_	
>>UL COUNT	М	INTEGER (0 4294967295)		Indicates the value of uplink COUNT associated to this DRB.	-	
>>DL COUNT	М	INTEGER (0 4294967295)		Indicates the value of downlink COUNT associated to this DRB.	-	

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs. Value is 32

## 9.1.2.20 RRC TRANSFER

This message is sent by the M-NG-RAN-NODE to the S-NG-RAN-NODE to transfer an RRC message or from the S-NG-RAN-NODE to the M-NG-RAN-NODE to report the DL RRC message delivery status.

Direction: M-NG-RAN node  $\rightarrow$  S-NG-RAN node or S-NG-RAN node  $\rightarrow$  M-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	reject
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	reject
Split SRB		01			YES	reject
>RRC Container	0		OCTET STRING	Contains a PDCP-C PDU encapsulating an RRC message as defined in subclause 6.2.1 of TS 38.331 [10] or TS 36.331 [14] and ciphered with the key of the M-NG-RAN node	-	
>SRB Type	M		ENUMERATED (srb1, srb2,)	The SRB type to be used	_	
>Delivery Status	0		9.2.3.45	DL RRC delivery status of split SRB	_	
UE Report		01			YES	reject
>RRC Container	M		OCTET STRING	For NGEN-DC and NR-DC, includes the <i>UL-DCCH-Message</i> as defined in subclause 6.2.1 of TS 38.331 [10] containing the <i>MeasurementReport</i> message or the <i>FailureInformation</i> message. For NE-DC, includes the <i>UL-DCCH-Message</i> as defined in subclause 6.2.1 of TS 36.331 [14] containing the <i>MeasurementReport</i> message.	- -	
Fast MCG Recovery via SRB3 from SN to MN		01			YES	ignore
>RRC Container	0		OCTET STRING	For NR-DC, includes the <i>UL-DCCH-Message</i> as defined in subclause 6.2.1 of TS 38.331 [10] containing the <i>MCGFailureInformation</i> , message. For NGEN-DC, includes the <i>UL-DCCH-Message</i> as defined in subclause 6.2.1 of TS 36.331 [14] containing the <i>MCGFailureInformation</i> message.	-	
Fast MCG Recovery via SRB3 from MN to SN		01			YES	ignore

>RRC Container	0	OCTET STRING	For NR-DC, includes	_	
			the DL-DCCH-Message		
			as defined in subclause		
			6.2.1 of TS 38.331 [10]		
			containing the		
			RRCReconfiguration		
			message,or the		
			RRCRelease message,		
			or the		
			MobilityFromNRComma		
			nd message.		
			For NGEN-DC, includes		
			the <i>DL-DCCH-Message</i>		
			as defined in subclause		
			6.2.1 of TS 36.331 [14]		
			containing the		
			RRCConnectionReconfi		
			guration message or		
			the		
			RRCConnectionReleas		
			e message, or the		
			MobilityFromEUTRACo		
			mmand message.		

### 9.1.2.21 NOTIFICATION CONTROL INDICATION

This message is sent to notify that the QoS requirements of already established GBR QoS flow(s) for a given UE for which notification control has been requested are either not fulfilled anymore or fulfilled again.

Direction: S-NG-RAN node  $\rightarrow$  M-NG-RAN node and M-NG-RAN node  $\rightarrow$  S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.3.1		YES	ignore
M-NG-RAN node UE	M		NG-RAN node	Allocated at the M-	YES	reject
XnAP ID			UE XnAP ID	NG-RAN node		-
			9.2.3.16			
S-NG-RAN node UE	M		NG-RAN node	Allocated at the S-	YES	reject
XnAP ID			UE XnAP ID	NG-RAN node		-
			9.2.3.16			
PDU Session		01			YES	reject
Resource Notify List						-
>PDU Session		1 <maxno< td=""><td></td><td></td><td>_</td><td></td></maxno<>			_	
Resource Notify Item		ofPDUSes				
		sions>				
>>PDU Session ID	M		9.2.3.18		_	
>>QoS Flow	M		9.2.3.57		_	
Notification Control						
Indication Info						

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions allowed towards one UE. Value is 256.

## 9.1.2.22 ACTIVITY NOTIFICATION

This message is sent by a NG-RAN node to send notification to another NG-RAN node for one or several QoS flows or PDU sessions already established for a given UE.

Direction: NG-RAN node → NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M- NG-RAN node	YES	ignore
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S- NG-RAN node	YES	ignore
UE Context level user plane activity report	0		User plane traffic activity report 9.2.3.59		YES	ignore
PDU Session Resource Activity Notify List		01			YES	ignore
>PDU Session Resource Activity		1 <maxno ofPDUSes</maxno 			_	
Notify Item		sions>	0.0040			
>>PDU Session ID >>PDU Session level	M O		9.2.3.18			
user plane activity report			User plane traffic activity report 9.2.3.59		_	
>>QoS Flows Activity Notify List		01			-	
>>>QoS Flows Activity Notify Item		1 <maxno ofQoSflow s&gt;</maxno 			I	
>>>QoS Flow Identifier	M		9.2.3.10		ı	
>>>>User plane traffic activity report	M		9.2.3.59		ı	
RAN Paging Failure	0		ENUMERATED (true,)		YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

## 9.1.2.23 E-UTRA – NR CELL RESOURCE COORDINATION REQUEST

This message is sent by a neighbouring ng-eNB to a peer gNB or by a neighbouring gNB to a peer ng-eNB, both nodes able to interact, to express the desired resource allocation for data traffic, for the sake of E-UTRA - NR Cell Resource Coordination.

Direction:  $ng-eNB \rightarrow gNB$ ,  $gNB \rightarrow ng-eNB$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
CHOICE Initiating Node Type	М				YES	reject
>ng- <i>eNB</i>						-
>>Data Traffic Resource Indication	M		9.2.2.30	Indicates resource allocations for data traffic.	-	
>>Spectrum Sharing Group ID	M		INTEGER (1 maxnoofCell sinNG- RANnode)	Indicates the E-UTRA cells involved in resource coordination with the NR cells affiliated with the same Spectrum Sharing Group ID.	-	
>>List of E-UTRA Cells in E-UTRA Coordination Request		1 < maxnoofCellsin NG-RANnode >		List of applicable E- UTRA cells.	_	
>>>EUTRA Cell ID	М		E-UTRA CGI 9.2.2.8		_	
>gNB						
>>Data Traffic Resource Indication	M		9.2.2.30	Indicates resource allocations for data traffic.	1	
>>List of E-UTRA Cells in NR Coordination Request		0 < maxnoofCellsin NG-RANnode >		List of applicable E- UTRA cells	-	
>>>E-UTRA Cell ID	М		E-UTRA CGI 9.2.2.8		_	
>>Spectrum Sharing Group ID	М		INTEGER (1 maxnoofCell sinNG- RANnode)	Indicates the NR cells involved in resource coordination with the E-UTRA cells affiliated with the same Spectrum Sharing Group ID.	_	
>>List of NR Cells in NR Coordination Request		1 < maxnoNRcellsS pectrumSharing withE-UTRA >		List of applicable NR cells	-	
>>>NR-Cell ID	М		NR CGI 9.2.2.7		_	
Interface Instance Indication	0		9.2.2.39		YES	reject

Range bound	Explanation
maxnoNRcellsSpectrumSharingwithE- UTRA	Maximum no. of NR cells affiliated to a <i>Spectrum Sharing Group ID</i> involved in cell resource coordination with a number of E-UTRA cells affiliated with the same <i>Spectrum Sharing Group ID</i> . Value is 64.
maxnoofCellsinNG-RANnode	Maximum no. cells that can be served by a NG-RAN node. Value is 16384.

## 9.1.2.24 E-UTRA – NR CELL RESOURCE COORDINATION RESPONSE

This message is sent by a neighbouring ng-eNB to a peer gNB or by a neighbouring gNB to a peer ng-eNB, both nodes able to interact, as a response to the E-UTRA – NR CELL RESOURCE COORDINATION REQUEST.

Direction:  $ng-eNB \rightarrow gNB$ ,  $gNB \rightarrow ng-eNB$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1	•	YES	reject
CHOICE Responding NodeType	М				YES	reject
>ng- <i>eNB</i>						
>>Data Traffic Resource Indication	M		9.2.2.30	Indicates resource allocations for data traffic.	-	
>>Spectrum Sharing Group ID	М		INTEGER (1 maxnoofCell sinNG- RANnode)	Indicates the E- UTRA cells involved in resource coordination with the NR cells affiliated with the same Spectrum Sharing Group ID.	_	
>>List of E-UTRA Cells in E-UTRA Coordination Response		1 < maxnoofCellsin NG-RANnode >		List of applicable E- UTRA cells	-	
>>>EUTRA Cell ID	М		E-UTRA CGI 9.2.2.8		_	
>gNB						
>>Data Traffic Resource Indication	M		9.2.2.30	Indicates resource allocations for data traffic.	_	
>>Spectrum Sharing Group ID	M		INTEGER (1 maxnoofCell sinNG- RANnode)	Indicates the NR cells involved in resource coordination with the E-UTRA cells affiliated with the same Spectrum Sharing Group ID.	-	
>>List of NR Cells in NR Coordination Response		1 < maxnoNRcellsS pectrumSharing withE-UTRA >		List of applicable NR cells	-	
>>>NR Cell ID	М		NR CGI 9.2.2.7		_	
Interface Instance Indication	0		9.2.2.39		YES	reject

Range bound	Explanation
maxnoNRcellsSpectrumSharingwithE-	Maximum no. of NR cells affiliated to a Spectrum Sharing Group ID
UTRA	involved in cell resource coordination with a number of E-UTRA cells affiliated with the same <i>Spectrum Sharing Group ID</i> . Value is 64.
maxnoofCellsinNG-RANnode	Maximum no. cells that can be served by a NG-RAN node. Value is
	16384.

# 9.1.2.25 SECONDARY RAT DATA USAGE REPORT

This message is sent by the S-NG-RAN node to report data volumes for secondary RAT.

Direction: S-NG-RAN node → M-NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	reject
M-NG-RAN node UE XnAP ID	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG- RAN node	YES	reject
S-NG-RAN node UE XnAP	М		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG- RAN node	YES	reject
PDU Session Resource Secondary RAT Usage List		1			YES	reject
> PDU Session Resource Secondary RAT Usage Item		1 <maxnoofpdu Sessions&gt;</maxnoofpdu 				
>>PDU Session ID	М		9.2.3.18		-	-
>>Secondary RAT Usage Information	М		9.2.3.87		-	-

Range bound	Explanation
maxnoofPDUsessions	Maximum no. of PDU sessions. Value is 256.

### 9.1.2.26 TRACE START

This message is sent by the M-NG-RAN node to initiate a trace session for a UE.

Direction: M-NG-RAN node → S-NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1	•	YES	ignore
M-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG-RAN node.	YES	reject
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG-RAN node.	YES	reject
Trace Activation	M		9.2.3.55		YES	ignore

## 9.1.2.27 DEACTIVATE TRACE

This message is sent by the M-NG-RAN node to deactivate a trace session.

Direction: M-NG-RAN node → S-NG-RAN node

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.3.1.1		YES	ignore
M-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the M-NG-RAN node.	YES	reject
S-NG-RAN node UE XnAP ID	M		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the S-NG-RAN node.	YES	reject
NG-RAN Trace ID	M		OCTET STRING (SIZE(8))	As per NG-RAN Trace ID in <i>Trace</i> Activation IE	YES	ignore

# 9.1.3 Messages for Global Procedures

# 9.1.3.1 XN SETUP REQUEST

This message is sent by a NG-RAN node to a neighbouring NG-RAN node to transfer application data for an Xn-C interface instance.

Direction: NG-RAN node<sub>1</sub>  $\rightarrow$  NG-RAN node<sub>2</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Global NG-RAN Node ID	M		9.2.2.3		YES	reject
TAI Support List	M		9.2.3.20	List of	YES	reject
				supported TAs		•
				and associated		
				characteristics.		
AMF Region Information	М		9.2.3.83	Contains a list	YES	reject
7 Will Region Information	141		3.2.3.00	of all the AMF	120	rojoot
				Regions to		
				which the NG-		
				RAN node		
				belongs.		
List of Served Cells NR		0		Contains a list	YES	reject
		<maxnoofcellsinn< td=""><td></td><td>of cells served</td><td></td><td></td></maxnoofcellsinn<>		of cells served		
		G-RAN node>		by the gNB. If a		
				partial list of		
				cells is		
				signalled, it		
				contains at		
				least one cell		
				per carrier		
				configured at		
>Served Cell Information	M		9.2.2.11	the gNB	_	
NR >Neighbour Information NR	0		9.2.2.13		_	
>Neighbour Information E-	0		9.2.2.14		_	
UTRA			J.Z.Z.14			
List of Served Cells E-		0		Contains a list	YES	reject
UTRA		<pre><maxnoofcellsinn< pre=""></maxnoofcellsinn<></pre>		of cells served	120	reject
OTICA		G-RAN node>				
		G-KAN Houe>		by the ng-eNB.		
				If a partial list		
				of cells is		
				signalled, it		
				contains at		
				least one cell		
				per carrier		
				configured at		
				the ng-eNB		
>Served Cell Information E-	М		9.2.2.12		-	
UTRA >Neighbour Information NR	0		9.2.2.13		_	
>Neighbour Information E-	0		9.2.2.13		_	
UTRA	1		3.2.2.14		-	
	0		0.2.2.20		YES	roigot
Interface Instance Indication			9.2.2.39			reject
TNL Configuration Info	0	1	9.2.3.96	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \	YES	ignore
Partial List Indicator NR	0		Partial List	Value "partial"	YES	ignore
			Indicator	indicates that a		
			9.2.2.46	partial list of		
				cells is		
				included in the		
				List of Served		
				Cells NR IE.		
			9.2.2.41	Contains NR	YES	ignore
Cell and Capacity Assistance	0		1 3.7.7.41			
Cell and Capacity Assistance Information NR	0		9.2.2.41	cell related		-
Cell and Capacity Assistance Information NR	0		9.2.2.41	cell related		-
	0		9.2.2.41	assistance		-
Information NR				assistance information.	VES	ignoro
	0		Partial List	assistance information.  Value "partial"	YES	ignore
Information NR			Partial List Indicator	assistance information.  Value "partial" indicates that a	YES	ignore
Information NR			Partial List	assistance information.  Value "partial" indicates that a partial list of	YES	ignore
Information NR			Partial List Indicator	assistance information.  Value "partial" indicates that a partial list of cells is	YES	ignore
Information NR			Partial List Indicator	assistance information.  Value "partial" indicates that a partial list of cells is included in the	YES	ignore
Information NR			Partial List Indicator	assistance information.  Value "partial" indicates that a partial list of cells is	YES	ignore

Cell and Capacity Assistance	0	9.2.2.42	Contains E-	YES	ignore
Information E-UTRA			UTRA cell		
			related		
			assistance		
			information.		

Range bound	Explanation
maxnoofCellsinNG-RAN node	Maximum no. cells that can be served by a NG-RAN node. Value is 16384.

## 9.1.3.2 XN SETUP RESPONSE

This message is sent by a NG-RAN node to a neighbouring NG-RAN node to transfer application data for an Xn-C interface instance.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Global NG-RAN Node ID	M		9.2.2.3		YES	reject
TAI Support List	M		9.2.3.20	List of	YES	reject
				supported TAs		
				and associated		
				characteristics.		
List of Served Cells NR		0		Contains a list	YES	reject
		<maxnoofcellsinn< td=""><td></td><td>of cells served</td><td></td><td></td></maxnoofcellsinn<>		of cells served		
		G-RAN node>		by the gNB. If a		
				partial list of		
				cells is		
				signalled, it		
				contains at		
				least one cell		
				per carrier		
				configured at		
				the gNB		
>Served Cell Information NR	M		9.2.2.11		_	
>Neighbour Information NR	0		9.2.2.13		_	
>Neighbour Information E-	0		9.2.2.14		_	
UTRA						
List of Served Cells E-		0		Contains a list	YES	reject
UTRA		<maxnoofcellsinn< td=""><td></td><td>of cells served</td><td></td><td></td></maxnoofcellsinn<>		of cells served		
		G-RAN node>		by the ng-eNB.		
				If a partial list		
				of cells is		
				signalled, it		
				contains at		
				least one cell		
				per carrier		
				configured at the gNB		
>Served Cell Information E-	M		9.2.2.12	the givib	_	
UTRA	IVI		3.2.2.12			
>Neighbour Information NR	0		9.2.2.13		_	
>Neighbour Information E-	0		9.2.2.14		_	
UTRA			0.2.2			
Criticality Diagnostics	0		9.2.3.3		YES	ignore
AMF Region Information	0		9.2.3.83	Contains a list	YES	reject
_				of all the AMF		-
				Regions to		
				which the NG-		
				RAN node		
				belongs.		
Interface Instance Indication	0		9.2.2.39		YES	reject
TNL Configuration Info	0		9.2.3.96		YES	ignore
Partial List Indicator NR	0		Partial List	Value "partial"	YES	ignore
			Indicator	indicates that a		
			9.2.2.46	partial list of		
				cells is		
				included in the		
				List of Served		
Call and Caracity A 1.4			0.00.44	Cells NR IE.	VEC	
Cell and Capacity Assistance	0		9.2.2.41	Contains NR	YES	ignore
Information NR				cell related		
				assistance		
Partial List Indicator E-UTRA	0		Partial List	information. Value "partial"	YES	ignoro
Fartial List Indicator E-UTRA			Indicator	indicates that a	150	ignore
			9.2.2.46	partial list of cells is		
				included in the		
				List of Served		
				Cells E-UTRA.		
	L	l .	l	Ocio E-OTRA.		

Cell and Capacity Assistance	0	9.	.2.2.42	Contains E-	YES	ignore
Information E-UTRA				UTRA cell		
				related		
				assistance		
				information.		

Range bound	Explanation
maxnoofCellsinNG-RAN node	Maximum no. cells that can be served by a NG-RAN node. Value is 16384.

### 9.1.3.3 XN SETUP FAILURE

This message is sent by the neighbouring NG-RAN node to indicate Xn Setup failure.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Cause	M		9.2.3.2		YES	ignore
Time To Wait	0		9.2.3.56		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Interface Instance Indication	0		9.2.2.39		YES	reject
Message Oversize Notification	0		9.2.2.45		YES	ignore

### 9.1.3.4 NG-RAN NODE CONFIGURATION UPDATE

This message is sent by a NG-RAN node to a neighbouring NG-RAN node to transfer updated information for an Xn-C interface instance.

Direction: NG-RAN node<sub>1</sub>  $\rightarrow$  NG-RAN node<sub>2</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
TAI Support List	0		9.2.3.20	List of supported TAs and associated characteristics.	GLOBAL	reject
CHOICE Initiating NodeType >gNB	М				YES	ignore
>>Served Cells To Update NR	0		9.2.2.15		YES	ignore
>>Cell Assistance Information NR	0		9.2.2.17		YES	ignore
>>Cell Assistance Information E-UTRA >ng-eNB	0		9.2.2.43		YES	ignore
>>Served Cells to Update E-UTRA	0		9.2.2.16		YES	ignore
>>Cell Assistance Information NR	0		9.2.2.17		YES	ignore
>>Cell Assistance Information E-UTRA	0		9.2.2.43		YES	ignore
TNLA To Add List	ĺ	01			YES	ignore
>TNLA To Add Item		1 <maxnooftnla ssociations=""></maxnooftnla>			_	J
>>TNLA Transport Layer Information	M		CP Transport Layer Information 9.2.3.31	CP Transport Layer Information of NG-RAN node <sub>1</sub>	-	
>> TNL Association Usage	М		9.2.3.84		_	
TNLA To Update List		01			YES	ignore
>TNLA To Update Item		1 <maxnooftnla ssociations=""></maxnooftnla>			_	
>>TNLA Transport Layer Information	M		CP Transport Layer Information 9.2.3.31	CP Transport Layer Information of NG-RAN node <sub>1</sub>		
>> TNL Association Usage	0		9.2.3.84		_	
TNLA To Remove List		01			YES	ignore
>TNLA To Remove Item		1 <maxnooftnla ssociations=""></maxnooftnla>			_	
>>TNLA Transport Layer Information	M		CP Transport Layer Information 9.2.3.31	CP Transport Layer Information of NG-RAN node <sub>1</sub>		
Global NG-RAN Node ID	0		9.2.2.3		YES	reject
AMF Region Information To Add	0		AMF Region Information 9.2.3.83	List of all added AMF Regions to which the NG- RAN node belongs.	YES	reject
AMF Region Information To Delete	0		AMF Region Information 9.2.3.83	List of all deleted AMF Regions to which the NG- RAN node belongs.	YES	reject
Interface Instance Indication	0		9.2.2.39		YES	reject
TNL Configuration Info	0		9.2.3.96		YES	ignore

Range bound	Explanation				
maxnoofTNLAssociations	Maximum numbers of TNL Associations between the NG RAN				
	nodes. Value is 32.				

### 9.1.3.5 NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE

This message is sent by a neighbouring NG-RAN node to a peer node to acknowledge update of information for a TNL association.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics	Criticality	Assigned
Message Type	M		9.2.3.1	description	YES	Criticality reject
CHOICE Responding	M		9.2.3.1		YES	ignore
NodeType	'''				120	ignore
>ng-eNB						
>gNB						
>>Served NR Cells		0 <		Complete or	-	
		maxnoofCellsinN		limited list of		
		G-RANnode>		cells served		
				by a gNB, if		
				requested by		
				an NG-RAN node.		
>>>Served Cell	М		9.2.2.11	noue.	_	
Information NR	IVI		3.2.2.11			
>>Neighbour	0		9.2.2.13	NR	_	
Information NR			0.2.20	neighbours.		
>>>Neighbour	0		9.2.2.14	E-UTRA	_	
Information E-UTRA				neighbours		
>>Partial List Indicator	0		Partial List	Value	YES	ignore
NR			Indicator	"partial"		
			9.2.2.46	indicates		
				that a partial list of cells is		
				included in		
				the Served		
				NR Cells IE		
>>Cell and Capacity	0		9.2.2.41	Contains NR	YES	ignore
Assistance Information				cell related		J
NR				assistance		
				information.		
TNLA Setup List		01			YES	ignore
>TNLA Setup Item		1 <maxnooftnl< td=""><td></td><td></td><td>_</td><td></td></maxnooftnl<>			_	
TNII A Transport Layer	M	Associations>	CP	CP		
>>TNLA Transport Layer Address	IVI		Transport	Transport	_	
Address			Layer	Layer		
			Information	Information		
			9.2.3.31	as received		
				from NG-		
				RAN node <sub>1</sub>		
TNLA Failed to Setup Lis		01			YES	ignore
>TNLA Failed To Setup		1 <maxnooftnl< td=""><td></td><td></td><td>_</td><td></td></maxnooftnl<>			_	
>>TNLA Transport Layer	M	Associations>	CP	CP		
Address	IVI		Transport	Transport	_	
71001033			Layer	Layer		
			Information	Information		
			9.2.3.31	as received		
				from NG-		
_				RAN node <sub>1</sub>		
>>Cause	M		9.2.3.2		-	
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Interface Instance Indication	0		9.2.2.39		YES	reject
TNL Configuration Info	0		9.2.3.96		YES	ignore
TINE Comiguration IIIIO		I	J.L.J.JU	ı	IES	ignore

Range bound	Explanation
maxnoofCellsinNGRANnode	Maximum no. cells that can be served by an NG-RAN node.
	Value is 16384.
maxnoofTNLAssociations	Maximum numbers of TNL Associations between NG-RAN nodes.
	Value is 32.

### 9.1.3.6 NG-RAN NODE CONFIGURATION UPDATE FAILURE

This message is sent by the neighbouring NG-RAN node to indicate NG-RAN node Configuration Update failure.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Cause	M		9.2.3.2		YES	ignore
Time To Wait	0		9.2.3.56		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Interface Instance Indication	0		9.2.2.39		YES	reject

### 9.1.3.7 CELL ACTIVATION REQUEST

This message is sent by the NG-RAN node<sub>1</sub> to the peer NG-RAN node<sub>2</sub> to request a previously switched-off cell/s to be re-activated.

Direction: NG-RAN  $node_1 \rightarrow NG$ -RAN  $node_2$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
CHOICE Served Cells To	M				YES	reject
Activate						
>NR Cells						
>>NR Cells List		1			-	
>>>NR Cells item		1 < maxnoofCellsinNG- RANnode>			1	
>>>>NR CGI	M		9.2.2.7		_	
>E-UTRA Cells						
>>E-UTRA Cells List		1			-	
>>>E-UTRA Cells		1 <			_	
item		maxnoofCellsinNG- RANnode>				
>>>E-UTRA CGI	M		9.2.2.8		_	
Activation ID	М		INTEGER (0255)	Allocated by the NG-RAN node <sub>1</sub>	YES	reject
Interface Instance Indication	0		9.2.2.39		YES	reject

Range bound	Explanation
maxnoofCellsinNG-RANnode	Maximum no. cells that can be served by an NG-RAN node.
	Value is 16384.

## 9.1.3.8 CELL ACTIVATION RESPONSE

This message is sent by an NG-RAN node<sub>2</sub> to a peer NG-RAN node<sub>1</sub> to indicate that one or more cell(s) previously switched-off has (have) been activated.

 $Direction: NG\text{-}RAN \ node_2 \rightarrow NG\text{-}RAN \ node_1.$ 

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1	-	YES	reject
CHOICE Activated Served	М				YES	reject
Cells						-
>NR Cells						
>>NR Cells List		1			_	
>>>NR Cells Item		1 < maxnoffCellsinNG-			_	
		RANnode>				
>>>>NR CGI	M		9.2.2.7		_	
>E-UTRA Cells						
>>E-UTRA Cells List		1			_	
>>>E-UTRA Cells		1 <			_	
Item		maxnoofCellsinNG- RANnode>				
>>>E-UTRA CGI	M		9.2.2.8		_	
Activation ID	M		INTEGER (0255)	Allocated by the NG-RAN node <sub>1</sub>	YES	reject
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Interface Instance Indication	0		9.2.2.39		YES	reject

Range bound	Explanation
maxnoofCellsinNG-RANnode	Maximum no. cells that can be served by an NG-RAN node. Value is 16384.

### 9.1.3.9 CELL ACTIVATION FAILURE

This message is sent by an NG-RAN node2 to a peer NG-RAN node1 to indicate cell activation failure.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Activation ID	M		INTEGER (0255)	Allocated by the NG-RAN node <sub>1</sub>	YES	reject
Cause	M		9.2.3.2		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Interface Instance Indication	0		9.2.2.39		YES	reject

## 9.1.3.10 RESET REQUEST

This message is sent from one NG-RAN node to another NG-RAN node and is used to request the Xn interface to be reset.

Direction: NG-RAN node<sub>1</sub>  $\rightarrow$  NG-RAN node<sub>2</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
CHOICE Reset Request	M				YES	reject
TypeInfo						-
>Full Reset						
>Partial Reset						
>>UE contexts to be released List		1			_	
>>>UE Contexts to be released Item		1 <maxnoof UEcontexts&gt;</maxnoof 			I	
>>>>NG-RAN node1 UE XnAP ID	0		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the NG-RAN node <sub>1</sub>	-	
>>>>NG-RAN node2 UE XnAP ID	0		NG-RAN node UE XnAP ID 9.2.3.16	Allocated at the NG-RAN node <sub>2</sub>	-	
Cause	M		9.2.3.2		YES	ignore
Interface Instance Indication	0		9.2.2.39		YES	reject

Range bound	Explanation
maxnoofUEContexts	Maximum no. of UE Contexts. Value is 8192.

## 9.1.3.11 RESET RESPONSE

This message is sent by an NG-RAN node as a response to a RESET REQUEST message.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1	•	YES	reject
CHOICE Reset Response	M				YES	ignore
Type Info						
>Full Reset						
>Partial Reset						
>>Admitted UE		1			-	
contexts to be released						
List						
>>>Admitted UE		1 <maxnoof< td=""><td></td><td></td><td>_</td><td></td></maxnoof<>			_	
Contexts to be		UEcontexts>				
released Item						
>>>>NG-RAN node1	0		NG-RAN	Allocated at	_	
UE XnAP ID			node UE	the NG-RAN		
			XnAP ID	node <sub>1</sub>		
			9.2.3.16			
>>>>NG-RAN node2	0		NG-RAN	Allocated at	_	
UE XnAP ID			node UE	the NG-RAN		
			XnAP ID	node <sub>2</sub>		
			9.2.3.16			
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Interface Instance	0		9.2.2.39		YES	reject
Indication	1	ĺ		1		

Range bound	Explanation
maxnoofUEContexts	Maximum no. of UE Contexts. Value is 8192.

### 9.1.3.12 ERROR INDICATION

This message is used to indicate that some error has been detected in the NG-RAN node.

Direction: NG-RAN  $node_1 \rightarrow NG$ -RAN  $node_2$ .

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.3.1		YES	ignore
Old NG-RAN node UE XnAP ID	0		NG-RAN node UE XnAP ID 9.2.3.16	Allocated for handover at the source NG-RAN node and for dual connectivity at the S-NG-RAN node or at the NG-RAN node from which a DRB is offloaded.	YES	ignore
New NG-RAN node UE XnAP ID	0		NG-RAN node UE XnAP ID 9.2.3.16	Allocated for handover at the target NG-RAN node and for dual connectivity at the M-NG-RAN node or the NG-RAN node to which a DRB is offloaded.	YES	ignore
Cause	0		9.2.3.2		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Interface Instance Indication	0		9.2.2.39		YES	reject

### 9.1.3.13 XN REMOVAL REQUEST

This message is sent by a NG-RAN node to a neighbouring NG-RAN node to initiate the removal of the signaling connection.

Direction: NG-RAN node  $_1 \rightarrow$  NG-RAN node  $_2$ .

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.3.1		YES	reject
Global NG-RAN Node ID	M		9.2.2.3		YES	reject
Xn Removal Threshold	0		Xn Benefit Value		YES	reject
			9.2.3.54			
Interface Instance	0		9.2.2.39		YES	reject
Indication						

### 9.1.3.14 XN REMOVAL RESPONSE

This message is sent by a NG-RAN node to a neighbouring NG-RAN node to acknowledge the initiation of removal of the signaling connection.

Direction: NG-RAN node  $_2 \rightarrow$  NG-RAN node  $_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Global NG-RAN Node ID	M		9.2.2.3		YES	reject
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Interface Instance Indication	0		9.2.2.39		YES	reject

### 9.1.3.15 XN REMOVAL FAILURE

This message is sent by the NG-RAN node to indicate that removing the signaling connection cannot be accepted.

Direction: NG-RAN node  $_2 \rightarrow$  NG-RAN node  $_1$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
Cause	M		9.2.3.2		YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore
Interface Instance Indication	0		9.2.2.39		YES	reject

### 9.1.3.16 FAILURE INDICATION

This message is sent by NG-RAN node<sub>2</sub> to indicate an RRC re-establishment attempt or a reception of an RLF Report from a UE that suffered a connection failure at NG-RAN node<sub>1</sub>.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1	_	YES	ignore
CHOICE Initiating condition	М				YES	reject
>RRC Reestab						
>>Failure cell PCI	C- ifUERLFR eportCont ainerAbse nt		9.2.2.10	Physical Cell Identifier		
>>Re-establishment cell CGI	C- ifUERLFR eportCont ainerAbse nt		Global NG-RAN Cell Identity 9.2.2.27			
>>C-RNTI	C- ifUERLFR eportCont ainerAbse nt		BIT STRING (SIZE (16))	C-RNTI contained in the RRCRe- establishment Request message (TS 38.331 [10]) or in the RRCConnection Reestablishment Request message (TS 36.331 [14])		
>>ShortMAC-I	C- ifUERLFR eportCont ainerAbse nt		BIT STRING (SIZE (16))	ShortMAC-I contained in the RRCRe-establishment Request message (TS 38.331 [10]) or in the RRCConnection Reestablishment Request message (TS 36.331 [14])		
>>UE RLF Report Container	0		9.2.2.59	nr-RLF-Report- r16 IE contained in the  UEInformationRe  sponse message  (TS 38.331 [10])  or RLF-Report-r9  IE contained in  the  UEInformationRe  sponse message  (TS 36.331 [14])		
> RRC Setup >>UE RLF Report Container	0		9.2.2.59	nr-RLF-Report- r16 IE contained in the UEInformationRe sponse message (TS 38.331 [10]) or RLF-Report-r9 IE contained in the UEInformationRe sponse message (TS 36.331 [14])		

Condition	Explanation
ifUERLFReportContainerAbsent	This IE shall be present if the UE RLF Report Container IE is absent

## 9.1.3.17 HANDOVER REPORT

This message is sent by NG-RAN  $node_1$  to NG-RAN  $node_2$  to report a handover failure event, or other critical mobility problem.

Direction: NG-RAN node  $_1 \rightarrow$  NG-RAN node  $_2$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	ignore
Handover Report Type	М		ENUMERATED (HO too early, HO to wrong cell, Inter-system ping-pong)		YES	ignore
Handover Cause	M		Cause 9.2.3.2	Indicates handover cause employed for handover from NG-RAN node 2	YES	ignore
Source cell CGI	M		Global NG-RAN Cell Identity 9.2.2.27	NG-RAN CGI of source cell for handover procedure (in NG- RAN node 2)	YES	ignore
Target cell CGI	M		Global NG-RAN Cell Identity 9.2.2.27	NG-RAN CGI of target cell for handover procedure (in NG-RAN node 1). If the Handover Report Type is set to "Inter-system ping-pong", it contains the target cell of the inter system handover from the other system to NG-RAN node 1 cell	YES	ignore
Re-establishment cell CGI	C- ifHandoverR eportType HoToWrong Cell		Global NG-RAN Cell Identity 9.2.2.27	NG-RAN CGI of cell where UE attempted re- establishment or where UE successfully re- connected after the failure	YES	ignore
Target cell in E-UTRAN	C- ifHandoverR eportType Intersystemp ingpong		OCTET STRING	Encoded according to Global Cell ID in the Last Visited E- UTRAN Cell Information IE, as defined in in TS 36.413 [31]	YES	ignore
Source cell C-RNTI	0		BIT STRING (SIZE (16))	C-RNTI allocated at the source NG-RAN node (in NG-RAN node 2)	YES	ignore
Mobility Information	0		BIT STRING (SIZE (32))	Information provided in the HANDOVER REQUEST message from NG- RAN node 2.	YES	ignore
UE RLF Report Container	0		9.2.2.59	The UE RLF Report Container IE received in the FAILURE INDICATION message.	YES	ignore

Condition	Explanation
ifHandoverReportType HoToWrongCell	This IE shall be present if the Handover Report Type IE is set to the
	value "HO to wrong cell"
ifHandoverReportType	This IE shall be present if the Handover Report Type IE is set to the
Intersystempingpong	value "Inter-system ping-pong"

### 9.1.3.18 RESOURCE STATUS REQUEST

This message is sent by NG-RAN  $node_1$  to NG-RAN  $node_2$  to initiate the requested measurement according to the parameters given in the message.

 $Direction: NG\text{-}RAN \ node_1 \rightarrow NG\text{-}RAN \ node_2.$ 

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
NG-RAN node1 Measurement ID	М		INTEGER (14095,)	Allocated by NG-RAN node1	YES	reject
NG-RAN node2 Measurement ID	C- ifRegistrati onRequest StoporAdd		INTEGER (14095,)	Allocated by NG-RAN node2	YES	ignore
Registration Request	М		ENUMERAT ED(start, stop, add,)	Type of request for which the resource status is required.	YES	reject
Report Characteristics	C- ifRegistrati onRequest Start		BITSTRING (SIZE(32))	Each position in the bitmap indicates measurement object the NG-RAN node2 is requested to report. First Bit = PRB Periodic, Second Bit = TNL Capacity Ind Periodic, Third Bit = Composite Available Capacity Periodic, Fourth Bit =Number of Active UEs, Fifth Bit =RRC connections. Other bits shall be ignored by the NG-RAN node2.	YES	reject
Cell To Report List		01		Cell ID list to which the request applies.	YES	ignore
>Cell To Report Item		1 <maxno ofCellsin NG- RANnod e&gt;</maxno 			EACH	ignore
>>Cell ID	М		Global NG- RAN Cell Identity 9.2.2.27			
>>SSB To Report List		01		SSB list to which the request applies.	YES	Ignore
>>>SSB To Report Item		1 < maxnoof SSBAre as>			EACH	Ignore
>>>SSB-Index	М		INTEGER (0,63)			
>>Slice To Report List		01		S-NSSAI list to which the request applies.	YES	ignore
>>>Slice To Report Item		1 < maxnoof BPLMNs >			EACH	ignore
>>>>PLMN Identity	М		9.3.1.14	Broadcast PLMN	E 4 0 1 1	
>>> <b>S-NSSAI List</b> >>>>S-NSSAI Item		1 < maxnoof SliceIte ms>			EACH	ignore
>>>S-NSSAI	М		S-NSSAI 9.3.1.38			

Reporting Periodicity	0	ENUMERAT	Periodicity that can be	YES	ignore
		ED(500ms,	used for reporting of		
		1000ms,	PRB Periodic, TNL		
		2000ms,	Capacity Ind Periodic,		
		5000ms,100	Composite Available		
		00ms,)	Capacity Periodic. Also		
			used as the averaging		
			window length for all		
			measurement object if		
			supported.		

Condition	Explanation
ifRegistrationRequestStoporAdd	This IE shall be present if the <i>Registration Request</i> IE is set to the value "stop" or "add".
ifRegistrationRequestStart	This IE shall be present if the Registration Request IE is set to the value "start".

Range bound	Explanation
maxnoofCellsinNG-RANnode	Maximum no. cells that can be served by a NG-RAN node. Value is 16384.
maxnoofSSBAreas	Maximum no. SSB Areas that can be served by a NG-RAN node cell. Value is 64.
maxnoofSliceItems	Maximum no. of signalled slice support items. Value is 1024.
maxnoofBPLMNs	Maximum no. of PLMN lds.broadcast in a cell. Value is 12.

#### 9.1.3.19 RESOURCE STATUS RESPONSE

This message is sent by NG-RAN node<sub>2</sub> to NG-RAN node<sub>1</sub> to indicate that the requested measurement, for all or for a subset of the measurement objects included in the measurement is successfully initiated.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>

IE/Group Name	Presence	Range	IE type and	Semantics description	Criticality	Assigned
			reference			Criticality
Message Type	M		9.2.3.1		YES	reject
NG-RAN node1	M		INTEGER	Allocated by NG-RAN	YES	reject
Measurement ID			(14095,)	node <sub>1</sub>		
NG-RAN node2	M		INTEGER	Allocated by NG-RAN	YES	reject
Measurement ID			(14095,)	node <sub>2</sub>		
Criticality Diagnostics	0		9.2.3.3		YES	ignore

### 9.1.3.20 RESOURCE STATUS FAILURE

This message is sent by the NG-RAN  $node_2$  to NG-RAN  $node_1$  to indicate that for any of the requested measurement objects the measurement cannot be initiated.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
NG-RAN node1 Measurement ID	М		INTEGER (14095,)	Allocated by NG-RAN node1	YES	reject
NG-RAN node2 Measurement ID	М		INTEGER (14095,)	Allocated by NG-RAN node2	YES	reject
Cause	M		9.2.3.2	Ignored by the receiver when the Complete Failure Cause Information IE is included.	YES	ignore
Criticality Diagnostics	0		9.2.3.3		YES	ignore

#### 9.1.3.21 RESOURCE STATUS UPDATE

This message is sent by NG-RAN  $node_2$  to NG-RAN  $node_1$  to report the results of the requested measurements.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1	•	YES	ignore
NG-RAN node1 Measurement ID	М		INTEGER (14095,)	Allocated by NG-RAN	YES	reject
Weasurement ib			(14095,)	node <sub>1</sub>		
NG-RAN node2 Measurement ID	М		INTEGER (14095,)	Allocated by NG-RAN node2	YES	reject
Cell Measurement Result		1			YES	ignore
>Cell Measurement Result Item		1 < maxnoofCellsinN G-RANnode >			YES	ignore
>>Cell ID	М		Global NG- RAN Cell Identity 9.2.2.27			
>>Radio Resource Status	0		9.2.2.50			
>>TNL Capacity Indicator	0		9.2.2.49			
>>Composite Available Capacity Group	0		9.2.2.51			
>>Slice Available Capacity	0		9.2.2.55			
>>Number of Active UEs	0		9.2.2.62		-	
>> RRC Connections	0		9.2.2.56			

Range bound	Explanation
maxnoofCellsinNG-RANnode	Maximum no. cells that can be served by a NG-RAN node. Value is
	16384.

### 9.1.3.22 MOBILITY CHANGE REQUEST

This message is sent by NG-RAN node  $_1$  to NG-RAN node  $_2$  to initiate adaptation of mobility parameters.

Direction: NG-RAN node<sub>1</sub>  $\rightarrow$  NG-RAN node<sub>2</sub>.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
			reference	description		Criticality
Message Type	M		9.2.3.1		YES	reject
NG-RAN node1 Cell ID	M		Global NG-		YES	reject
			RAN Cell			
			Identity			
			9.2.2.27			
NG-RAN node2 Cell ID	M		Global NG-		YES	reject
			RAN Cell			
			Identity			
			9.2.2.27			
NG-RAN node1 Mobility	0		Mobility	Configuration	YES	ignore
Parameters			Parameters	change in NG-		
			Information	RAN node1 cell		
			9.2.2.60			
NG-RAN node2 Proposed	M		Mobility	Proposed	YES	reject
Mobility Parameters			Parameters	configuration		
			Information	change in NG-		
			9.2.2.60	RAN node2 cell		
Cause	M		9.2.3.2		YES	reject

### 9.1.3.23 MOBILITY CHANGE ACKNOWLEDGE

This message is sent by NG-RAN  $node_2$  to indicate to NG-RAN  $node_1$  that Proposed Mobility Parameters proposed by NG-RAN  $node_1$  were accepted.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
NG-RAN node1 Cell ID	М		Global NG-RAN Cell Identity 9.2.2.27		YES	reject
NG-RAN node2 Cell ID	М		Global NG-RAN Cell Identity 9.2.2.27		YES	reject
Criticality Diagnostics	0		9.2.3.2		YES	ignore

### 9.1.3.24 MOBILITY CHANGE FAILURE

This message is sent by the NG-RAN node<sub>2</sub> to indicate to NG-RAN node<sub>1</sub> that Proposed Mobility Parameters proposed by NG-RAN node<sub>1</sub> were refused.

Direction: NG-RAN node<sub>2</sub>  $\rightarrow$  NG-RAN node<sub>1</sub>.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	M		9.2.3.1		YES	reject
NG-RAN node1 Cell ID	М		Global NG-RAN Cell Identity 9.2.2.27		YES	ignore
NG-RAN node2 Cell ID	М		Global NG-RAN Cell Identity 9.2.2.27		YES	ignore
Cause	M		9.2.3.2		YES	ignore
Mobility Parameters Modification Range	0		9.2.2.61		YES	ignore
Criticality Diagnostics	0		9.2.3.2		YES	ignore

### 9.1.3.25 ACCESS AND MOBILITY INDICATION

This message is sent by NG-RAN node1 to transfer access and mobility related information to NG-RAN node2.

Direction: NG-RAN node  $_1 \rightarrow$  NG-RAN node  $_2$ .

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Message Type	М		9.2.3.1		YES	ignore
RACH Report List		01			YES	ignore
>RACH Report List Item		1 <maxno ofRACH Reports &gt;</maxno 			EACH	ignore
>>RACH Report Container	0		OCTET STRING	RACH-ReportList- r16 IE as defined in subclause 6.2.2 in TS 38.331 [10].	YES	ignore

Range bound	Explanation
maxnoofRACHReports	Maximum no. of RACH Reports, the maximum value is 64.

## 9.2 Information Element definitions

## 9.2.0 General

When specifying information elements which are to be represented by bit strings, if not otherwise specifically stated in the semantics description of the concerned IE or elsewhere, the following principle applies with regards to the ordering of bits:

- The first bit (leftmost bit) contains the most significant bit (MSB);
- The last bit (rightmost bit) contains the least significant bit (LSB);
- When importing bit strings from other specifications, the first bit of the bit string contains the first bit of the concerned information.

### 9.2.1 Container and List IE definitions

### 9.2.1.1 PDU Session Resources To Be Setup List

This IE contains PDU session resource related information used at UE context transfer between NG-RAN nodes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDU Session Resources To Be Setup List		1			_	
>PDU Session		1 <maxnoof< td=""><td></td><td></td><td>_</td><td></td></maxnoof<>			_	
Resources To Be		PDU sessions			_	
Setup Item		>	0.0.0.40			
>>PDU Session ID	M		9.2.3.18		_	
>>S-NSSAI	M		9.2.3.21		-	
>>PDU Session	0		PDU Session	This IE shall be	_	
Resource Aggregate			Aggregate	present when at least		
Maximum Bitrate			Maximum Bit	one Non-GBR QoS		
			Rate	Flow has been setup.		
			9.2.3.69			
>>UL NG-U UP TNL	M		UP Transport	UPF endpoint of the	_	
Information at UPF			Layer Information	NG-U transport		
			9.2.3.30	bearer. For delivery of		
				UL PDUs		
>>Additional UL NG-U	0		Additional UP	Additional UPF	YES	ignore
UP TNL Information at			Transport Layer	endpoint of the NG-U	0	.9
UPF List			Information	transport bearer. For		
OTT LIST			9.2.1.32	delivery of UL PDUs		
>>Source DL NG-U	0		UP Transport	Indicates the		
TNL Information			Layer Information	possibility to keep the	_	
TINE IIIIOIIIIalioii						
			9.2.3.30	NG-U GTP-U tunnel		
				termination point at		
				the target NG-RAN		
				node.		
>>Security Indication	0		9.2.3.52		_	
>>PDU Session Type	M		9.2.3.19		_	
>>Network Instance	0		9.2.3.85	This IE is ignored if	_	
				the Common Network		
				Instance IE is		
				present.		
>>QoS Flows To Be Setup List		1			_	
>>>QoS Flows To		1				
Be Setup Item		<maxnoofqos< td=""><td></td><td></td><td>_</td><td></td></maxnoofqos<>			_	
be Setup Item		Flows>				
>>>QoS Flow	М	1 10003/	9.2.3.10			
	IVI		9.2.3.10		_	
Identifier	N 4		0.0.0.5			
>>>>QoS Flow	М		9.2.3.5		_	
Level QoS						
Parameters						
>>>E-RAB ID	0		INTEGER (015,		_	
			)			
>>>>TSC Traffic	0		9.2.3.114		YES	ignore
Characteristics						
>>>>Redundant	0		9.2.3.118		YES	ignore
QoS Flow Indicator						
>>Data Forwarding	0		9.2.1.17			
and Offloading Info						
from source NG-RAN						
node						
>> Common Network	0		9.2.3.92		YES	ignore
Instance						
>>Redundant UL NG	-U O		UP Transport	UPF endpoint of the	YES	ignore
UP TNL Information	-		Layer Information			19.75
UPF			9.2.3.30	bearer. For delivery	of	
] 5			0.2.0.00	UL PDUs for the	~·	
				redundant		
A -1-1141 1	<del></del>		A plutter and 1 1 1 P	transmission	-1 \/50	
>>Additional	0		Additional UP	Additional Redunda		ignore
Redundant UL NG-U			Transport Layer		·	
UP TNL Information a	at		Information	NG-U transport		
UPF List	I	1	9.2.1.32	bearer. For delivery	of	
OI I LIST			0.202	UL PDUs	0.	

>>Redundant Common	0	Common Network	YES	ignore
Network Instance		Instance		
		9.2.3.92		
>>Redundant PDU	0	9.2.3.112	YES	ignore
Session Information				

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

### 9.2.1.2 PDU Session Resources Admitted List

This IE contains PDU session resource related information to report success of the establishment of PDU session resources.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDU Session Resources Admitted List		1			-	
>PDU Session Resources Admitted Item		1 <maxno ofPDUSess ions&gt;</maxno 			_	
>>PDU Session ID	М		9.2.3.18		_	
>>PDU Session Resource Admitted Info	М				-	
>>>DL NG-U TNL Information Unchanged	0		ENUMERATED (True,)	Indicates the NG-U tunnels that have been kept unchanged at the target NG-RAN node	-	
>>>QoS Flows Admitted List		1			_	
>>>QoS Flows Admitted Item		1 <maxno ofQoSFlow s&gt;</maxno 			_	
>>>>QoS Flow Identifier	М		9.2.3.10		_	
>>>>Current QoS Parameters Set Index	0		9.2.3.103	Index to the currently fulfilled alternative QoS parameters set.	YES	ignore
>>>QoS Flows not Admitted List	0		QoS Flow List with Cause 9.2.1.4		-	
>>>Data Forwarding Info from target NG- RAN node	0		9.2.1.16		-	
>>>Secondary Data Forwarding Info from target NG- RAN node List	0		9.2.1.31	This IE would be present only when the target M-NG-RAN node decide to split a PDU session between MN and SN	YES	ignore

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256

maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value
	is 64.

### 9.2.1.3 PDU Session Resources Not Admitted List

This IE contains a list of PDU session resources which were not admitted to be added or modified.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session		1		
Resources Not				
Admitted List				
>PDU Session		1 <maxnoof< td=""><td></td><td></td></maxnoof<>		
Resources Not		PDUSession		
Admitted Item		S>		
>>PDU Session ID	M		9.2.3.18	
>>Cause	0		9.2.3.2	

Range bound	Explanation
maxnoofPDUSessions	Maximum no. of PDU sessions. Value is 256

### 9.2.1.4 QoS Flow List with Cause

This IE contains a list of QoS flows with a cause value.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flow with Cause Item		1 <maxnoof QoSFlows&gt;</maxnoof 		
>QoS Flow Identifier	M		9.2.3.10	
>Cause	0		9.2.3.2	

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value
	is 64.

#### 9.2.1.4a QoS Flow List

This IE contains a list of QoS flows.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flow Item		1 <maxnoof QoSFlows&gt;</maxnoof 		
>QoS Flow Identifier	M		9.2.3.10	

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

## 9.2.1.5 PDU Session Resource Setup Info – SN terminated

This IE contains information for the addition of S-NG-RAN node resources related to a PDU session for DRBs configured with an SN terminated bearer option.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
UL NG-U UP TNL Information at UPF	М		UP Transport Layer Information 9.2.3.30	UPF endpoint of the NG-U transport bearer. For delivery of UL PDUs	-	
PDU Session Type	M		9.2.3.19		_	
Network Instance	0		9.2.3.85	This IE shall be ignored if the Common Network Instance IE is present.	_	
QoS Flows To Be Setup List		1			_	
>QoS Flow To Be Setup Item		1 <maxnoofq oSFlows&gt;</maxnoofq 			-	
>>QoS Flow Identifier	M		9.2.3.10		_	
>>QoS Flow Level QoS Parameters	М		9.2.3.5	For GBR QoS flows, this IE contains GBR QoS flow information as received at NG-C	_	
>>Offered GBR QoS Flow Information	0		GBR QoS Flow Information 9.2.3.6	This IE contains M- Node offered GBR QoS Flow Information.	-	
>>TSC Traffic Characteristics	0		9.2.3.114		YES	ignore
>>Redundant QoS Flow Indicator	0		9.2.3.118		YES	ignore
Data Forwarding and Offloading Info from source NG-RAN node	0		9.2.1.17		-	
Security Indication	0		9.2.3.52		_	
Security Result	0		9.2.3.67	Indicates security activation status in MN.	YES	reject
Common Network Instance	0		9.2.3.92		YES	ignore
Default DRB Allowed	0		9.2.3.93		YES	ignore
Split Session Indicator	0		9.2.3.94		YES	reject
Non-GBR Resources Offered	0		9.2.3.98		YES	ignore
Redundant UL NG-U UP TNL Information at UPF	0		UP Transport Layer Information 9.2.3.30	UPF endpoint of the NG-U transport bearer. For delivery of UL PDUs for the redundant transmission.	YES	ignore
Redundant Common Network Instance	0		Common Network Instance 9.2.3.92		YES	ignore
Redundant PDU Session Information	0		9.2.3.112		YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows. Value is 64

# 9.2.1.6 PDU Session Resource Setup Response Info – SN terminated

This IE contains the result of the addition of S-NG-RAN node resources related to a PDU session for DRBs configured with an SN terminated bearer option.

IE/Group Name	Presence	Range	IE type and	Semantics	Criticality	Assigned
iL/Oroup Name	i reserice	Range	reference	description	Officiality	Criticality
DL NG-U UP TNL	M		UP Transport	S-NG-RAN node	_	_
Information at NG-RAN			Layer	endpoint of the NG		
			Information	transport bearer.		
			9.2.3.30	For delivery of DL		
				PDUs.		
DRBs To Be Setup List		01			_	
>DRBs to Be Setup		1			_	
Item		<maxnoofd RBs&gt;</maxnoofd 				
>>DRB ID	M	RDS>	9.2.3.33			
>>SN UL PDCP UP	M		UP Transport	S-NG-RAN node	_	
TNL Information	IVI		Parameters	endpoint(s) of a	_	
TIVE IIIIOTTIALIOTT			9.2.3. 76	DRB's Xn transport		
			3.2.3.70	bearer at its PDCP		
				resource. For		
				delivery of UL		
				PDUs.		
>>DRB QoS	М		QoS Flow Level		_	
			QoS Parameters			
			9.2.3.5			
>>PDCP SN Length	0		9.2.3.63	Indicates the PDCP	_	
				SN length of the		
				DRB.		
>>RLC Mode	M		9.2.3.28	Indicates the RLC	_	
				mode to be used in		
				the assisting node.		
>>secondary SN UL	0		UP Transport	S-NG-RAN node	_	
PDCP UP TNL			Parameters	endpoint(s) of a		
Information			9.2.3.76	DRB's Xn transport		
				bearer at its PDCP		
				resource. For		
				delivery of UL PDUs in case of PDCP		
				duplication.		
>>Duplication	0		9.2.3.71	Information on the	_	
Activation			0.2.0.7	initial state of UL		
				PDCP duplication.		
				This IE is ignored if		
				the RLC Duplication		
				Information IE is		
				present.		
>>UL Configuration	0		9.2.3.75	Information about	_	
				UL usage in the M-		
				NG-RAN node.		
>>QoS Flows Mapped		1			_	
To DRB List >>>QoS Flows		1				
Mapped To DRB		<maxnoofq< td=""><td></td><td></td><td>_</td><td></td></maxnoofq<>			_	
Item		oSFlows>				
>>>QoS Flow	M	00.1000	9.2.3.10		_	
Identifier			3.2.0.10			
>>>MCG	0		GBR QoS Flow	This IE contains	_	
requested GBR QoS			Information	GBR QoS Flow		
Flow Information			9.2.3.6	Information		
				necessary for the		
				MCG part.		
>>>QoS Flow	0		9.2.3.79		_	
Mapping Indication		1			,	
>>Additional PDCP		01			YES	Ignore
Duplication TNL List >>>Additional PDCP		1				
Duplication TNL		<pre>1 <maxnoofa< pre=""></maxnoofa<></pre>			_	
Item		dditionalPD				
		CPDuplicat				
		ionTNL>				
	1		1	ı	1	1

>>>>Additional PDCP Duplication UP TNL Information	М	UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of additional PDCP duplication.	_	
>>RLC Duplication Information	0	9.2.3.111		ı	
Data Forwarding Info from target NG-RAN node	0	9.2.1.16		_	
QoS Flows Not Admitted List	0	QoS Flow List with Cause 9.2.1.4		-	
Security Result	0	9.2.3.67		ı	
DRB IDs taken into use	0	DRB List 9.2.1.29	Indicating the DRB IDs taken into use by the target NG- RAN node, as specified in TS 37.340 [8].	YES	reject
Redundant DL NG-U UP TNL Information at NG- RAN	0	UP Transport Layer Information 9.2.3.30	S-NG-RAN node endpoint of the NG transport bearer. For delivery of DL PDUs for the redundant transmission.	YES	ignore
Used RSN Information	0	Redundant PDU Session Information 9.2.3.112		YES	ignore

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.
maxnoofQoSFlows	Maximum no. of QoS flows. Value is 64
maxnoofAdditionalPDCPDuplicationTNL	Maximum no. of additional PDCP Duplication TNL. Value is 2.

# 9.2.1.7 PDU Session Resource Setup Info – MN terminated

This IE contains information for the addition of S-NG-RAN node resources related to a PDU session for DRBs configured with an MN terminated bearer option.

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDU Session Type	М		9.2.3.19		_	•
DRBs To Be Setup List		1			_	
>DRBs to Be Setup Item		1 <maxnoo fDRBs&gt;</maxnoo 			_	
>>DRB ID	M		9.2.3.33		_	
>>MN UL PDCP UP TNL Information	M		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of a DRB's Xn-U transport bearer at its PDCP resource. For delivery of UL PDUs.	_	
>>RLC Mode	M		9.2.3.28	Indicates the RLC mode to be used in the assisting node.	_	
>>UL Configuration	0		9.2.3.75	Information about UL usage in the S-NG-RAN node.	_	
>>DRB QoS	М		QoS Flow Level QoS Parameters 9.2.3.5		_	
>>PDCP SN Length	0		9.2.3.63	Indicates the PDCP SN length of the DRB.	_	
>>secondary MN UL PDCP UP TNL Information	0		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of PDCP duplication.	_	
>>Duplication Activation	0		9.2.3.71	Information on the initial state of UL PDCP duplication. This IE is ignored if the RLC Duplication Information IE is present.	-	
>>QoS Flows Mapped To DRB List		1			-	
>>>QoS Flows Mapped To DRB Item		1 <maxnoo fQoSFlo ws&gt;</maxnoo 			_	
>>>>QoS Flow Identifier	М		9.2.3.10		_	
>>>>QoS Flow Level QoS Parameters	M		9.2.3.5		_	
>>>>QoS Flow Mapping Indication	0		9.2.3.79		-	
>>>>TSC Traffic Characteristics	0		9.2.3.114		YES	ignore
>>Additional PDCP Duplication TNL List		01			YES	Ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoo fAddition aIPDCPD uplication TNL&gt;</maxnoo 			_	

>>>>Additional PDCP Duplication UP TNL Information	M	UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of additional PDCP duplication.	-	
>>RLC Duplication Information	0	9.2.3.111		_	

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.
maxnoofAdditionalPDCPDuplicationTNL	Maximum no. of additional PDCP Duplication TNL. Value is 2.

# 9.2.1.8 PDU Session Resource Setup Response Info – MN terminated

This IE contains the result of the addition of S-NG-RAN node resources related to a PDU session for DRBs configured with an MN terminated bearer option.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DRBs Admitted List		1		_	_	_
>DRBs Admitted Item		1 <maxnoof DRBs&gt;</maxnoof 			_	_
>>DRB ID	М		9.2.3.33		_	_
>>SN DL SCG UP TNL Information	М		UP Transport Parameters 9.2.3.76	S-NG-RAN node GTP-U tunnel endpoint(s) of the DRB's Xn transport at its Lower Layer SCG resource. For delivery of DL PDUs.	-	-
>>secondary SN DL SCG UP TNL Information	0		UP Transport Parameters 9.2.3.76	S-NG-RAN node GTP-U tunnel endpoint(s) of the DRB's Xn transport at its Lower Layer SCG resource. For delivery of DL PDUs in case of PDCP duplication.	-	_
>>LCID	0		9.2.3.70	LCID or LCID for split secondary path for fallback to split bearer for primary path if PDCP duplication is applied	-	-
>>Additional PDCP Duplication TNL List		01			YES	Ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoofa dditionalP DCPDuplic ationTNL&gt;</maxnoofa 			_	
>>>>Additional PDCP Duplication UP TNL Information	М		UP Transport Parameters 9.2.3.76	S-NG-RAN node GTP-U tunnel endpoint(s) of the DRB's Xn transport at its Lower Layer SCG resource. For delivery of DL PDUs in case of additional PDCP duplication.	_	
DRBs Not Admitted To Be Setup or Modified List	0		DRB List with Cause 9.2.1.28		YES	ignore

Range bound	Explanation			
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.			

## 9.2.1.9 PDU Session Resource Modification Info – SN terminated

This IE contains information related to a PDU session resource for an M-NG-RAN node initiated request to modify DRBs configured with an SN terminated bearer option.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
UL NG-U UP TNL Information at UPF	0		UP Transport Layer Information 9.2.3.30	UPF endpoint of the NG-U transport bearer. For delivery of UL PDUs	-	
Network Instance	0		9.2.3.85	This IE shall be ignored if the Common Network Instance IE is present.	_	
QoS Flows To Be Setup List		01			_	
>QoS Flows To Be Setup Item		1 <maxnoof QoSFlow s&gt;</maxnoof 			_	
>>QoS Flow Identifier	М		9.2.3.10		_	
>>QoS Flow Level QoS Parameters	M		9.2.3.5	For GBR QoS flows, this IE contains GBR QoS flow information as received at NG-C	-	
>>Offered GBR QoS Flow Information	0		GBR QoS Flow Information 9.2.3.6	This IE contains M- Node offered GBR QoS Flow Information.	_	
>>TSC Traffic Characteristics	0		9.2.3.114		YES	ignore
>>Redundant QoS Flow Indicator	0		9.2.3.118		YES	ignore
Data Forwarding and Offloading Info from source NG-RAN node	0		9.2.1.17	Applicable for the QoS flows contained in the QoS Flows To Be Setup List IE.	-	
QoS Flows To Be Modified List		01			_	
>QoS Flows To Be Modified Item		1 <maxnoof QoSFlow s&gt;</maxnoof 			_	
>>QoS Flow Identifier	M		9.2.3.10		_	
>>QoS Flow Level QoS Parameters	0		9.2.3.5	For GBR QoS flows, this IE contains GBR QoS flow information as received at NG-C	_	
>>Offered GBR QoS Flow Information	0		GBR QoS Flow Information 9.2.3.6	This IE contains M- Node offered GBR QoS Flow Information.	_	
>>TSC Traffic Characteristics	0		9.2.3.114		YES	ignore
>>Redundant QoS Flow Indicator	0		9.2.3.118		YES	ignore
QoS Flows To Be Released List		01	QoS Flow List with Cause 9.2.1.4		_	
DRBs To Be Modified List		01			_	
>DRBs to Be Modified Item		1 <maxnoof DRBs&gt;</maxnoof 			-	
>>DRB ID	М		9.2.3.33		_	

>>MN DL CG UP TNL Information	0		UP Transport Parameters 9.2.3.76	M-NG-RAN node GTP-U endpoint(s) of a DRB's Xn transport bearer at its lower layer CG resource. For delivery of DL PDUs.	-	
>>secondary MN DL CG UP TNL Information	0		UP Transport Parameters 9.2.3.76	M-NG-RAN node GTP-U endpoint(s) of a DRB's Xn transport bearer at its lower layer CG resource. For delivery of DL PDUs in case of PDCP duplication.		
>>LCID	0		9.2.3.70	LCID or LCID for split secondary path for fallback to split bearer for primary path if PDCP duplication is applied	Г	
>>RLC Status	0		9.2.3.80		-	
>>Additional PDCP Duplication TNL List		01			YES	ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoof Additional PDCPDu plicationT NL&gt;</maxnoof 			-	
>>>>Additional PDCP Duplication UP TNL Information	М		UP Transport Parameters 9.2.3.76	M-NG-RAN node GTP-U endpoint(s) of a DRB's Xn transport bearer at its lower layer CG resource. For delivery of DL PDUs in case of additional PDCP duplication.	I	
DRBs To Be Released List	0		DRB List with Cause 9.2.1.28		-	
Common Network Instance	0		9.2.3.92		YES	ignore
Default DRB Allowed	0		9.2.3.93		YES	ignore
Non-GBR Resources	0		9.2.3.98		YES	ignore
Offered Redundant UL NG-U	0			UPF endpoint of the	YES	
UP TNL Information at UPF			UP Transport Layer Information 9.2.3.30	NG-U transport bearer. For delivery of UL PDUs for the redundant transmission		ignore
Redundant Common Network Instance	0		Common Network Instance 9.2.3.92		YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows. Value is 64.
maxnoofAdditionalPDCPDuplicationTNL	Maximum no. of additional PDCP Duplication TNL. Value is 2.

# 9.2.1.10 PDU Session Resource Modification Response Info – SN terminated

This IE contains the PDU session resource related result of an M-NG-RAN node initiated request to modify DRBs configured with an SN terminated bearer option.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DL NG-U UP TNL Information at NG-RAN	0		UP Transport Layer Information 9.2.3.30	S-NG-RAN node endpoint of the NG transport bearer. For delivery of DL PDUs.	-	
DRBs To Be Setup List		01			_	
>DRBs to Be Setup Item		1 <maxnoo fDRBs&gt;</maxnoo 			_	
>>DRB ID	М	_	9.2.3.33		_	
>>SN UL PDCP UP TNL Information	M		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs.	-	
>>DRB QoS	M		QoS Flow Level QoS Parameters 9.2.3.5	1 500.	-	
>>PDCP SN Length	0		9.2.3.63	Indicates the PDCP SN length of the DRB.	-	
>>RLC Mode	M		9.2.3.28	Indicates the RLC mode to be used in the assisting node.	I	
>>secondary SN UL PDCP UP TNL Information	0		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of PDCP duplication.	I	
>>Duplication Activation	0		9.2.3.71	Information on the initial state of UL PDCP duplication. This IE is ignored if the <i>RLC Duplication Information</i> IE is present.	-	
>>UL Configuration	0		9.2.3.75	Information about UL usage in the S- NG-RAN node.	-	
>>QoS Flows Mapped To DRB List		1			-	
>>>QoS Flows Mapped To DRB Item		1 <maxnoo fQoSFlo ws&gt;</maxnoo 			-	
>>>QoS Flow Identifier	М		9.2.3.10		-	
>>Additional PDCP Duplication TNL List		01			YES	Ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoo fAddition alPDCPD uplication TNL&gt;</maxnoo 			-	

>>>>Additional PDCP Duplication UP TNL Information	М		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of additional PDCP duplication.	I	
>>RLC Duplication Information	0		9.2.3.111		_	
>>>>MCG requested GBR QoS Flow Information	0		GBR QoS Flow Information 9.2.3.6	This IE contains GBR QoS Flow Information necessary for the MCG part.	ľ	
>>>>QoS Flow Mapping Indication	0		9.2.3.79		-	
Data Forwarding Info from target NG-RAN node	0		9.2.1.16	Applicable for the QoS flows in DRBs to be setup.	-	
DRBs To Be Modified List		01			_	
>DRBs to Be Modified Item		1 <maxnoo fDRBs&gt;</maxnoo 			I	
>>DRB ID	М		9.2.3.33		_	
>>SN UL PDCP UP TNL Information	0		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs.	-	
>>DRB QoS	0		QoS Flow Level QoS Parameters 9.2.3.5	1 500.	-	
>>QoS Flows Mapped to DRB List		01	3.2.0.0	Overwriting the existing QoS Flow List	-	
>>>QoS Flows Mapped to DRB Item		1 <maxnoo fQoSFlo ws&gt;</maxnoo 			ı	
>>>QoS Flow Identifier	М		9.2.3.10		I	
>>>>MCG requested GBR QoS Flow Information	0		GBR QoS Flow Information 9.2.3.6	This IE contains GBR QoS Flow Information necessary for the MCG part.		
>>>>QoS Flow Mapping Indication	0		9.2.3.79		-	
>>Additional PDCP Duplication TNL List		01			YES	Ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoo alpdcpd="" faddition="" tnl="" uplication=""></maxnoo>			-	

	ı	ı	T	<u>,                                      </u>		1
>>>Additional PDCP Duplication UP TNL Information  >>RLC Duplication Information	M O		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of additional PDCP duplication.	-	
DRBs To Be Released List		01			_	
>DRBs to Be Released Item		1 <maxnoo fDRBs&gt;</maxnoo 			_	
>>DRB ID	М		9.2.3.33		1	
>>Cause	0		9.2.3.2		1	
Data Forwarding and Offloading Info from source NG-RAN node	0		9.2.1.17	Contains DL Data Forwarding indications for QoS Flows removed from the SDAP in the SN.	-	
QoS Flows Not Admitted to be Added List	0		QoS Flow List with Cause 9.2.1.4		-	
QoS Flows Released List	0		QoS Flow List with Cause 9.2.1.4		-	
DRB IDs taken into use	0		DRB List 9.2.1.29	Indicating the DRB IDs taken into use by the target NG- RAN node, as specified in TS 37.340 [8].	YES	reject
Redundant DL NG-U UP TNL Information at NG-RAN	0		UP Transport Layer Information 9.2.3.30	S-NG-RAN node endpoint of the NG transport bearer. For delivery of DL PDUs for the redundant transmission.	YES	ignore

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.
maxnoofQoSFlows	Maximum no. of QoS flows. Value is 64.
maxnoofAdditionalPDCPDuplicationTNL	Maximum no. of additional PDCP Duplication TNL. Value is 2.

## 9.2.1.11 PDU Session Resource Modification Info – MN terminated

This IE contains information related to PDU session resource for an M-NG-RAN node initiated request to modify DRBs configured with an MN terminated bearer option.

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDU Session Type	М		9.2.3.19			,
DRBs To Be Setup List		01			_	
>DRBs to Be Setup Item		1 <maxnoo f DRBs&gt;</maxnoo 			-	
>>DRB ID	M		9.2.3.33		-	
>>MN UL PDCP UP TNL Information	М		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs.		
>>RLC Mode	М		9.2.3.28	Indicates the RLC mode to be used in the assisting node.	-	
>>UL Configuration	0		9.2.3.75	Information about UL usage in the S-NG- RAN node.	_	
>>DRB QoS	М		QoS Flow Level QoS Parameters 9.2.3.5		-	
>>PDCP SN Length	0		9.2.3.63	Indicates the PDCP SN length of the DRB.	-	
>>secondary MN UL PDCP UP TNL Information	0		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of PDCP duplication.	-	
>>Duplication Activation	0		9.2.3.71	Information on the initial state of UL PDCP duplication. This IE is ignored if the RLC Duplication Information IE is present.	-	
>>QoS Flows Mapped to DRB List		1			-	
>>>QoS Flows Mapped To DRB Item		1 <maxnoo fQoSFlo ws&gt;</maxnoo 			_	
>>>>QoS Flow Identifier	М		9.2.3.10		_	
>>>>QoS Flow Level QoS Parameters	М		9.2.3.5		_	
>>>>QoS Flow Mapping Indication	0		9.2.3.79		_	

	I .		I			Γ -
>>Additional PDCP Duplication TNL List		01			YES	Ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoo fAddition alPDCPD uplication TNL&gt;</maxnoo 			-	
>>>>Additional PDCP Duplication UP TNL Information	M		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of additional PDCP duplication.	_	
>>RLC Duplication Information	0		9.2.3.111		_	
DRBs To Be Modified List		01			_	
>DRBs to Be Modified Item		1 <maxnoo fDRBs&gt;</maxnoo 			_	
>>DRB ID	М		9.2.3.33		_	
>>MN UL PDCP UP TNL Information	0		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs.	-	
>>DRB QoS	0		QoS Flow Level QoS Parameters 9.2.3.5		-	
>>secondary MN UL PDCP UP TNL Information	0		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of PDCP duplication.	-	
>>UL Configuration	0		9.2.3.75	Information about UL usage in the S-NG- RAN node.	_	
>>PDCP Duplication Configuration	0		9.2.3.86		-	
>>Duplication Activation	0		9.2.3.71		_	
>>QoS Flows Mapped To DRB List		01		Overwriting the existing QoS Flow List	_	
>>>QoS Flows Mapped To DRB Item		1 <maxnoo f QoS Flows&gt;</maxnoo 			-	

>>>QoS Flow	М		9.2.3.10		_	
Identifier						
>>>QoS Flow	M		9.2.3.5		1	
Level QoS						
Parameters						
>>>QoS Flow	0		9.2.3.79		_	
Mapping						
Indication		0.4			\/50	
>>Additional		01			YES	Ignore
PDCP Duplication TNL List						
>>>Additional		1				
PDCP		1 <maxnoo< td=""><td></td><td></td><td>_</td><td></td></maxnoo<>			_	
Duplication TNL		fAddition				
Item		alPDCPD				
110111		uplication				
		TNL>				
>>>Additional	M		UP Transport	M-NG-RAN	-	
PDCP			Parameters 9.2.3.76	node		
Duplication UP				endpoint(s) of a		
TNL Information				DRB's Xn		
				transport bearer		
				at its PDCP		
				resource. For		
				delivery of UL		
				PDUs in case of		
				additional PDCP		
s DLC Duplication	0		9.2.3.111	duplication.		
>>RLC Duplication Information	١٠		9.2.3.111		_	
DRBs To Be	0		DRB List with Cause		_	
Released List			9.2.1.28		_	
IVEIGASEU LISI	L		3.2.1.20	1		

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.
maxnoofAdditionalPDCPDuplicationTN L	Maximum no. of additional PDCP Duplication TNL. Value is 2.

# 9.2.1.12 PDU Session Resource Modification Response Info – MN terminated

This IE contains the PDU session resource related result of an M-NG-RAN node initiated modification of DRBs configured with an MN terminated bearer option.

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DRBs Admitted to be Setup or Modified List		1			_	
>DRBs Admitted to be Setup or Modified Item		1 <maxnoo fDRBs&gt;</maxnoo 			_	
>>DRB ID	M		9.2.3.33		_	
>>SN DL SCG UP TNL Information	0		UP Transport Parameters 9.2.3.76	S-NG-RAN node GTP-U tunnel endpoint(s) of the DRB's Xn transport at its Lower Layer SCG resource. For delivery of DL PDUs.	_	
>>secondary SN DL SCG UP TNL Information	0		UP Transport Parameters 9.2.3.76	S-NG-RAN node GTP-U tunnel endpoint(s) of the DRB's Xn transport at its Lower Layer SCG resource. For delivery of DL PDUs in case of PDCP duplication.	_	
>>LCID	0		9.2.3.70	LCID or LCID for split secondary path for fallback to split bearer for primary path if PDCP duplication is applied	-	
>>Additional PDCP Duplication TNL List		01			YES	Ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoo fAddition aIPDCPD uplication TNL&gt;</maxnoo 			-	
>>>>Additional PDCP Duplication UP TNL Information	M		UP Transport Parameters 9.2.3.76	S-NG-RAN node GTP-U tunnel endpoint(s) of the DRB's Xn transport at its Lower Layer SCG resource. For delivery of DL PDUs in case of additional PDCP duplication.	-	
DRBs Released List	0		DRB List 9.2.1.29		_	
DRBs Not Admitted To Be Setup or Modified List	0		DRB List with Cause 9.2.1.28		_	

Range bound	Explanation			
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.			
maxnoofAdditionalPDCPDuplicationTNL	Maximum no, of additional PDCP Duplication TNL, Value is 2.			

# 9.2.1.13 UE Context Information – Retrieve UE Context Response

This IE contains the UE context information within the RETRIEVE UE CONTEXT RESPONSE message.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
NG-C UE associated Signalling reference	М		AMF UE NGAP ID 9.2.3.26	Allocated at the AMF on the old NG-C connection.	-	,
Signalling TNL Association Address at source NG-C side	M		CP Transport Layer Information 9.2.3.31	This IE indicates the AMF's IP address of the SCTP association used at the source NG-C interface instance.  Note: If no UE TNLA binding exists at the source NG-RAN node, the source NG-RAN node indicates the TNL association address it would have selected if it would have had to create a UE TNLA binding.	-	
UE Security Capabilities	M		9.2.3.49		_	
AS Security Information	M		9.2.3.50		_	
UE Aggregate Maximum Bit Rate	M		9.2.3.17		_	
PDU Session Resources To Be Setup List	M		9.2.1.1		_	
RRC Context	M		OCTET STRING	Includes the HandoverPreparationInfo rmation message as defined in subclause 11.2.2 of TS 38.331[10] if the old and new serving NG-RAN nodes are gNBs. Includes either the HandoverPreparationInfo rmation message as defined in subclause 10.2.2 of TS 36.331 [14] or the HandoverPreparationInfo rmation-NB message as defined in subclause 10.6.2 of TS 36.331 [14], if the old and new serving NG-RAN nodes are ngeNBs.	_	
Mobility Restriction List	0		9.2.3.53		_	
Index to RAT/Frequency Selection Priority	0		9.2.3.23		-	
5GC Mobility Restriction List Container	0		9.2.3.100		YES	ignore
NR UE Sidelink Aggregate Maximum Bit Rate	0		9.2.3.107	This IE applies only if the UE is authorized for NR V2X services.	YES	ignore
LTE UE Sidelink Aggregate Maximum Bit Rate	0		9.2.3.108	This IE applies only if the UE is authorized for LTE V2X services.	YES	Ignore
UE Radio Capability ID	0		9.2.3.138		YES	reject

# 9.2.1.14 DRBs Subject To Status Transfer List

This IE contains a list of DRBs containing information about PDCP SN status.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DRBs Subject To Status Transfer Item		1 <maxnoof DRBs&gt;</maxnoof 				
>DRB ID	M		9.2.3.33		_	
>CHOICE PDCP Status Transfer UL >>12 bits	М				_	
>>>Receive Status Of PDCP SDU	0		BIT STRING (1 2048)	The IE is used in case of 12-bit long PDCP-SN. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The Nth bit indicates the status of the UL PDCP SDU in position (N + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN).  0: PDCP SDU has not been received. 1: PDCP SDU has been	_	
>>>UL COUNT Value	M		COUNT Value for PDCP SN Length 12 9.2.3.36	received correctly.  PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 12-bit long PDCP-SN	_	
>> 18 bits			3.2.0.00	or 12 bit long 1 bor on		
>>>Receive Status Of PDCP SDU	O		BIT STRING (1 131072)	The IE is used in case of 18-bit long PDCP-SN. The first bit indicates the status of the SDU after the First Missing UL PDCP SDU. The Nth bit indicates the status of the UL PDCP SDU in position (N + First Missing SDU Number) modulo (1 + the maximum value of the PDCP-SN).  0: PDCP SDU has not been received. 1: PDCP SDU has been received correctly.	_	
>>>UL COUNT Value	М		COUNT Value for PDCP SN Length 18 9.2.3.37	PDCP-SN and Hyper Frame Number of the first missing UL SDU in case of 18-bit long PDCP-SN	-	
>CHOICE PDCP Status Transfer DL >>12 bits	М			Ĭ	-	
22 12 DIG	L	l	l			<u> </u>

>>>DL COUNT Value	M	COUNT Value for PDCP SN Length 12 9.2.3.36	PDCP-SN and Hyper Frame Number that the target NG-RAN node (handover) or the NG- RAN node to which the DRB context is transferred (dual connectivity) should assign for the next DL SDU not having an SN yet in case of 12-bit long PDCP-SN.	_	
>>18 bits >>>DL COUNT	M	COUNT Value	PDCP-SN and Hyper		
Value	IVI	for PDCP SN Length 18 9.2.3.37	Frame Number that the target NG-RAN node (handover) or the NG-RAN node to which the DRB context is transferred (dual connectivity) should assign for the next DL SDU not having an SN yet in case of 18-bit long PDCP-SN.	1	
>Old QoS Flow List - UL End Marker expected	0	QoS Flow List 9.2.1.4a	This IE is included to be used for indicating that the source NG-RAN node has initiated QoS flow remapping and has not yet received SDAP end markers, as described in TS 38.300 [8].	YES	reject

Range bound	Explanation		
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.		

# 9.2.1.15 DRB to QoS Flow Mapping List

This IE contains a list of DRBs containing information about the mapped QoS flows.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DRBs to QoS Flow Mapping Item		1 <maxnoof DRBs&gt;</maxnoof 			I	
>DRB ID	M		9.2.3.33		1	
>QoS Flows List		1			1	
>>QoS Flow Item		1 <maxno ofQoSFlow s&gt;</maxno 			I	
>>>QoS Flow Identifier	М		9.2.3.10		_	
>>>QoS Flow Mapping Indication	0		9.2.3.79		ı	
>RLC Mode	0		9.2.3.28	Indicates the RLC mode for PDCP transfer between M-NG-RAN node and S-NG-RAN node.	_	
>DAPS Request Information	0		9.2.1.33		YES	ignore

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

## 9.2.1.16 Data Forwarding Info from target NG-RAN node

This IE contains TNL information for the establishment of data forwarding tunnels towards the target NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flows Accepted For Data Forwarding List		1		
>QoS Flows Accepted For Data Forwarding Item		1 <maxnoof QoSFlows&gt;</maxnoof 		
>>QoS Flow Identifier	М		9.2.3.10	
PDU Session level DL data forwarding UP TNL Information	0		UP Transport Layer Information 9.2.3.30	To forward NG-U DL SDAP SDUs to the target node.
PDU Session level UL data forwarding UP TNL Information	0		UP Transport Layer Information 9.2.3.30	To forward NG-U UL SDAP SDU to the target node.
Data Forwarding Response DRB List		01		
>Data Forwarding Response DRB Item		1 <maxnoof DRBs&gt;</maxnoof 		
>>DRB ID	M		9.2.3.33	
>>DL Forwarding UP TNL Information	0		UP Transport Layer Information 9.2.3.30	
>>UL Forwarding UP TNL Information	0		UP Transport Layer Information 9.2.3.30	

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs. Value is 32.
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

# 9.2.1.17 Data Forwarding and Offloading Info from source NG-RAN node

This IE contains information from a source NG-RAN node regarding per QoS flow proposed data forwarding and offloading.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
QoS Flows To Be		1			_	
Forwarded List						
>QoS Flows To Be		1			_	
Forwarded Item		<maxnoo fQoSFlo ws&gt;</maxnoo 				
>>QoS Flow Identifier	M		9.2.3.10		_	
>>DL Forwarding	M		9.2.3.34		_	
>>UL Forwarding	M		9.2.3.90	This IE shall be ignored.	_	
>>UL Forwarding Proposal	0		9.2.3.95		YES	ignore
Source DRB to QoS Flow Mapping List	0		DRB to QoS Flow Mapping List 9.2.1.15	Usage of the DRB IDs indicated in the Source DRB to QoS Flow Mapping List IE is specified in TS 37.340 [8].	_	

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

### 9.2.1.18 PDU Session Resource Change Required Info – SN terminated

This IE contains information for the S-NG-RAN node initiated request for an S-NG-RAN node change related to a PDU session resource with DRBs configured with an SN terminated bearer option.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Data Forwarding and Offloading Info from	0		9.2.1.17	
source NG-RAN node				

### 9.2.1.19 PDU Session Resource Change Confirm Info – SN terminated

This IE contains information for the M-NG-RAN node's confirmation of an S-NG-RAN node initiated request for an S-NG-RAN node change related to a PDU session resource with DRBs configured with an SN terminated bearer option.

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Data Forwarding Info from target NG-RAN node	0		9.2.1.16		_	
DRB IDs taken into use	0		DRB List 9.2.1.29	Indicating the DRB IDs taken into use by the target NG-RAN node, as specified in TS 37.340 [8].	YES	reject

## 9.2.1.20 PDU Session Resource Modification Required Info – SN terminated

This IE contains PDU session resource information of an S-NG-RAN node initiated modification request of DRBs configured with an SN terminated bearer option.

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DL NG-U UP TNL Information at NG-RAN	0		UP Transport Layer Information 9.2.3.30	S-NG-RAN node endpoint of the NG-U transport bearer. For delivery of DL PDUs.	-	, , , , , ,
QoS Flows To Be Released List	0		QoS Flow List with Cause 9.2.1.4	,	-	
Data Forwarding and Offloading Info from source NG-RAN node	0		9.2.1.17	This IE only applies to QoS flows included in the QoS FlowS To Be Released List IE.	-	
DRBs To Be Setup List		01			-	
>DRBs to Be Setup Item		1 <maxnoo fDRBs&gt;</maxnoo 			-	
>>DRB ID	M		9.2.3.33		-	
>>PDCP SN Length	0		9.2.3.63	Indicates the PDCP SN length of the DRB.	-	
>>SN UL PDCP UP TNL Information	M		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs.	-	
>>DRB QoS	M		QoS Flow Level QoS Parameters 9.2.3.5		-	
>>secondary SN UL PDCP UP TNL Information	О		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of PDCP Duplication.	F	
>>Duplication Activation	0		9.2.3.71	Information on the initial state of UL PDCP duplication. This IE is ignored if the RLC Duplication Information IE is present	-	
>>UL Configuration	0		9.2.3.75	Information about UL usage in the S-NG-RAN node.	_	
>>QoS Flows Mapped To DRB List		1			-	
>>>QoS Flows Mapped To DRB Item		1 <maxnoo fQoSFlo ws&gt;</maxnoo 			-	
>>>>QoS Flow Identifier	М		9.2.3.10		_	
>>>>MCG requested GBR QoS Flow Information	0		GBR QoS Flow Information 9.2.3.6	This IE contains GBR QoS Flow Information necessary for the MCG part.	-	
>>>QoS Flow Mapping Indication	0		9.2.3.79		-	
>>RLC Mode	М		9.2.3.28	Indicates the RLC mode at the assisting node.	-	
>>Additional PDCP Duplication TNL List		01			YES	Ignore

>>>Additional PDCP Duplication TNL Item		1 <maxnoo fAddition aIPDCPD uplication</maxnoo 			-	
>>>>Additional PDCP Duplication UP TNL Information	M	TNL>	UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of additional PDCP Duplication.	-	
>>RLC Duplication Information	0		9.2.3.111		-	
DRBs To Be Modified List		01			_	
>DRBs to Be Modified Item		1 <maxnoo fDRBs&gt;</maxnoo 			I	
>>DRB ID	M		9.2.3.33		_	
>>SN UL PDCP UP TNL Information	0		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs.	-	
>>DRB QoS	0		QoS Flow Level QoS Parameters 9.2.3.5		-	
>>secondary SN UL PDCP UP TNL Information	0		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of PDCP Duplication.	-	
>>UL Configuration	0		9.2.3.75	Information about UL usage in the S-NG-RAN node.	_	
>>PDCP Duplication Configuration	0		9.2.3.86		_	
>>Duplication Activation	0		9.2.3.71	This IE is ignored if the RLC Duplication Information IE is present.	-	
>>QoS Flows Mapped to DRB List		01		Overwriting the existing QoS Flow List	-	
>>>QoS Flows Mapped to DRB Item		1 <maxnoo fQoSFlo ws&gt;</maxnoo 			-	
>>>QoS Flow Identifier	М		9.2.3.10		_	
>>>MCG requested GBR QoS Flow Information	0		GBR QoS Flow Information 9.2.3.6	This IE contains GBR QoS Flow Information necessary for the MCG part.	-	
>>>QoS Flow Mapping Indication	0		9.2.3.79		-	
>>Additional PDCP Duplication TNL List		01			YES	Ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoo fAddition aIPDCPD uplication TNL&gt;</maxnoo 			-	

>>>>Additional PDCP Duplication UP TNL Information	М	UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint(s) of a DRB's Xn transport bearer at its PDCP resource. For delivery of UL PDUs in case of additional PDCP Duplication.	-	
>>RLC Duplication Information	0	9.2.3.111		_	
DRBs To Be Released List	0	DRB List with Cause 9.2.1.28		_	

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.
maxnoofQoSFlows	Maximum no. of QoS flows. Value is 64.
maxnoofAdditionalPDCPDuplicationTNL	Maximum no. of additional PDCP Duplication TNL. Value is 2.

## 9.2.1.21 PDU Session Resource Modification Confirm Info – SN terminated

This IE contains the PDU session resource related result of an S-NG-RAN node initiated modification of DRBs configured with an SN terminated bearer option.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
UL NG-U UP TNL Information at UPF	0		UP Transport Layer Information 9.2.3.30	UPF endpoint of the NG- U transport bearer. For delivery of UL PDUs	-	
DRBs Admitted to be Setup or Modified List		1			_	
>DRBs Admitted to be Setup or Modified Item		1 <maxnoo fDRBs&gt;</maxnoo 			-	
>>DRB ID	M		9.2.3.33		_	
>>MN DL CG UP TNL Information	0		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of the DRB's Xn transport at its Lower Layer CG resource. For delivery of DL PDUs.	_	
>>secondary MN DL CG UP TNL Information	0		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of the DRB's Xn transport at its Lower Layer CG resource. For delivery of DL PDUs at the case of PDCP duplication.	-	
>>LCID	0		9.2.3.70	LCID or LCID for split secondary path for fallback to split bearer for primary path if PDCP duplication is applied.	_	
>>Additional PDCP Duplication TNL List		01			YES	Ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoo fAddition aIPDCPD uplication TNL&gt;</maxnoo 			-	
>>>>Additional PDCP Duplication UP TNL Information	M		UP Transport Parameters 9.2.3.76	M-NG-RAN node endpoint(s) of the DRB's Xn transport at its Lower Layer CG resource. For delivery of DL PDUs at the case of additional PDCP duplication.	-	
DRBs Not Admitted To Be Setup or Modified List	0		DRB List with Cause 9.2.1.28	·	-	
Data Forwarding Info from target NG-RAN node	0		9.2.1.16	Forwarding Addresses for both, QoS flow and DRB level offloading.	_	
DRB IDs taken into use	0		DRB List 9.2.1.29	Indicating the DRB IDs taken into use by the target NG-RAN node, as specified in TS 37.340 [8].	YES	reject

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.
maxnoofQoSFlows	Maximum no. of QoS flows. Value is 64.
maxnoofAdditionalPDCPDuplicationTNL	Maximum no. of additional PDCP Duplication TNL. Value is 2.

## 9.2.1.22 PDU Session Resource Modification Required Info – MN terminated

This IE contains PDU session resource information of an S-NG-RAN node initiated modification request of DRBs configured with an MN terminated bearer option.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DRBs To Be Modified List	0				_	-
>DRBs To Be Modified Item		1 <maxn oofDRBs &gt;</maxn 			_	
>>DRB ID	М		9.2.3.33		_	
>>SN DL SCG UP TNL Information	M		UP Transport Layer Information 9.2.3.30	S-NG-RAN node endpoint of a DRB's Xn transport bearer. For delivery of DL PDUs.	-	
>>secondary SN DL SCG UP TNL Information	0		UP Transport Layer Information 9.2.3.30	S-NG-RAN node endpoint of a DRB's Xn transport bearer. For delivery of DL PDUs in case of PDCP Duplication	-	
>>LCID	0		9.2.3.70	LCID or LCID for split secondary path for fallback to split bearer for primary path if PDCP duplication is applied	-	
>>RLC Status	0		9.2.3.80		_	
>>Additional PDCP Duplication TNL List		01			YES	Ignore
>>>Additional PDCP Duplication TNL Item		1 <maxnoo fAddition aIPDCPD uplication TNL&gt;</maxnoo 			-	
>>>>Additional PDCP Duplication UP TNL Information	M		UP Transport Parameters 9.2.3.76	S-NG-RAN node endpoint of a DRB's Xn transport bearer. For delivery of DL PDUs in case of additional PDCP Duplication	-	
DRBs To Be Released List	0		DRB List with Cause 9.2.1.28		_	

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs. Value is 32.
maxnoofAdditionalPDCPDuplicationTNL	Maximum no. of additional PDCP Duplication TNL. Value is 2.

## 9.2.1.23 PDU Session Resource Modification Confirm Info – MN terminated

This IE contains the PDU session resource related result of an S-NG-RAN node initiated modification of DRBs configured with an MN terminated bearer option.

NOTE: In the current version of this specification, this IE has no content, apart from an extension container.

IE/Group Name	Presence	Range	IE type and reference	Semantics description

# 9.2.1.24 PDU Session List with data forwarding request info

This IE contains a list of PDU session related data forwarding request information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session List with data forwarding request info		1 <maxnoofpdu sessions&gt;</maxnoofpdu 		
>PDU Session ID	M		9.2.3.18	
>Data Forwarding and Offloading Info from source NG-RAN node	0		9.2.1.17	
>DRBs To Be Released List	0		DRB to QoS Flow Mapping List 9.2.1.15	Indicate the QoS flow mapping and RLC mode of the released DRBs.

Range bound	Explanation
maxnoofPDUsessions	Maximum no. of PDU sessions. Value is 256.

## 9.2.1.25 PDU Session List with data forwarding info from the target node

This IE contains a list of PDU session related data forwarding information from the target NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
PDU Session List with data forwarding from the target node		1 <maxnoo fPDUses sions&gt;</maxnoo 			_	
>PDU Session ID	M		9.2.3.18		_	
>Data Forwarding Info from target NG- RAN node	0		9.2.1.16		-	
>DRB IDs taken into use	0		DRB List 9.2.1.29	Indicating the DRB IDs taken into use by the target NG-RAN node, as specified in TS 37.340 [8].	YES	reject

Range bound	Explanation
maxnoofPDUsessions	Maximum no. of PDU sessions. Value is 256.

### 9.2.1.26 PDU Session List with Cause

This IE contains a list of PDU Sessions, a cause may accompany each list element.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session List with Cause		1 <maxnoofpd Usessions&gt;</maxnoofpd 		
>PDU Session ID	M		9.2.3.18	
>Cause	0		9.2.3.2	

Range bound	Explanation		
maxnoofPDUsessions	Maximum no. of PDU sessions. Value is 256		

#### 9.2.1.27 PDU Session List

This IE contains a list of PDU sessions.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session List		1 <maxnoofpd Usessions&gt;</maxnoofpd 		
>PDU Session ID	M		9.2.3.18	

Range bound	Explanation
maxnoofPDUsessions	Maximum no. of PDU sessions. Value is 256.

## 9.2.1.28 DRB List with Cause

This IE contains a list of DRBs, a cause may accompany each list element.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DRB List with Cause		1 <maxnoof DRBs&gt;</maxnoof 		
>DRB ID	M		9.2.3.33	
>Cause	M		9.2.3.2	
>RLC Mode	0		9.2.3.28	Indicates the RLC mode for PDCP transfer between M-NG-RAN node and S-NG-RAN node.

Range bound	Explanation
maxnoofDRBs	Maximum no. of PDU sessions. Value is 32.

## 9.2.1.29 DRB List

This IE contains a list of DRBs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DRB List		1 <maxnoofdr Bs&gt;</maxnoofdr 		
>DRB ID	М		9.2.3.33	

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs. Value is 32.

# 9.2.1.30 PDU Session Resource Setup Complete Info – SN terminated

This IE contains information to complete the establishment of Xn-U bearers for SN terminated bearers.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
DRBs To Be Setup List		1			ı	_
>DRBs to Be Setup		1			_	_
Item		<maxnoof DRBs&gt;</maxnoof 				
>>DRB ID	M		9.2.3.33		-	_
>>MN DL Xn UP TNL Information	М		UP Transport Layer Information 9.2.3.30	M-NG-RAN node endpoint of a DRB's Xn-U transport. For delivery of DL PDUs.		
>>Secondary MN DL Xn UP TNL Information	0		UP Transport Layer Information 9.2.3.30	M-NG-RAN node endpoint of a DRB's Xn-U transport. For delivery of DL PDUs in case of PDCP Duplication.	YES	ignore

Range bound	Explanation
maxnoofDRBs	Maximum no. of DRBs allowed towards one UE. Value is 32.

# 9.2.1.31 Secondary Data Forwarding Info from target NG-RAN node List

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Secondary Data		1 <maxnoofm< td=""><td></td><td></td></maxnoofm<>		
Forwarding Info from		ultiConnectivity		
target NG-RAN node Item		MinusOne>		
> Secondary Data	M		Data Forwarding	
Forwarding Info from			Info from target NG-	
target NG-RAN node			RAN node	
_			9.2.1.16	

Range bound	Explanation
maxnoofMultiConnectivityMinusOne	Maximum no. of MultiConnectivity minus one. Value is 3

# 9.2.1.32 Additional UL NG-U UP TNL Information at UPF List

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Additional UL NG-U UP		1 <maxnoofm< th=""><th></th><th></th></maxnoofm<>		
TNL Information at UPF		ultiConnectivity		
Item		MinusOne>		
> Additional UL NG-U UP	M		UP Transport Layer	
TNL Information at UPF			Information	
			9.2.3.30	

Range bound	Explanation
maxnoofMultiConnectivityMinusOne	Maximum no. of MultiConnectivity minus one. Value is 3

# 9.2.1.33 DAPS Request Information

The DAPS Indicator IE indicates that the source NG-RAN node requests a DAPS HO for the concerned DRB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DAPS Indicator	M		ENUMERATED (DAPS HO required,)	Indicates that DAPS HO
				is requested

# 9.2.1.34 DAPS Response Information

The DAPS Response Indicator IE indicates the per DRB response to a requested DAPS Handover.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DAPS Response Indicator	M		ENUMERATED (DAPS HO accepted, DAPS HO not accepted,)	Indicates that the DAPS Handover is accepted or not.

# 9.2.2 NG-RAN Node and Cell Configuration related IE definitions

# 9.2.2.1 Global gNB ID

This IE is used to globally identify a gNB (see TS 38.300 [9]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.2.4	
CHOICE gNB ID	M			
>gNB ID				
>>gNB ID	М		BIT STRING (SIZE(2232))	Equal to the leftmost bits of the NR Cell Identity IE contained in the NR CGI IE of each cell served by the gNB.

# 9.2.2.2 Global ng-eNB ID

This IE is used to globally identify an ng-eNB (see TS 38.300 [9]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.2.4	
CHOICE ng-eNB ID	M			
>Macro ng-eNB ID				
>>Macro ng-eNB ID	М		BIT STRING (SIZE(20))	Equal to the 20 leftmost bits of the <i>E-UTRA Cell Identity</i> IE contained in the <i>E-UTRA CGI</i> IE of each cell served by the ng-eNB.
>Short Macro ng-eNB ID				
>>Short Macro ng-eNB ID	М		BIT STRING (SIZE(18))	Equal to the 18 leftmost bits of the <i>E-UTRA Cell Identity</i> IE contained in the <i>E-UTRA CGI</i> IE of each cell served by the ng-eNB.
>Long Macro ng-eNB ID				
>>Long Macro ng-eNB ID	М		BIT STRING (SIZE(21))	Equal to the 21 leftmost bits of the <i>E-UTRA Cell Identity</i> IE contained in the <i>E-UTRA CGI</i> IE of each cell served by the ng-eNB.

# 9.2.2.3 Global NG-RAN Node ID

This IE is used to globally identify an NG-RAN node (see TS 38.300 [9]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE NG-RAN node	M			
>gNB				
>>Global gNB ID	M		9.2.2.1	
>ng-eNB				
>>Global ng-eNB ID	М		9.2.2.2	

# 9.2.2.4 PLMN Identity

This IE indicates the PLMN Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		OCTET STRING (SIZE(3))	Digits 0 to 9 encoded 0000 to 1001, 1111 used as filler digit.
				Two digits per octet: - bits 4 to 1 of octet n encoding digit 2n-1 - bits 8 to 5 of octet n encoding digit 2n
				PLMN Identity consists of 3 digits from MCC followed by either: - a filler digit plus 2 digits from MNC (in case of 2 digit MNC) or - 3 digits from MNC (in case of 3 digit MNC).

# 9.2.2.5 TAC

This information element is used to uniquely identify a Tracking Area within a PLMN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TAC	М		OCTET STRING (SIZE (3))	

#### 9.2.2.6 RAN Area Code

This IE defines the RAN Area Code.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RANAC	M		INTEGER (0255)	

## 9.2.2.7 NR CGI

This IE is used to globally identify an NR cell (see TS 38.300 [9]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.2.4	
NR Cell Identity	M		BIT STRING (SIZE(36))	The leftmost bits of the NR Cell Identity IE correspond to the gNB ID (defined in subclause 9.2.2.1).

#### 9.2.2.8 E-UTRA CGI

This IE is used to globally identify an E-UTRA cell (see TS 36.300 [12]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.2.4	
E-UTRA Cell Identity	M		BIT STRING (SIZE(28))	The leftmost bits of the <i>E-UTRA Cell Identity</i> IE correspond to the ng-eNB ID (defined in subclause 9.2.2.2).

# 9.2.2.9 NG-RAN Cell Identity

This IE contains either an NR or an E-UTRA Cell Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE Cell Identifier	M			
>NR				
>>NR Cell Identity	М		BIT STRING (SIZE(36))	The leftmost bits of the NR Cell Identity IE correspond to the gNB ID (defined in subclause 9.2.2.1).
>E-UTRA				
>>E-UTRA Cell Identity	M		BIT STRING (SIZE(28))	The leftmost bits of the <i>E-UTRA Cell Identity</i> IE correspond to the ngeNB ID (defined in subclause 9.2.2.8).

## 9.2.2.10 NG-RAN Cell PCI

This IE defines physical cell ID of a cell served by an NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE RAT	M			
>nr				
>>NR PCI	M		INTEGER (01007,)	NR Physical Cell ID
>e-utra				
>>E-UTRA PCI	М		INTEGER (0503,)	E-UTRA Physical Cell ID

## 9.2.2.11 Served Cell Information NR

This IE contains cell configuration information of an NR cell that a neighbouring NG-RAN node may need for the Xn AP interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
NR-PCI	М		INTEGER (01007,)	NR Physical Cell ID	_	
NR CGI	М		9.2.2.7		_	
TAC	М		9.2.2.5	Tracking Area Code	_	
RANAC	0		RAN Area Code 9.2.2.6	<u> </u>	_	
Broadcast PLMNs		1 <maxnoof BPLMNs&gt;</maxnoof 		Broadcast PLMNs in SIB1 associated to the NR Cell Identity in the NR CGI IE.	-	
>PLMN Identity	M		9.2.2.4		-	
CHOICE NR-Mode-Info >FDD	M				_	
>rบบ >> <b>FDD Info</b>		1				
>>>UL NR	M	I	ND Fraguency		_	
Frequency Info	IVI		NR Frequency Info 9.2.2.19		_	
>>>DL NR Frequency Info	М		NR Frequency Info 9.2.2.19		-	
>>>UL Transmission Bandwidth	М		NR Transmission Bandwidth 9.2.2.20		-	
>>>DL Transmission Bandwidth	M		NR Transmission Bandwidth 9.2.2.20		-	
>>>UL Carrier List	0		NR Carrier List 9.2.2.63	If included, the <i>UL</i> Transmission  Bandwidth IE shall be ignored.	YES	ignore
>>>DL Carrier List	0		NR Carrier List 9.2.2.63	If included, the <i>DL</i> Transmission  Bandwidth IE shall be ignored.	YES	ignore
>TDD						
>>TDD Info		1			_	
>>>Frequency Info	M		NR Frequency Info 9.2.2.19		-	
>>>Transmission Bandwidth	M		NR Transmission Bandwidth 9.2.2.20		-	
>>>Intended TDD DL-UL Configuration NR	0		9.2.2.40		YES	ignore
>>>TDD UL-DL Configuration Common NR	0		OCTET STRING	The tdd-UL-DL- ConfigurationCommo n as defined in TS 38.331 [10]	YES	ignore
>>>Carrier List	0		NR Carrier List 9.2.2.63	If included, the Transmission Bandwidth IE shall be ignored.	YES	ignore
Measurement Timing Configuration	М		OCTET STRING	Contains the MeasurementTiming Configuration internode message for the served cell, as defined in TS 38.331 [10].	-	
Connectivity Support	М		9.2.2.28		_	

Broadcast PLMN Identity Info List NR		0 <maxnoof BPLMNs&gt;</maxnoof 		This IE corresponds to the <i>PLMIN-IdentityInfoList</i> IE in <i>SIB1</i> as specified in TS 38.331 [8]. All PLMN Identities and associated information contained in the <i>PLMIN-IdentityInfoList</i> IE are included and provided in the same order as broadcast in SIB1.	YES	ignore
>Broadcast PLMNs		1 <maxnoof BPLMNs&gt;</maxnoof 		Broadcast PLMNs in SIB1 associated to the NR Cell Identity IE.	_	
>>PLMN Identity	M		9.2.2.4		-	
>TAC	М		9.2.2.5		_	
>NR Cell Identity	M		BIT STRING (SIZE(36))		-	
>RANAC	0		RAN Area Code 9.2.2.6		-	
>NPN Broadcast Information	0		9.2.2.71	If this IE is included the content of the Broadcast PLMNs IE in the Broadcast PLMN Identity Info List NR IE is ignored.	YES	reject
NPN Broadcast Information	0		9.2.2.71	If this IE is included the content of the Broadcast PLMNs IE in the top Served Cell Information NR IE is ignored.	YES	reject
SSB Positions In Burst	0		9.2.2.64		YES	ignore
NR Cell PRACH Configuration	0		OCTET STRING	Containing 9.3.1.139 NR Cell PRACH Configuration as of TS 38.473 [41].	YES	ignore
CSI-RS Transmission Indication	0		ENUMERATED {activated, deactivated,}	This IE indicates the CSI-RS transmission status of the given cell.	YES	ignore

Range bound	Explanation
maxnoofBPLMNs	Maximum no. of broadcast PLMNs by a cell. Value is 12.

# 9.2.2.12 Served Cell Information E-UTRA

This IE contains cell configuration information of an E-UTRA cell that a neighbour NG-RAN node may need for the Xn AP interface.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
E-UTRA PCI	М		INTEGER (0503,)	E-UTRA Physical Cell ID	_	
ECGI	М		E-UTRA CGI 9.2.2.8	302	_	
TAC	М		9.2.2.5	Tracking Area Code	_	
RANAC	O		RAN Area Code 9.2.2.6	a	_	
Broadcast PLMNs		1 <maxnoof BPLMNs&gt;</maxnoof 		Broadcast PLMNs in SIB1 associated to the E-UTRA Cell Identity in the ECGI IE.  NOTE: In this version of the specification, it is possible to broadcast only up to 6 PLMN IDs.	-	
>PLMN Identity	М		9.2.2.4		_	
CHOICE <i>E-UTRA-Mode-</i> Info	М				_	
>FDD					_	
>>FDD Info		1			_	
>>>UL EARFCN	M		E-UTRA ARFCN 9.2.2.21	Corresponds to Nul in TS 36.104 [25] for E-UTRA operating bands for which it is defined; ignored for E-UTRA operating bands for which Nul is not defined	_	
>>>DL EARFCN	М		E-UTRA ARFCN 9.2.2.21	Corresponds to N <sub>DL</sub> in TS 36.104 [25]	_	
>>>UL E-UTRA Transmission Bandwidth	М		E-UTRA Transmission Bandwidth 9.2.2.22	Same as DL Transmission Bandwidth in this release; ignored in case UL EARFCN value is ignored	-	
>>>DL E-UTRA Transmission Bandwidth	M		E-UTRA Transmission Bandwidth 9.2.2.22		-	
>>>Offset of NB-IoT Channel Number to DL EARFCN	0		Offset of NB-IoT Channel Number to EARFCN 9.2.2.47	Corresponds to M <sub>DL</sub> in TS 36.104 [25]	YES	reject
>>>Offset of NB-IoT Channel Number to UL EARFCN	0		Offset of NB-IoT Channel Number to EARFCN 9.2.2.47	Corresponds to MuL in TS 36.104 [25]	YES	reject
>TDD					_	
>>TDD Info		1			_	
>>>EARFCN	М		E-UTRA ARFCN 9.2.2.21	Corresponds to N <sub>DL</sub> /N <sub>UL</sub> in TS 36.104 [25]	_	
>>>E-UTRA Transmission Bandwidth	М		9.2.2.22		_	

S reject
O Toject
S reject
3 Tejeci
'
·
·
•
•
,
•

Protected E-UTRA	0		9.2.2.29	This IE indicates	_	
Resource Indication			0.2.2.20	which E-UTRA		
resource maleation				control/reference		
				signal resources are		
				protected and are		
				not subject to E-		
				UTRA - NR Cell		
				Resource		
				Coordination.		
Broadcast PLMN Identity		0 <maxnoof< th=""><th></th><th>This IE corresponds</th><th>YES</th><th>ignoro</th></maxnoof<>		This IE corresponds	YES	ignoro
Info List E-UTRA		EUTRABPL		to the	153	ignore
IIIIO LISI E-OTKA		MNs>		cellAccessRelatedIn		
		IVII VS >		foList-5GC IE in		
				SIB1 as specified in		
				TS 36.331 [14]. All PLMN Identities and		
				associated		
				information		
				contained in the		
				cellAccessRelatedIn		
				foList-5GC IE are		
				included and		
				provided in the		
				same order as		
				broadcast in SIB1.		
>Broadcast PLMNs		1 <maxnoof< td=""><td></td><td>Broadcast PLMNs in</td><td>_</td><td></td></maxnoof<>		Broadcast PLMNs in	_	
		EUTRABPL		SIB1 associated to		
		MNs>		the E-UTRA Cell		
				Identity IE.		
>>PLMN Identity	M		9.2.2.4		_	
>TAC	M		9.2.2.5		_	
>E-UTRA Cell Identity	M		BIT STRING		_	
			(SIZE(28))			
>RANAC	0		RAN Area Code		_	
			9.2.2.6			

Range bound	Explanation
maxnoofBPLMNs	Maximum no. of broadcast PLMNs by a cell. The value is 12.
maxnoofMBSFN	Maximum no. of MBSFN frame allocation with different offset. Value is 8.
maxnoofEUTRABPLMNs	Maximum no. of PLMN lds.broadcast in an E-UTRA cell. Value is 6.

# 9.2.2.13 Neighbour Information NR

This IE contains cell configuration information of NR cells that a neighbour NG-RAN node may need to properly operate its own served cells.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Neighbour Information NR		1 <maxnoofneighbours></maxnoofneighbours>		
>NRPCI	М		INTEGER (01007)	NR Physical Cell ID
>NR CGI	М		9.2.2.7	
>TAC	M		9.2.2.5	Tracking Area Code
>RANAC	0		RAN Area Code	-
			9.2.2.6	
>CHOICE NR-Mode-Info	М		0.2.2.0	
>>FDD				
>>>FDD Info		1		
>>>>UL NR FreqInfo	М		NR Frequency Info 9.2.2.19	
>>>DL NR FreqInfo	M		NR Frequency Info 9.2.2.19	
>>TDD				
>>>TDD Info		1		
>>>>NR FreqInfo	M		NR ARFCN Frequency Info 9.2.2.19	
>Connectivity Support	M		9.2.2.28	
>Measurement Timing Configuration	M		OCTET STRING	Contains the MeasurementTimingConfiguration inter-node message for the neighbour cell, as defined in TS 38.331 [10].

Range bound	Explanation
maxnoofNeighbours	Maximum no. of neighbour cells associated to a given served cell.  Value is 1024.

# 9.2.2.14 Neighbour Information E-UTRA

This IE contains cell configuration information of E-UTRA cells that a neighbour NG-RAN node may need to properly operate its own served cells.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
E-UTRA Neighbour Information E-UTRA		1 <maxnoofneighbours></maxnoofneighbours>		
>E-UTRA PCI	M		INTEGER (0503,)	E-UTRA Physical Cell Identifier of the neighbour cell
>ECGI	M		E-UTRA CGI 9.2.2.8	
>EARFCN	M		E-UTRA ARFCN 9.2.2.21	DL EARFCN for FDD or EARFCN for TDD
>TAC	M		9.2.2.5	Tracking Area Code
>RANAC	0		RAN Area Code 9.2.2.6	

Range bound	Explanation
maxnoofNeighbours	Maximum no. of neighbour cells associated to a given served cell.  Value is 1024.

# 9.2.2.15 Served Cells To Update NR

This IE contains updated configuration information for served NR cells exchanged between NG-RAN nodes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Served Cells NR To Add		0 < maxnoofCell sinNG-RAN node>		List of added cells served by the NG- RAN node.	GLOBAL	reject
>Served Cell Information NR	М		9.2.2.11		_	
>Neighbour Information NR	0		9.2.2.13		_	
>Neighbour Information E-UTRA	0		9.2.2.14		_	
Served Cells To Modify NR		0 < maxnoofCell sinNG-RAN node>		List of modified cells served by the NG- RAN node.	YES	reject
>Old NR CGI	М		NR CGI 9.2.2.7		_	
>Served Cell Information NR	М		9.2.2.11		_	
>Neighbour Information NR	0		9.2.2.13		_	
>Neighbour Information E-UTRA	0		9.2.2.14		_	
>Deactivation Indication	0		ENUMERATED (deactivated,)	Indicates that the concerned cell is switched off for energy saving reasons.	_	
Served Cells To Delete NR		0 < maxnooffCell sinNG-RAN node >		List of deleted cells served by the NG- RAN node.	YES	reject
>Old NR-CGI	М		NR CGI 9.2.2.7		_	

Range bound	Explanation
maxnoofCellsinNG-RAN node	Maximum no. cells that can be served by a NG-RAN node. Value is
	16384.

# 9.2.2.16 Served Cells to Update E-UTRA

This IE contains updated configuration information for served E-UTRA cells exchanged between NG-RAN nodes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Served Cells To Add E- UTRA		0 < maxnoofCell sinNG-RAN node>		List of added cells served by the NG-RAN node.	YES	reject
>Served Cell Information E-UTRA	М		9.2.2.12		_	
>Neighbour Information NR	0		9.2.2.13		_	
>Neighbour Information E-UTRA	0		9.2.2.14		_	
Served Cells To Modify E-UTRA		0 < maxnoofCell sinNG-RAN node>		List of modified cells served by the NG-RAN node.	YES	reject
>Old ECGI	М		E-UTRA CGI 9.2.2.8		_	
>Served Cell Information E-UTRA	М		9.2.2.12		_	
>Neighbour Information NR	0		9.2.2.13		_	
>Neighbour Information E-UTRA	0		9.2.2.14		_	
>Deactivation Indication	0		ENUMERATED (deactivated,)	Indicates that the concerned cell is switched off for energy saving reasons.	-	
Served Cells To Delete E-UTRA		0 < maxnoofCell sinNG-RAN node >		List of deleted cells served by the NG-RAN node.	YES	reject
>Old ECGI	М		E-UTRA CGI 9.2.2.8		_	

Range bound	Explanation
maxnoofCellsinNG-RAN node	Maximum no. cells that can be served by a NG-RAN node. Value is 16384.

# 9.2.2.17 Cell Assistance Information NR

The Cell Assistance Information IE is used by the NG-RAN node to request information about NR cells.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cell Assistance	M			
Туре				
>Limited NR List				
>>List of Requested NR Cells		1 < maxnoofCellsin NG-RAN node>		Included when the NG-RAN node requests a limited list of served NR cells.
>>>NR CGI	M		9.2.2.7	NR cell for which served NR cell information is requested.
>Full NR List				
>>Complete Information Request Indicator	М		ENUMERATED (allServedCellsNR, )	Included when the NG-RAN node requests the complete list of served cells for a gNB

Range bound	Explanation
maxnoofCellsinNG-RAN node	Maximum no. cells that can be served by a NG-RAN node. Value is 16384.

## 9.2.2.18 SUL Information

This IE contains information about the SUL carrier.

IE/Group Name	Presenc e	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
SUL Frequency Info	М		INTEGER (0maxNRARFC N)	RF Reference Frequency as defined in TS 38.104 [24] section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the SUL carrier. Its lowest subcarrier is also known as Point A.	-	
SUL Transmission Bandwidth	М		NR Transmission Bandwidth 9.2.2.20		-	
Carrier List	0		NR Carrier List 9.2.2.63	If included, the SUL Transmission Bandwidth IE shall be ignored.	YES	ignore
Frequency Shift 7p5khz	0		ENUMERATED (false, true,)	Indicate whether the value of $\Delta_{\text{shift}}$ is 0kHz or 7.5kHz when calculating F <sub>REF,shift</sub> as defined in Section 5.4.2.1 of TS 38.104 [24].	YES	ignore

Range bound	Explanation
maxNRARFCN	Maximum value of NRARFCNs. Value is 3279165.

# 9.2.2.19 NR Frequency Info

The NR Frequency Info defines the carrier frequency and bands used in a cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD or for SUL carrier.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description	Criticality	Assigned Criticality
NR ARFCN	М		INTEGER (0 maxNRARFCN)	RF Reference Frequency as defined in TS 38.104 [24], section 5.4.2.1. The frequency provided in this IE identifies the absolute frequency position of the reference resource block (Common RB 0) of the carrier. Its lowest subcarrier is also known as Point A.	-	
SUL Information	0		9.2.2.18		_	
NR Frequency Band List		1			_	
>NR Frequency Band Item		1 <max noofNR CellBan ds&gt;</max 				
>>NR Frequency Band	М		INTEGER (1 1024,)	Primary NR Operating Band as defined in TS 38.104 [24], section 5.4.2.3. The value 1 corresponds e n1, value 2 corresponds to NR operating band n2, etc.		
>>Supported SUL band List		0 <max noofNR CellBan ds&gt;</max 				
>>>Supported SUL band Item	M		INTEGER (1 1024,)	Supplementary NR Operating Band as defined in TS 38.104 [24] section 5.4.2.3 that can be used for SUL duplex mode as per TS 38.101-1 table 5.2-1. The value 80 corresponds to NR operating band n80, value 81 corresponds to NR operating band n81, etc.		
Frequency Shift 7p5khz	0		ENUMERATED (false, true,)	Indicate whether the value of $\Delta_{\text{shift}}$ is 0kHz or 7.5kHz when calculating F <sub>REF,shift</sub> as defined in Section 5.4.2.1 of TS 38.104 [24].	YES	ignore

Range bound	Explanation
maxNRARFCN	Maximum value of NRARFCNs. Value is 3279165.
maxnoofNRCellBands	Maximum no. of frequency bands supported for a NR cell. Value is 32.

# 9.2.2.20 NR Transmission Bandwidth

The NR Transmission Bandwidth IE is used to indicate either the UL or the DL transmission bandwidth.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR SCS	М		ENUMERATED (scs15, scs30, scs60, scs120,)	The values scs15, scs30, scs60 and scs120 corresponds to the sub carrier spacing in TS 38.104 [24].
NR NRB	М		ENUMERATED (nrb11, nrb18, nrb24, nrb25, nrb31, nrb32, nrb38, nrb51, nrb52, nrb65, nrb66, nrb78, nrb79, nrb93, nrb106, nrb107, nrb121, nrb132, nrb133, nrb135, nrb160, nrb162, nrb189, nrb216, nrb217, nrb245, nrb264, nrb270, nrb273,)	This IE is used to indicate the UL or DL transmission bandwidth expressed in units of resource blocks "N <sub>RB</sub> " (TS 38.104 [24]). The values nrb11, nrb18, etc. correspond to the number of resource blocks "N <sub>RB</sub> " 11, 18, etc.

#### 9.2.2.21 E-UTRA ARFCN

The E-UTRA Absolute Radio Frequency Channel Number defines the carrier frequency used in an E-UTRAN cell for a given direction (UL or DL) in FDD or for both UL and DL directions in TDD.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
E-UTRA ARFCN	М		INTEGER	The relation between EARFCN
			(0maxEARFCN)	and carrier frequency (in MHz) are defined in TS 36.104 [25].

Range bound	Explanation
maxEARFCN	Maximum value of EARFCNs. Value is 262143.

## 9.2.2.22 E-UTRA Transmission Bandwidth

The *E-UTRA Transmission Bandwidth* IE is used to indicate the UL or DL transmission bandwidth expressed in units of resource blocks " $N_{RB}$ " (TS 36.104 [25]). The values bw1, bw6, bw15, bw25, bw50, bw75, bw100 correspond to the number of resource blocks " $N_{RB}$ " 6, 15, 25, 50, 75, 100.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
E-UTRA Transmission	М		ENUMERATED (bw6,	
Bandwidth			bw15, bw25, bw50,	
			bw75, bw100,, bw1)	

#### 9.2.2.23 Number of Antenna Ports E-UTRA

The *Number of Antenna Ports E-UTRA* IE is used to indicate the number of cell specific antenna ports supported by an E-UTRA cell.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Number of Antenna Ports	M		ENUMERATED (an1,	an1 = One antenna port
			an2, an4,)	an2 = Two antenna ports
				an4 = Four antenna ports

#### 9.2.2.24 E-UTRA Multiband Info List

The *E-UTRA Multiband Info List* IE contains the additional frequency band indicators that an E-UTRA cell belongs to listed in decreasing order of preference and corresponds to the *MultiBandInfoList* specified in TS 36.331 [14].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
BandInfo		1 <maxnoofeutra Bands&gt;</maxnoofeutra 		
>Frequency Band Indicator	M		INTEGER (1 256,)	E-UTRA operating band as defined in TS 36.101 [27, table 5.5-1]

Range bound	Explanation
maxnoofEUTRABands	Maximum number of frequency bands that an E-UTRA cell belongs
	to. The value is 16.

# 9.2.2.25 E-UTRA PRACH Configuration

This IE indicates the E-UTRA PRACH resources used in an E-UTRA neighbour cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RootSequenceIndex	M		INTEGER (0837)	See section 5.7.2. in TS 36.211 [26]
ZeroCorrelationZoneConfi guration	М		INTEGER (015)	See section 5.7.2. in TS 36.211 [26]
HighSpeedFlag	M		ENUMERATED (true, false,)	"true" corresponds to Restricted set and "false" to Unrestricted set. See section 5.7.2 in TS 36.211 [26]
PRACH-FrequencyOffset	M		INTEGER (094)	See section 5.7.1 of TS 36.211 [26]
PRACH- ConfigurationIndex	C-ifTDD		INTEGER (063)	See section 5.7.1. in TS 36.211 [26]

Condition	Explanation
ifTDD	This IE shall be present if the EUTRA-Mode-Info IE in the Served Cell
	Information E-UTRA IE is set to the value "TDD".

## 9.2.2.26 MBSFN Subframe Allocation E-UTRA

The *MBSFN Subframe Allocation E-UTRA* IE is used to indicate the subframes that are allocated for MBSFN within the radio frame allocation period as specified for the *MBSFN-SubframeConfig* IE TS 36.331 [14].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Subframe	M			
Allocation				
>oneframe				
>>Oneframe Info	M		BITSTRING (SIZE(6))	
>fourframes				
>>Fourframes Info	M		BITSTRING (SIZE(24))	

# 9.2.2.27 Global NG-RAN Cell Identity

This IE contains either an NR or an E-UTRA Cell Identity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.2.4	
NG-RAN Cell Identity	М		9.2.2.9	

# 9.2.2.28 Connectivity Support

The Connectivity Support IE is used to indicate the connectivity supported by a NR cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
EN-DC Support	M		ENUMERATED	
			(Supported, Not	
			supported,)	

# 9.2.2.29 Protected E-UTRA Resource Indication

This IE indicates the resources allocated for E-UTRA DL and UL reference and control signals (hereby referred to as protected resources). This information is used in the process of E-UTRA – NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Activation SFN	M		INTEGER (01023)	Indicates from which SFN of the receiving node the resource allocation is valid.
Protected Resource List		1		The protected resource pattern is continuously repeated, and it is valid until stated otherwise or until replaced by a new pattern. The pattern does not apply in reserved subframes.
>Protected Resource List Item		1 <maxnoofp rotectedReso urcePatterns &gt;</maxnoofp 		Each item describes one transmission pattern. A pattern may comprise several control signals.
>>Resource Type	M		ENUMERATED (downlinknonCRS,C RS,uplink,)	Indicates whether the protected resource is E-UTRA DL non-CRS, E-UTRA CRS or E-UTRA UL.
>>Intra-PRB Protected Resource Footprint	M		BIT STRING (84,)	The bitmap of REs occupied by the protected signal within one PRB. Each position in the bitmap represents an RE in one PRB; value "0" indicates "resource not protected", value "1" indicates "resource protected ". The first bit of the string corresponds to the RE with the smallest time and frequency index in the PRB, where the indexing first goes into the frequency domain. The length of the bit string equals the product of and the length of PRB in time dimension, measured in REs. Is defined in TS 36.211 [10]. The intra-PRB pattern consisting of all "1"s is equivalent to PRB-level granularity.
>>Protected Footprint Frequency Pattern	M		BIT STRING(6110,)	The bit string indicates in which PRBs inside carrier bandwidth the Intra-PRB Protected Resource Footprint applies. How often in time dimension this frequency pattern applies, depends on time periodicity of Intra-PRB Protected Resource Footprint. The first bit of the bit string corresponds to the PRB occupying the lowest subcarrier frequencies of the carrier bandwidth, where the indexing first goes into the frequency domain. Each position in the string represents a PRB; value "0" indicates " Intra-PRB Protected Resource Footprint does not appear in PRB", value "1" indicates "Intra-PRB Protected Resource Footprint appears in PRB". The length of the bit string equals the number of PRBs in the carrier bandwidth.
>>Protected Footprint Time Pattern	М			The description of time periodicity of the Intra-PRB Protected Resource Footprint.
>>>Protected Footprint Time-periodicity	М		INTEGER(1320, )	Periodicity with which the periodic Intra-PRB Protected Resource Footprint repeats in time-dimension (1= every PRB (i.e. slot), 2=every other PRB (i.e. slot) etc.

>>>Protected Footprint Start Time	М	INTEGER(120,)	The time-position of the PRB inside the frame in which the periodic Intra-PRB Protected Resource Footprint appears for the first time. The value "1" corresponds to the receiving node's slot 0 in subframe 0 in the receiving node's radio frame where SFN = Activation SFN.
MBSFN Control Region Length	0	INTEGER(03)	Length of control region in MBSFN subframes. Expressed in REs, in the time dimension.
PDCCH Region Length	М	INTEGER(13)	Length of PDCCH region in regular subframes. Expressed in REs, in the time dimension.

Range bound	Explanation
maxnoofProtectedResourcePatterns	Maximum no. protected resource patterns. Value is 16.

## 9.2.2.30 Data Traffic Resource Indication

This IE indicates the intended data traffic resource allocation for E-UTRA - NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Activation SFN	M		INTEGER (01023)	Indicates from which SFN of the receiving node the agreement is valid.
CHOICE Shared Resource Type	М			
>UL Only Sharing				
>>UL Resource Bitmap	M		Data Traffic Resources 9.2.2.31	
>UL and DL Sharing				
>>CHOICE UL Resources	M			
>>>Unchanged			NULL	
>>>Changed				
>>>>UL Resource Bitmap	M		Data Traffic Resources 9.2.2.31	
>>CHOICE DL Resources	M			
>>>Unchanged			NULL	
>>>Changed				
>>>DL Resource Bitmap	М		Data Traffic Resources 9.2.2.31	
Reserved Subframe Pattern	0		9.2.2.32	Indicates subframes in which the resource allocation does not hold.

# 9.2.2.31 Data Traffic Resources

The *Data Traffic Resources* IE indicates the intended data traffic resource allocation for E-UTRA - NR Cell Resource Coordination.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Data Traffic Resources	M		BIT STRING (617600)	The indication of resources allocated to E-UTRA PDSCH/PUSCH. Each position in the bit string represents a PRB pair in a subframe; value "0" indicates "resource not intended to be used for transmission", value "1" indicates "resource intended to be used for transmission ". The first bit of the bit string corresponds to the PRB pair occupying the lowest subcarrier frequencies of the carrier, where the indexing first goes into the frequency domain.  The bit string may span across multiple contiguous subframes. The first position of the Data Traffic Resources IE corresponds to the receiving node's subframe 0 in a receiving node's radio frame where SFN = Activation SFN.  The length of the bit string is an integer multiple of NEE or NEE, defined in TS 36.211 [10].

## 9.2.2.32 Reserved Subframe Pattern

The Reserved Subframe Pattern IE indicates the pattern of subframes in which the Protected E-UTRA Resource Indication and Data Traffic Resource Indication do not hold.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Subframe Type	М		ENUMERATED( MBSFN, non- MBSFN,)	Indicates what type of non-regular subframes the Reserved Subframe Pattern refers to (e.g. MBSFN).
Reserved Subframe Pattern	M		BIT STRING (10160)	Each position in the bitmap represents a subframe. Value '0' indicates "regular subframe". Value '1' indicates "reserved subframe". For MBSFN subframes, the exception refers only to the non-control region of the subframe. The bit string may span across multiple contiguous subframes. The first position of the Subframe Configuration IE corresponds to the receiving node's subframe 0 in a receiving node's radio frame where SFN = Activation SFN. The IE is ignored if received by the ng-eNB.
MBSFN Control Region Length	0		INTEGER(03)	Length of control region in MBSFN subframes. Expressed in REs, in the time dimension.

#### 9.2.2.33 MR-DC Resource Coordination Information

The MR-DC Resource Coordination Information IE is used to coordinate resource utilisation between the M-NG-RAN node and the S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE NG-RAN Node	M			
Resource Coordination				
Information				
>EUTRA				
>>E-UTRA Resource			9.2.2.34	E-UTRA resource
Coordination				coordination information
Information				
>NR				
>>NR Resource			9.2.2.35	NR resource coordination
Coordination				information
Information				

## 9.2.2.34 E-UTRA Resource Coordination Information

The *E-UTRA Resource Configuration Information* IE indicates LTE resource allocation at ng-eNB used at the gNB to coordinate resource utilisation between M-NG-RAN-node and S-NG-RAN node.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
EUTRA Cell ID	M		E-UTRA CGI	This IE indicates the sPCell.
			9.2.2.8	
UL Coordination Information	M		BIT STRING (64400,)	Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "PCell resource not intended to be used for transmission by the sending node", value "1" indicates "PCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to UL subframes.  The bit string may span across multiple contiguous subframes (maximum 40). The first position of the $UL$ $Coordination$ $Information$ corresponds to subframe 0 in a radio frame where $SFN = 0$ . The length of the bit string is an integer multiple of $N_{RB}^{UL}$ . $N_{RB}^{UL}$ is defined in TS 36.211 [10]. The UL Coordination Information Information is continuously tapacted.
			1	repeated.

DI Casadinatias		DIT CTDING	Fools modition in the hiter
DL Coordination Information	0	BIT STRING (64400,)	Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "PCell resource not intended to be used for transmission by the sending node", value "1" indicates "PCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to DL subframes.  The bit string may span across multiple contiguous subframes (maximum 40). The first position Information corresponds to the receiving pode's subframe 0 in a
			same order. Each position is applicable only in positions corresponding to DL subframes.  The bit string may span across multiple contiguous subframes (maximum 40).  The first position of the DL Coordination Information
			node's subframe 0 in a receiving node's radio frame where $SFN = 0$ .  The length of the bit string is an integer multiple of $N_{SD}^{DL}$ .
			NDL NES is defined in TS 36.211 [10]. The DL Coordination Information is continuously repeated.
NR CGI	0	9.2.2.7	This IE indicates the assumed sPCell.
E-UTRA Coordination Assistance Information	0	9.2.2.36	

# 9.2.2.35 NR Resource Coordination Information

The NR Resource Coordination Information IE indicates resources within the bandwidth of the ng-eNB sPCell which are not available for use by the ng-eNB and is used at the ng-eNB to coordinate resource utilisation between the gNB and the ng-eNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR CGI	M		9.2.2.7	This IE indicates the sPCell.
UL Coordination Information	M M		9.2.2.7 BIT STRING (64400,)	This IE indicates the sPCell. Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "sPCell resource not intended to be used for transmission by the sending node", value "1" indicates "sPCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to UL subframes. The bit string may span across multiple contiguous subframes (maximum 40). The first position of the $UL$ $Coordination$ $Information$ corresponds to the receiving node's subframe 0 in a receiving node's radio frame where $SFN = 0$ .  The length of the bit string is an integer multiple of $N_{RB}^{UL}$ is defined in TS 36.211 [26]. The UL Coordination Information information is continuously

DL Coordination Information	0	ECGI	Each position in the bitmap represents a PRB pair in a subframe; value "0" indicates "sPCell resource not intended to be used for transmission by the sending node", value "1" indicates "sPCell resource intended to be used for transmission by the sending node". The bit string spans from the first PRB pair of the first represented subframe to the last PRB pair of the same subframe and then moves to the following PRBs in the following subframes in the same order. Each position is applicable only in positions corresponding to DL subframes.  The bit string may span across multiple contiguous subframes (maximum 40). The first position of the <i>DL Coordination Information</i> corresponds to the receiving node's subframe 0 in a receiving node's radio frame where <i>SFN</i> = 0.  The length of the bit string is an integer multiple of NDL is defined in TS 36.211 [26].  The DL Coordination Information Information is continuously repeated.
		9.2.2.8	Coordination Information IE and DL Coordination IE.
NR Coordination Assistance Information	0	9.2.2.37	

## 9.2.2.36 E-UTRA Coordination Assistance Information

The *E-UTRA Coordination Assistance Information* IE is provided by the ng-eNB and used by the gNB to determine further coordination of resource utilisation between the gNB and the ng-eNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
E-UTRA Coordination Assistance Information	M		ENUMERATED(Coordi nation Not Required,	
, tecietarios imerination			)	

## 9.2.2.37 NR Coordination Assistance Information

The NR Coordination Assistance Information IE is provided by the gNB and used by the ng-eNB to determine further coordination of resource utilisation between the gNB and the ng-eNB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR Coordination Assistance Information	М		ENUMERATED(Coordi nation Not Required,	
			)	

#### 9.2.2.38 NE-DC TDM Pattern

The *NE-DC TDM Pattern* IE is provided by the gNB and used by the ng-eNB to determine UL/DL reference configuration indicating the time during which a UE configured with NE-DC is allowed to transmit.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Subframe Assignment	M		ENUMERATED(sa0, sa1, sa2, sa3, sa4, sa5, sa6)	Indicates DL/UL subframe configuration where sa0 points to Configuration 0, sa1 to Configuration 1 etc. as specified in TS 36.331 [14].
Harq Offset	M		INTEGER (09)	Indicates a HARQ subframe offset that is applied to the subframes designated as UL in the associated subframe assignment, see TS 36.331 [14]

## 9.2.2.39 Interface Instance Indication

The Interface Instance Indication identifies the interface instance the XnAP message is destined for.

NOTE: The Interface Instance Indication is allocated so that it can be associated with an Xn-C interface instance. The Interface Instance Indication may identify more than one interface instance.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Interface Instance Indication	M		INTEGER (0255,)	

## 9.2.2.40 Intended TDD DL-UL Configuration NR

This IE contains the subcarrier spacing, cyclic prefix and TDD DL-UL slot configuration of an NR cell that a neighbour NG-RAN node needs to take into account for cross-link interference mitigation, and/or for NR-DC power coordination, when operating its own cells.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR SCS	М		ENUMERATED (scs15, scs30, scs60, scs120,)	The values scs15, scs30, scs60 and scs120 corresponds to the sub carrier spacing in TS 38.104 [24].
NR Cyclic Prefix	M		ENUMERATED (Normal, Extended,)	The type of cyclic prefix, which determines the number of symbols in a slot.
NR DL-UL Transmission Periodicity	M		ENUMERATED (ms0p5, ms0p625, ms1, ms1p25, ms2, ms2p5, ms3, ms4, ms5, ms10, ms20, ms40, ms60, ms80, ms100, ms120, ms140, ms160,)	The periodicity is expressed in the format msXpYZ, and equals X.YZ milliseconds.
Slot Configuration List		1		
>Slot Configuration List Item		1 <ma xnoofsl ots&gt;</ma 		
>>Slot Index			INTEGER (0 5119)	
>>CHOICE Symbol Allocation in Slot >>>All DL	M			
>>>All UL				
>>>Both DL and UL				
>>>Number of DL Symbols	М		INTEGER (013)	Number of consecutive DL symbols at the beginning of the slot identified by Slot Index. If extended cyclic prefix is used, the maximum value is 11.
>>>>Number of UL Symbols	M		INTEGER (013)	Number of consecutive UL symbols in the end of the slot identified by Slot Index. If extended cyclic prefix is used, the maximum value is 11.

Range bound	Explanation
maxnoofslots	Maximum length of number of slots in a 10-ms period. Value is5120.

# 9.2.2.41 Cell and Capacity Assistance Information NR

The *Cell and Capacity Assistance Information NR* IE is used by the NG-RAN node to request information about NR cells and it includes information about cell list size capacity.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Maximum Cell List Size	0		9.2.2.44	
Cell Assistance Information NR	0		9.2.2.17	

# 9.2.2.42 Cell and Capacity Assistance Information E-UTRA

The *Cell and Capacity Assistance Information E-UTRA* IE is used by the NG-RAN node to request information about NR cells and it includes information about cell list size capacity.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Maximum Cell List Size	0		9.2.2.44	
Cell Assistance Information	0		9.2.2.43	
E-UTRA				

#### 9.2.2.43 Cell Assistance Information E-UTRA

The Cell Assistance Information IE is used by the NG-RAN node to request information about E-UTRA cells.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cell Assistance	M			
Туре				
>Limited EUTRA List				
>>List of Requested E-		1 <		Included when the NG-RAN
UTRA Cells		maxnoofCellsin		node requests a limited list of
		NG-RAN node>		served E-UTRA cells.
>>>E-UTRA CGI	M		9.2.2.7	E-UTRA cell for which
				served E-UTRA cell
				information is requested.
>Full E-UTRA List				
>>Complete Information	M		ENUMERATED	Included when the NG-RAN
Request Indicator			(allServedCellsNR,)	node requests the complete
				list of served cells for a ng-
				eNB

Range bound	Explanation
maxnoofCellsinNG-RAN node	Maximum no. cells that can be served by a NG-RAN node. Value is 16384.

#### 9.2.2.44 Maximum Cell List Size

This IE indicates the maximum size the sending node can handle for a given cell list.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Maximum Cell List Size	M		INTEGER (016384,)	

# 9.2.2.45 Message Oversize Notification

This IE indicates that a failure has occurred due to an excessive message size and it indicates the maximum number of cells that can be received in the *List of Served Cells NR* IE or in the *List of Served Cells E-UTRA* IE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Maximum Cell List Size	M		9.2.2.44	

## 9.2.2.46 Partial List Indicator

The *Partial List Indicator* IE is used by the NG-RAN node to indicate whether the served cell information contained in the same message is a partial list.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Partial List Indicator	M		ENUMERATED (partial,)	

#### 9.2.2.47 Offset of NB-IoT Channel Number to EARFCN

This IE is used to indicate the offset of the NB-IoT Channel Number to the EARFCN (TS 36.104 [25]).

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Offset of NB-IoT Channel	M		ENUMERATED (-10, -	
Number to EARFCN			9, -8.5, -8, -7, -6, -5, -	
			4.5, -4, -3, -2, -1, -0.5,	
			0, 1, 2, 3, 3.5, 4, 5, 6, 7,	
			7.5, 8, 9,)	

# 9.2.2.48 NB-IoT UL DL Alignment Offset

This IE is used to indicate the offset between the UL carrier frequency center with respect to DL carrier frequency center.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NB-IoT UL DL Alignment Offset	М		ENUMERATED (-7.5, 0, 7.5,)	Unit: kHz

# 9.2.2.49 TNL Capacity Indicator

The TNL Capacity Indicator IE indicates the offered and available capacity of the Transport Network experienced by the NG RAN cell

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DL TNL Offered Capacity	М		INTEGER (1	Maximum capacity
			16777216,)	offered by the transport
				portion of the cell in kbps
DL TNL Available	M		INTEGER (0 100,)	Available capacity over
Capacity				the transport portion
				serving the cell in
				percentage. Value 100
				corresponds to the
				offered capacity.
UL TNL Offered Capacity	M		INTEGER (1	Maximum capacity
			16777216,)	offered by the transport
				portion of the cell in kbps
UL TNL Available	M		INTEGER (0 100,)	Available capacity over
Capacity				the transport portion
				serving the cell in
				percentage. Value 100
				corresponds to the
				offered capacity.

## 9.2.2.50 Radio Resource Status

The *Radio Resource Status* IE indicates the usage of the PRBs per cell and per SSB area for all traffic in Downlink and Uplink and the usage of PDCCH CCEs for Downlink and Uplink scheduling.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE Radio Resource Status Type	M			
>ng-eNB				
>>DL GBR PRB usage	M		INTEGER (0100)	Per cell DL GBR PRB usage
>>UL GBR PRB usage	M		INTEGER (0100)	Per cell UL GBR PRB usage
>>DL non-GBR PRB usage	M		INTEGER (0100)	Per cell DL non-GBR PRB usage
>>UL non-GBR PRB usage	M		INTEGER (0100)	Per cell UL non-GBR PRB usage
>>DL Total PRB usage	М		INTEGER (0100)	Per cell DL Total PRB usage
>>UL Total PRB usage	M		INTEGER (0100)	Per cell UL Total PRB usage
>gNB				
>>SSB Area Radio Resource Status List		1		
>>>SSB Area Radio Resource Status Item		1 <max noofSS BAreas</max 		
>>>SSB Index	M		INTEGER (063)	
>>>SSB Area DL GBR PRB usage	M		INTEGER (0100)	Per SSB area DL GBR PRB usage
>>>SSB Area UL GBR PRB usage	M		INTEGER (0100)	Per SSB area UL GBR PRB usage
>>>SSB Area DL non-GBR PRB usage	M		INTEGER (0100)	Per SSB area DL non- GBR PRB usage
>>>SSB Area UL non-GBR PRB usage	M		INTEGER (0100)	Per SSB area UL non- GBR PRB usage
>>>SSB Area DL Total PRB usage	M		INTEGER (0100)	Per SSB area DL Total PRB usage
>>>SSB Area UL Total PRB usage	М		INTEGER (0100)	Per SSB area UL Total PRB usage
>>DL scheduling PDCCH CCE usage	0		INTEGER (0100)	<u> </u>
>>UL scheduling PDCCH CCE usage	0		INTEGER (0100)	

Range bound	Explanation
maxnoofSSBAreas	Maximum no. SSB Areas that can be served by a NG-RAN node
	cell. Value is 64.

# 9.2.2.51 Composite Available Capacity Group

The *Composite Available Capacity Group* IE indicates the overall available resource level per cell and per SSB area in the cell in Downlink and Uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Composite Available Capacity Downlink	М		Composite Available Capacity 9.2.2.52	For the Downlink
Composite Available Capacity Uplink	М		Composite Available Capacity 9.2.2.52	For the Uplink

## 9.2.2.52 Composite Available Capacity

The *Composite Available Capacity* IE indicates the overall available resource level in the cell in either Downlink or Uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Cell Capacity Class Value	0		9.2.2.53	
Capacity Value	M		9.2.2.54	'0' indicates no resource is available, Measured on a linear scale.

### 9.2.2.53 Cell Capacity Class Value

The *Cell Capacity Class Value* IE indicates the value that classifies the cell capacity with regards to the other cells. The *Cell Capacity Class Value* IE only indicates resources that are configured for traffic purposes.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Capacity Class Value	М		INTEGER (1100,)	Value 1 shall indicate the minimum cell capacity, and 100 shall indicate the maximum cell capacity. There should be a linear relation between cell capacity and Cell Capacity Class Value.

# 9.2.2.54 Capacity Value

The Capacity Value IE indicates the amount of resources per cell and per SSB area that are available relative to the total NG-RAN resources. The capacity value should be measured and reported so that the minimum NG-RAN resource usage of existing services is reserved according to implementation. The Capacity Value IE can be weighted according to the ratio of cell capacity class values, if available.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Capacity Value	M		INTEGER (0100)	Value 0 shall indicate no available capacity, and 100 shall indicate maximum available capacity with respect to the whole cell. Capacity Value should be measured on a linear scale.
SSB Area Capacity Value List		01		
>SSB Area Capacity Value Item		0 <max noofSS BAreas</max 		
>>SSB Index	M		INTEGER (063)	
>>SSB Area Capacity Value	M		INTEGER (0100)	Value 0 shall indicate no available capacity, and 100 shall indicate maximum available capacity . SSB Area Capacity Value should be measured on a linear scale.

Range bound	Explanation
maxnoofSSBAreas	Maximum no. SSB Areas that can be served by a NG-RAN node
	cell. Value is 64.

## 9.2.2.55 Slice Available Capacity

The Slice Available Capacity IE indicates the amount of resources per network slice that are available per cell relative to the total NG-RAN resources per cell. The Slice Capacity Value Downlink IE and the Slice Capacity Value Uplink IE

can be weighted according to the ratio of the corresponding cell capacity class values contained in the *Composite Available Capacity Group* IE, if available.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Slice Available Capacity		1< maxnoo fBPLMN s >		
>PLMN Identity	M		9.3.1.14	Broadcast PLMN
>S-NSSAI Available Capacity List		1		
>>S-NSSAI Available Capacity Item	M	1 < maxnoo fSliceIte ms>		
>>>S-NSSAI			9.3.1.38	
>>>Slice Available Capacity Value Downlink	0		INTEGER (0100)	Value 0 shall indicate no available capacity, and 100 shall indicate maximum available capacity. Slice Capacity Value should be measured on a linear scale.
>>>Slice Available Capacity Value Uplink	0		INTEGER (0100)	Value 0 indicates no available capacity, and 100 indicates maximum available capacity. Slice Capacity Value should be measured on a linear scale.

Range bound	Explanation			
maxnoofSliceItems	Maximum no. of signalled slice support items. Value is 1024.			
maxnoofBPLMNs	Maximum no. of PLMN lds.broadcast in a cell. Value is 12.			

## 9.2.2.56 RRC Connections

The RRC Connections IE indicates the overall status of RRC connections per cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Number of RRC Connections	M		9.2.2.57	
Available RRC Connection Capacity Value	М		9.2.2.58	

## 9.2.2.57 Number of RRC Connections

The Number of RRC Connections IE indicates the absolute number of UEs in RRC\_CONNECTED mode.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Number of RRC Connections	М		INTEGER (165536,)	

# 9.2.2.58 Available RRC Connection Capacity Value

The Available RRC Connection Capacity Value IE indicates the residual percentage of the number of RRC connections, relative to the maximum number of RRC connections supported by the cell.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Available RRC Connection Capacity Value	М		INTEGER (0100)	Value 0 shall indicate no available capacity, and 100 shall indicate maximum available capacity with respect to the whole cell. Capacity Value should be measured on a linear scale.

# 9.2.2.59 UE RLF Report

This IE contains the RLF Report to be transferred.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE type	M			
>NR				
>>NR UE RLF Report Container	М		OCTET STRING	nr-RLF-Report-r16 IE contained in the UEInformationResponse message defined in TS 38.331 [10].
>LTE				
>>LTE UE RLF Report Container	М		OCTET STRING	RLF-Report-r9 IE contained in the UEInformationResponse message defined in TS 36.331 [14]

## 9.2.2.60 Mobility Parameters Information

The *Mobility Parameters Information* IE contains the change of the Handover Trigger as compared to its current value. The Handover Trigger corresponds to the threshold at which a cell initialises the handover preparation procedure towards a specific neighbour cell. Positive value of the change means the handover is proposed to take place later.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Handover Trigger Change	М		INTEGER (-20 20)	The actual value is IE value * 0.5 dB.

## 9.2.2.61 Mobility Parameters Modification Range

The *Mobility Parameters Modification Range* IE contains the range of *Handover Trigger Change* values permitted by the NG-RAN node<sub>2</sub> at the moment the MOBILITY CHANGE FAILURE message is sent.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Handover Trigger Change Lower Limit	М		INTEGER (-20 20)	The actual value is IE value * 0.5 dB.
Handover Trigger Change Upper Limit	M		INTEGER (-20 20)	The actual value is IE value * 0.5 dB.

#### 9.2.2.62 Number of Active UEs

The Number of Active UEs IE indicates the mean number of active UEs as defined in TS 38.314 [42].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Mean number of Active UEs	М		INTEGER(0.	As defined in TS 38.314 [ref1] and where
Weat named of Active GES	141		.16777215,	value "1" is equivalent to 0.1 Active UEs,
			)	value "2" is equivalent to 0.2 Active UEs,
				value <i>n</i> is equivalent to n/10 Active UEs.

# 9.2.2.63 NR Carrier List

This IE indicates the SCS-specific carriers per TDD, per DL, per UL or per SUL of an NR cell.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR Carrier Item		1 <maxnoofn RSCSs&gt;</maxnoofn 		
>NR SCS	M		ENUMERATED (scs15, scs30, scs60, scs120,)	SCS for the corresponding carrier.
>Offset to Carrier	M		INTEGER (0 2199,)	Offset in frequency domain between Point A (lowest subcarrier of common RB 0) and the lowest usable subcarrier on this carrier in number of PRBs (using the <i>NR SCS</i> IE defined for this carrier). The maximum value corresponds to 275×8–1. See TS 38.211 [39], clause 4.4.2.
>Carrier Bandwidth	М		INTEGER (1 maxnoofPhysicalRe sourceBlocks,)	Width of this carrier in number of PRBs (using the NR SCS IE defined for this carrier). See TS 38.211 [39], clause 4.4.2.

Range bound	Explanation		
maxnoofNRSCSs	Maximum no. of SCS-specific carriers per TDD, per DL, per UL or		
	per SUL of an NR cell. Value is 5.		
maxnoofPhysicalResourceBlocks	Maximum no. of Physical Resource Blocks. Value is 275.		

## 9.2.2.64 SSB Positions In Burst

Indicates the time domain positions of the transmitted SS-blocks in a half frame with SS/PBCH blocks as defined in TS 38.213 [40], clause 4.1.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE ssb- PositionsInBurst	M			The first/ leftmost bit corresponds to SS/PBCH block index 0, the second bit corresponds to SS/PBCH block index 1, and so on. Value 0 in the bitmap indicates that the corresponding SS/PBCH block is not transmitted while value 1 indicates that the corresponding SS/PBCH block is transmitted.
>ShortBitmap				
>>ShortBitmap	M		BIT STRING (SIZE(4))	
>MediumBitmap				
>>MediumBitmap	М		BIT STRING (SIZE(8))	
>LongBitmap		•		
>>LongBitmap	М		BIT STRING (SIZE(64))	

#### 9.2.2.65 NID

This IE is used to identify (together with a PLMN identifier) a Standalone Non-Public Network. The NID is specified in TS 23.003 [22].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NID	M		BIT STRING	
			(SIZE(44))	

## 9.2.2.66 CAG-Identifier

This IE is used to identify (together with a PLMN identifier) a Public Network Integrated Non-Public Network. The CAG-Identifier is specified in TS 23.003 [22].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CAG-Identifier	М		BIT STRING (SIZE(32))	

## 9.2.2.67 Broadcast NID List

This IE contains a list of NIDs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Broadcast NID List		1 <maxnoofni Ds&gt;</maxnoofni 		
>NID	M		9.2.2.65	

Range bound	Explanation
maxnoofNIDs	Maximum no. of NIDs broadcast in a cell. Value is 12.

### 9.2.2.68 Broadcast SNPN ID List

This IE contains a list of SNPN IDs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Broadcast SNPN ID List		1 <maxnoofs NPNIDs&gt;</maxnoofs 		
>PLMN Identity	М		9.2.2.4	
>Broadcast NID List	M		9.2.2.67	

Range bound	Explanation
maxnoofSNPNIDs	Maximum no. of SNPN IDs broadcast in a cell. Value is 12.

## 9.2.2.69 Broadcast CAG-Identifier List

This IE contains a list of CAG-Identifiers.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Broadcast CAG-Identifier		1 <maxnoofc< td=""><td></td><td></td></maxnoofc<>		
List		AGs>		
>CAG-Identifier	M		9.2.2.66	

Range bound	Explanation
maxnoofCAGs	Maximum no. of CAG-Identifiers broadcast in a cell. Value is 12.

## 9.2.2.70 Broadcast PNI-NPN ID Information

This IE contains a list of PNI-NPN IDs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Broadcast PNI-NPN ID Information		1 <maxnoofb PLMNs&gt;</maxnoofb 		Broadcast PLMNs
>PLMN Identity	M		9.2.2.4	
>Broadcast CAG-Identifier List	М		9.2.2.69	

Range bound	Explanation
maxnoofBPLMNs	Maximum no. of broadcast PLMNs by a cell. Value is 12.

### 9.2.2.71 NPN Broadcast Information

This IE contains NPN related broadcast information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE NPN Broadcast	M			
Information per PLMN				
>SNPN Information				
>>Broadcast SNPN ID	M		9.2.2.68	
List				
>PNI-NPN Information				
>>Broadcast PNI-NPN ID Information	М		9.2.2.70	

# 9.2.2.72 NPN Support

This IE contains NPN related information associated with Network Slicing information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE NPN Support	M			
>SNPN				
>>NID	M		9.2.2.65	This IE is associated with the PLMN Identity and the TAI Slice Support List contained in the TAI Support List IE.  Together with the PLMN Identity it identifiers the SNPN supported in the corresponding Tracking Area by the NG-RAN node.

# 9.2.3 General IE definitions

# 9.2.3.1 Message Type

The Message Type IE uniquely identifies the message being sent. It is mandatory for all messages.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	M		INTEGER (0255)	
Type of Message	М		CHOICE (Initiating Message, Successful Outcome, Unsuccessful Outcome,)	

## 9.2.3.2 Cause

The purpose of the *Cause* IE is to indicate the reason for a particular event for the XnAP protocol.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
CHOICE Cause	М			
Group >Radio				
Network Layer			ENUMED ATED	
>>Radio Network	M		ENUMERATED (	
Layer Cause			Cell not Available,	
			Handover Desirable for Radio Reasons, Handover Target not Allowed,	
			Invalid AMF Set ID,	
			No Radio Resources Available in Target Cell,	
			Partial Handover, Reduce Load in Serving Cell,	
			Resource Optimisation Handover,	
			Time Critical Handover, TXNRELOCOVETALL EXPIRE,	
			TXINELOCOVERAIN EXPINY, TXINELOCOVERAIN EXPINY,	
			Unknown GUAMI ID,	
			Unknown Local NG-RAN node UE XnAP ID, Inconsistent Remote NG-RAN node UE XnAP ID,	
			Encryption And/Or Integrity Protection Algorithms Not	
			Supported, Protection Algorithms Not Supported,	
			Multiple PDU Session ID Instances,	
			Unknown PDU Session ID, Unknown QoS Flow ID,	
			Multiple QoS Flow ID Instances,	
			Switch Off Ongoing,	
			Not supported 5QI value, TXnDCoverall Expiry,	
			TXn <sub>DCprep</sub> Expiry,	
			Action Desirable for Radio Reasons, Reduce Load,	
			Resource Optimisation,	
			Time Critical action, Target not Allowed,	
			No Radio Resources Available,	
			Invalid QoS combination,	
			Encryption Algorithms Not Supported, Procedure cancelled,	
			RRM purpose,	
			Improve User Bit Rate, User Inactivity,	
			Radio Connection With UE Lost,	
			Failure in the Radio Interface Procedure, Bearer Option not Supported,	
			UP integrity protection not possible, UP confidentiality	
			protection not possible, Resources not available for the slice(s),	
			UE Maximum integrity protected data rate reason,	
			CP Integrity Protection Failure,	
			UP Integrity Protection Failure, Slice(s) not supported by NG-RAN,	
			MN Mobility,	
			SN Mobility, Count reaches max value,	
			Unknown Old NG-RAN node UE XnAP ID,	
			PDCP Overload, DRB ID not available,	
			Unspecified,	
			UE Context ID not known, Non-relocation of context,	
			CHO-CPC resources to be changed, RSN not available for the UP,	
			NPN access denied)	

>Transport Layer			
>>Transport Layer Cause	М	ENUMERATED (Transport Resource Unavailable, Unspecified,)	
>Protocol			
>>Protocol Cause	М	ENUMERATED (Transfer Syntax Error, Abstract Syntax Error (Reject), Abstract Syntax Error (Ignore and Notify), Message not Compatible with Receiver State, Semantic Error, Abstract Syntax Error (Falsely Constructed Message), Unspecified,)	
>Misc			
>>Miscellane ous Cause	M	ENUMERATED (Control Processing Overload, Hardware Failure, O&M Intervention, Not enough User Plane Processing Resources, Unspecified,)	

The meaning of the different cause values is specified in the following table. In general, "not supported" cause values indicate that the related capability is missing. On the other hand, "not available" cause values indicate that the related capability is present, but insufficient resources were available to perform the requested action.

Radio Network Layer cause	Meaning
Cell not Available	The concerned cell is not available.
Handover Desirable for Radio Reasons	The reason for requesting handover is radio related.
Handover Target not Allowed	Handover to the indicated target cell is not allowed for the UE in question.
Invalid AMF Set ID	The target NG-RAN node doesn't belong to the same AMF Set of the source NG-RAN node, i.e. NG handovers should be attempted instead.
No Radio Resources Available in Target Cell	The target cell doesn't have sufficient radio resources available.
Partial Handover	Provides a reason for the handover cancellation. The target NG-RAN node did not admit all PDU Sessions included in the HANDOVER REQUEST and the source NG-RAN node estimated service continuity for the UE would be better by not proceeding with handover towards this particular target NG-RAN node.
Reduce Load in Serving Cell	Load in serving cell needs to be reduced. When applied to handover preparation, it indicates the handover is triggered due to load balancing.
Resource Optimisation Handover	The reason for requesting handover is to improve the load distribution with the neighbour cells.
Time Critical Handover	Handover is requested for time critical reason i.e. this cause value is reserved to represent all critical cases where the connection is likely to be dropped if handover is not performed.
TXnRELOCoverall Expiry	The reason for the action is expiry of timer TXnRELOCoverall.
TXn <sub>RELOCprep</sub> Expiry	Handover Preparation procedure is cancelled when timer TXn <sub>RELOCprep</sub> expires.
Unknown GUAMI ID	The target NG-RAN node belongs to the same AMF Set of the source NG-RAN node and recognizes the AMF Set ID. However, the GUAMI value is unknown to the target NG-RAN node.
Unknown Local NG-RAN node UE XnAP ID	The action failed because the receiving NG-RAN node does not recognise the local NG-RAN node UE XnAP ID.
Inconsistent Remote NG-RAN node UE XnAP ID	The action failed because the receiving NG-RAN node considers that the received remote NG-RAN node UE XnAP ID is inconsistent
Encryption And/Or Integrity Protection Algorithms Not Supported	The target NG-RAN node is unable to support any of the encryption and/or integrity protection algorithms supported by the UE.
Multiple PDU Session ID Instances	The action failed because multiple instances of the same PDU Session had been provided to the NG-RAN node.
Unknown PDU Session ID	The action failed because the PDU Session ID is unknown in the NG-RAN node.
Unknown QoS Flow ID	The action failed because the QoS Flow ID is unknown in the NG-RAN node.
Multiple QoS Flow ID Instances	The action failed because multiple instances of the same QoS flow had been provided to the NG-RAN node.
Switch Off Ongoing	The reason for the action is an ongoing switch off i.e. the concerned cell will be switched off after offloading and not be available. It aides the receiving NG-RAN node in taking subsequent actions, e.g. selecting the target cell for subsequent handovers.
Not supported 5QI value	The action failed because the requested 5QI is not supported.
TXnpcoverall Expiry	The reason for the action is expiry of timer TXnDCoverall.
TXnDCprep Expiry	The reason for the action is expiry of timer TXn <sub>DCprep</sub>
Action Desirable for Radio Reasons	The reason for requesting the action is radio related. In the current version of this specification applicable for Dual Connectivity only.
Reduce Load	Load in the cell(group) served by the requesting node needs to be reduced.  In the current version of this specification applicable for Dual
Resource Optimisation	Connectivity only.  The reason for requesting this action is to improve the load distribution with the neighbour cells.  In the current version of this specification applicable for Dual Connectivity only.

Time Critical action	The action is requested for time critical reason i.e. this cause value is reserved to represent all critical cases where radio resources are likely to be dropped if the requested action is not performed.  In the current version of this specification applicable for Dual Connectivity only.
Target not Allowed	Requested action towards the indicated target cell is not allowed for the UE in question. In the current version of this specification applicable for Dual Connectivity only.
No Radio Resources Available	The cell(s) in the requested node don't have sufficient radio resources available. In the current version of this specification applicable for Dual Connectivity only.
Invalid QoS combination	The action was failed because of invalid QoS combination. In the current version of this specification applicable for Dual Connectivity only.
Encryption Algorithms Not Supported	The requested NG-RAN node is unable to support any of the encryption algorithms supported by the UE.  In the current version of this specification applicable for Dual Connectivity only.
Procedure cancelled	The sending node cancelled the procedure due to other urgent actions to be performed.  In the current version of this specification applicable for Dual Connectivity only.
RRM purpose	The procedure is initiated due to node internal RRM purposes. In the current version of this specification applicable for Dual Connectivity only.
Improve User Bit Rate	The reason for requesting this action is to improve the user bit rate. In the current version of this specification applicable for Dual Connectivity only.
User Inactivity	The action is requested due to user inactivity on all PDU Sessions. The action may be performed on several levels: - on UE Context level, if NG is requested to be released in order to optimise the radio resources; or S-NG-RAN node didn't see activity on the PDU session recently on PDU Session Resource or DRB or QoS flow level, e.g. if Activity Notification indicate lack of activity In the current version of this specification applicable for Dual Connectivity only.
Radio Connection With UE Lost	The action is requested due to losing the radio connection to the UE.  In the current version of this specification applicable for Dual Connectivity only.
Failure in the Radio Interface Procedure	Radio interface procedure has failed. In the current version of this specification applicable for Dual Connectivity only.
Bearer Option not Supported	The requested bearer option is not supported by the sending node. In the current version of this specification applicable for Dual Connectivity only.
UP integrity protection not possible	The PDU session cannot be accepted according to the required user plane integrity protection policy.
UP confidentiality protection not possible	The PDU session cannot be accepted according to the required user plane confidentiality protection policy.
Resources not available for the slice(s)	The requested resources are not available for the slice(s).
UE Maximum integrity protected data rate reason	The request is not accepted in order to comply with the maximum data rate for integrity protection supported by the UE.
CP Integrity Protection Failure	The request is not accepted due to failed control plane integrity protection.
UP Integrity Protection Failure	The procedure is initiated because the SN (hosting node) detected an Integrity Protection failure in the UL PDU coming from the MN.
Slice(s) not supported by NG-RAN	The failure is due to slice(s) not supported by the NG-RAN node.

MN Mobility	The procedure is initiated due to relocation of the M-NG-RAN node UE context.
SN Mobility	The procedure is initiated due to relocation of the S-NG-RAN node UE context.
Count reaches max value,	Indicates the PDCP COUNT for UL or DL reached the max value and the bearer may be released.
Unknown Old NG-RAN node UE XnAP ID	The action failed because the Old NG-RAN node UE XnAP ID or the S-NG-RAN node UE XnAP ID is unknown.
PDCP Overload	The procedure is initiated due to PDCP resource limitation.
DRB ID not available	The action failed because the M-NG-RAN node is not able to provide additional DRB IDs to the S-NG-RAN node.
Unspecified	Sent for radio network layer cause when none of the specified cause values applies.
UE Context ID not known	The context retrieval procedure cannot be performed because the UE context cannot be identified.
Non-relocation of context	The context retrieval procedure is not performed because the old RAN node has decided not to relocate the UE context.
CHO-CPC resources to be	The prepared resources for CHO or CPC for a UE are to be
changed	changed.
RSN not available for the UP	The redundant user plane resources are not available.
NPN Access denied	Access denied due to NPN reasons.

Transport Layer cause	Meaning
Transport resource unavailable	The required transport resources are not available.
Unspecified	Sent when none of the above cause values applies but still the
	cause is Transport Network Layer related.

NAS cause	Meaning
Unspecified	Sent when none of the above cause values applies but still
	the cause is NAS related.

Protocol cause	Meaning
Transfer Syntax Error	The received message included a transfer syntax error.
Abstract Syntax Error (Reject)	The received message included an abstract syntax error and
	the concerning criticality indicated "reject".
Abstract Syntax Error (Ignore And	The received message included an abstract syntax error and
Notify)	the concerning criticality indicated "ignore and notify".
Message Not Compatible With	The received message was not compatible with the receiver
Receiver State	state.
Semantic Error	The received message included a semantic error.
Abstract Syntax Error (Falsely	The received message contained IEs or IE groups in wrong
Constructed Message)	order or with too many occurrences.
Unspecified	Sent when none of the above cause values applies but still the
	cause is Protocol related.

Miscellaneous cause	Meaning
Control Processing Overload	NG-RAN node control processing overload.
Hardware Failure	NG-RAN node hardware failure.
Not enough User Plane	NG-RAN node has insufficient user plane processing
Processing Resources	resources available.
O&M Intervention	Operation and Maintenance intervention related to NG-RAN
	node equipment.
Unspecified	Sent when none of the above cause values applies and the
	cause is not related to any of the categories Radio Network
	Layer, Transport Network Layer or Protocol.

# 9.2.3.3 Criticality Diagnostics

The *Criticality Diagnostics* IE is sent by the NG-RAN node when parts of a received message have not been comprehended or were missing, or if the message contained logical errors. When applicable, it contains information about which IEs were not comprehended or were missing.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Procedure Code	0		INTEGER (0255)	Procedure Code is to be used if Criticality Diagnostics is part of Error Indication procedure, and not within the response message of the same procedure that caused the error.
Triggering Message	0		ENUMERATED (initiating message, successful outcome, unsuccessful outcome)	The Triggering Message is used only if the Criticality Diagnostics is part of Error Indication procedure.
Procedure Criticality	0		ENUMERATED (reject, ignore, notify)	This Procedure Criticality is used for reporting the Criticality of the Triggering message (Procedure).
Information Element Criticality Diagnostics		0 <maxnroferror s&gt;</maxnroferror 		
>IE Criticality	М		ENUMERATED (reject, ignore, notify)	The IE Criticality is used for reporting the criticality of the triggering IE. The value "ignore" is not applicable.
>IE ID	M		INTEGER (065535)	The IE ID of the not understood or missing IE
>Type Of Error	М		ENUMERATED(not understood, missing,)	

Range bound	Explanation
maxNrOfErrors	Maximum no. of IE errors allowed to be reported with a single
	message. The Value is 256.

## 9.2.3.4 Bit Rate

This IE indicates the number of bits delivered by NG-RAN in UL or to NG-RAN in DL or by UE in sidelink within a period of time, divided by the duration of the period. It is used, for example, to indicate the maximum or guaranteed bit rate for a GBR QoS flow, or an aggregate maximum bit rate.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bit Rate	M		INTEGER (04,000,000,000,000, )	The unit is: bit/s

### 9.2.3.5 QoS Flow Level QoS Parameters

This IE defines the QoS Parameters to be applied to a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE QoS	М				-	_
Characteristics						
>Non Dynamic 5QI						
>>Non dynamic 5QI	M		9.2.3.8		-	
Descriptor						
>Dynamic 5QI						
>>Dynamic 5QI	М		9.2.3.9		-	
Descriptor						
Allocation and Retention Priority	М		9.2.3.7		-	
GBR QoS Flow Information	0		9.2.3.6	This IE shall be present for GBR QoS flows and is ignored otherwise.	-	
Reflective QoS Attribute	0		ENUMERATED (subject to,)	Reflective QoS is specified in TS 23.501 [7]. This IE applies to Non-GBR bearers only and is ignored otherwise.	-	
Additional QoS flow Information	O		ENUMERATED (more likely,)	If this IE is set to "more likely", this indicates that traffic for this QoS flow is likely to appear more often than traffic for other flows established for the PDU session. This IE may be present in case of Non-GBR flows only and is ignored otherwise.	-	
QoS Monitoring Request	0		ENUMERATED (UL, DL, Both,)	Indicates to measure UL, or DL, or both UL/DL delays for the associated QoS flow.	YES	ignore

# 9.2.3.6 GBR QoS Flow Information

This IE indicates QoS Parameters for a GBR QoS Flow for downlink and uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assign Critica
Maximum Flow Bit Rate Downlink	М		Bit Rate 9.2.3.4	Maximum Bit Rate in DL. Flow Bit Rates are specified in TS 23.501 [7].	-	
Maximum Flow Bit Rate Uplink	М		Bit Rate 9.2.3.4	Maximum Bit Rate in UL. Flow Bit Rates are specified in TS 23.501 [7].	_	
Guaranteed Flow Bit Rate Downlink	M		Bit Rate 9.2.3.4	Guaranteed Bit Rate (provided that there is data to deliver) in DL. Flow Bit Rates are specified in TS 23.501 [7].	-	
Guaranteed Flow Bit Rate Uplink	М		Bit Rate 9.2.3.4	Guaranteed Bit Rate (provided that there is data to deliver). Flow Bit Rates are specified in TS 23.501 [7].	-	
Notification Control	0		ENUMERAT ED (notification requested, )	Notification control is specified in TS 23.501 [7]	_	
Maximum Packet Loss Rate Downlink	0		Packet Loss Rate 9.2.3.11	Indicates the maximum rate for lost packets that can be tolerated in the downlink direction. Maximum Packet Loss Rate is specified in TS 23.501 [7].	-	
Maximum Packet Loss Rate Uplink	0		Packet Loss Rate 9.2.3.11	Indicates the maximum rate for lost packets that can be tolerated in the uplink direction.  Maximum Packet Loss Rate is specified in TS 23.501 [7].	_	
Alternative QoS Parameters Set List	0		9.2.3.102	Indicates alternative sets of QoS Parameters for the QoS flow.	YES	ignor

# 9.2.3.7 Allocation and Retention Priority

This IE specifies the relative importance compared to other QoS flows for allocation and retention of the NR RAN resource.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Allocation/Retention Priority		1		
>Priority Level	M		INTEGER (015,)	Desc.: This defines the relative importance of a resource request. (see TS 23.501 [7]). Usage: Values between 1 and 15 are ordered in decreasing order of priority, i.e., 1 is the highest and 15 is the lowest.
>Pre-emption Capability	M		ENUMERATED (shall not trigger pre-emption, may trigger pre- emption,)	Desc.: This IE indicates the preemption capability of the request on other QoS flows (see TS 23.501 [7]). Usage: The QoS flow shall not pre-empt other QoS flow or, the QoS flow may pre-empt other QoS flows. NOTE: The Pre-emption Capability indicator applies to the allocation of resources for a QoS flow and as such it provides the trigger to the preemption procedures/processes of the gNB.
>Pre-emption Vulnerability	M		ENUMERATED (not pre- emptable, pre- emptable,)	Desc.: This IE indicates the vulnerability of the QoS flow to preemption of other QoS flows (see TS 23.501 [7]).  Usage: The QoS flow shall not be preempted by other QoS flows or the QoS flow may be preempted by other QoS flows.  NOTE: Pre-emption Vulnerability indicator applies for the entire duration of the QoS flow, unless modified and as such indicates whether the QoS flow is a target of the pre-emption procedures/processes of the gNB.

# 9.2.3.8 Non dynamic 5QI Descriptor

This IE defines QoS characteristics for a standardized or pre-configured 5QI for downlink and uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
5QI	M		INTEGER (0255, )	This IE contains the standardized or preconfigured 5QI as specified in TS 23.501 [7]	ľ	
Priority Level	0		9.2.3.62	Priority level is specified in TS 23.501 [7]. When included, it overrides standardized or pre- configured value.	Т	
Averaging Window	0		9.2.3.14	Averaging window is specified in TS 23.501 [7]. When included, it overrides standardized or preconfigured value.	-	
Maximum Data Burst Volume	0		9.2.3.15	Maximum Data Burst Volume is specified in TS 23.501 [7]. When included, it overrides standardized or pre- configured value.	-	
CN Packet Delay Budget Downlink	0		Extended Packet Delay Budget 9.2.3.113	Core Network Packet Delay Budget is specified in TS 23.501 [7]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore
CN Packet Delay Budget Uplink	0		Extended Packet Delay Budget 9.2.3.113	Core Network Packet Delay Budget is specified in TS 23.501 [7]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore

# 9.2.3.9 Dynamic 5QI Descriptor

This IE defines the QoS characteristics for a non-standardized or not pre-configured 5QI for downlink and uplink.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Priority Level	М		9.2.3.62	Priority level is specified in TS 23.501 [7].	-	,
Packet Delay Budget	М		9.2.3.12	Packet Delay Budget is specified in TS 23.501 [7]. This IE is ignored if the Extended Packet Delay Budget IE is present.	_	
Packet Error Rate	М		9.2.3.13	Packet Error Rate is specified in TS 23.501 [7].	I	
5QI	0		INTEGER (0255,)	This IE contains the dynamically assigned 5QI as specified in TS 23.501 [7].	ı	
Delay Critical	C- ifGBRflow		ENUMERATED (Delay critical, Non-delay critical,)	This IE indicates whether the GBR QoS flow is delay critical as specified in TS 23.501 [7].	ı	
Averaging Window	C- ifGBRflow		9.2.3.14	Averaging window is specified in TS 23.501 [7].	-	
Maximum Data Burst Volume	0		9.2.3.15	Maximum Data Burst Volume is specified in TS 23.501 [7]. This IE shall be included if the <i>Delay Critical</i> IE is set to "delay critical" and is be ignored otherwise.	ľ	
Extended Packet Delay Budget	0		9.2.3.113	Packet Delay Budget is specified in TS 23.501 [7].	YES	ignore
CN Packet Delay Budget Downlink	0		Extended Packet Delay Budget 9.2.3.113	Core Network Packet Delay Budget is specified in TS 23.501 [7]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore
CN Packet Delay Budget Uplink	0		Extended Packet Delay Budget 9.2.3.113	Core Network Packet Delay Budget is specified in TS 23.501 [7]. This IE may be present in case of GBR QoS flows and is ignored otherwise.	YES	ignore

Condition	Explanation
ifGBRflow	This IE shall be present if the GBR QoS Flow Information IE is present in
	the QoS Flow Level QoS Parameters IE.

#### 9.2.3.10 QoS Flow Identifier

This IE identifies a QoS Flow within a PDU Session. Definition and use of the QoS Flow Identifier is specified in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flow Identifier	M		INTEGER (063,)	

#### 9.2.3.11 Packet Loss Rate

This IE indicates the Packet Loss Rate for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Packet Loss Rate	M		INTEGER (01000,)	Ratio of lost packets per
				number of packets sent,
				expressed in tenth of
				percent.

## 9.2.3.12 Packet Delay Budget

This IE indicates the Packet Delay Budget for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Packet Delay Budget	М		INTEGER (01023,)	Upper bound value for the delay that a packet may
				experience expressed in
				units of 0.5ms.

#### 9.2.3.13 Packet Error Rate

This IE indicates the Packet Error Rate for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Scalar	M		INTEGER (09,)	The packet error rate is expressed as Scalar * 10 <sup>-k</sup> , whereas k is the Exponent.
Exponent	M		INTEGER (09,)	

### 9.2.3.14 Averaging Window

This IE indicates the Averaging Window for a QoS flow and applies to GBR QoS flows only.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Averaging Window	M		INTEGER (04095,)	Unit: ms.

#### 9.2.3.15 Maximum Data Burst Volume

This IE indicates the Maximum Data Burst Volume for a QoS flow and applies to delay critical GBR QoS flows only.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Maximum Data Burst	M		INTEGER (04095,, 4096	Unit: byte,
Volume			2000000)	-

#### 9.2.3.16 NG-RAN node UE XnAP ID

The NG-RAN node UE XnAP ID uniquely identifies a UE over the Xn interface within the NG-RAN node.

The use of this IE is defined in TS 38.401 [2].

NOTE: If Xn-C signalling transport is shared among multiple interface instances, the value of the NG-RAN node UE XnAP ID is allocated so that it can be associated with the corresponding Xn-C interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NG-RAN node UE XnAP	M		INTEGER (0 2 <sup>32</sup> -1)	
ID			·	

## 9.2.3.17 UE Aggregate Maximum Bit Rate

The UE Aggregate Maximum Bitrate is applicable for all Non-GBR QoS flows per UE which is defined for the Downlink and the Uplink direction and a subscription parameter provided by the AMF to the NG-RAN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Aggregate Maximum Bit Rate		1		Applicable for Non-GBR QoS flows.
>UE Aggregate Maximum Bit Rate Downlink	M		Bit Rate 9.2.3.4	This IE indicates the UE Aggregate Maximum Bit Rate as specified in TS 23.501 [7] in the downlink direction.
>UE Aggregate Maximum Bit Rate Uplink	M		Bit Rate 9.2.3.4	This IE indicates the UE Aggregate Maximum Bit Rate as specified in TS 23.501 [7] in the uplink direction.

#### 9.2.3.18 PDU Session ID

This IE identifies a PDU Session for a UE. Definition and use of the PDU Session ID is specified in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session ID	M		INTEGER (0255)	

### 9.2.3.19 PDU Session Type

This IE defines the PDU Session Type as specified in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session Type	M		ENUMERATED (IPv4, IPv6,	
			IPv4v6, Ethernet,	
			Unstructured,)	

## 9.2.3.20 TAI Support List

This IE indicates the list of TAIs supported by NG-RAN node and associated characteristics e.g. supported slices.

IE/Group Name	Presenc	Range	IE type and	Semantics	Criticality	Assigned
	е		reference	description		Criticality
TAI Support Item		1 <maxnoof< td=""><td></td><td></td><td>_</td><td></td></maxnoof<>			_	
		supportedTA Cs>				
>TAC	M		9.2.2.5	Broadcast TAC	_	
>Broadcast		1 <maxnoof< td=""><td></td><td></td><td>_</td><td></td></maxnoof<>			_	
PLMNs		supportedPL MNs>				
>>PLMN Identity	M		9.2.2.4	Broadcast PLMN	_	
>>TAI Slice	M		Slice Support List	Supported S-	_	
Support List			9.2.3.22	NSSAIs per TA		
>>NPN Support	0		9.2.2.72		YES	reject
>>Extended TAI	0		Extended Slice	Additional	YES	reject
Slice Support			Support List	Supported S-		
List			9.2.3.139	NSSAIs per TA		

Range bound	Explanation
maxnoofsupportedTACs	Maximum no. of TACs supported by an NG-RAN node. Value is 256.
maxnoofsupportedPLMNs	Maximum no. of PLMNs supported by an NG-RAN node. Value is 12.

### 9.2.3.21 S-NSSAI

This IE indicates the S-NSSAI as defined in TS 23.003 [22].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SST	M		OCTET STRING	
			(SIZE(1))	
SD	0		OCTET STRING	
			(SIZE(3))	

## 9.2.3.22 Slice Support List

This IE indicates the list of supported slices.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Slice Support Item		1 <maxnoofslic eltems=""></maxnoofslic>		
>S-NSSAI	M		9.2.3.21	

Range bound	Explanation
maxnoofSliceItems	Maximum no. of signalled slice support items. Value is 1024.

## 9.2.3.23 Index to RAT/Frequency Selection Priority

The *Index to RAT/Frequency Selection Priority* IE is used to define local configuration for RRM strategies such as camp priorities and control of inter-RAT/inter-frequency mobility in RRC\_CONNECTED, as specified in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Index to RAT/Frequency Selection Priority	М		INTEGER (1256)	

#### 9.2.3.24 GUAMI

This IE contains the Globally Unique AMF Identifier (GUAMI) as defined in TS 23.003 [22].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.2.4	
AMF Identifier		1		
>AMF Region ID	M		BIT STRING (SIZE (8))	
>AMF Set ID	M		BIT STRING (SIZE (10))	
>AMF Pointer	M		BIT STRING (SIZE (6))	

### 9.2.3.25 Target Cell Global ID

This IE contains either an NR CGI or an E-UTRA CGI.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE Target Cell	M			
>NR				
>>NR CGI	M		9.2.2.7	
>E-UTRA				
>>E-UTRA CGI	M		9.2.2.8	

#### 9.2.3.26 AMF UE NGAP ID

This IE is defined in TS 38.413 [5] and used to uniquely identify the UE association over the source side NG interface instance.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AMF UE NGAP ID	M		INTEGER (0 2 <sup>40</sup> -1)	

## 9.2.3.27 SCG Configuration Query

The SCG Configuration Query IE is used to request the S-NG-RAN node to provide current SCG configuration.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
SCG Configuration Query	M		ENUMERATED (True,)	

#### 9.2.3.28 RLC Mode

The RLC Mode IE indicates the RLC Mode used for a DRB.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RLC Mode	M		ENUMERATED (	
			RLC-AM,	
			RLC-UM-Bidirectional,	
			RLC-UM-Unidirectional-UL,	
			RLC-UM-Unidirectional-DL,	
			)	

## 9.2.3.29 Transport Layer Address

This IE is defined to contain an IP address.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Transport Layer Address	M		BIT STRING (1160,)	

## 9.2.3.30 UP Transport Layer Information

This element is used to provide the transport layer information associated with NG or Xn user plane transport. In this release it corresponds to an IP address and a GTP Tunnel Endpoint Identifier.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE UP Transport	M			
Layer Information				
>GTP tunnel				
>>Transport Layer Address	M		9.2.3.29	The Transport Layer Address is specified in TS 38.424 [19] and TS 38.414 [20].
>>GTP-TEID	M		OCTET STRING (4)	The Tunnel Endpoint Identifier (TEID) is specified in TS 29.281 [18]

## 9.2.3.31 CP Transport Layer Information

This element is used to provide the transport layer information associated with NG or Xn control plane transport.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
CHOICE CP Transport Layer Information						
>Endpoint-IP-address					-	
>>Endpoint IP Address	M		Transport Layer Address 9.2.3.29		-	
>Endpoint-IP-address- and-port					YES	reject
>>Endpoint IP Address	М		Transport Layer Address 9.2.3.29		-	
>>Port Number	M		BIT STRING (16)		-	

#### 9.2.3.32 Masked IMEISV

This information element contains the IMEISV value with a mask, to identify a terminal model without identifying an individual Mobile Equipment.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Masked IMEISV	M		BIT STRING (SIZE(64))	Coded as the International Mobile station Equipment Identity and Software Version Number (IMEISV) defined in TS 23.003 [22] with the last 4 digits of the SNR masked by setting the corresponding bits to 1.

#### 9.2.3.33 DRB ID

This IE contains the DRB ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
DRB ID	M		INTEGER (132,)	

### 9.2.3.34 DL Forwarding

This element indicates a proposal for forwarding of downlink packets.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
DL Forwarding	M		ENUMERATED	
_			(DL forwarding	
			proposed,)	

#### 9.2.3.35 Data Forwarding Accepted

This element indicates that data forwarding was accepted.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Data Forwarding Accepted	M		ENUMERATED (data forwarding accepted,)	

## 9.2.3.36 COUNT Value for PDCP SN Length 12

This information element indicates the 12-bit long PDCP sequence number and the corresponding 20 bits long Hyper Frame Number.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDCP-SN Length 12	M		INTEGER (04095)	
HFN for PDCP-SN Length 12	M		INTEGER (01048575)	

## 9.2.3.37 COUNT Value for PDCP SN Length 18

This information element indicates the 18-bit long PDCP sequence number and the corresponding 14 bits long Hyper Frame Number.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDCP-SN Length 18	М		INTEGER (0262143)	
HFN for PDCP-SN Length 18	M		INTEGER (016383)	

### 9.2.3.38 RAN Paging Area

The RAN Paging Area IE defines the paging area within a PLMN for RAN paging a UE in RRC\_INACTIVE state.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	M		9.2.2.4	
CHOICE RAN Paging	М			
Area Choice				
>Cell List				
>>Cell List Item		1 < maxnoofCellsinRNA>		
>>>NG-RAN Cell Identity	M		9.2.2.9	In this version of the specification, the RAN paging area should contain NG-RAN cells of the same RAT type.
>RAN Area ID List				
>>RAN Area ID List		1		
Item		<maxnoofranareasinr NA&gt;</maxnoofranareasinr 		
>>>RAN Area ID	M		9.2.3.39	

Range bound	Explanation
maxnoofCellsinRNA	Maximum no. of cells in a RAN notification area. Value is 32.
maxnoofRanAreasinRNA	Maximum no. of RAN area IDs in a RAN notification area. Value is 16.

### 9.2.3.39 RAN Area ID

This IE defines the RAN Area ID.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
TAC	M		9.2.2.5	Tracking Area Code
RANAC	0		RAN Area Code	
			9.2.2.6	

### 9.2.3.40 UE Context ID

This IE is used to address a UE Context within an NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE UE Context ID	M			
>RRC Resume				
>>I-RNTI	M		9.2.3.46	NOTE: How the new NG-RAN node is able to resolve the old NG-RAN ID from the I-RNTI is a matter of proper configuration in the old and new NG-RAN node.
>>Allocated C-RNTI	M		BIT STRING (SIZE (16))	Temporary C-RNTI allocated to the UE by the cell where the RRC connection has been requested to be resumed, contained in the MAC RAR as defined in TS 38.321 [35] or in TS 36.321 [36].
>>Access PCI	M		NG-RAN Cell PCI 9.2.2.10	The cell PCI where the RRC connection has been requested to be resumed.
>RRC Reestablishment				
>>C-RNTI	M		BIT STRING (SIZE (16))	C-RNTI contained in the RRCReestablishmentRequest message (TS 38.331 [10]) or RRCConnectionReestablishmentRequest message (TS 36.331 [14]).
>> Failure Cell PCI	М		NG-RAN Cell PCI 9.2.2.10	

## 9.2.3.41 Assistance Data for RAN Paging

This IE provides assistance information for RAN paging.

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
RAN Paging Attempt Information	0		9.2.3.42		1	
NPN Paging Assistance Information	0		9.2.3.121		YES	ignore

# 9.2.3.42 RAN Paging Attempt Information

This IE includes information related to the RAN paging attempt over Xn.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Paging Attempt Count	М		INTEGER (116,)	Number of the RAN paging attempt.
Intended Number of Paging Attempts	M		INTEGER (116,)	Intended number of RAN paging attempts.
Next Paging Area Scope	0		ENUMERATED (same, changed,)	Indicates whether the RAN paging area scope will change at next RAN paging attempt.

## 9.2.3.43 UE RAN Paging Identity

The IE defines the UE Identity for RAN paging a UE in RRC\_INACTIVE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE UE RAN Paging	М			
Identity				
>I-RNTI full				
>>I-RNTI full	М		BIT STRING (SIZE (40))	

# 9.2.3.44 Paging Priority

This information element contains an indication of the priority to be considered for the paging request.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Paging Priority	M		ENUMERATED (PrioLevel1, PrioLevel2, PrioLevel3, PrioLevel4, PrioLevel5, PrioLevel6, PrioLevel7, PrioLevel8,)	Lower value codepoint indicates higher priority.

## 9.2.3.45 Delivery Status

This IE provides the delivery status of RRC PDUs provided by RRC Transfer message.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Delivery Status	М		INTEGER (02 <sup>12</sup> -1)	Highest successfully
				delivered NR PDCP SN, as
				defined in TS 38.323 [11].

### 9.2.3.46 I-RNTI

The I-RNTI is defined for allocation in an NR or E-UTRA serving cell as a reference to a UE Context within an NG-RAN node. The I-RNTI is partitioned into two parts, the first part identifies the NG-RAN node that allocated the I-RNTI and the second part identifies the UE context stored in this NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE I-RNTI				
>I-RNTI full				
>>I-RNTI full	М		BIT STRING (SIZE (40))	This IE is used to identify the suspended UE context of a UE in RRC_INACTIVE using 40 bits (refer to <i>I-RNTI-Value</i> IE in TS 38.331 [10] and <i>I-RNTI</i> IE in TS 36.331 [14]).
>I-RNTI short				
>>I-RNTI short	М		BIT STRING (SIZE (24))	This IE is used to identify the suspended UE context of a UE in RRC_INACTIVE using 24 bits (refer to Shortl-RNTI-Value IE in TS 38.331 [10] and Shortl-RNTI IE in TS 36.331 [14]).

# 9.2.3.47 Location Reporting Information

This information element indicates how the location information should be reported.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Event Type	M		ENUMERATED ( report upon change of serving cell, report UE moving presence into or out of the Area of Interest,)	
Report Area	M		ENUMERATED (Cell,)	
Area of Interest Information	0		9.2.3.48	

### 9.2.3.48 Area of Interest Information

This IE contains indicates the Area of Interest information, which may contain multiple Areas of Interest, as specified in TS 23.502 [13].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Area of Interest Item		1 <maxnoofaois></maxnoofaois>		
>List of TAIs in Area of Interest		01		
>>TAI in Area of Interest Item		1< maxnoofTAIsinAoI >		
>>>PLMN Identity	M		9.2.2.4	
>>>TAC	М		9.2.2.5	
>List of Cells in Area of Interest		01		This IE may need to be refined with SA2.
>>Cell Item		1 <maxnoofcellsinaol></maxnoofcellsinaol>		
>>>PLMN Identity	M		9.2.2.4	
>>>NG-RAN Cell Identity	М		9.2.2.9	
>List of Global NG- RAN Nodes in Area of Interest		01		
>>Global NG-RAN Node in Area of Interest Item		1 <maxnoofrannodesinaol></maxnoofrannodesinaol>		
>>>Global NG-RAN Node ID	М		9.2.2.3	
>Request Reporting Reference ID	М		9.2.3.58	

Range bound	Explanation
maxnoofAOIs	Maximum no. of Areas of Interest. Value is 64.
maxnoofTAlsinAol	Maximum no. of tracking areas in an Area of Interest. Value is 16.
maxnoofcellsinAol	Maximum no. of cells in an Area of Interest. Value is 256.
maxnoofRANNodesinAol	Maximum no. of global NG-RAN nodes in an Area of Interest. Value is 64.

# 9.2.3.49 UE Security Capabilities

The UE Security Capabilities IE defines the supported algorithms for encryption and integrity protection in the UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
NR Encryption Algorithms	M		BIT STRING {nea1-128(1), nea2-128(2), nea3-128(3)} (SIZE(16,))	Each position in the bitmap represents an encryption algorithm: "all bits equal to 0" – UE supports no other NR algorithm than NEA0, "first bit" – 128-NEA1, "second bit" – 128-NEA2, "third bit" – 128-NEA3, other bits reserved for future use. Value '1' indicates support and value '0' indicates no support of the algorithm. Algorithms are defined in TS 33.501 [28].
NR Integrity Protection Algorithms	М		BIT STRING {nia1-128(1), nia2-128(2), nia3-128(3)} (SIZE(16,))	Each position in the bitmap represents an integrity protection algorithm:  "all bits equal to 0" – UE supports no other NR algorithm than NIA0,  "first bit" – 128-NIA1,  "second bit" – 128-NIA2,  "third bit" – 128-NIA3,  other bits reserved for future use.  Value '1' indicates support and value '0' indicates no support of the algorithm.  Algorithms are defined in TS 33.501 [28].
E-UTRA Encryption Algorithms	М		BIT STRING {eea1-128(1), eea2-128(2), eea3-128(3)} (SIZE(16,))	Each position in the bitmap represents an encryption algorithm:  "all bits equal to 0" – UE supports no other algorithm than EEA0,  "first bit" – 128-EEA1,  "second bit" – 128-EEA2,  "third bit" – 128-EEA3,  other bits reserved for future use.  Value '1' indicates support and value '0' indicates no support of the algorithm.  Algorithms are defined in TS 33.401 [29].
E-UTRA Integrity Protection Algorithms	М		BIT STRING {eia1-128(1), eia2-128(2), eia3-128(3)} (SIZE(16,))	Each position in the bitmap represents an integrity protection algorithm:  "all bits equal to 0" – UE supports no other algorithm than EIA0,  "first bit" – 128-EIA1,  "second bit" – 128-EIA2,  "third bit" – 128-EIA3,  other bits reserved for future use.  Value '1' indicates support and value '0' indicates no support of the algorithm.  Algorithms are defined in TS 33.401 [29].

# 9.2.3.50 AS Security Information

The AS Security Information IE is used to generate the key material to be used for AS security with the UE.

IE/Group Name	Presence	Range	IE Type and	Semantics Description
			Reference	
Key NG-RAN Star	М		BIT STRING (256)	K <sub>NG-RAN</sub> * defined in TS 33.501 [28].
Next Hop Chaining Count	M		INTEGER (07)	Next Hop Chaining Count (NCC) defined in TS 33.501 [28]

### 9.2.3.51 S-NG-RAN node Security Key

The S-NG-RAN node Security Key IE is used to apply security in the S-NG-RAN node as defined in TS 33.501 [28].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
S-NG-RAN node	M		BIT STRING	The S-K <sub>SN</sub> which is provided by the M-NG-RAN
Security Key			(SIZE(256))	node, see TS 33.501 [28].

### 9.2.3.52 Security Indication

This IE contains the user plane integrity protection indication and confidentiality protection indication which indicates the requirements on UP integrity protection and ciphering for the corresponding PDU session, respectively. Additionally, this IE contains the maximum integrity protected data rate values (UL and DL) per UE for integrity protected DRBs.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Integrity Protection Indication	M		ENUMERATED	Indicates whether UP
			(required, preferred, not	integrity protection shall
			needed,)	apply, should apply, or
				shall not apply for the
				concerned PDU session.
Confidentiality Protection	M		ENUMERATED	Indicates whether UP
Indication			(required, preferred, not	ciphering shall apply,
			needed,)	should apply, or shall not
				apply for the concerned
				PDU session.
Maximum Integrity Protected	C-		9.2.3.73	If present, this IE contains
Data Rate	ifIntegrityP			the values received from
	rotectionre			the CN for the overall UE
	quiredorpr			capability. This IE may be
	eferred			ignored by the SN in the
				case of dual connectivity.

Condition	Explanation
ifIntegrityProtectionrequiredorpreferred	This IE shall be present if the Integrity Protection IE within the Security
	Indication IE is present and set to "required" or "preferred".

### 9.2.3.53 Mobility Restriction List

This IE defines roaming or access restrictions for subsequent mobility actions for which the NG-RAN provides information about the target of the mobility action towards the UE, e.g., handover, or for SCG selection during dual connectivity operation or for assigning proper RNAs. If the NG-RAN receives the *Mobility Restriction List* IE, it shall overwrite previously received restriction information. NG-RAN behaviour upon receiving this IE is specified in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Serving PLMN	М		PLMN Identity 9.2.2.4		-	
Equivalent PLMNs		0 <maxnoo fEPLMNs&gt;</maxnoo 		Allowed PLMNs in addition to Serving PLMN. This list corresponds to the list of "equivalent PLMNs" as defined in TS 24.501 [30]. This list is part of the roaming restriction information. Roaming restrictions apply to PLMNs other than the Serving PLMN and Equivalent PLMNs.	-	
>PLMN Identity	M		9.2.2.4		-	
RAT Restrictions		0 <maxnoo fPLMNs&gt;</maxnoo 		This IE contains RAT restriction related information as specified in TS 23.501 [7].	_	
>PLMN Identity	М		9.2.2.4		1	
>RAT Restriction Information	M		BIT STRING { e-UTRA (0), nR (1), nR- unlicensed (2)} (SIZE(8,))	Each position in the bitmap represents a RAT. If a bit is set to "1", the respective RAT is restricted for the UE. If a bit is set to "0", the respective RAT is not restricted for the UE. This version of the specification does not use bits 3-7, the sending node shall set bits 3-7 to "0", the sender shall ignore bits 3-7.	_	
>Extended RAT Restriction Information	0		9.2.3.99	If this IE is included, the RAT Restriction Information IE is ignored.	YES	ignore
Forbidden Area Information		0 <maxnoo fPLMNs&gt;</maxnoo 		This IE contains Forbidden Area information as specified in TS 23.501 [7].	-	
>PLMN Identity	M		9.2.2.4		ı	
>Forbidden TACs		1 <maxnoo fForbiddenT ACs&gt;</maxnoo 			_	
>>TAC	М		9.2.2.5	The TAC of the forbidden TAI.	ı	
Service Area Information		0 <maxnoo fPLMNs&gt;</maxnoo 		This IE contains Service Area Restriction information as specified in TS 23.501 [7].	-	
>PLMN Identity	М		9.2.2.4		_	
>Allowed TACs		0 <maxnoo AllowedAre as&gt;</maxnoo 			_	
>>TAC	М		9.2.2.5	The TAC of the allowed TAI.	-	
>Not Allowed TACs		0 <maxnoo AllowedAre as&gt;</maxnoo 			-	
>>TAC	М		9.2.2.5	The TAC of the not-allowed TAI.	_	

Last E-UTRAN PLMN Identity	0		9.2.2.4	Indicates the E-UTRAN PLMN ID from where the UE formerly handed over to 5GS and which is preferred in case of subsequent mobility to EPS.	YES	ignore
Core Network Type Restriction for serving PLMN	0		ENUMERAT ED (EPCForbidd en,)	Indicates whether the UE is restricted to connect to EPC for the Serving PLMN as specified in TS 23.501 [7].	YES	ignore
Core Network Type Restriction for Equivalent PLMNs		0 <maxnoo fEPLMNs&gt;</maxnoo 			YES	ignore
>PLMN Identity	M		9.2.2.4	Includes any of the Equivalent PLMNs listed in the <i>Mobility Restriction List</i> IE for which CN Type restriction applies as specified in TS 23.501 [7].	-	
>Core Network Type Restriction	M		ENUMERAT ED (EPCForbidd en, 5GCForbidd en,)	Indicates whether the UE is restricted to connect to EPC or to 5GC for this PLMN.	-	
NPN Mobility Information	0		9.2.3.119		YES	reject

Range bound	Explanation
maxnoofEPLMNs	Maximum no. of equivalent PLMNs. Value is 15.
maxnoofPLMNs	Maximum no. of allowed PLMNs. Value is 16.
maxnoofForbiddenTACs	Maximum no. of forbidden Tracking Area Codes. Value is 4096.
maxnoofAllowedAreas	Maximum no. of allowed or not allowed Tracking Areas. Value is 16.

## 9.2.3.54 Xn Benefit Value

The Xn Benefit Value IE indicates the quantified benefit of the signalling connection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Xn Benefit Value	М		INTEGER (18,)	Value 1 indicates lowest benefit, and 8 indicates highest benefit.

### 9.2.3.55 Trace Activation

This IE defines parameters related to a trace activation.

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
NG-RAN Trace ID	M		9.2.3.97		_	
Interfaces To Trace	M		BIT STRING (SIZE(8))	Each position in the bitmap represents an NG-RAN node interface: first bit = NG-C, second bit = Xn-C, third bit = Uu, fourth bit = F1-C, fifth bit = E1: other bits reserved for future use. Value '1' indicates 'should be traced'. Value '0' indicates 'should not be traced'.	-	
Trace Depth	M		ENUMERATED (minimum, medium, maximum, MinimumWithoutVend orSpecificExtension, MediumWithoutVend orSpecificExtension, MaximumWithoutVen dorSpecificExtension,)	Defined in TS 32.422 [23].	-	
Trace Collection Entity IP Address	М		Transport Layer Address 9.2.3.29	For File based Reporting. Defined in TS 32.422 [23] Should be ignored if URI is present	_	
Trace Collection Entity URI	0		9.2.3.124	For Streaming based Reporting. Defined in TS 32.422 [11] Replaces Trace Collection Entity IP Address if present	YES	ignore
MDT Configuration	0		9.2.3.125	This IE defines the MDT configuration parameters.	YES	ignore

# 9.2.3.56 Time To Wait

This IE defines the minimum allowed waiting times.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Time To Wait	M		ENUMERATED (1s, 2s, 5s, 10s, 20s, 60s,)	

### 9.2.3.57 QoS Flow Notification Control Indication Info

This IE provides information about QoS flows of a PDU Session Resource for which notification control has been requested.

IE/Group Name	Presenc e	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
QoS Flow Notification Indication Info		1			_	
>QoS Flows Notify Item		1 <maxno ofQoSFlow s&gt;</maxno 			_	
>>QoS Flow Identifier	M		9.2.3.10		_	
>>Notification Information	М		ENUMERATED (fulfilled, not fulfilled,)		-	
>>Current QoS Parameters Set Index	0		Alternative QoS Parameter set Notify Index 9.2.3.104	Index to the currently fulfilled alternative QoS parameters set. Value 0 indicates that NG-RAN cannot even fulfil the lowest alternative parameter set.	YES	ignore

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

### 9.2.3.58 Request Reporting Reference ID

This IE contains the Request Reporting Reference ID and is used for UE presence in Area of Interest reporting as specified in TS 23.502 [13].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Request Reporting Reference ID	M		INTEGER (164,)	

## 9.2.3.59 User plane traffic activity report

This IE is used to indicate user plane traffic activity.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
User plane traffic activity report	M		ENUMERATED (inactive, reactivated,)	"re-activated" is only set after "inactive" has been reported for the concerned reporting object

## 9.2.3.60 Lower Layer presence status change

This IE is used to indicate that lower layer resources' presence status shall be changed. If the presence status is set to "release lower layers" or "suspend lower layers", SDAP entities, PDCP entities, Xn-U bearer resources, NG-U bearer resources and UE context information shall be kept.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
Lower Layer presence status change	M		ENUMERATED (release lower layers, re- establish lower layers,, suspend lower layers, resume	"re-establish lower layers" is only set after "release lower layers" has been indicated. "resume lower layers" shall restore SCG. "resume lower layers" shall be only set after "suspend lower layers" has been
			lower layers)	indicated.

### 9.2.3.61 RRC Resume Cause

The purpose of the *RRC Resume Cause* IE is to indicate to the old NG-RAN node the reason for the RRC Connection Resume as received from the UE in the *ResumeCause* defined in TS 36.331 [14] and TS 38.331 [10]. In this version of the specification, this is limited to the case of RNA update.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RRC Resume Cause	M		ENUMERATED (rna-Update,)	

### 9.2.3.62 Priority Level

This IE indicates the Priority Level for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Priority Level	M		INTEGER (1127,)	Values ordered in decreasing order of priority, i.e. with 1 as the highest priority and 127 as the lowest priority.

### 9.2.3.63 PDCP SN Length

The PDCP SN Length IE is used to indicate the PDCP SN length configuration of the bearer.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UL PDCP SN Length	M		ENUMERATED (12bits,	This IE indicates the PDCP
			18bits,)	sequence number size for UL.
DL PDCP SN Length	М		ENUMERATED (12bits,	This IE indicates the PDCP
DL FDCF SIN Length	IVI		18bits,)	sequence number size for
				DL.

## 9.2.3.64 UE History Information

The *UE History Information* IE contains information about cells that a UE has been served by in active state prior to the target cell. The overall mechanism is described in TS 36.300 [12].

NOTE: The definition of this IE is aligned with the definition of the *UE History Information* IE in TS 38.413 [5].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Last Visited Cell List		1 <maxnoofcellsin UEHistoryInfo&gt;</maxnoofcellsin 		Most recent information is added to the top of this list
>Last Visited Cell Information	М		9.2.3.65	

Range bound	Explanation
maxnoofCellsinUEHistoryInfo	Maximum number of last visited cell information records that can be
	reported in the IE. Value is 16.

#### 9.2.3.65 Last Visited Cell Information

The Last Visited Cell Information may contain cell specific information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE Last Visited Cell	M			
Information				
>NG-RAN Cell				
>>Last Visited NG-RAN	M		OCTET STRING	Defined in TS 38.413 [5].
Cell Information				
>E-UTRAN Cell				
>>Last Visited E-UTRAN	M		OCTET STRING	Defined in TS 36.413 [31].
Cell Information				
>UTRAN Cell				
>>Last Visited UTRAN	M		OCTET STRING	Defined in TS 25.413 [32].
Cell Information				
>GERAN Cell				
>>Last Visited GERAN	M		OCTET STRING	Defined in TS 36.413 [31].
Cell Information				

## 9.2.3.66 Paging DRX

This IE indicates the Paging DRX as defined in TS 38.304 [33] and TS 36.304 [34].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Paging DRX	M		ENUMERATED (32, 64,	
			128, 256, , 512, 1024)	

## 9.2.3.67 Security Result

This IE indicates whether the security policy indicated as "preferred" in the Security Indication IE is performed or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Integrity Protection Result	M		ENUMERATED	Indicates whether UP
			(performed, not	integrity protection is
			performed,)	performed or not for the
				concerned PDU session.
Confidentiality Protection	M		ENUMERATED	Indicates whether UP
Result			(performed, not	ciphering is performed or
			performed,)	not for the concerned PDU
				session.

# 9.2.3.68 UE Context Kept Indicator

This IE indicates whether the UE Context is kept at the S-NG-RAN node in case of an M-NG-RAN node handover without S-NG-RAN node change.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
UE Context Kept Indicator	M		ENUMERATED (true,)	

### 9.2.3.69 PDU Session Aggregate Maximum Bit Rate

This IE is applicable for all Non-GBR QoS flows per PDU session which is defined for the downlink and the uplink direction and is provided at the Handover Preparation procedure to the target NG-RAN node and at the Retrieve UE Context procedure to the new NG-RAN node as received by the 5GC, during dual connectivity related procedures to the to the S-NG-RAN node as decided by the M-NG-RAN node, as specified in TS 37.340 [8].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU session Aggregate Maximum Bit Rate		1		Applicable for Non-GBR QoS flows.
>PDU session Aggregate Maximum Bit Rate Downlink	M		Bit Rate 9.2.3.4	This IE indicates the PDU session Aggregate Maximum Bit Rate as specified in TS 23.501 [7] in the downlink direction.
>PDU session Aggregate Maximum Bit Rate Uplink	M		Bit Rate 9.2.3.4	This IE indicates the PDU session Aggregate Maximum Bit Rate as specified in TS 23.501 [7] in the uplink direction.

#### 9.2.3.70 LCID

This IE uniquely identifies a logical channel ID for the associated DRB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
LCID	M		INTEGER	Corresponds to the
			(132,)	LogicalChannelIdentity
				defined in TS 38.331 [10].

### 9.2.3.71 Duplication Activation

The *Duplication Activation* IE indicates the initial status of UL PDCP duplication, i.e., whether UL PDCP Duplication is activated or not.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Duplication Activation	М		ENUMERATED ( Active, Inactive,)	

### 9.2.3.72 RRC Config Indication

This IE indicates the type of RRC configuration used at the S-NG-RAN node.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
RRC Config Indication	М		ENUMERATED (full	
			config, delta	
			config,)	

## 9.2.3.73 Maximum Integrity Protected Data Rate

This IE indicates the maximum aggregate data rate for integrity protected DRBs for a UE as defined in TS 38.300 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description	Criticality	Assigned Criticality
Maximum IP Rate Uplink	М		Maximum IP Rate 9.2.3.89	Indicates the maximum aggregate rate for integrity protected DRBs supported by the UE in UL. If the Maximum IP Rate Downlink IE is absent, this IE applies to both UL and DL.	ľ	
Maximum IP Rate Downlink	0		Maximum IP Rate 9.2.3.89	Indicates the maximum aggregate rate for integrity protected DRBs supported by the UE in the DL.	YES	ignore

# 9.2.3.74 PDCP Change Indication

The PDCP Change Indication IE is used for S-NG-RAN node to either initiate the security key update or to request PDCP data recovery in M-NG-RAN node. The PDCP Change Indication IE is also used for M-NG-RAN node to request PDCP data recovery in S-NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE PDCP Change Indication	M			
>From S-NG-RAN node				
>>Indication from S-NG- RAN node to M-NG-RAN node	M		ENUMERATED (S-NG-RAN node key update required, PDCP data recovery required,)	S-NG-RAN node key update required indicates that the security key in S-NG-RAN node needs to be updated. The value of PDCP data recovery required indicates that the M-NG-RAN node needs to perform PDCP data recovery.
>From M-NG-RAN node				
>>Indication from M-NG- RAN node to S-NG-RAN node	M		ENUMERATED (PDCP data recovery required,)	The value of PDCP data recovery required indicates that the S-NG-RAN node needs to perform PDCP data recovery.

# 9.2.3.75 UL Configuration

This IE indicates how the UL PDCP is configured for the corresponding node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UL UE Configuration	М		ENUMERATED (no- data, shared, only,)	Indicates how the UE uses the UL at the corresponding node.

## 9.2.3.76 UP Transport Parameters

This IE contains Xn-U related information related to a DRB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UP Transport Parameters		1		
>UP Transport Item		1 <maxnoofs CellGroupsplu s1&gt;</maxnoofs 		
>>UP Transport Layer Information	М		9.2.3.30	
>>Cell Group ID	М		INTEGER (0maxnoofSCell Groups,)	This IE corresponds to the CellGroupld as defined in TS 38.331 [10] (0=MCG, 1=SCG). In this version of the specification, values "2" and "3" shall not be set by the sender and ignored by the receiver. For E-UTRA Cell Groups, the same encoding is used as for NR Cell Groups. NOTE: There is no corresponding IE defined in TS 36.331 [14].

Range bound	Explanation
maxnoofSCellGroups	Maximum no of Secondary Cell Groups. Value is 3.

## 9.2.3.77 Desired Activity Notification Level

This IE contains information on which level activity notification shall be performed.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Desired Activity Notification Level	0		ENUMERATED (None, QoS Flow, PDU session, UE, )	

### 9.2.3.78 Number of DRB IDs

This IE indicates the number of DRB IDs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Number of DRB IDs	M		INTEGER (132,)	

## 9.2.3.79 QoS Flow Mapping Indication

This IE is used to indicate whether only the uplink or the downlink of a QoS flow is mapped to a DRB.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
QoS Flow Mapping Indication	М		ENUMERATED (ul, dl,)	This IE indicates whether only the uplink or the downlink QoS flow is mapped to the DRB

## 9.2.3.80 RLC Status

The RLC Status IE indicates about the RLC configuration change included in the container towards the UE.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Reestablishment Indication	М		ENUMERATED	Indicates that following the
			(reestablished,)	change of the radio status,
				the RLC has been re-
				established.

## 9.2.3.81 Expected UE Behaviour

This IE indicates the behaviour of a UE with predictable activity and/or mobility behaviour, to assist the NG-RAN node in determining the optimum RRC connection time and to help with the RRC\_INACTIVE state transition and RNA configuration (e.g. size and shape of the RNA).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected UE Activity Behaviour	0		9.2.3.82	
Expected HO Interval	0		ENUMERATED (sec15, sec30, sec60, sec90, sec120, sec180, long-time,)	Indicates the expected time interval between inter NG-RAN node handovers.  If "long-time" is included, the interval between inter NG-RAN node handovers is expected to be longer than 180 seconds.
Expected UE Mobility	0		ENUMERATED (stationary, mobile,)	Indicates whether the UE is expected to be stationary or mobile.
Expected UE Moving Trajectory		01		Indicates the UE's expected geographical movement.
>Expected UE Moving Trajectory Item		1 <maxnoofc ellsUEMovingT rajectory&gt;</maxnoofc 		Includes list of visited and non- visited cells, where visited cells are listed in the order the UE visited them with the most recent cell being the first in the list. Non- visited cells are included immediately after the visited cell they are associated with.
>>Global NG-RAN Cell Identity	M		9.2.2.27	
>>Time Stayed in Cell	0		INTEGER (04095)	Included for visited cells and indicates the time a UE stayed in a cell in seconds. If the UE stays in a cell more than 4095 seconds, this IE is set to 4095.

Range bound	Explanation	
maxnoofCellsUEMovingTrajectory	Maximum no. of cells of UE moving trajectory. Value is 16.	

## 9.2.3.82 Expected UE Activity Behaviour

This IE indicates information about the expected "UE activity behaviour" as defined in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Expected Activity Period	0		INTEGER (130 40 50 60 80  100 120 150 180  181,)	If set to "181" the expected activity time is longer than 180 seconds.  The remaining values indicate the expected activity time in [seconds].
Expected Idle Period	0		INTEGER (130 40 50 60 80  100 120 150 180  181,)	If set to "181" the expected idle time is longer than 180 seconds. The remaining values indicate the expected idle time in [seconds].
Source of UE Activity Behaviour Information	0		ENUMERATED (subscription information, statistics,)	If "subscription information" is indicated, the information contained in the Expected Activity Period IE and the Expected Idle Period IE, if present, is derived from subscription information. If "statistics" is indicated, the information contained in the Expected Activity Period IE and the Expected Idle Period IE, if present, is derived from statistical information.

## 9.2.3.83 AMF Region Information

This IE indicates the Global AMF Region IDs of the AMF Regions to which the NG-RAN node belongs.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
AMF Region Information		1		
>Global AMF Region Information Item		1 <maxnoofa MFRegions&gt;</maxnoofa 		
>>PLMN Identity	M	_	9.2.2.4	
>>AMF Region Identifier		1		
>>>AMF Region ID	М		BIT STRING (SIZE (8))	

Range bound	Explanation		
maxnoofAMFRegions	Maximum no. of AMF Regions an NG-RAN node can be connected		
	to. Value is 16.		

# 9.2.3.84 TNL Association Usage

This IE indicates the usage of the TNL association.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TNL Association Usage	0		ENUMERATED (ue, non-ue, both,)	Indicates whether the TNL association is only used for UE associated signalling, or non-UE associated signalling, or both.

### 9.2.3.85 Network Instance

This IE provides the network instance to be used by the NG-RAN node when selecting a particular transport network resource as described in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Network Instance	М		INTEGER (1256,)	

### 9.2.3.86 PDCP Duplication Configuration

The PDCP Duplication Configuration IE indicates whether PDCP Duplication is configured or de-configured.

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
PDCP Duplication	M		ENUMERATED (	
Configuration			configured, de-	
			configured,)	

### 9.2.3.87 Secondary RAT Usage Information

This IE provides information on the Secondary RAT resources used by a PDU Session with MR-DC as specified in TS 37.340 [8].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PDU Session Usage		01		
Report				
>RAT Type	М		ENUMERATED	
			(nR, e-UTRA,,	
			nR-unlicensed,	
			eUTRA-	
			unlicensed)	
>PDU Session Timed	M		Volume Timed	
Report List			Report List	
			9.2.3.88	
QoS Flows Usage Report		01		
List				
>QoS Flows Usage		1 <maxnoo< td=""><td></td><td></td></maxnoo<>		
Report Item		fQoSflows>		
>>QoS Flow Indicator	M		9.2.3.10	
>>RAT Type	M		ENUMERATED	
			(nR, eutra,, nR-	
			unlicensed,	
			eUTRA-	
			unlicensed)	
>>QoS Flows Timed	M		Volume Timed	
Report List			Report List	
			9.2.3.88	

Range bound	Explanation
maxnoofQoSFlows	Maximum no. of QoS flows allowed within one PDU session. Value is 64.

### 9.2.3.88 Volume Timed Report List

This IE provides information on the data usage.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Volume Timed Report Item		1 <maxnoofti meperiods=""></maxnoofti>		
>Start Timestamp	M		OCTET STRING (SIZE(4))	UTC time encoded in the same format as the first four octets of the 64-bit timestamp format as defined in section 6 of IETF RFC 5905 [37]. It indicates the start time of the collecting period of the included <i>Usage Count UL</i> IE and <i>Usage Count DL</i> IE.
>End Timestamp	M		OCTET STRING (SIZE(4))	UTC time encoded in the same format as the first four octets of the 64-bit timestamp format as defined in section 6 of IETF RFC 5905 [37]. It indicates the end time of the collecting period of the included <i>Usage Count UL</i> IE and <i>Usage Count DL</i> IE.
>Usage Count UL	M		INTEGER (02 <sup>64</sup> - 1)	The unit is: octets.
>Usage Count DL	М		INTEGER (02 <sup>64</sup> - 1)	The unit is: octets.

Range bound	Explanation
maxnoofTimePeriods	Maximum no. of time reporting periods. Value is 2.

# 9.2.3.89 Maximum IP Rate

This IE indicates the maximum aggregate data rate for integrity protected DRBs for a UE as defined in TS 38.300 [9].

IE/Group Name	Presence	Range	IE Type and Reference	Semantics Description
Maximum Integrity Protected	M		ENUMERATED	Defines the upper bound of the
Data Rate			(64kbps, max UE	aggregate data rate of user
			rate,)	plane integrity protected data.

# 9.2.3.90 UL Forwarding

This element indicates a proposal for forwarding of uplink packets.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
			reference	
UL Forwarding	M		ENUMERATED	
			(UL forwarding	
			proposed,)	

# 9.2.3.91 UE Radio Capability for Paging

This IE contains paging specific UE Radio Capability information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Radio Capability for Paging of NR	0		OCTET STRING	Includes the RRC UERadioPagingInformation message as defined in TS 38.331 [18].
UE Radio Capability for Paging of E-UTRA	0		OCTET STRING	Includes the RRC  UERadioPagingInformation message as defined in TS 36.331 [21].

#### 9.2.3.92 Common Network Instance

This IE provides the common network instance to be used by the NG-RAN node when selecting a particular transport network resource as described in TS 23.501 [7] in a format common with 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Common Network Instance	M		OCTET STRING	

#### 9.2.3.93 Default DRB Allowed

This IE is used to indicate whether the SN is allowed to configure the default DRB for a PDU session or not.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Default DRB Allowed	M		ENUMERATED (true,	
			false,)	

### 9.2.3.94 Split Session Indicator

This IE indicates whether admitting the requested resources results in a split PDU session.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Split Session Indicator	М		ENUMERATED (split,)	

### 9.2.3.95 UL Forwarding Proposal

This IE indicates a proposal for forwarding of uplink packets.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UL Forwarding Proposal	М		ENUMERATED	
oz r orwarding r ropodar	"		(UL data	
			forwarding	
			proposed,)	

### 9.2.3.96 TNL Configuration Info

This IE is used for signalling IP addresses of IPSEc endpoints used for establishment of IPSec tunnels.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Extended UP Transport Layer Addresses To Add List		01		
>Extended UP Transport Layer Addresses To Add Item		1 <maxnoofex tTLAs&gt;</maxnoofex 		
>>IP-Sec Transport Layer Address	M		Transport Layer Address 9.2.3.29	Transport Layer Addresses for IP-Sec endpoint.
>>GTP Transport Layer Addresses To Add List		01		
>>>GTP Transport Layer Addresses To Add Item		1 <maxnoofg TPTLAs&gt;</maxnoofg 		
>>>>GTP Transport Layer Address Info	M		Transport Layer Address 9.3.2.3	GTP Transport Layer Addresses for GTP end-points.
Extended UP Transport Layer Addresses To Remove List		01		
>Extended UP Transport Layer Addresses To Remove Item		0 <maxnoofex tTLAs&gt;</maxnoofex 		
>>IP-Sec Transport Layer Address	0		Transport Layer Address 9.2.3.29	Transport Layer Addresses for IP-Sec endpoint.
>>GTP Transport Layer Addresses To Remove List		01		
>>>GTP Transport Layer Addresses To Remove Item		1 <maxnoofg TPTLAs&gt;</maxnoofg 		
>>>>GTP Transport Layer Address Info	M		Transport Layer Address 9.3.2.3	GTP Transport Layer Addresses for GTP end-points.

Range bound	Explanation
maxnoofExtTLAs	Maximum no. of Extended Transport Layer Addresses in the message.
	Value is 16.
maxnoofGTPTLAs	Maximum no. of GTP Transport Layer Addresses for a GTP end-point in
	the message. Value is 16.

### 9.2.3.97 NG-RAN Trace ID

This IE defines the NG-RAN Trace ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NG-RAN Trace ID	M		OCTET STRING (SIZE(8))	This IE is composed of the
				following: Trace Reference
				defined in TS 32.422 [23]
				(leftmost 6 octets, with
				PLMN information encoded
				as in 9.2.2.4), and
				Trace Recording Session
				Reference defined in TS
				32.422 [23] (last 2 octets).

#### 9.2.3.98 Non-GBR Resources Offered

This IE indicates whether the MCG offers non-GBR resources for non-GBR QoS flows of the PDU Session Resource.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Non-GBR Resources	M		ENUMERATED (true,)	
Offered				

### 9.2.3.99 Extended RAT Restriction Information

This element provides RAT restrictions as specified in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Primary RAT Restriction	М		BIT STRING { e-UTRA (0), nR (1), nR-unlicensed (2)} (SIZE(8,))	Each position in the bitmap represents a RAT. If a bit is set to "1", the respective RAT is restricted for the UE. If a bit is set to "0", the respective RAT is not restricted for the UE. Bits 3-7 reserved for future use. The Primary RAT is the RAT used in the access cell, or target cell.
Secondary RAT Restriction	М		BIT STRING { e-UTRA (0), nR (1), e-UTRA- unlicensed (2), nR- unlicensed (3)} (SIZE(8,))	Each position in the bitmap represents a RAT. If a bit is set to "1", the respective RAT is restricted for the UE. If a bit is set to "0", the respective RAT is not restricted for the UE. Bits 4-7 reserved for future use. A Secondary RAT is a RAT used in any cell serving the UE excluding the PCell.

### 9.2.3.100 5GC Mobility Restriction List Container

This IE contains the Mobility Restriction List IE specified in TS 38.413 [5] as received by the NG-RAN from the 5GC.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
5GC Mobility Restriction List	M		OCTET STRING	The octets of the OCTET
Container				STRING are encoded
				according to the
				specifications of the
				Mobility Restriction List IE
				specified in TS 38.413 [5].

### 9.2.3.101 Maximum Number of CHO Preparations

This IE indicates the maximum number of CHO preparations for a UE towards a candidate target NG-RAN node.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Maximum Number of	M		INTEGER (18,)	
CHO Preparations			·	

### 9.2.3.102 Alternative QoS Parameters Set List

This IE contains alternative sets of QoS parameters which the NG-RAN node can indicate to be fulfilled when notification control is enabled and it cannot fulfil the requested list of QoS parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Alternative QoS		1 <maxnoofq< td=""><td></td><td></td></maxnoofq<>		
Parameters Set Item		oSparaSets>		
>Alternative QoS	M		9.2.3.103	
Parameters Set Index				
>Guaranteed Flow Bit	0		Bit Rate	
Rate Downlink			9.3.1.4	
>Guaranteed Flow Bit	0		Bit Rate	
Rate Uplink			9.3.1.4	
>Packet Delay Budget	0		9.3.1.80	
>Packet Error Rate	0		9.3.1.81	

Range bound	Explanation
maxnoofQoSparaSets	Maximum no. of alternative sets of QoS Parameters allowed for the QoS profile. Value is 8.

#### 9.2.3.103 Alternative QoS Parameters Set Index

This IE indicates the QoS parameters set which can currently be fulfilled.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Alternative QoS Parameters Set Index	М		INTEGER (18,)	Indicates the index of the item within the Alternative QoS Parameter Set List IE corresponding to the currently fulfilled alternative QoS parameters set.

### 9.2.3.104 Alternative QoS Parameters Set Notify Index

This IE indicates the QoS parameters set which can currently be fulfilled.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Alternative QoS Parameters Set Notify Index	М		INTEGER (08,)	Indicates the index of the item within the Alternative QoS Parameter Set List IE corresponding to the currently fulfilled alternative QoS parameters set. Value 0 indicates that NG-RAN cannot even fulfil the lowest alternative parameter set.

#### 9.2.3.105 NR V2X Services Authorized

This IE provides information on the authorization status of the UE to use the NR sidelink for V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Vehicle UE	0		ENUMERATED (authorized, not	Indicates whether the UE is
			authorized,)	authorized as Vehicle UE
Pedestrian UE	0		ENUMERATED (authorized, not	Indicates whether the UE is
			authorized,)	authorized as Pedestrian UE

#### 9.2.3.106 LTE V2X Services Authorized

This IE provides information on the authorization status of the UE to use the LTE sidelink for V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Vehicle UE	0		ENUMERATED (authorized, not	Indicates whether the UE is
			authorized,)	authorized as Vehicle UE
Pedestrian UE	0		ENUMERATED (authorized, not	Indicates whether the UE is
			authorized,)	authorized as Pedestrian UE

### 9.2.3.107 NR UE Sidelink Aggregate Maximum Bit Rate

This IE provides information on the Aggregate Maximum Bitrate of the UE's sidelink communication for NR V2X services.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
NR UE Sidelink Aggregate Maximum Bit Rate	M		Bit Rate 9.2.3.4	Value 0 shall be considered as a logical error by the receiving NG-RAN node.

### 9.2.3.108 LTE UE Sidelink Aggregate Maximum Bit Rate

This IE provides information on the Aggregate Maximum Bitrate of the UE's sidelink communication for LTE V2X services.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
LTE UE Sidelink	M		Bit Rate	Value 0 shall be considered as a
Aggregate Maximum Bit			9.2.3.4	logical error by the receiving
Rate				NG-RAN node.

### 9.2.3.109 PC5 QoS Parameters

This IE provides information on the PC5 QoS parameters of the UE's sidelink communication for NR PC5.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PC5 QoS Flow List		1		
>PC5 QoS Flow Item		1 <maxno ofPC5QoS Flows&gt;</maxno 		
>>PQI	М		INTEGER (0255,)	PQI is a special 5QI as specified in TS 23.501 [9].
>>PC5 Flow Bit Rates	0			Only applies for GBR QoS Flows.
>>>Guaranteed Flow Bit Rate	M		Bit Rate 9.2.3.4	Guaranteed Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>>Maximum Flow Bit Rate	M		Bit Rate 9.2.3.4	Maximum Bit Rate for the PC5 QoS flow. Details in TS 23.501 [9].
>>Range	0		ENUMERAT ED (m50, m80, m180, m200, m350, m400, m500, m700, m1000,)	Only applies for groupcast.
PC5 Link Aggregated Bit Rates	0		Bit Rate 9.2.3.4	Only applies for non-GBR QoS Flows.

Range bound	Explanation
maxnoofPC5QoSFlows	Maximum no. of PC5 QoS flows allowed towards one UE. Value is 2048.

### 9.2.3.110 UE History Information from the UE

This IE contains information about mobility history report for a UE.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE UE History Information from the UE	М			
>NR				
>>NR Mobility History Report	M		OCTET STRING	VisitedCellInfoList contained in the UEInformationResponse message (TS 38.331 [10]).

# 9.2.3.111 RLC Duplication Information

This IE indicates the RLC duplication configuration in case that the indicated DRB is configured with more than two RLC entities as specified in TS 38.331 [9].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RLC Activation State List		1		
>RLC Activation State Items		1 < maxnoofRLCD uplicationstate >		This IE indicates information on the initial secondary RLC activation state of UL PDCP duplication. Each position in the list represents a secondary RLC entity in ascending order by the LCH ID in the order of MCG and SCG.
>>Duplication State	М		ENUMERATED (Active, Inactive,)	
Primary RLC Indication	0		ENUMERATED ( True, False,)	This IE is present when DC based PDCP duplication is configured. This IE indicates whether the primary RLC entity located at the assisting node.

Range bound	Explanation
maxnoofRLCDuplicationstate	Maximum no of Secondary RLC entities. Value is 3.

### 9.2.3.112 Redundant PDU Session Information

This IE provides Redundancy information to be applied to a PDU Session.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
RSN	М		ENUMERATED (v1, v2,)	

### 9.2.3.113 Extended Packet Delay Budget

This IE indicates the Packet Delay Budget for a QoS flow.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Extended Packet Delay Budget	M		INTEGER (065535,)	Upper bound value for the delay that a packet may experience expressed in unit of 0.01ms.

### 9.2.3.114 TSC Traffic Characteristics

This IE provides the traffic characteristics of TSC QoS flows.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
TSC Assistance Information Downlink	0		TSC Assistance Information 9.2.3.115	
TSC Assistance Information Uplink	0		TSC Assistance Information 9.2.3.115	

#### 9.2.3.115 TSC Assistance Information

This IE provides the TSC assistance information for a TSC QoS flow in the uplink or downlink (see TS 23.501 [7]).

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Periodicity	M		9.2.3.116	Periodicity as specified in TS 23.501 [7].
Burst Arrival Time	0		9.2.3.117	Burst Arrival Time as specified in TS 23.501 [7].

### 9.2.3.116 Periodicity

This IE indicates the Periodicity of the TSC QoS flow as defined in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Periodicity	М		INTEGER (0640000,)	Periodicity expressed in units of 1 us.

### 9.2.3.117 Burst Arrival Time

This IE indicates the Burst Arrival Time of the TSC QoS flow as defined in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Burst Arrival Time	M		OCTET STRING	Encoded in the same format as the <i>ReferenceTime</i> IE as defined in TS 38.331 [10]. The value is truncated to 1 us granularity.

### 9.2.3.118 Redundant QoS Flow Indicator

This IE provides the Redundant QoS Flow Indicator for a QoS flows as specified in TS 23.501 [7].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Redundant QoS Flow Indicator	М		ENUMERATED (true, false)	This IE indicates if this QoS flow is requested for the redundant transmission. Value "true" indicates that redundant transmission is requested for this QoS flow. Value "false" indicates that redundant transmission is requested to be stopped if started.

### 9.2.3.119 NPN Mobility Information

This information element indicates the access restrictions related to an NPN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE NPN Mobility Information	M			
>SNPN Mobility Information				
>>Serving NID	М		NID 9.2.2.65	
>PNI-NPN Mobility Information				
>>Allowed PNI-NPN ID List	M		9.2.3.120	

### 9.2.3.120 Allowed PNI-NPN ID List

This IE contains a list of PNI-NPN Identities of PNI-NPNs a UE is allowed to access.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Allowed PNI-NPN ID List		1 <maxnoofe PLMNs+1&gt;</maxnoofe 		
>PLMN Identity	M		9.2.2.4	
>PNI-NPN Restricted Information	М		9.2.3.123	
>Allowed CAG-Identifier		1 <maxnoofc< td=""><td></td><td></td></maxnoofc<>		
List per PLMN		AGsperPLMN>		
>>CAG-Identifier	М		9.2.2.66	

Range bound	Explanation
maxnoofEPLMNs+1	Maximum no. of equivalent PLMNs plus one serving PLMN. Value is 16.
maxnoofCAGsperPLMN	Maximum number of CAGs per PLMN in UE's Allowed PNI-NPN ID List. Value is 256.

### 9.2.3.121 NPN Paging Assistance Information

This IE contains NPN Paging Assistance Information.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE NPN Mobility Information	М			
>PNI-NPN Information				
>>Allowed PNI-NPN ID List	М		9.2.3.120	

### 9.2.3.122 Serving SNPN ID

This IE contains the Serving SNPN ID.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PLMN Identity	М		9.2.2.4	
NID	М		9.2.2.65	

### 9.2.3.123 PNI-NPN Restricted Information

This IE indicates that the UE is only allowed to access cells that support PNI-NPNs for a PLMN.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
PNI-NPN Restricted Information	M		ENUMERATED (restricted, not-restricted,)	If set to "restricted", the IE indicates that the UE may not access public (non-CAG) cells for a PLMN.

### 9.2.3.124 URI

This IE is defined to contain a URI address.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
URI	М		VisibleString	String representing URI
			_	(Uniform Resource
				Identifier)

# 9.2.3.125 MDT Configuration

The IE defines the MDT configuration parameters.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT Configuration-NR	0		9.2.3.126	
MDT Configuration-EUTRA	0		9.2.3.127	

# 9.2.3.126 MDT Configuration-NR

The IE defines the MDT configuration parameters of NR.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT Activation	М		ENUMERATED	•
			(Immediate MDT only, Logged MDT only,	
			Immediate MDT and	
			Trace,)	
CHOICE Area Scope of MDT-NR	0			
>Cell based >>Cell ID List for MDT-		4		
>>Cell ID List for MiD1-		1 <maxnoofcel< td=""><td></td><td></td></maxnoofcel<>		
		IIDforMDT>		
>>> NR CGI	M		9.2.2.7	
>TA based >>TA List for MDT		1		
ZZIA EISCIOI MIDI		<maxnoofta forMDT&gt;</maxnoofta 		
>>>TAC	М		OCTET STRING (SIZE (3))	The TAI is derived using the current serving PLMN.
>TAI based				
>>TAI List for MDT		1 <maxnoofta forMDT&gt;</maxnoofta 		
>>TAI	M	TOTIVIDT>	9.2.3.20	
CHOICE MDT Mode	M			
>Immediate MDT-NR	N 4		DITOTOINO	Fools and it is the bitmen
>>Measurements to Activate	M		BITSTRING (SIZE(8))	Each position in the bitmap indicates a MDT
riouvate			(0.22(0))	measurement, as defined in
				TS 37.320 [y].
				First Bit = M1, Second Bit= M2,
				Fourth Bit = M4,
				Fifth Bit = M5,
				Sixth Bit = logging of M1 from event triggered
				measurement reports
				according to existing RRM
				configuration, Seventh Bit = M6,
				Eighth Bit = M7.
				Value "1" indicates "activate"
				and value "0" indicates "do not activate".
				This version of the
				specification does not use
>>M1 Configuration	C-ifM1		9.2.3.128	bits 3.
>>M4 Configuration	C-ifM4		9.2.3.129	
>>M5 Configuration	C-ifM5		9.2.3.130	
>>MDT Location	0		BITSTRING(SIZE(8))	Each position in the bitmap
Information				represents requested location information as
				defined in TS 37.320 [y].
				First Bit = GNSS
				Other bits are reserved for future use and are ignored if
				received.
				Value "1" indicates "activate"
				and value "0" indicates "do not activate".
				The eNB shall ignore the first
				bit unless the <i>Measurements</i>
Ma C. C.	0:040		0.0.0.10.1	to Activate IE has the first bit or the sixth bit set to "1".
>>M6 Configuration	C-ifM6		9.2.3.131	

>>M7 Configuration	C-ifM7	9.2.3.132	
>>Bluetooth	0	9.2.3.11	
Measurement			
Configuration			
>>WLAN Measurement	0	9.2.3.12	
Configuration			
>>Sensor Measurement	0	9.2.3.136	
Configuration			
>Logged MDT-NR			
>>Logging interval	M	ENUMERATED	This IE is defined in TS
		(ms320, ms640,	38.331 [10]. The value
		ms1280, ms2560,	"infinity" represents one shot
		ms5120, ms10240,	logging, i.e., only one log per
		ms20480, ms30720,	event in the logged MDT
		ms40960 and	report.
		ms61440, infinity)	
>>Logging duration	M	ENUMERATED (10,	This IE is defined in TS
		20, 40, 60, 90, 120)	38.331 [10]. Unit: [minute].
>>CHOICE Report Type	M		
>>>Periodical			
>>>Event Triggered			
>>>>Logged Event	M	9.2.3.137	
Trigger Config			
>>Bluetooth	0	9.2.3.134	
Measurement			
Configuration			
>>WLAN Measurement	0	9.2.3.135	
Configuration			
>>Sensor Measurement	0	9.2.3.136	
Configuration			
>>Area Scope of	0	9.2.3.140	
Neighbour Cells			
Signalling based MDT	0	MDT PLMN List	
PLMN List		9.2.3.133	

Range bound	Explanation		
maxnoofCellIDforMDT	Maximum no. of Cell ID subject for MDT scope. Value is 32.		
maxnoofTAforMDT	Maximum no. of TA subject for MDT scope. Value is 8.		

Condition	Explanation
C-ifM1	This IE shall be present if the <i>Measurements to Activate</i> IE has the first
	bit set to "1".
C-ifM4	This IE shall be present if the Measurements to Activate IE has the
	fourth bit set to "1".
C-ifM5	This IE shall be present if the Measurements to Activate IE has the fifth
	bit set to "1".
C-ifM6	This IE shall be present if the Measurements to Activate IE has the
	seventh bit set to "1".
C-ifM7	This IE shall be present if the Measurements to Activate IE has the
	eighth bit set to "1".

# 9.2.3.127 MDT Configuration-EUTRA

The IE defines the MDT configuration parameters of EUTRA.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT Activation	M		ENUMERATED(Immediate	
			MDT only, Logged MDT	
			only, Immediate MDT and	
			Trace,)	
CHOICE Area Scope of MDT-E-UTRA	0			
>Cell based				
>>Cell ID List for MDT		1		
		<maxnoofcel< td=""><td></td><td></td></maxnoofcel<>		
		IIDforMDT>		
>>> NR CGI	M		9.2.2.7	
>TA based				
>>TA List for MDT		1		
		<maxnoofta< td=""><td></td><td></td></maxnoofta<>		
		forMDT>		
>>>TAC	M		OCTET STRING (SIZE (3))	The TAI is derived using
				the current serving
				PLMN.
>TAI based				
>>TAI List for MDT		1		
		<maxnoofta< td=""><td></td><td></td></maxnoofta<>		
		forMDT>		
>>>TAI	M		9.2.3.20	
MDT Mode E-UTRA	M		OCTET STRING	MDTMode IE defined in
				TS 36.413 [16].
Signalling based MDT	0		MDT PLMN List	
PLMN List			9.2.3.133	

Range bound	Explanation		
maxnoofCellIDforMDT	Maximum no. of Cell ID subject for MDT scope. Value is 32.		
maxnoofTAforMDT	Maximum no. of TA subject for MDT scope. Value is 8.		

# 9.2.3.128 M1 Configuration

This IE defines the parameters for M1 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M1 Reporting Trigger	M		ENUMERATED (periodic, A2event- triggered, A2event- triggered periodic,)	
M1 Threshold Event A2	C- ifM1A2trigg er			Included in case of event-triggered or event-triggered periodic reporting for measurement M1.
>CHOICE Threshold >>RSRP	М			
>>>Threshold RSRP	М		INTEGER (0127)	This IE is defined in TS 38.331 [18].
>>RSRQ >>>Threshold RSRQ >>SINR	M		INTEGER (0127)	This IE is defined in TS 38.331 [18].
>>>Threshold SINR	М		INTEGER (0127)	This IE is defined in TS 38.331 [18].
M1 Periodic reporting	C- ifperiodicM DT			Included in case of periodic or event-triggered periodic reporting for measurement M1.
>Report interval	М		ENUMERATED (ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60)	This IE is defined in TS 38.331 [18].
>Report amount	М		ENUMERATED (1, 2, 4, 8, 16, 32, 64, infinity)	Number of reports.

Condition	Explanation
C-ifM1A2trigger	This IE shall be present if the Measurements to Activate IE has the
	first bit set to "1" and the M1 Reporting Trigger IE is set to "A2event-
	triggered" or to "A2event-triggered periodic".
C-ifperiodicMDT	This IE shall be present if the M1 Reporting Trigger IE is set to
·	"periodic", or to "A2event-triggered periodic".

# 9.2.3.129 M4 Configuration

This IE defines the parameters for M4 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M4 Collection Period	M		ENUMERATED (ms1024, ms2048, ms5120, ms10240, min1,)	
M4 Links to log	М		ENUMERATED(uplin k, downlink, both-uplink-and-downlink,)	

# 9.2.3.130 M5 Configuration

This IE defines the parameters for M5 measurement collection.

IE/Group Name	Presence	Range	IE type and	Semantics description
			reference	
M5 Collection Period	M		ENUMERATED	
			(ms1024, ms2048,	
			ms5120, ms10240,	
			min1,)	
M5 Links to log	M		ENUMERATED(uplin	
			k, downlink, both-	
			uplink-and-downlink,	
			)	

# 9.2.3.131 M6 Configuration

This IE defines the parameters for M6 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M6 Report Interval	M		ENUMERATED (ms120,ms240,ms48 0,ms640,ms1024, ms2048, ms5120, ms10240, ms20480,ms40960,m in1,min6,min12,min30 ,)	
M6 Links to log	M		ENUMERATED(uplin k, downlink, both-uplink-and-downlink,)	

# 9.2.3.132 M7 Configuration

This IE defines the parameters for M7 measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
M7 Collection Period	M		INTEGER (160,)	Unit: minutes
M7 Links to log	М		ENUMERATED(uplink,	
			downlink, both-uplink-	
			and-downlink,)	

### 9.2.3.133 MDT PLMN List

The purpose of the MDT PLMN List IE is to provide the list of PLMN allowed for MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
MDT PLMN List		1 <maxnoofmdt< th=""><th></th><th></th></maxnoofmdt<>		
		PLMNs>		
>PLMN Identity	M		9.2.2.4	

Range bound	Explanation
maxnoofMDTPLMNs	Maximum no. of PLMNs in the MDT PLMN list. Value is 16.

# 9.2.3.134 Bluetooth Measurement Configuration

This IE defines the parameters for Bluetooth measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Bluetooth Measurement Configuration	М		ENUMERATED (Setup,)	
Bluetooth Measurement Configuration Name List		01		
>Bluetooth Measurement Configuration Name Item IEs		1 <maxnoofblu etoothName &gt;</maxnoofblu 		
>>Bluetooth Measurement Configuration Name	М		OCTET STRING (SIZE (1248))	
BT RSSI	0		ENUMERATED (True,)	In case of Immediate MDT, it corresponds to M8 measurement as defined in 37.320 [y].

Range bound	Explanation
maxnoofBluetoothName	Maximum no. of Bluetooth local name used for Bluetooth
	measurement collection. Value is 4.

# 9.2.3.135 WLAN Measurement Configuration

This IE defines the parameters for WLAN measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
WLAN Measurement Configuration	М		ENUMERATED (Setup,)	
WLAN Measurement Configuration Name List		01		
>WLAN Measurement Configuration Name Item IEs		1 <maxnoofw LANName&gt;</maxnoofw 		
>>WLAN Measurement Configuration Name	М		OCTET STRING (SIZE (132))	
WLAN RSSI	0		ENUMERATED (True,)	In case of Immediate MDT, it corresponds to M8 as defined in 37.320 [y].
WLAN RTT	0		ENUMERATED (True,)	In case of Immediate MDT, it corresponds to M9 as defined in 37.320 [x].

Range bound	Explanation
maxnoofWLANName	Maximum no. of WLAN SSID used for WLAN measurement
	collection. Value is 4.

# 9.2.3.136 Sensor Measurement Configuration

This IE defines the parameters for Sensor measurement collection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Sensor Measurement	М		ENUMERATED	
Configuration			(Setup,)	
Sensor Measurement		01		
Configuration Name List				
>Sensor Measurement		1		
Configuration Name Item		<maxnoofse< td=""><td></td><td></td></maxnoofse<>		
IEs		nsorName>		
>>Uncompensated	0		ENUMERATED	
Barometeric Configuration			(True,)	
>>UE Speed	0		ENUMERATED	
Configuration			(True,)	
>>UE Orientation	0		ENUMERATED	
Configuration			(True,)	

Range bound	Explanation
maxnoofSensorName	Maximum no. of Sensor local name used for Sensor measurement
	collection. Value is 3

# 9.2.3.137 Logged Event Trigger Config

This IE configures with UE with specific events for triggering MDT configuration. Current specified event is based on out of coverage (OOC) detection.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
CHOICE Event Type Trigger	M			
> Out of Coverage				
>>Out of Coverage Indication			ENUMERATED (true,)	
> L1 Event				
>>CHOICE L1 Event Threshold	М			
>>>RSRP				
>>>>Threshold RSRP	М		INTEGER (0127)	This IE is defined in TS 38.331 [18].
>>>RSRQ				
>>>>Threshold RSRQ	М		INTEGER (0127)	This IE is defined in TS 38.331 [18].
>> Hysteresis			INTEGER (030)	This parameter is used within the entry and leave condition of an event triggered reporting condition.
>> Time to trigger			ENUMERATED (ms0, ms40, ms64, ms80, ms100, ms128, ms160, ms256, ms320, ms480, ms512, ms640, ms1024, ms1280, ms2560, ms2560, ms5120)	Time during which specific criteria for the event needs to be met in order to trigger a measurement report.

# 9.2.3.138 UE Radio Capability ID

This IE contains UE Capability ID as defined in TS 23.003 [22].

IE/Group Name	Presence	Range	IE type and reference	Semantics description
UE Radio Capability ID	M		OCTET STRING	

# 9.2.3.139 Extended Slice Support List

This IE indicates a list of supported slices.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Slice Support Item		1 <maxnoofext SliceItems&gt;</maxnoofext 		
>S-NSSAI	M		9.2.3.21	

Range bound	Explanation
maxnoofExtSliceItems	Maximum no. of signalled slice support items. Value is 65535.

# 9.2.3.140 Area Scope of Neighbour Cells

This IE defines the area scope of neighbour cells for logged MDT.

IE/Group Name	Presence	Range	IE type and reference	Semantics description
Area Scope of Neighbour	M	1		
Cells		<maxnooffreq forMDT&gt;</maxnooffreq 		
>NR FreqInfo	M		9.2.2.19	
>PCI List for MDT	0	1 <maxnoofneig hPClforMDT&gt;</maxnoofneig 		
>> NRPCI	M		INTEGER (01007)	NR Physical Cell ID

Range bound	Explanation
maxnoofFreqforMDT	Maximum no. of Frequency Information subject for MDT scope. Value is 8.
maxnoofNeighPClforMDT	Maximum no. of Neighbour cells subject for MDT scope. Value is 32.

# 9.3 Message and Information Element Abstract Syntax (with ASN.1)

### 9.3.1 General

XnAP ASN.1 definition conforms to ITU-T Rec. X.680 [16] and ITU-T Rec. X.681 [17].

Sub clause 9.3 presents the Abstract Syntax of the XnAP protocol with ASN.1. In case there is contradiction between the ASN.1 definition in this sub clause and the tabular format in sub clause 9.1 and 9.2, the ASN.1 shall take precedence, except for the definition of conditions for the presence of conditional elements, in which the tabular format shall take precedence.

The ASN.1 definition specifies the structure and content of XnAP messages. XnAP messages can contain any IEs specified in the object set definitions for that message without the order or number of occurrence being restricted by ASN.1. However, for this version of the standard, a sending entity shall construct an XnAP message according to the PDU definitions module and with the following additional rules:

- IEs shall be ordered (in an IE container) in the order they appear in object set definitions.
- Object set definitions specify how many times IEs may appear. An IE shall appear exactly once if the presence field in an object has value "mandatory". An IE may appear at most once if the presence field in an object has value "optional" or "conditional". If in a tabular format there is multiplicity specified for an IE (i.e. an IE list) then in the corresponding ASN.1 definition the list definition is separated into two parts. The first part defines an IE container list in which the list elements reside. The second part defines list elements. The IE container list appears as an IE of its own. For this version of the standard an IE container list may contain only one kind of list elements.

NOTE: In the above, "IE" means an IE in the object set with an explicit ID. If one IE needs to appear more than once in one object set, then the different occurrences have different IE IDs.

If an XnAP message that is not constructed as defined above is received, this shall be considered as Abstract Syntax Error, and the message shall be handled as defined for Abstract Syntax Error in clause 10.

# 9.3.2 Usage of Private Message Mechanism for Non-standard Use

The private message mechanism for non-standard use may be used:

- for special operator (and/or vendor) specific features considered not to be part of the basic functionality, i.e. the functionality required for a complete and high-quality specification in order to guarantee multivendor inter-operability.
- by vendors for research purposes, e.g. to implement and evaluate new algorithms/features before such features are proposed for standardisation.

The private message mechanism shall not be used for basic functionality. Such functionality shall be standardised.

# 9.3.3 Elementary Procedure Definitions

-- ASN1START

```
__ ********************
-- Elementary Procedure definitions
__ **********************
XnAP-PDU-Descriptions {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) xnap (2) version1 (1) xnap-PDU-Descriptions (0) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
__ *********************
-- IE parameter types from other modules.
__ *********************
IMPORTS
   Criticality,
   ProcedureCode
FROM XnAP-CommonDataTypes
   HandoverRequest,
   HandoverRequestAcknowledge,
   HandoverPreparationFailure,
   SNStatusTransfer,
   UEContextRelease,
   HandoverCancel,
   NotificationControlIndication,
   RANPaging,
   RetrieveUEContextRequest,
   RetrieveUEContextResponse,
   RetrieveUEContextFailure,
   XnUAddressIndication,
   SecondaryRATDataUsageReport,
   SNodeAdditionRequest,
   SNodeAdditionRequestAcknowledge,
   SNodeAdditionRequestReject,
   SNodeReconfigurationComplete,
   SNodeModificationRequest,
   SNodeModificationRequestAcknowledge,
   SNodeModificationRequestReject,
   SNodeModificationRequired,
   SNodeModificationConfirm,
   SNodeModificationRefuse,
   SNodeReleaseRequest,
   SNodeReleaseRequestAcknowledge,
   SNodeReleaseReject,
   SNodeReleaseRequired,
   SNodeReleaseConfirm,
```

```
SNodeCounterCheckRequest,
SNodeChangeRequired,
SNodeChangeConfirm,
SNodeChangeRefuse,
RRCTransfer,
XnRemovalRequest,
XnRemovalResponse,
XnRemovalFailure,
XnSetupRequest,
XnSetupResponse,
XnSetupFailure,
NGRANNodeConfigurationUpdate,
NGRANNodeConfigurationUpdateAcknowledge,
NGRANNodeConfigurationUpdateFailure,
E-UTRA-NR-CellResourceCoordinationRequest,
E-UTRA-NR-CellResourceCoordinationResponse,
ActivityNotification,
CellActivationRequest,
CellActivationResponse,
CellActivationFailure,
ResetRequest,
ResetResponse,
ErrorIndication,
PrivateMessage,
DeactivateTrace,
TraceStart.
HandoverSuccess,
ConditionalHandoverCancel,
EarlyStatusTransfer,
FailureIndication,
HandoverReport,
ResourceStatusRequest,
ResourceStatusResponse,
ResourceStatusFailure,
ResourceStatusUpdate,
MobilityChangeRequest,
MobilityChangeAcknowledge,
MobilityChangeFailure,
AccessAndMobilityIndication
```

#### FROM XnAP-PDU-Contents

```
id-handoverPreparation,
id-sNStatusTransfer,
id-handoverCancel,
id-notificationControl,
id-retrieveUEContext,
id-rANPaging,
id-xnUAddressIndication,
id-uEContextRelease,
id-secondaryRATDataUsageReport,
id-sNGRANnodeAdditionPreparation,
id-sNGRANnodeReconfigurationCompletion,
```

```
id-mNGRANnodeinitiatedSNGRANnodeModificationPreparation,
   id-sNGRANnodeinitiatedSNGRANnodeModificationPreparation,
   id-mNGRANnodeinitiatedSNGRANnodeRelease.
   id-sNGRANnodeinitiatedSNGRANnodeRelease,
   id-sNGRANnodeCounterCheck.
   id-sNGRANnodeChange,
   id-activityNotification,
   id-rRCTransfer,
   id-xnRemoval,
   id-xnSetup,
   id-nGRANnodeConfigurationUpdate,
   id-e-UTRA-NR-CellResourceCoordination,
   id-cellActivation,
   id-reset.
   id-errorIndication,
   id-privateMessage,
   id-deactivateTrace,
   id-traceStart,
   id-handoverSuccess,
   id-conditionalHandoverCancel,
   id-earlyStatusTransfer,
   id-failureIndication,
   id-handoverReport,
   id-resourceStatusReportingInitiation,
   id-resourceStatusReporting,
   id-mobilitySettingsChange,
   id-accessAndMobilityIndication
FROM XnAP-Constants;
  ****************
-- Interface Elementary Procedure Class
  *****************
XNAP-ELEMENTARY-PROCEDURE ::= CLASS {
   &InitiatingMessage
   &SuccessfulOutcome
                                OPTIONAL,
   &UnsuccessfulOutcome
                                    OPTIONAL,
   &procedureCode
                         ProcedureCode UNIQUE,
   &criticality
                         Criticality
                                       DEFAULT ignore
WITH SYNTAX {
   INITIATING MESSAGE
                         &InitiatingMessage
                         &SuccessfulOutcomel
   [SUCCESSFUL OUTCOME
   [UNSUCCESSFUL OUTCOME
                            &UnsuccessfulOutcomel
   PROCEDURE CODE
                         &procedureCode
   [CRITICALITY
                         &criticality]
    -- Interface PDU Definition
```

```
XnAP-PDU ::= CHOICE {
   initiatingMessage
                      InitiatingMessage,
    successfulOutcome
                       SuccessfulOutcome,
   unsuccessfulOutcome UnsuccessfulOutcome.
InitiatingMessage ::= SEQUENCE {
   procedureCode XNAP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                 ({XNAP-ELEMENTARY-PROCEDURES}),
                                                                 ({XNAP-ELEMENTARY-PROCEDURES}{@procedureCode}),
   criticality
                   XNAP-ELEMENTARY-PROCEDURE.&criticality
   value
                   XNAP-ELEMENTARY-PROCEDURE.&InitiatingMessage
                                                                 ({XNAP-ELEMENTARY-PROCEDURES}{@procedureCode})
SuccessfulOutcome ::= SEOUENCE {
   procedureCode XNAP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                 ({XNAP-ELEMENTARY-PROCEDURES}),
   criticality
                                                                 ({XNAP-ELEMENTARY-PROCEDURES}{@procedureCode}),
                   XNAP-ELEMENTARY-PROCEDURE.&criticality
                                                                 ({XNAP-ELEMENTARY-PROCEDURES}{@procedureCode})
   value
                   XNAP-ELEMENTARY-PROCEDURE.&SuccessfulOutcome
UnsuccessfulOutcome ::= SEQUENCE {
                                                                 ({XNAP-ELEMENTARY-PROCEDURES}),
   procedureCode XNAP-ELEMENTARY-PROCEDURE.&procedureCode
                                                                 ({XNAP-ELEMENTARY-PROCEDURES}{@procedureCode}),
   criticality
                   XNAP-ELEMENTARY-PROCEDURE.&criticality
    value
                   XNAP-ELEMENTARY-PROCEDURE.&UnsuccessfulOutcome
                                                                 ({XNAP-ELEMENTARY-PROCEDURES}{@procedureCode})
     -- Interface Elementary Procedure List
   *****************
XNAP-ELEMENTARY-PROCEDURES XNAP-ELEMENTARY-PROCEDURE ::= {
   XNAP-ELEMENTARY-PROCEDURES-CLASS-1
   XNAP-ELEMENTARY-PROCEDURES-CLASS-2
    . . .
XNAP-ELEMENTARY-PROCEDURES-CLASS-1 XNAP-ELEMENTARY-PROCEDURE ::= {
   handoverPreparation
   retrieveUEContext
    sNGRANnodeAdditionPreparation
   {\tt mNGRAN} node {\tt initiatedSNGRAN} node {\tt ModificationPreparation}
    sNGRANnodeinitiatedSNGRANnodeModificationPreparation
   mNGRANnodeinitiatedSNGRANnodeRelease
    sNGRANnodeinitiatedSNGRANnodeRelease
    sNGRANnodeChange
   xnRemoval
   xnSetup
   nGRANnodeConfigurationUpdate
    e-UTRA-NR-CellResourceCoordination
    cellActivation
```

```
reset
   resourceStatusReportingInitiation
   mobilitySettingsChange
XNAP-ELEMENTARY-PROCEDURES-CLASS-2 XNAP-ELEMENTARY-PROCEDURE ::=
    sNStatusTransfer
   handoverCancel
   rANPaging
    xnUAddressIndication
    uEContextRelease
    sNGRANnodeReconfigurationCompletion
    sNGRANnodeCounterCheck
    rRCTransfer
    errorIndication
    privateMessage
    notificationControl
    activityNotification
    secondaryRATDataUsageReport
    deactivateTrace
    traceStart
    handoverSuccess
    conditionalHandoverCancel
    earlyStatusTransfer
    failureIndication
    handoverReport
    resourceStatusReporting
    accessAndMobilityIndication
-- Interface Elementary Procedures
handoverPreparation XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            HandoverRequest
    SUCCESSFUL OUTCOME
                            HandoverRequestAcknowledge
                            HandoverPreparationFailure
   UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-handoverPreparation
                            reject
    CRITICALITY
sNStatusTransfer
                    XNAP-ELEMENTARY-PROCEDURE ::= {
                            SNStatusTransfer
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-sNStatusTransfer
    CRITICALITY
                            ignore
```

```
handoverCancel XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            HandoverCancel
                            id-handoverCancel
    PROCEDURE CODE
    CRITICALITY
                            ignore
retrieveUEContext XNAP-ELEMENTARY-PROCEDURE ::= {
                            RetrieveUEContextRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            RetrieveUEContextResponse
                            RetrieveUEContextFailure
    UNSUCCESSFUL OUTCOME
                            id-retrieveUEContext
    PROCEDURE CODE
    CRITICALITY
                            reject
rANPaging XNAP-ELEMENTARY-PROCEDURE ::= {
                            RANPaging
    INITIATING MESSAGE
                            id-rANPaging
    PROCEDURE CODE
    CRITICALITY
                            reject
xnUAddressIndication
                        XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            XnUAddressIndication
    PROCEDURE CODE
                            id-xnUAddressIndication
    CRITICALITY
                            reject
uEContextRelease
                    XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            UEContextRelease
    PROCEDURE CODE
                            id-uEContextRelease
    CRITICALITY
                            reject
sNGRANnodeAdditionPreparation XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SNodeAdditionRequest
                            SNodeAdditionRequestAcknowledge
    SUCCESSFUL OUTCOME
                            SNodeAdditionRequestReject
    UNSUCCESSFUL OUTCOME
                            id-sNGRANnodeAdditionPreparation
    PROCEDURE CODE
    CRITICALITY
                            reject
sNGRANnodeReconfigurationCompletion XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SNodeReconfigurationComplete
    PROCEDURE CODE
                            \verb|id-sNGRAN| node Reconfiguration Completion|
                            reject
    CRITICALITY
```

```
mNGRANnodeinitiatedSNGRANnodeModificationPreparation
                                                         XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                             SNodeModificationRequest
    SUCCESSFUL OUTCOME
                             SNodeModificationRequestAcknowledge
    UNSUCCESSFUL OUTCOME
                            SNodeModificationRequestReject
    PROCEDURE CODE
                             id-mNGRANnodeinitiatedSNGRANnodeModificationPreparation
    CRITICALITY
                            reject
sNGRANnodeinitiatedSNGRANnodeModificationPreparation
                                                         XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SNodeModificationRequired
                             SNodeModificationConfirm
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            SNodeModificationRefuse
    PROCEDURE CODE
                             \verb|id-sNGRAN| node initiated SNGRAN| node \verb|Modification| Preparation|
    CRITICALITY
                            reject
                                         XNAP-ELEMENTARY-PROCEDURE ::=
mNGRANnodeinitiatedSNGRANnodeRelease
    INITIATING MESSAGE
                             SNodeReleaseRequest
    SUCCESSFUL OUTCOME
                             SNodeReleaseRequestAcknowledge
    UNSUCCESSFUL OUTCOME
                            SNodeReleaseReject
    PROCEDURE CODE
                             id-mNGRANnodeinitiatedSNGRANnodeRelease
    CRITICALITY
                            reject
sNGRANnodeinitiatedSNGRANnodeRelease
                                         XNAP-ELEMENTARY-PROCEDURE ::= {
                            SNodeReleaseRequired
    INITIATING MESSAGE
                            SNodeReleaseConfirm
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-sNGRANnodeinitiatedSNGRANnodeRelease
    CRITICALITY
                            reject
sNGRANnodeCounterCheck XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SNodeCounterCheckRequest
                             id-sNGRANnodeCounterCheck
    PROCEDURE CODE
    CRITICALITY
                            reject
sNGRANnodeChange
                        XNAP-ELEMENTARY-PROCEDURE ::=
                             SNodeChangeRequired
    INITIATING MESSAGE
                             SNodeChangeConfirm
    SUCCESSFUL OUTCOME
                            SNodeChangeRefuse
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                             id-sNGRANnodeChange
    CRITICALITY
                            reject
rRCTransfer XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            RRCTransfer
                             id-rRCTransfer
    PROCEDURE CODE
```

281

```
CRITICALITY
                            reject
xnRemoval
           XNAP-ELEMENTARY-PROCEDURE ::= {
                            XnRemovalRequest
    INITIATING MESSAGE
                            XnRemovalResponse
    SUCCESSFUL OUTCOME
                                XnRemovalFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-xnRemoval
                            reject
    CRITICALITY
xnSetup XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            XnSetupRequest
    SUCCESSFUL OUTCOME
                            XnSetupResponse
                                XnSetupFailure
    UNSUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-xnSetup
                            reject
    CRITICALITY
nGRANnodeConfigurationUpdate
                                XNAP-ELEMENTARY-PROCEDURE ::= {
                            NGRANNodeConfigurationUpdate
    INITIATING MESSAGE
                            NGRANNodeConfigurationUpdateAcknowledge
    SUCCESSFUL OUTCOME
    UNSUCCESSFUL OUTCOME
                            NGRANNodeConfigurationUpdateFailure
                            id-nGRANnodeConfigurationUpdate
    PROCEDURE CODE
    CRITICALITY
                            reject
e-UTRA-NR-CellResourceCoordination XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            E-UTRA-NR-CellResourceCoordinationRequest
    SUCCESSFUL OUTCOME
                            E-UTRA-NR-CellResourceCoordinationResponse
                            id-e-UTRA-NR-CellResourceCoordination
    PROCEDURE CODE
    CRITICALITY
                            reject
cellactivation XNAP-ELEMENTARY-PROCEDURE ::= {
                            CellActivationRequest
    INITIATING MESSAGE
    SUCCESSFUL OUTCOME
                            CellActivationResponse
    UNSUCCESSFUL OUTCOME
                            CellActivationFailure
    PROCEDURE CODE
                            id-cellActivation
    CRITICALITY
                            reject
       XNAP-ELEMENTARY-PROCEDURE ::= {
reset
                            ResetRequest
    INITIATING MESSAGE
                            ResetResponse
    SUCCESSFUL OUTCOME
    PROCEDURE CODE
                            id-reset
    CRITICALITY
                            reject
```

```
errorIndication XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ErrorIndication
    PROCEDURE CODE
                            id-errorIndication
    CRITICALITY
                            ignore
notificationControl
                            XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            NotificationControlIndication
    PROCEDURE CODE
                            id-notificationControl
    CRITICALITY
                            ignore
activityNotification
                            XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ActivityNotification
                            id-activityNotification
    PROCEDURE CODE
    CRITICALITY
                            ignore
                        XNAP-ELEMENTARY-PROCEDURE ::= {
privateMessage
    INITIATING MESSAGE
                            PrivateMessage
    PROCEDURE CODE
                            id-privateMessage
    CRITICALITY
                            ignore
secondaryRATDataUsageReport XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            SecondaryRATDataUsageReport
    PROCEDURE CODE
                            id-secondaryRATDataUsageReport
    CRITICALITY
                            reject
deactivateTrace XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            DeactivateTrace
                            id-deactivateTrace
    PROCEDURE CODE
    CRITICALITY
                            ignore
traceStart XNAP-ELEMENTARY-PROCEDURE ::= {
                            TraceStart
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-traceStart
    CRITICALITY
                            ignore
                        XNAP-ELEMENTARY-PROCEDURE ::= {
handoverSuccess
    INITIATING MESSAGE
                            HandoverSuccess
                            id-handoverSuccess
    PROCEDURE CODE
    CRITICALITY
                            ignore
conditionalHandoverCancel
                            XNAP-ELEMENTARY-PROCEDURE ::=
```

```
ConditionalHandoverCancel
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-conditionalHandoverCancel
    CRITICALITY
                            ignore
                        XNAP-ELEMENTARY-PROCEDURE ::= {
earlyStatusTransfer
    INITIATING MESSAGE
                            EarlyStatusTransfer
                            id-earlyStatusTransfer
    PROCEDURE CODE
    CRITICALITY
                            ignore
failureIndication XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            FailureIndication
    PROCEDURE CODE
                            id-failureIndication
    CRITICALITY
                            ignore
handoverReport XNAP-ELEMENTARY-PROCEDURE ::= {
                            HandoverReport
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-handoverReport
    CRITICALITY
                            ignore
                                    XNAP-ELEMENTARY-PROCEDURE ::= {
resourceStatusReportingInitiation
    INITIATING MESSAGE
                                    ResourceStatusRequest
    SUCCESSFUL OUTCOME
                                    ResourceStatusResponse
                                    ResourceStatusFailure
    UNSUCCESSFUL OUTCOME
                                    id-resourceStatusReportingInitiation
    PROCEDURE CODE
                                    reject
    CRITICALITY
resourceStatusReporting XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                            ResourceStatusUpdate
    PROCEDURE CODE
                            id-resourceStatusReporting
    CRITICALITY
                            ignore
mobilitySettingsChange XNAP-ELEMENTARY-PROCEDURE ::= {
    INITIATING MESSAGE
                                    MobilityChangeRequest
    SUCCESSFUL OUTCOME
                                    MobilityChangeAcknowledge
                                    MobilityChangeFailure
    UNSUCCESSFUL OUTCOME
                                    id-mobilitySettingsChange
    PROCEDURE CODE
                                    reject
    CRITICALITY
accessAndMobilityIndication XNAP-ELEMENTARY-PROCEDURE ::={
                            AccessAndMobilityIndication
    INITIATING MESSAGE
    PROCEDURE CODE
                            id-accessAndMobilityIndication
    CRITICALITY
                                ignore
END
-- ASN1STOP
```

#### 9.3.4 PDU Definitions

```
-- ASN1START
__ ********************
-- PDU definitions for XnAP.
__ *********************
XnAP-PDU-Contents {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) xnap (2) version1 (1) xnap-PDU-Contents (1) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
     *****************
-- IE parameter types from other modules.
IMPORTS
   ActivationIDforCellActivation,
   AMF-Region-Information,
   AMF-UE-NGAP-ID,
   AS-SecurityInformation,
   AssistanceDataForRANPaging,
   BitRate,
   Cause,
   CellAndCapacityAssistanceInfo-EUTRA,
   CellAndCapacityAssistanceInfo-NR,
   CellAssistanceInfo-EUTRA,
   CellAssistanceInfo-NR,
   CHOinformation-Req,
   CHOinformation-Ack,
   CHO-MRDC-Indicator,
   CPTransportLayerInformation,
   TNLA-To-Add-List,
   TNLA-To-Update-List,
   TNLA-To-Remove-List,
   TNLA-Setup-List,
   TNLA-Failed-To-Setup-List,
   CriticalityDiagnostics,
   XnUAddressInfoperPDUSession-List,
   DAPSResponseInfo-List,
   DataTrafficResourceIndication,
   DeliveryStatus,
   DesiredActNotificationLevel,
   DRB-ID,
```

```
DRB-List,
DRB-Number.
DRBsSubjectToDLDiscarding-List,
DRBsSubjectToEarlyStatusTransfer-List,
DRBsSubjectToStatusTransfer-List,
DRBToOoSFlowMapping-List,
E-UTRA-CGI,
ExpectedUEBehaviour,
FiveGCMobilityRestrictionListContainer,
GlobalNG-RANNode-ID,
GlobalNG-RANCell-ID,
GUAMI,
InterfaceInstanceIndication,
I-RNTI.
LocationInformationSNReporting,
LocationReportingInformation,
LowerLayerPresenceStatusChange,
LTEUESidelinkAggregateMaximumBitRate,
LTEV2XServicesAuthorized,
MR-DC-ResourceCoordinationInfo,
ServedCells-E-UTRA,
ServedCells-NR,
ServedCellsToUpdate-E-UTRA,
ServedCellsToUpdate-NR,
MAC-I,
MaskedIMEISV,
MDT-Configuration,
MDTPLMNList,
MobilityRestrictionList,
NG-RAN-Cell-Identity,
NG-RANnodeUEXnAPID,
NR-CGI,
NE-DC-TDM-Pattern,
NRUESidelinkAggregateMaximumBitRate,
NRV2XServicesAuthorized.
PagingDRX,
PagingPriority,
PartialListIndicator,
PLMN-Identity,
PDCPChangeIndication,
PDUSessionAggregateMaximumBitRate,
PDUSession-ID.
PDUSession-List,
PDUSession-List-withCause,
PDUSession-List-withDataForwardingFromTarget,
PDUSession-List-withDataForwardingRequest,
PDUSessionResourcesAdmitted-List,
PDUSessionResourcesNotAdmitted-List,
PDUSessionResourcesToBeSetup-List,
PDUSessionResourceChangeRequiredInfo-SNterminated,
PDUSessionResourceChangeRequiredInfo-MNterminated,
PDUSessionResourceChangeConfirmInfo-SNterminated,
PDUSessionResourceChangeConfirmInfo-MNterminated,
PDUSessionResourceSecondaryRATUsageList,
```

```
PDUSessionResourceSetupInfo-SNterminated,
PDUSessionResourceSetupInfo-MNterminated,
PDUSessionResourceSetupResponseInfo-SNterminated.
PDUSessionResourceSetupResponseInfo-MNterminated,
PDUSessionResourceModificationInfo-SNterminated.
PDUSessionResourceModificationInfo-MNterminated,
PDUSessionResourceModificationResponseInfo-SNterminated,
PDUSessionResourceModificationResponseInfo-MNterminated.
PDUSessionResourceModConfirmInfo-SNterminated,
PDUSessionResourceModConfirmInfo-MNterminated.
PDUSessionResourceModRqdInfo-SNterminated,
PDUSessionResourceModRqdInfo-MNterminated,
PDUSessionType,
PC50oSParameters,
OoSFlowIdentifier,
OoSFlowNotificationControlIndicationInfo,
OoSFlows-List,
RANPagingArea,
ResetRequestTypeInfo,
ResetResponseTypeInfo,
RFSP-Index.
RRCConfigIndication,
RRCResumeCause,
SCGConfigurationQuery,
SecurityIndication,
S-NG-RANnode-SecurityKey,
SpectrumSharingGroupID,
SplitSRBsTypes,
S-NG-RANnode-Addition-Trigger-Ind,
S-NSSAI,
TargetCellList,
TAISupport-List,
Target-CGI,
TimeToWait,
TraceActivation,
UEAggregateMaximumBitRate,
UEContextID,
UEContextInfoRetrUECtxtResp,
UEContextKeptIndicator,
UEHistoryInformation,
UEIdentityIndexValue,
UERadioCapabilityForPaging,
UERadioCapabilityID,
UERANPagingIdentity,
UESecurityCapabilities,
UPTransportLayerInformation,
UserPlaneTrafficActivityReport,
XnBenefitValue,
RANPagingFailure,
TNLConfigurationInfo,
MaximumCellListSize,
MessageOversizeNotification,
NG-RANTraceID,
MobilityInformation,
```

```
InitiatingCondition-FailureIndication,
    HandoverReportType,
    TargetCellinEUTRAN,
    C-RNTI,
    UERLFReportContainer,
    Measurement-ID,
    RegistrationRequest,
    ReportCharacteristics,
    CellToReport,
    ReportingPeriodicity,
    CellMeasurementResult,
    UEHistoryInformationFromTheUE,
   MobilityParametersInformation,
    MobilityParametersModificationRange,
    RACHReportInformation,
    IABNodeIndication,
    SNTriggered
FROM XnAP-IEs
    PrivateIE-Container{},
    ProtocolExtensionContainer{},
    ProtocolIE-Container{},
    ProtocolIE-ContainerList{},
    ProtocolIE-ContainerPair(),
    ProtocolIE-ContainerPairList{},
    ProtocolIE-Single-Container{},
    XNAP-PRIVATE-IES,
    XNAP-PROTOCOL-EXTENSION,
    XNAP-PROTOCOL-IES,
    XNAP-PROTOCOL-IES-PAIR
FROM XnAP-Containers
    id-ActivatedServedCells,
    id-ActivationIDforCellActivation,
    id-AdditionalDRBIDs,
    id-AMF-Region-Information,
    id-AMF-Region-Information-To-Add,
    id-AMF-Region-Information-To-Delete,
    id-AssistanceDataForRANPaging,
    id-AvailableDRBIDs,
    id-Cause.
    id-cellAssistanceInfo-EUTRA,
    id-cellAssistanceInfo-NR,
    id-CellAndCapacityAssistanceInfo-EUTRA,
    id-CellAndCapacityAssistanceInfo-NR,
    id-ConfigurationUpdateInitiatingNodeChoice,
    id-UEContextID,
    id-CriticalityDiagnostics,
    id-XnUAddressInfoperPDUSession-List,
    id-DesiredActNotificationLevel,
    id-DRBsSubjectToStatusTransfer-List,
```

```
id-ExpectedUEBehaviour,
id-FiveGCMobilityRestrictionListContainer,
id-GlobalNG-RAN-node-ID.
id-GUAMI.
id-indexToRatFrequSelectionPriority,
id-List-of-served-cells-E-UTRA,
id-List-of-served-cells-NR.
id-LocationInformationSN,
id-LocationInformationSNReporting,
id-LocationReportingInformation,
id-LTEUESidelinkAggregateMaximumBitRate,
id-LTEV2XServicesAuthorized.
id-MAC-I,
id-MaskedIMEISV.
id-MDT-Configuration,
id-MDTPLMNList,
id-MN-to-SN-Container,
id-MobilityRestrictionList,
id-M-NG-RANnodeUEXnAPID,
id-new-NG-RAN-Cell-Identity,
id-newNG-RANnodeUEXnAPID,
id-NRUESidelinkAggregateMaximumBitRate,
id-NRV2XServicesAuthorized,
id-oldNG-RANnodeUEXnAPID,
id-OldtoNewNG-RANnodeResumeContainer,
id-PagingDRX,
id-PagingPriority,
id-PartialListIndicator-EUTRA,
id-PartialListIndicator-NR,
id-PCellID,
id-PDUSessionResourceSecondaryRATUsageList,
id-PDUSessionResourcesActivityNotifyList,
id-PDUSessionResourcesAdmitted-List,
id-PDUSessionResourcesNotAdmitted-List,
id-PDUSessionResourcesNotifvList.
id-PDUSessionToBeAddedAddReg,
id-PDUSessionToBeReleased-RelReqAck,
id-procedureStage,
id-RANPagingArea,
id-requestedSplitSRB,
id-RequiredNumberOfDRBIDs,
id-ResetRequestTypeInfo,
id-ResetResponseTypeInfo,
id-RespondingNodeTypeConfigUpdateAck,
id-RRCResumeCause,
id-selectedPLMN,
id-ServedCellsToActivate,
id-servedCellsToUpdate-E-UTRA,
id-ServedCellsToUpdateInitiatingNodeChoice,
id-servedCellsToUpdate-NR,
id-sourceNG-RANnodeUEXnAPID,
id-SpareDRBIDs,
id-S-NG-RANnodeMaxIPDataRate-UL,
id-S-NG-RANnodeMaxIPDataRate-DL,
```

```
id-S-NG-RANnodeUEXnAPID,
id-TAISupport-list,
id-Target2SourceNG-RANnodeTranspContainer,
id-targetCellGlobalID,
id-targetNG-RANnodeUEXnAPID,
id-TimeToWait.
id-TNLA-To-Add-List.
id-TNLA-To-Update-List,
id-TNLA-To-Remove-List,
id-TNLA-Setup-List,
id-TNLA-Failed-To-Setup-List,
id-TraceActivation.
id-UEContextInfoHORequest,
id-UEContextInfoRetrUECtxtResp,
id-UEContextKeptIndicator,
id-UEContextRefAtSN-HORequest,
id-UEHistoryInformation,
id-UEIdentityIndexValue,
id-UERANPagingIdentity,
id-UESecurityCapabilities,
id-UserPlaneTrafficActivityReport,
id-XnRemovalThreshold,
id-PDUSessionAdmittedAddedAddRegAck,
id-PDUSessionNotAdmittedAddRegAck,
id-SN-to-MN-Container,
id-RRCConfigIndication,
id-SplitSRB-RRCTransfer,
id-UEReportRRCTransfer,
id-PDUSessionReleasedList-RelConf,
id-BearersSubjectToCounterCheck,
id-PDUSessionToBeReleasedList-RelRgd.
id-ResponseInfo-ReconfCompl,
id-initiatingNodeType-ResourceCoordRequest,
id-respondingNodeType-ResourceCoordResponse,
id-PDUSessionToBeReleased-RelReg.
id-PDUSession-SNChangeRequired-List,
id-PDUSession-SNChangeConfirm-List,
id-PDCPChangeIndication,
id-PC5OoSParameters,
id-SCGConfigurationOuery,
id-UEContextInfo-SNModRequest,
id-requestedSplitSRBrelease,
id-PDUSessionAdmitted-SNModResponse,
id-PDUSessionNotAdmitted-SNModResponse,
id-admittedSplitSRB,
id-admittedSplitSRBrelease,
id-PDUSessionAdmittedModSNModConfirm,
id-PDUSessionReleasedSNModConfirm,
id-s-ng-RANnode-SecurityKey,
id-PDUSessionToBeModifiedSNModRequired,
id-S-NG-RANnodeUE-AMBR,
id-PDUSessionToBeReleasedSNModRequired,
id-target-S-NG-RANnodeID,
id-S-NSSAI,
```

```
id-MR-DC-ResourceCoordinationInfo,
id-RANPagingFailure,
id-UERadioCapabilityForPaging,
id-PDUSessionDataForwarding-SNModResponse,
id-Secondary-MN-Xn-U-TNLInfoatM,
id-NE-DC-TDM-Pattern,
id-InterfaceInstanceIndication.
id-S-NG-RANnode-Addition-Trigger-Ind.
id-SNTriggered,
id-DRBs-transferred-to-MN,
id-TNLConfigurationInfo,
id-MessageOversizeNotification,
id-NG-RANTraceID.
id-FastMCGRecoveryRRCTransfer-SN-to-MN,
id-FastMCGRecoveryRRCTransfer-MN-to-SN,
id-RequestedFastMCGRecoveryViaSRB3,
id-AvailableFastMCGRecoveryViaSRB3,
id-RequestedFastMCGRecoveryViaSRB3Release,
id-ReleaseFastMCGRecoveryViaSRB3,
id-CHOinformation-Req,
id-CHOinformation-Ack,
id-targetCellsToCancel,
id-requestedTargetCellGlobalID,
id-DAPSResponseInfo-List,
id-CHO-MRDC-Indicator,
id-MobilityInformation,
id-InitiatingCondition-FailureIndication,
id-UEHistoryInformationFromTheUE,
id-HandoverReportType,
id-HandoverCause,
id-SourceCellCGI,
id-TargetCellCGI,
id-ReEstablishmentCellCGI,
id-TargetCellinEUTRAN,
id-SourceCellCRNTI,
id-UERLFReportContainer,
id-NGRAN-Nodel-Measurement-ID,
id-NGRAN-Node2-Measurement-ID,
id-RegistrationReguest,
id-ReportCharacteristics,
id-CellToReport,
id-ReportingPeriodicity,
id-CellMeasurementResult,
id-NG-RANnodelCellID,
id-NG-RANnode2CellID,
id-NG-RANnodelMobilityParameters,
id-NG-RANnode2ProposedMobilityParameters,
id-MobilityParametersModificationRange,
id-RACHReportInformation,
id-IABNodeIndication,
id-UERadioCapabilityID,
```

```
maxnoofCellsinNG-RANnode,
    maxnoofDRBs.
    maxnoof PDUSessions.
    maxnoofOoSFlows
FROM XnAP-Constants;
-- HANDOVER REQUEST
__ *********************
HandoverRequest ::= SEOUENCE {
    protocolIEs
                       ProtocolIE-Container
                                               {{HandoverRequest-IEs}},
HandoverRequest-IEs XNAP-PROTOCOL-IES ::= {
     ID id-sourceNG-RANnodeUEXnAPID
                                               CRITICALITY reject TYPE NG-RANnodeUEXnAPID
                                                                                                            PRESENCE mandatory}
     ID id-Cause
                                               CRITICALITY reject TYPE Cause
                                                                                                            PRESENCE mandatory }
     ID id-targetCellGlobalID
                                               CRITICALITY reject TYPE Target-CGI
                                                                                                            PRESENCE mandatory
     ID id-GUAMI
                                               CRITICALITY reject TYPE GUAMI
                                                                                                            PRESENCE mandatory }
     ID id-UEContextInfoHORequest
                                               CRITICALITY reject TYPE UEContextInfoHORequest
                                                                                                            PRESENCE mandatory }
     ID id-TraceActivation
                                               CRITICALITY ignore TYPE TraceActivation
                                                                                                            PRESENCE optional
     ID id-MaskedIMEISV
                                               CRITICALITY ignore TYPE MaskedIMEISV
                                                                                                            PRESENCE optional
     ID id-UEHistoryInformation
                                               CRITICALITY ignore TYPE UEHistoryInformation
                                                                                                            PRESENCE mandatory }
                                                                                                            PRESENCE optional
     ID id-UEContextRefAtSN-HORequest
                                               CRITICALITY ignore TYPE UEContextRefAtSN-HORequest
     ID id-CHOinformation-Reg
                                               CRITICALITY reject TYPE CHOinformation-Reg
                                                                                                            PRESENCE optional
     ID id-NRV2XServicesAuthorized
                                               CRITICALITY ignore TYPE NRV2XServicesAuthorized
                                                                                                            PRESENCE optional
     ID id-LTEV2XServicesAuthorized
                                               CRITICALITY ignore TYPE LTEV2XServicesAuthorized
                                                                                                            PRESENCE optional }
     ID id-PC50oSParameters
                                               CRITICALITY ignore TYPE PC5QoSParameters
                   PRESENCE optional }
     ID id-MobilityInformation
                                           CRITICALITY ignore TYPE MobilityInformation
                                                                                                               PRESENCE optional }
                                           CRITICALITY ignore TYPE UEHistoryInformationFromTheUE
                                                                                                            PRESENCE optional } |
     ID id-UEHistoryInformationFromTheUE
     ID id-IABNodeIndication
                                               CRITICALITY reject TYPE IABNodeIndication
                                                                                                            PRESENCE optional }.
UEContextInfoHORequest ::= SEQUENCE {
    ng-c-UE-reference
                                           AMF-UE-NGAP-ID,
    cp-TNL-info-source
                                           CPTransportLayerInformation,
    ueSecurityCapabilities
                                           UESecurityCapabilities,
                                           AS-SecurityInformation,
    securityInformation
    indexToRatFrequencySelectionPriority
                                           RFSP-Index
                                                                                                         OPTIONAL,
                                           UEAggregateMaximumBitRate,
    pduSessionResourcesToBeSetup-List
                                           PDUSessionResourcesToBeSetup-List,
    rrc-Context
                                           OCTET STRING,
    locationReportingInformation
                                           LocationReportingInformation
                                                                                                         OPTIONAL,
    mrl
                                           MobilityRestrictionList
                                                                                                         OPTIONAL,
                                           ProtocolExtensionContainer { {UEContextInfoHORequest-ExtIEs} } OPTIONAL,
    iE-Extensions
UEContextInfoHORequest-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
```

```
PRESENCE optional } |
 ID id-NRUESidelinkAggregateMaximumBitRate
                                           CRITICALITY ignore EXTENSION NRUESidelinkAggregateMaximumBitRate PRESENCE optional } |
                                               CRITICALITY ignore EXTENSION
 ID id-LTEUESidelinkAggregateMaximumBitRate
                                                                          LTEUESidelinkAggregateMaximumBitRate PRESENCE optional}
     ID id-MDTPLMNList
                                               CRITICALITY reject EXTENSION MDTPLMNList
                                                                                                                PRESENCE optional }
   { ID id-UERadioCapabilityID
                                               CRITICALITY reject EXTENSION UERadioCapabilityID
                                                                                                                PRESENCE optional },
UEContextRefAtSN-HORequest ::= SEQUENCE {
                                GlobalNG-RANNode-ID,
   globalNG-RANNode-ID
   sN-NG-RANnodeUEXnAPID
                                NG-RANnodeUEXnAPID,
   iE-Extensions
                                ProtocolExtensionContainer { { UEContextRefAtSN-HORequest-ExtIEs} } OPTIONAL,
UEContextRefAtSN-HORequest-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
    -- HANDOVER REQUEST ACKNOWLEDGE
  *****************
HandoverRequestAcknowledge ::= SEQUENCE
                     ProtocolIE-Container
                                           {{HandoverRequestAcknowledge-IEs}},
   protocolIEs
   . . .
HandoverRequestAcknowledge-IEs XNAP-PROTOCOL-IES ::= {
     ID id-sourceNG-RANnodeUEXnAPID
                                                                                                        PRESENCE mandatory }
                                               CRITICALITY ignore TYPE NG-RANnodeUEXnAPID
     ID id-targetNG-RANnodeUEXnAPID
                                               CRITICALITY ignore TYPE NG-RANnodeUEXnAPID
                                                                                                        PRESENCE mandatory
     ID id-PDUSessionResourcesAdmitted-List
                                                                                                        PRESENCE mandatory
                                               CRITICALITY ignore TYPE PDUSessionResourcesAdmitted-List
     ID id-PDUSessionResourcesNotAdmitted-List
                                               CRITICALITY ignore TYPE PDUSessionResourcesNotAdmitted-List
                                                                                                        PRESENCE optional
     ID id-Target2SourceNG-RANnodeTranspContainer CRITICALITY ignore TYPE OCTET STRING
                                                                                                        PRESENCE mandatory
     ID id-UEContextKeptIndicator
                                               CRITICALITY ignore TYPE UEContextKeptIndicator
                                                                                                        PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                                                                        PRESENCE optional
                                               CRITICALITY ignore TYPE CriticalityDiagnostics
     ID id-DRBs-transferred-to-MN
                                               CRITICALITY ignore TYPE DRB-List
                                                                                                        PRESENCE optional
     ID id-DAPSResponseInfo-List
                                               CRITICALITY reject TYPE DAPSResponseInfo-List
                                                                                                        PRESENCE optional
     ID id-CHOinformation-Ack
                                               CRITICALITY reject TYPE CHOinformation-Ack
                                                                                                        PRESENCE optional },
  HANDOVER PREPARATION FAILURE
HandoverPreparationFailure ::= SEQUENCE {
   protocolIEs
                     ProtocolIE-Container
                                           {{HandoverPreparationFailure-IEs}},
```

```
HandoverPreparationFailure-IES XNAP-PROTOCOL-IES ::= {
     ID id-sourceNG-RANnodeUEXnAPID
                                                CRITICALITY ignore TYPE NG-RANnodeUEXnAPID
                                                                                                         PRESENCE mandatory }
     ID id-Cause
                                                CRITICALITY ignore TYPE Cause
                                                                                                         PRESENCE mandatory}
     ID id-CriticalityDiagnostics
                                                CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                         PRESENCE optional }
    ID id-requestedTargetCellGlobalID
                                                CRITICALITY reject TYPE Target-CGI
                                                                                                         PRESENCE optional },
  -- SN STATUS TRANSFER
SNStatusTransfer ::= SEQUENCE {
                                            {{SNStatusTransfer-IEs}},
   protocolIEs
                     ProtocolIE-Container
SNStatusTransfer-IEs XNAP-PROTOCOL-IES ::= {
     ID id-sourceNG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                                                              PRESENCE mandatory }
                                                                      TYPE NG-RANnodeUEXnAPID
     ID id-targetNG-RANnodeUEXnAPID
                                                                                                              PRESENCE mandatory
                                                CRITICALITY reject
                                                                      TYPE NG-RANnodeUEXnAPID
     ID id-DRBsSubjectToStatusTransfer-List
                                                CRITICALITY ignore
                                                                      TYPE DRBsSubjectToStatusTransfer-List
                                                                                                              PRESENCE mandatory },
-- UE CONTEXT RELEASE
__ *********************
UEContextRelease ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                            {{UEContextRelease-IEs}},
    . . .
UEContextRelease-IEs XNAP-PROTOCOL-IES ::= {
     ID id-sourceNG-RANnodeUEXnAPID
                                                    CRITICALITY reject
                                                                          TYPE NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory |
    { ID id-targetNG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory },
                                                    CRITICALITY reject
                                                                          TYPE NG-RANnodeUEXnAPID
-- HANDOVER CANCEL
HandoverCancel ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                            {{HandoverCancel-IEs}},
```

```
HandoverCancel-IES XNAP-PROTOCOL-IES ::= {
     ID id-sourceNG-RANnodeUEXnAPID
                                                     CRITICALITY reject
                                                                           TYPE NG-RANnodeUEXnAPID
                                                                                                                   PRESENCE mandatory }
     ID id-targetNG-RANnodeUEXnAPID
                                                     CRITICALITY ignore
                                                                           TYPE NG-RANnodeUEXnAPID
                                                                                                                  PRESENCE optional }
     ID id-Cause
                                                     CRITICALITY ignore
                                                                           TYPE Cause
                                                                                                                   PRESENCE mandatory}
                                                                                                                   PRESENCE optional },
     ID id-targetCellsToCancel
                                                     CRITICALITY reject
                                                                           TYPE TargetCellList
   -- HANDOVER SUCCESS
HandoverSuccess ::= SEQUENCE {
                                             {{HandoverSuccess-IEs}},
   protocolIEs
                      ProtocolIE-Container
HandoverSuccess-IEs XNAP-PROTOCOL-IES ::= {
     ID id-sourceNG-RANnodeUEXnAPID
                                                                                                                   PRESENCE mandatory }
                                                     CRITICALITY reject
                                                                           TYPE NG-RANnodeUEXnAPID
     ID id-targetNG-RANnodeUEXnAPID
                                                                                                                   PRESENCE mandatory
                                                     CRITICALITY reject
                                                                           TYPE NG-RANnodeUEXnAPID
     ID id-requestedTargetCellGlobalID
                                                     CRITICALITY reject
                                                                           TYPE Target-CGI
                                                                                                                   PRESENCE mandatory },
-- CONDITIONAL HANDOVER CANCEL
__ *********************
ConditionalHandoverCancel ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ ConditionalHandoverCancel-IEs}},
    . . .
ConditionalHandoverCancel-IES XNAP-PROTOCOL-IES ::= {
     ID id-sourceNG-RANnodeUEXnAPID
                                                     CRITICALITY reject
                                                                           TYPE NG-RANnodeUEXnAPID
                                                                                                                   PRESENCE mandatory
     ID id-targetNG-RANnodeUEXnAPID
                                                                                                                   PRESENCE mandatory}
                                                     CRITICALITY reject
                                                                           TYPE NG-RANnodeUEXnAPID
     ID id-targetCellsToCancel
                                                     CRITICALITY reject
                                                                           TYPE TargetCellList
                                                                                                                   PRESENCE optional |
    { ID id-Cause
                                                                                                                   PRESENCE mandatory },
                                                     CRITICALITY ignore
                                                                           TYPE Cause
-- EARLY STATUS TRANSFER
EarlyStatusTransfer ::= SEQUENCE {
                                             {{ EarlyStatusTransfer-IEs}},
   protocolIEs
                      ProtocolIE-Container
```

```
EarlyStatusTransfer-IEs XNAP-PROTOCOL-IES ::= {
     ID id-sourceNG-RANnodeUEXnAPID
                                                       CRITICALITY reject
                                                                              TYPE NG-RANnodeUEXnAPID
                                                                                                                       PRESENCE mandatory}
                                                                                                                       PRESENCE mandatory}
     ID id-targetNG-RANnodeUEXnAPID
                                                                              TYPE NG-RANnodeUEXnAPID
                                                       CRITICALITY reject
     ID id-procedureStage
                                                       CRITICALITY reject
                                                                              TYPE ProcedureStageChoice
                                                                                                                       PRESENCE mandatory },
    . . .
ProcedureStageChoice ::= CHOICE {
    first-dl-count
                                       FirstDLCount,
    dl-discarding
                                       DLDiscarding,
    choice-extension
                                       ProtocolIE-Single-Container { {ProcedureStageChoice-ExtIEs} }
ProcedureStageChoice-ExtIEs XNAP-PROTOCOL-IES ::= {
FirstDLCount ::= SEQUENCE {
    dRBsSubjectToEarlyStatusTransfer
                                               DRBsSubjectToEarlyStatusTransfer-List,
                                               ProtocolExtensionContainer { {FirstDLCount-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
FirstDLCount-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DLDiscarding ::= SEQUENCE {
    dRBsSubjectToDLDiscarding
                                               DRBsSubjectToDLDiscarding-List,
    iE-Extension
                                               ProtocolExtensionContainer { {DLDiscarding-ExtIEs} } OPTIONAL,
    . . .
DLDiscarding-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- RAN PAGING
__ *********************
RANPaging ::= SEQUENCE
    protocolIEs
                       ProtocolIE-Container
                                               {{RANPaging-IEs}},
RANPaging-IEs XNAP-PROTOCOL-IES ::= {
     ID id-UEIdentityIndexValue
                                                                       TYPE UEIdentityIndexValue
                                                                                                                 PRESENCE mandatory}
                                               CRITICALITY reject
    { ID id-UERANPagingIdentity
                                               CRITICALITY ignore
                                                                       TYPE UERANPagingIdentity
                                                                                                                 PRESENCE mandatory}
```

```
ID id-PagingDRX
                                             CRITICALITY ignore
                                                                    TYPE PagingDRX
                                                                                                              PRESENCE mandatory }
     ID id-RANPagingArea
                                             CRITICALITY reject
                                                                    TYPE RANPagingArea
                                                                                                              PRESENCE mandatory
     ID id-PagingPriority
                                             CRITICALITY ignore
                                                                    TYPE PagingPriority
                                                                                                              PRESENCE optional
     ID id-AssistanceDataForRANPaging
                                             CRITICALITY ignore
                                                                    TYPE AssistanceDataForRANPaging
                                                                                                              PRESENCE optional }
     ID id-UERadioCapabilityForPaging
                                             CRITICALITY ignore
                                                                    TYPE UERadioCapabilityForPaging
                                                                                                              PRESENCE optional },
-- RETRIEVE UE CONTEXT REQUEST
  ******************
RetrieveUEContextRequest ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{RetrieveUEContextRequest-IEs}},
    . . .
RetrieveUEContextRequest-IEs XNAP-PROTOCOL-IES ::= {
     ID id-newNG-RANnodeUEXnAPID
                                                 CRITICALITY reject
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory }
     ID id-UEContextID
                                                 CRITICALITY reject
                                                                        TYPE UEContextID
                                                                                                                PRESENCE mandatory}
                                                                                                                PRESENCE mandatory
     TD id-MAC-T
                                                 CRITICALITY reject
                                                                        TYPE MAC-I
     ID id-new-NG-RAN-Cell-Identity
                                                 CRITICALITY reject
                                                                        TYPE NG-RAN-Cell-Identity
                                                                                                                PRESENCE mandatory
     ID id-RRCResumeCause
                                                 CRITICALITY ignore
                                                                        TYPE RRCResumeCause
                                                                                                                PRESENCE optional },
     -- RETRIEVE UE CONTEXT RESPONSE
   ****************
RetrieveUEContextResponse ::= SEOUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ RetrieveUEContextResponse-IEs}},
RetrieveUEContextResponse-IES XNAP-PROTOCOL-IES ::=
     ID id-newNG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory }
                                                 CRITICALITY ignore
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                        TYPE NG-RANnodeUEXnAPID
     ID id-oldNG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                                                                 PRESENCE mandatory
     ID id-GUAMI
                                                                                                                PRESENCE mandatory }
                                                 CRITICALITY reject
                                                                        TYPE GUAMI
     ID id-UEContextInfoRetrUECtxtResp
                                                                                                                 PRESENCE mandatory }
                                                 CRITICALITY reject
                                                                        TYPE UEContextInfoRetrUECtxtResp
     ID id-TraceActivation
                                                 CRITICALITY ignore
                                                                        TYPE TraceActivation
                                                                                                                 PRESENCE optional
                                                                                                                 PRESENCE optional
     ID id-MaskedIMEISV
                                                 CRITICALITY ignore
                                                                        TYPE MaskedIMEISV
     ID id-LocationReportingInformation
                                                 CRITICALITY ignore
                                                                        TYPE LocationReportingInformation
                                                                                                                PRESENCE optional }
                                                                                                                 PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore
                                                                        TYPE CriticalityDiagnostics
     ID id-NRV2XServicesAuthorized
                                          CRITICALITY ignore TYPE NRV2XServicesAuthorized
                                                                                             PRESENCE optional }
                                                                                             PRESENCE optional }
     ID id-LTEV2XServicesAuthorized
                                         CRITICALITY ignore TYPE LTEV2XServicesAuthorized
                                                                                           PRESENCE optional } |
     ID id-PC50oSParameters
                                          CRITICALITY ignore TYPE PC5QoSParameters
     ID id-UEHistoryInformation
                                             CRITICALITY ignore TYPE UEHistoryInformation
                                                                                                        PRESENCE optional |
     ID id-UEHistoryInformationFromTheUE
                                         CRITICALITY ignore TYPE UEHistoryInformationFromTheUE
                                                                                                        PRESENCE optional }
     ID id-MDTPLMNList
                                                 CRITICALITY ignore
                                                                                                                 PRESENCE optional },
                                                                        TYPE MDTPLMNList
```

```
-- RETRIEVE UE CONTEXT FAILURE
__ *********************
RetrieveUEContextFailure ::= SEOUENCE {
                                               {{ RetrieveUEContextFailure-IEs}},
   protocolIEs
                       ProtocolIE-Container
    . . .
RetrieveUEContextFailure-IEs XNAP-PROTOCOL-IES ::= {
     ID id-newNG-RANnodeUEXnAPID
                                                   CRITICALITY ignore
                                                                          TYPE NG-RANnodeUEXnAPID
                                                                                                                    PRESENCE mandatory}
                                                                                                                    PRESENCE optional
     ID id-OldtoNewNG-RANnodeResumeContainer
                                                   CRITICALITY ignore
                                                                          TYPE OCTET STRING
     ID id-Cause
                                                   CRITICALITY ignore
                                                                                                                    PRESENCE mandatory}
                                                                          TYPE Cause
    { ID id-CriticalityDiagnostics
                                                   CRITICALITY ignore
                                                                          TYPE CriticalityDiagnostics
                                                                                                                    PRESENCE optional },
-- XN-U ADDRESS INDICATION
XnUAddressIndication ::= SEQUENCE {
                                               {{ XnUAddressIndication-IEs}},
   protocolIEs
                       ProtocolIE-Container
    . . .
XnUAddressIndication-IEs XNAP-PROTOCOL-IES ::= {
     ID id-newNG-RANnodeUEXnAPID
                                                   CRITICALITY ignore
                                                                          TYPE NG-RANnodeUEXnAPID
                                                                                                                    PRESENCE mandatory}
     ID id-oldNG-RANnodeUEXnAPID
                                                   CRITICALITY ignore
                                                                          TYPE NG-RANnodeUEXnAPID
                                                                                                                    PRESENCE mandatory}
     ID id-XnUAddressInfoperPDUSession-List
                                                   CRITICALITY reject
                                                                          TYPE XnUAddressInfoperPDUSession-List
                                                                                                                    PRESENCE mandatory}
     ID id-CHO-MRDC-Indicator
                                                   CRITICALITY reject
                                                                          TYPE CHO-MRDC-Indicator
                                                                                                                    PRESENCE optional },
-- S-NODE ADDITION REQUEST
SNodeAdditionRequest ::= SEQUENCE {
   protocolIEs
                       ProtocolIE-Container
                                               {{ SNodeAdditionRequest-IEs}},
    . . .
SNodeAdditionRequest-IES XNAP-PROTOCOL-IES ::= {
    { ID id-M-NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory}
                                               CRITICALITY reject
                                                                       TYPE NG-RANnodeUEXnAPID
```

```
ID id-UESecurityCapabilities
                                              CRITICALITY reject
                                                                      TYPE UESecurityCapabilities
                                                                                                                PRESENCE mandatory}
     ID id-s-ng-RANnode-SecurityKey
                                              CRITICALITY reject
                                                                      TYPE S-NG-RANnode-SecurityKey
                                                                                                                PRESENCE mandatory
     ID id-S-NG-RANnodeUE-AMBR
                                              CRITICALITY reject.
                                                                      TYPE UEAggregateMaximumBitRate
                                                                                                                PRESENCE mandatory
     ID id-selectedPLMN
                                              CRITICALITY ignore
                                                                      TYPE PLMN-Identity
                                                                                                                PRESENCE optional
     ID id-MobilityRestrictionList
                                              CRITICALITY ignore
                                                                      TYPE MobilityRestrictionList
                                                                                                                PRESENCE optional
                                                                                                                PRESENCE optional
     ID id-indexToRatFrequSelectionPriority
                                              CRITICALITY reject
                                                                      TYPE RFSP-Index
     ID id-PDUSessionToBeAddedAddReg
                                                                      TYPE PDUSessionToBeAddedAddReq
                                                                                                                PRESENCE mandatory }
                                              CRITICALITY reject
     ID id-MN-to-SN-Container
                                              CRITICALITY reject
                                                                      TYPE OCTET STRING
                                                                                                                PRESENCE mandatory
     ID id-S-NG-RANnodeUEXnAPID
                                              CRITICALITY reject
                                                                      TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE optional
                                                                                                                PRESENCE optional
     ID id-ExpectedUEBehaviour
                                              CRITICALITY ignore
                                                                      TYPE ExpectedUEBehaviour
                                                                                                                PRESENCE optional
     ID id-requestedSplitSRB
                                              CRITICALITY reject
                                                                      TYPE SplitSRBsTypes
     ID id-PCellID
                                              CRITICALITY reject
                                                                      TYPE GlobalNG-RANCell-ID
                                                                                                                PRESENCE optional
                                                                      TYPE DesiredActNotificationLevel
                                                                                                                PRESENCE optional }
     ID id-DesiredActNotificationLevel
                                              CRITICALITY ignore
     ID id-AvailableDRBIDs
                                              CRITICALITY reject
                                                                      TYPE DRB-List.
                                                                                                                PRESENCE conditional }
 -- The IE shall be present if there is at least one PDUSessionResourceSetupInfo-SNterminated included --
     ID id-S-NG-RANnodeMaxIPDataRate-UL
                                              CRITICALITY reject
                                                                      TYPE BitRate
                                                                                                                PRESENCE optional
     ID id-S-NG-RANnodeMaxIPDataRate-DL
                                                                                                                PRESENCE optional
                                              CRITICALITY reject
                                                                      TYPE BitRate
     ID id-LocationInformationSNReporting
                                                                      TYPE LocationInformationSNReporting
                                                                                                                PRESENCE optional }
                                              CRITICALITY ignore
                                                                                                                PRESENCE optional
     ID id-MR-DC-ResourceCoordinationInfo
                                              CRITICALITY ignore
                                                                      TYPE MR-DC-ResourceCoordinationInfo
     ID id-MaskedIMEISV
                                              CRITICALITY ignore
                                                                      TYPE MaskedIMEISV
                                                                                                                PRESENCE optional }
     ID id-NE-DC-TDM-Pattern
                                              CRITICALITY ignore
                                                                      TYPE NE-DC-TDM-Pattern
                                                                                                                PRESENCE optional }
     ID id-S-NG-RANnode-Addition-Trigger-Ind
                                              CRITICALITY reject
                                                                      TYPE S-NG-RANnode-Addition-Trigger-Ind
                                                                                                                PRESENCE optional }
     ID id-TraceActivation
                                              CRITICALITY ignore
                                                                      TYPE TraceActivation
                                                                                                                PRESENCE optional }
     ID id-RequestedFastMCGRecoveryViaSRB3
                                              CRITICALITY ignore
                                                                              RequestedFastMCGRecoveryViaSRB3
                                                                                                                PRESENCE optional }
     ID id-UERadioCapabilityID
                                              CRITICALITY reject
                                                                      TYPE UERadioCapabilityID
                                                                                                                PRESENCE optional },
    . . .
PDUSessionToBeAddedAddReq ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionToBeAddedAddReq-Item
PDUSessionToBeAddedAddReg-Item ::= SEOUENCE {
   pduSessionId
                           PDUSession-ID,
   s-NSSAI
                           S-NSSAI,
    sN-PDUSessionAMBR
                           PDUSessionAggregateMaximumBitRate
                                                                      OPTIONAL,
                                                                      OPTIONAL,
    sn-terminated
                           PDUSessionResourceSetupInfo-SNterminated
   mn-terminated
                           PDUSessionResourceSetupInfo-MNterminated
                                                                      OPTIONAL,
-- NOTE: If neither the PDU Session Resource Setup Info - SN terminated IE
-- nor the PDU Session Resource Setup Info - MN terminated IE is present,
-- abnormal conditions as specified in clause 8.3.1.4 apply.
   iE-Extension
                           . . .
PDUSessionToBeAddedAddReq-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RequestedFastMCGRecoveryViaSRB3 ::= ENUMERATED {true, ...}
-- S-NODE ADDITION REQUEST ACKNOWLEDGE
```

298

```
SNodeAdditionRequestAcknowledge ::= SEQUENCE {
    protocolIEs
                        ProtocolIE-Container
                                                {{ SNodeAdditionRequestAcknowledge-IEs}},
SNodeAdditionRequestAcknowledge-IES XNAP-PROTOCOL-IES ::= {
      ID id-M-NG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory}
      ID id-S-NG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory }
      ID id-PDUSessionAdmittedAddedAddRegAck
                                                CRITICALITY ignore
                                                                        TYPE PDUSessionAdmittedAddedAddRegAck
                                                                                                                 PRESENCE mandatory
                                                CRITICALITY ignore
                                                                                                                 PRESENCE optional
      ID id-PDUSessionNotAdmittedAddRegAck
                                                                        TYPE PDUSessionNotAdmittedAddRegAck
      ID id-SN-to-MN-Container
                                                CRITICALITY reject
                                                                        TYPE OCTET STRING
                                                                                                                 PRESENCE mandatory }
      ID id-admittedSplitSRB
                                                CRITICALITY reject
                                                                        TYPE SplitSRBsTypes
                                                                                                                 PRESENCE optional
      ID id-RRCConfigIndication
                                                CRITICALITY reject
                                                                        TYPE RRCConfigIndication
                                                                                                                 PRESENCE optional
      ID id-CriticalityDiagnostics
                                                                        TYPE CriticalityDiagnostics
                                                                                                                 PRESENCE optional
                                                CRITICALITY ignore
      ID id-LocationInformationSN
                                                CRITICALITY ignore
                                                                        TYPE Target-CGI
                                                                                                                 PRESENCE optional
      ID id-MR-DC-ResourceCoordinationInfo
                                                CRITICALITY ignore
                                                                        TYPE MR-DC-ResourceCoordinationInfo
                                                                                                                 PRESENCE optional
     ID id-AvailableFastMCGRecoveryViaSRB3
                                                CRITICALITY ignore
                                                                        TYPE AvailableFastMCGRecoveryViaSRB3
                                                                                                                 PRESENCE optional },
    . . .
PDUSessionAdmittedAddedAddReqAck ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionAdmittedAddedAddReqAck-Item
PDUSessionAdmittedAddedAddRegAck-Item ::= SEOUENCE {
    pduSessionId
                                            PDUSession-ID,
    sn-terminated
                            PDUSessionResourceSetupResponseInfo-SNterminated
                                                                                OPTIONAL,
    mn-terminated
                            PDUSessionResourceSetupResponseInfo-MNterminated
                                                                                OPTIONAL,
-- NOTE: If neither the PDU Session Resource Setup Response Info - SN terminated IE
-- nor the PDU Session Resource Setup Response Info - MN terminated IE is present,
-- abnormal conditions as specified in clause 8.3.1.4 apply.
    iE-Extension
                            ProtocolExtensionContainer { {PDUSessionAdmittedAddedAddRegAck-Item-ExtIEs} } OPTIONAL,
PDUSessionAdmittedAddedAddRegAck-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionNotAdmittedAddReqAck ::= SEQUENCE {
    pduSessionResourcesNotAdmitted-SNterminated
                                                    PDUSessionResourcesNotAdmitted-List OPTIONAL,
    pduSessionResourcesNotAdmitted-MNterminated
                                                    PDUSessionResourcesNotAdmitted-List OPTIONAL,
    iE-Extension
                            ProtocolExtensionContainer { {PDUSessionNotAdmittedAddReqAck-ExtIEs} }
                                                                                                     OPTIONAL,
PDUSessionNotAdmittedAddReqAck-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
AvailableFastMCGRecoveryViaSRB3 ::= ENUMERATED {true, ...}
-- S-NODE ADDITION REQUEST REJECT
```

```
SNodeAdditionRequestReject ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                            {{ SNodeAdditionRequestReject-IEs}},
SNodeAdditionRequestReject-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                                                                              PRESENCE mandatory}
                                                CRITICALITY reject
                                                                      TYPE NG-RANnodeUEXnAPID
     ID id-S-NG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                      TYPE NG-RANnodeUEXnAPID
                                                                                                              PRESENCE mandatory
     ID id-Cause
                                                CRITICALITY ignore
                                                                      TYPE Cause
                                                                                                              PRESENCE mandatory}
    ID id-CriticalityDiagnostics
                                                                                                              PRESENCE optional },
                                                CRITICALITY ignore
                                                                      TYPE CriticalityDiagnostics
    S-NODE RECONFIGURATION COMPLETE
  SNodeReconfigurationComplete ::= SEQUENCE {
   protocolIEs
                     ProtocolIE-Container
                                            {{ SNodeReconfigurationComplete-IEs}},
SNodeReconfigurationComplete-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                      TYPE NG-RANnodeUEXnAPID
                                                                                                              PRESENCE mandatory }
                                                                                                              PRESENCE mandatory)
     ID id-S-NG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                      TYPE NG-RANnodeUEXnAPID
     ID id-ResponseInfo-ReconfCompl
                                                CRITICALITY ignore
                                                                      TYPE ResponseInfo-ReconfCompl
                                                                                                              PRESENCE mandatory },
ResponseInfo-ReconfCompl ::= SEQUENCE
   responseType-ReconfComplete
                                 ResponseType-ReconfComplete,
   iE-Extensions
                                     ProtocolExtensionContainer { {ResponseInfo-ReconfCompl-ExtIEs} } OPTIONAL,
ResponseInfo-ReconfCompl-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ResponseType-ReconfComplete ::= CHOICE {
   configuration-successfully-applied
                                            Configuration-successfully-applied,
   configuration-rejected-by-M-NG-RANNode
                                            Configuration-rejected-by-M-NG-RANNode,
                                     ProtocolIE-Single-Container { {ResponseType-ReconfComplete-ExtIEs} }
   choice-extension
ResponseType-ReconfComplete-ExtIEs XNAP-PROTOCOL-IES ::= {
   . . .
```

```
Configuration-successfully-applied ::= SEQUENCE {
    m-NG-RANNode-to-S-NG-RANNode-Container
                                               OCTET STRING
                                                                    OPTIONAL.
    iE-Extensions
                                        ProtocolExtensionContainer { {Configuration-successfully-applied-ExtIEs} } OPTIONAL,
Configuration-successfully-applied-ExtIEs XNAP-PROTOCOL-EXTENSION ::=
Configuration-rejected-by-M-NG-RANNode ::= SEQUENCE
                                                    Cause,
    m-NG-RANNode-to-S-NG-RANNode-Container
                                                OCTET STRING
                                                                    OPTIONAL,
    iE-Extensions
                                        ProtocolExtensionContainer { {Configuration-rejected-by-M-NG-RANNode-ExtIEs} } OPTIONAL,
Configuration-rejected-by-M-NG-RANNode-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
  S-NODE MODIFICATION REQUEST
__ **********************
SNodeModificationRequest ::= SEOUENCE {
                                                {{ SNodeModificationRequest-IEs}},
    protocolIEs
                        ProtocolIE-Container
SNodeModificationRequest-IEs XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                    CRITICALITY reject
                                                                            TYPE NG-RANnodeUEXnAPID
                                                                                                                      PRESENCE mandatory}
     ID id-S-NG-RANnodeUEXnAPID
                                                    CRITICALITY reject
                                                                           TYPE NG-RANnodeUEXnAPID
                                                                                                                      PRESENCE mandatory }
     ID id-Cause
                                                    CRITICALITY ignore
                                                                                                                      PRESENCE mandatory }
                                                                            TYPE Cause
     ID id-PDCPChangeIndication
                                                    CRITICALITY ignore
                                                                            TYPE PDCPChangeIndication
                                                                                                                      PRESENCE optional
     ID id-selectedPLMN
                                                    CRITICALITY ignore
                                                                           TYPE PLMN-Identity
                                                                                                                      PRESENCE optional
     ID id-MobilityRestrictionList
                                                    CRITICALITY ignore
                                                                            TYPE MobilityRestrictionList
                                                                                                                      PRESENCE optional
     ID id-SCGConfigurationOuery
                                                    CRITICALITY ignore
                                                                            TYPE SCGConfigurationQuery
                                                                                                                      PRESENCE optional
     ID id-UEContextInfo-SNModRequest
                                                    CRITICALITY reject
                                                                            TYPE UEContextInfo-SNModRequest
                                                                                                                      PRESENCE optional
     ID id-MN-to-SN-Container
                                                    CRITICALITY ignore
                                                                           TYPE OCTET STRING
                                                                                                                      PRESENCE optional
     ID id-requestedSplitSRB
                                                    CRITICALITY ignore
                                                                           TYPE SplitSRBsTypes
                                                                                                                      PRESENCE optional
     ID id-requestedSplitSRBrelease
                                                    CRITICALITY ignore
                                                                            TYPE SplitSRBsTvpes
                                                                                                                      PRESENCE optional
     ID id-DesiredActNotificationLevel
                                                    CRITICALITY ignore
                                                                            TYPE DesiredActNotificationLevel
                                                                                                                      PRESENCE optional
     ID id-AdditionalDRBIDs
                                                    CRITICALITY reject
                                                                           TYPE DRB-List
                                                                                                                      PRESENCE optional
     ID id-S-NG-RANnodeMaxIPDataRate-UL
                                                    CRITICALITY reject
                                                                           TYPE BitRate
                                                                                                                      PRESENCE optional
     ID id-S-NG-RANnodeMaxIPDataRate-DL
                                                                            TYPE BitRate
                                                                                                                      PRESENCE optional
                                                    CRITICALITY reject
     ID id-LocationInformationSNReporting
                                                    CRITICALITY ignore
                                                                           TYPE LocationInformationSNReporting
                                                                                                                      PRESENCE optional}
     ID id-MR-DC-ResourceCoordinationInfo
                                                    CRITICALITY ignore
                                                                           TYPE MR-DC-ResourceCoordinationInfo
                                                                                                                      PRESENCE optional
     ID id-PCellID
                                                    CRITICALITY reject
                                                                            TYPE GlobalNG-RANCell-ID
                                                                                                                      PRESENCE optional
     ID id-NE-DC-TDM-Pattern
                                                                            TYPE NE-DC-TDM-Pattern
                                                                                                                      PRESENCE optional}
                                                    CRITICALITY ignore
     ID id-RequestedFastMCGRecoveryViaSRB3
                                                    CRITICALITY ignore
                                                                            TYPE RequestedFastMCGRecoveryViaSRB3
                                                                                                                      PRESENCE optional }
```

```
TYPE RequestedFastMCGRecoveryViaSRB3Release PRESENCE optional } |
      ID id-RequestedFastMCGRecoveryViaSRB3Release CRITICALITY ignore
     ID id-SNTriggered
                                            CRITICALITY ignore
                                                                     TYPE SNTriggered
                                                                                                            PRESENCE optional }.
    . . .
UEContextInfo-SNModRequest ::= SEQUENCE {
    ueSecurityCapabilities
                                                     UESecurityCapabilities
                                                                                                      OPTIONAL,
    s-ng-RANnode-SecurityKey
                                                     S-NG-RANnode-SecurityKev
                                                                                                      OPTIONAL,
    s-ng-RANnodeUE-AMBR
                                                     UEAggregateMaximumBitRate
                                                                                                      OPTIONAL,
    indexToRatFrequencySelectionPriority
                                                     RFSP-Index
                                                                                                      OPTIONAL,
    lowerLayerPresenceStatusChange
                                                    LowerLayerPresenceStatusChange
                                                                                                      OPTIONAL,
    pduSessionResourceToBeAdded
                                                     PDUSessionsToBeAdded-SNModRequest-List
                                                                                                      OPTIONAL,
    pduSessionResourceToBeModified
                                                     PDUSessionsToBeModified-SNModRequest-List
                                                                                                      OPTIONAL,
    pduSessionResourceToBeReleased
                                                     PDUSessionsToBeReleased-SNModReguest-List
                                                                                                      OPTIONAL,
    iE-Extension
                            ProtocolExtensionContainer { {UEContextInfo-SNModRequest-ExtIEs} }
                                                                                                      OPTIONAL,
UEContextInfo-SNModRequest-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionsToBeAdded-SNModRequest-List ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionsToBeAdded-SNModRequest-Item
PDUSessionsToBeAdded-SNModRequest-Item ::= SEQUENCE {
                            PDUSession-ID,
    pduSessionId
    s-NSSAI
                            S-NSSAI,
    sN-PDUSessionAMBR
                            PDUSessionAggregateMaximumBitRate
                                                                         OPTIONAL,
    sn-terminated
                            PDUSessionResourceSetupInfo-SNterminated
                                                                         OPTIONAL,
    mn-terminated
                            PDUSessionResourceSetupInfo-MNterminated
                                                                         OPTIONAL,
-- NOTE: If neither the PDU Session Resource Setup Info - SN terminated IE
-- nor the PDU Session Resource Setup Info - MN terminated IE is present,
-- abnormal conditions as specified in clause 8.3.3.4 apply.
                            ProtocolExtensionContainer { {PDUSessionsToBeAdded-SNModRequest-Item-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
PDUSessionsToBeAdded-SNModRequest-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionsToBeModified-SNModRequest-List ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionsToBeModified-SNModRequest-Item
PDUSessionsToBeModified-SNModRequest-Item ::= SEQUENCE {
    pduSessionId
                            PDUSession-ID.
    sN-PDUSessionAMBR
                            PDUSessionAggregateMaximumBitRate
                                                                             OPTIONAL,
    sn-terminated
                            PDUSessionResourceModificationInfo-SNterminated OPTIONAL.
    mn-terminated
                            PDUSessionResourceModificationInfo-MNterminated OPTIONAL,
-- NOTE: If neither the PDU Session Resource Modification Info - SN terminated IE
-- nor the PDU Session Resource Modification Info - MN terminated IE is present,
-- abnormal conditions as specified in clause 8.3.3.4 apply.
    iE-Extension
                            ProtocolExtensionContainer { {PDUSessionsToBeModified-SNModRequest-Item-ExtIEs} } OPTIONAL,
```

```
PDUSessionsToBeModified-SNModRequest-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
                       CRITICALITY reject EXTENSION S-NSSAI
    {ID id-S-NSSAI
                                                                   PRESENCE optional }.
PDUSessionsToBeReleased-SNModRequest-List ::= SEQUENCE {
    pdu-session-list
                           PDUSession-List-withCause
                                                                   OPTIONAL,
    iE-Extension
                           ProtocolExtensionContainer { {PDUSessionsToBeReleased-SNModRequest-List-ExtIEs} } OPTIONAL,
PDUSessionsToBeReleased-SNModRequest-List-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RequestedFastMCGRecoveryViaSRB3Release ::= ENUMERATED {true, ...}
-- S-NODE MODIFICATION REQUEST ACKNOWLEDGE
                SNodeModificationRequestAcknowledge ::= SEQUENCE
                       ProtocolIE-Container
                                               {{ SNodeModificationRequestAcknowledge-IEs}},
    protocolIEs
    . . .
SNodeModificationRequestAcknowledge-IEs XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                    CRITICALITY ignore
                                                                           TYPE NG-RANnodeUEXnAPID
                                                                                                                         PRESENCE mandatory }
     ID id-S-NG-RANnodeUEXnAPID
                                                    CRITICALITY ignore
                                                                                                                        PRESENCE mandatory
                                                                           TYPE NG-RANnodeUEXnAPID
     ID id-PDUSessionAdmitted-SNModResponse
                                                    CRITICALITY ignore
                                                                           TYPE PDUSessionAdmitted-SNModResponse
                                                                                                                        PRESENCE optional
                                                                                                                        PRESENCE optional
     ID id-PDUSessionNotAdmitted-SNModResponse
                                                   CRITICALITY ignore
                                                                           TYPE PDUSessionNotAdmitted-SNModResponse
     ID id-SN-to-MN-Container
                                                    CRITICALITY ignore
                                                                           TYPE OCTET STRING
                                                                                                                        PRESENCE optional
     ID id-admittedSplitSRB
                                                    CRITICALITY ignore
                                                                           TYPE SplitSRBsTypes
                                                                                                                        PRESENCE optional
     ID id-admittedSplitSRBrelease
                                                    CRITICALITY ignore
                                                                           TYPE SplitSRBsTypes
                                                                                                                         PRESENCE optional
     ID id-CriticalityDiagnostics
                                                    CRITICALITY ignore
                                                                           TYPE CriticalityDiagnostics
                                                                                                                         PRESENCE optional
     ID id-LocationInformationSN
                                                   CRITICALITY ignore
                                                                           TYPE Target-CGI
                                                                                                                         PRESENCE optional
      ID id-MR-DC-ResourceCoordinationInfo
                                                    CRITICALITY ignore
                                                                           TYPE MR-DC-ResourceCoordinationInfo
                                                                                                                         PRESENCE optional
     ID id-PDUSessionDataForwarding-SNModResponse CRITICALITY ignore
                                                                           TYPE PDUSessionDataForwarding-SNModResponse
                                                                                                                        PRESENCE optional
     ID id-RRCConfigIndication
                                                    CRITICALITY reject
                                                                           TYPE RRCConfigIndication
                                                                                                                         PRESENCE optional
     ID id-AvailableFastMCGRecoveryViaSRB3
                                                                                                                         PRESENCE optional }
                                                    CRITICALITY ignore
                                                                           TYPE AvailableFastMCGRecoveryViaSRB3
     ID id-ReleaseFastMCGRecoveryViaSRB3
                                                                   TYPE ReleaseFastMCGRecoveryViaSRB3
                                          CRITICALITY ignore
                                                                                                          PRESENCE optional },
PDUSessionAdmitted-SNModResponse ::= SEOUENCE {
    pduSessionResourcesAdmittedToBeAdded
                                                    PDUSessionAdmittedToBeAddedSNModResponse
                                                                                                    OPTIONAL,
    pduSessionResourcesAdmittedToBeModified
                                                    PDUSessionAdmittedToBeModifiedSNModResponse
                                                                                                    OPTIONAL,
    pduSessionResourcesAdmittedToBeReleased
                                                    PDUSessionAdmittedToBeReleasedSNModResponse
                                                                                                    OPTIONAL,
                           ProtocolExtensionContainer { {PDUSessionAdmitted-SNModResponse-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
```

```
PDUSessionAdmitted-SNModResponse-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionAdmittedToBeAddedSNModResponse ::= SEOUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionAdmittedToBeAddedSNModResponse-Item
PDUSessionAdmittedToBeAddedSNModResponse-Item ::= SEQUENCE {
   pduSessionId
                           PDUSession-ID,
    sn-terminated
                           PDUSessionResourceSetupResponseInfo-SNterminated
                                                                                OPTIONAL,
   mn-terminated
                           PDUSessionResourceSetupResponseInfo-MNterminated
                                                                                OPTIONAL,
-- NOTE: If neither the PDU Session Resource Setup Response Info - SN terminated IE
-- nor the PDU Session Resource Setup Response Info - MN terminated IE is present,
-- abnormal conditions as specified in clause 8.3.3.4 apply.
    iE-Extension
                            ProtocolExtensionContainer { {PDUSessionAdmittedToBeAddedSNModResponse-Item-ExtIEs} } OPTIONAL,
    . . .
PDUSessionAdmittedToBeAddedSNModResponse-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionAdmittedToBeModifiedSNModResponse::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionAdmittedToBeModifiedSNModResponse-Item
PDUSessionAdmittedToBeModifiedSNModResponse-Item ::= SEQUENCE {
   pduSessionId
                           PDUSession-ID,
    sn-terminated
                            PDUSessionResourceModificationResponseInfo-SNterminated OPTIONAL.
                           PDUSessionResourceModificationResponseInfo-MNterminated OPTIONAL,
    mn-terminated
-- NOTE: If neither the PDU Session Resource Modification Response Info - SN terminated IE
-- nor the PDU Session Resource Modification Response Info - MN terminated IE is present,
-- abnormal conditions as specified in clause 8.3.3.4 apply.
                           ProtocolExtensionContainer { {PDUSessionAdmittedToBeModifiedSNModResponse-Item-ExtIEs} } OPTIONAL,
    iE-Extension
PDUSessionAdmittedToBeModifiedSNModResponse-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionAdmittedToBeReleasedSNModResponse ::= SEQUENCE {
    sn-terminated
                            PDUSession-List-withDataForwardingRequest
                                                                            OPTIONAL,
   mn-terminated
                            PDUSession-List-withCause
                                                                            OPTIONAL,
    iE-Extension
                            ProtocolExtensionContainer { {PDUSessionAdmittedToBeReleasedSNModResponse-ExtIEs} } OPTIONAL,
    . . .
PDUSessionAdmittedToBeReleasedSNModResponse-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionNotAdmitted-SNModResponse ::= SEQUENCE
    pdu-Session-List
                           PDUSession-List OPTIONAL,
                           ProtocolExtensionContainer { {PDUSessionNotAdmitted-SNModResponse-ExtIEs} } OPTIONAL,
    iE-Extension
PDUSessionNotAdmitted-SNModResponse-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
PDUSessionDataForwarding-SNModResponse ::= SEQUENCE {
                      PDUSession-List-withDataForwardingRequest,
    sn-terminated
   iE-Extensions
                      ProtocolExtensionContainer { {PDUSessionDataForwarding-SNModResponse-ExtIEs} } OPTIONAL,
PDUSessionDataForwarding-SNModResponse-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
ReleaseFastMCGRecoveryViaSRB3 ::= ENUMERATED {true, ...}
        ****************
-- S-NODE MODIFICATION REQUEST REJECT
__ ***********************
SNodeModificationRequestReject ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ SNodeModificationRequestReject-IEs}},
   . . .
SNodeModificationRequestReject-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory }
     ID id-S-NG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory }
     ID id-Cause
                                                 CRITICALITY ignore
                                                                                                                PRESENCE mandatory
                                                                        TYPE Cause
    { ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore
                                                                        TYPE CriticalityDiagnostics
                                                                                                                 PRESENCE optional },
-- S-NODE MODIFICATION REQUIRED
__ ********************************
SNodeModificationRequired ::= SEQUENCE {
                      ProtocolIE-Container
                                             {{ SNodeModificationRequired-IEs}},
   protocolIEs
    . . .
SNodeModificationRequired-IEs XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory
                                                 CRITICALITY reject
     ID id-S-NG-RANnodeUEXnAPID
                                                 CRITICALITY reject
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory }
     ID id-Cause
                                                 CRITICALITY ignore
                                                                        TYPE Cause
                                                                                                                PRESENCE mandatory}
     ID id-PDCPChangeIndication
                                                 CRITICALITY ignore
                                                                        TYPE PDCPChangeIndication
                                                                                                                 PRESENCE optional
     ID id-PDUSessionToBeModifiedSNModRequired
                                                 CRITICALITY ignore
                                                                        TYPE PDUSessionToBeModifiedSNModRequired
                                                                                                                PRESENCE optional }
     ID id-PDUSessionToBeReleasedSNModRequired
                                                 CRITICALITY ignore
                                                                        TYPE PDUSessionToBeReleasedSNModRequired
                                                                                                                 PRESENCE optional }
```

```
ID id-SN-to-MN-Container
                                                   CRITICALITY ignore
                                                                          TYPE OCTET STRING
                                                                                                                   PRESENCE optional }
     ID id-SpareDRBIDs
                                                   CRITICALITY ignore
                                                                          TYPE DRB-List
                                                                                                                   PRESENCE optional
     ID id-RequiredNumberOfDRBIDs
                                                   CRITICALITY ignore
                                                                          TYPE DRB-Number
                                                                                                                   PRESENCE optional
     ID id-LocationInformationSN
                                                   CRITICALITY ignore
                                                                          TYPE Target-CGI
                                                                                                                   PRESENCE optional
     ID id-MR-DC-ResourceCoordinationInfo
                                                   CRITICALITY ignore
                                                                          TYPE MR-DC-ResourceCoordinationInfo
                                                                                                                   PRESENCE optional
                                                                                                                   PRESENCE optional
     ID id-RRCConfigIndication
                                                   CRITICALITY reject
                                                                          TYPE RRCConfigIndication
     ID id-AvailableFastMCGRecoveryViaSRB3
                                                   CRITICALITY ignore
                                                                          TYPE AvailableFastMCGRecoveryViaSRB3
                                                                                                                   PRESENCE optional }
     ID id-ReleaseFastMCGRecoveryViaSRB3
                                                   CRITICALITY ignore
                                                                          TYPE ReleaseFastMCGRecoveryViaSRB3
                                                                                                                      PRESENCE optional },
PDUSessionToBeModifiedSNModRequired::= SEQUENCE (SIZE (1.. maxnoofPDUSessions)) OF PDUSessionToBeModifiedSNModRequired-Item
PDUSessionToBeModifiedSNModRequired-Item ::= SEQUENCE {
   pduSessionId
                                       PDUSession-ID,
    sn-terminated
                           PDUSessionResourceModRqdInfo-SNterminated
   mn-terminated
                           PDUSessionResourceModRqdInfo-MNterminated
                                                                      OPTIONAL,
-- NOTE: If neither the PDU Session Resource Modification Required Info - SN terminated IE
-- nor the PDU Session Resource Modification Required Info - MN terminated IE is present,
-- abnormal conditions as specified in clause 8.3.4.4 apply.
                       ProtocolExtensionContainer { {PDUSessionToBeModifiedSNModRequired-Item-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
PDUSessionToBeModifiedSNModRequired-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionToBeReleasedSNModReguired ::= SEOUENCE {
    sn-terminated
                           PDUSession-List-withDataForwardingReguest
                                                                          OPTIONAL,
   mn-terminated
                           PDUSession-List-withCause
                                                                          OPTIONAL,
   iE-Extension
                           ProtocolExtensionContainer { {PDUSessionToBeReleasedSNModRequired-ExtIEs} } OPTIONAL,
PDUSessionToBeReleasedSNModRequired-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
      *************
-- S-NODE MODIFICATION CONFIRM
  ******************
SNodeModificationConfirm ::= SEOUENCE {
   protocolIEs
                       ProtocolIE-Container
                                              {{ SNodeModificationConfirm-IEs}},
    . . .
SNodeModificationConfirm-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                   CRITICALITY ignore
                                                                          TYPE NG-RANnodeUEXnAPID
                                                                                                                   PRESENCE mandatory }
     ID id-S-NG-RANnodeUEXnAPID
                                                   CRITICALITY ignore
                                                                          TYPE NG-RANnodeUEXnAPID
                                                                                                                   PRESENCE mandatory}
     ID id-PDUSessionAdmittedModSNModConfirm
                                                   CRITICALITY ignore
                                                                                                                   PRESENCE optional }
                                                                          TYPE PDUSessionAdmittedModSNModConfirm
                                                                                                                   PRESENCE optional }
     ID id-PDUSessionReleasedSNModConfirm
                                                   CRITICALITY ignore
                                                                          TYPE PDUSessionReleasedSNModConfirm
```

```
ID id-MN-to-SN-Container
                                                  CRITICALITY ignore
                                                                        TYPE OCTET STRING
                                                                                                                 PRESENCE optional }
     ID id-AdditionalDRBIDs
                                                 CRITICALITY reject
                                                                        TYPE DRB-List
                                                                                                                 PRESENCE optional
                                                                                                                 PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                  CRITICALITY ignore
                                                                        TYPE CriticalityDiagnostics
     ID id-MR-DC-ResourceCoordinationInfo
                                                 CRITICALITY ignore
                                                                        TYPE MR-DC-ResourceCoordinationInfo
                                                                                                                 PRESENCE optional },
PDUSessionAdmittedModSNModConfirm ::= SEOUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionAdmittedModSNModConfirm-Item
PDUSessionAdmittedModSNModConfirm-Item ::= SEOUENCE {
   pduSessionId
                              PDUSession-ID,
   sn-terminated
                          PDUSessionResourceModConfirmInfo-SNterminated
   mn-terminated
                          PDUSessionResourceModConfirmInfo-MNterminated OPTIONAL.
-- NOTE: If neither the PDU Session Resource Modification Confirm Info - SN terminated IE
-- nor the PDU Session Resource Modification Confirm Info - MN terminated IE is present,
-- abnormal conditions as specified in clause 8.3.4.4 apply.
                          ProtocolExtensionContainer { {PDUSessionAdmittedModSNModConfirm-Item-ExtIEs} } OPTIONAL,
   iE-Extension
PDUSessionAdmittedModSNModConfirm-Item-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionReleasedSNModConfirm ::= SEQUENCE
                          PDUSession-List-withDataForwardingFromTarget
    sn-terminated
                                                                                            OPTIONAL,
   mn-terminated
                          PDUSession-List
                                                                                            OPTIONAL,
                          ProtocolExtensionContainer { {PDUSessionAdmittedToBeReleasedSNModConfirm-ExtIEs} } OPTIONAL,
   iE-Extension
PDUSessionAdmittedToBeReleasedSNModConfirm-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   -- S-NODE MODIFICATION REFUSE
      ********************
SNodeModificationRefuse ::= SEQUENCE {
                                              {{ SNodeModificationRefuse-IEs}},
   protocolIEs
                      ProtocolIE-Container
SNodeModificationRefuse-IEs XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                  CRITICALITY ignore
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory}
     ID id-S-NG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory}
     ID id-Cause
                                                 CRITICALITY ignore
                                                                        TYPE Cause
                                                                                                                 PRESENCE mandatory}
     ID id-MN-to-SN-Container
                                                 CRITICALITY ignore
                                                                        TYPE OCTET STRING
                                                                                                                 PRESENCE optional }
                                                                                                                 PRESENCE optional },
     ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore
                                                                        TYPE CriticalityDiagnostics
```

```
-- S-NODE RELEASE REQUEST
__ **********************
SNodeReleaseRequest ::= SEOUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ SNodeReleaseRequest-IEs}},
   . . .
SNodeReleaseRequest-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                       TYPE NG-RANnodeUEXnAPID
                                                                                                               PRESENCE mandatory }
     ID id-S-NG-RANnodeUEXnAPID
                                                                                                               PRESENCE optional
                                                CRITICALITY reject
                                                                       TYPE NG-RANnodeUEXnAPID
     ID id-Cause
                                                 CRITICALITY ignore
                                                                                                               PRESENCE mandatory }
                                                                       TYPE Cause
     ID id-PDUSessionToBeReleased-RelReg
                                                 CRITICALITY ignore
                                                                       TYPE PDUSession-List-withCause
                                                                                                               PRESENCE mandatory}
     ID id-UEContextKeptIndicator
                                                CRITICALITY ignore
                                                                       TYPE UEContextKeptIndicator
                                                                                                               PRESENCE optional }
     ID id-MN-to-SN-Container
                                                CRITICALITY ignore
                                                                       TYPE OCTET STRING
                                                                                                               PRESENCE optional }
    { ID id-DRBs-transferred-to-MN
                                                CRITICALITY ignore
                                                                       TYPE DRB-List
                                                                                                               PRESENCE optional },
    **************
-- S-NODE RELEASE REQUEST ACKNOWLEDGE
         SNodeReleaseRequestAcknowledge ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ SNodeReleaseRequestAcknowledge-IEs}},
   . . .
SNodeReleaseRequestAcknowledge-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                    CRITICALITY reject
                                                                           TYPE NG-RANnodeUEXnAPID
                                                                                                                       PRESENCE mandatory}
     ID id-S-NG-RANnodeUEXnAPID
                                                    CRITICALITY reject
                                                                                                                       PRESENCE optional }
                                                                          TYPE NG-RANnodeUEXnAPID
     ID id-PDUSessionToBeReleased-RelReqAck
                                                    CRITICALITY ignore
                                                                           TYPE PDUSessionToBeReleasedList-RelRegAck
                                                                                                                       PRESENCE optional }
    ID id-CriticalityDiagnostics
                                                    CRITICALITY ignore
                                                                          TYPE CriticalityDiagnostics
                                                                                                                       PRESENCE optional },
PDUSessionToBeReleasedList-RelReqAck ::= SEQUENCE {
   pduSessionsToBeReleasedList-SNterminated
                                                 PDUSession-List-withDataForwardingRequest
                                                                                                                       OPTIONAL,
   iE-Extensions
                                                 ProtocolExtensionContainer { {PDUSessionToBeReleasedList-RelReqAck-ExtIEs} } OPTIONAL,
PDUSessionToBeReleasedList-RelReqAck-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
__ **********************
-- S-NODE RELEASE REJECT
  *****************
SNodeReleaseReject ::= SEQUENCE {
   protocolIEs
                     ProtocolIE-Container
                                           {{ SNodeReleaseReject-IEs}},
SNodeReleaseReject-IEs XNAP-PROTOCOL-IES ::= {
                                                                                                          PRESENCE mandatory}
     ID id-M-NG-RANnodeUEXnAPID
                                                                    TYPE NG-RANnodeUEXnAPID
                                               CRITICALITY reject
     ID id-S-NG-RANnodeUEXnAPID
                                               CRITICALITY reject
                                                                    TYPE NG-RANnodeUEXnAPID
                                                                                                           PRESENCE optional }
     ID id-Cause
                                               CRITICALITY ignore
                                                                    TYPE Cause
                                                                                                           PRESENCE mandatory}
   { ID id-CriticalityDiagnostics
                                               CRITICALITY ignore
                                                                    TYPE CriticalityDiagnostics
                                                                                                           PRESENCE optional },
  *****************
-- S-NODE RELEASE REQUIRED
__ *********************
SNodeReleaseRequired ::= SEQUENCE {
                                           {{ SNodeReleaseRequired-IEs}},
   protocolIEs
                     ProtocolIE-Container
SNodeReleaseRequired-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                                    TYPE NG-RANnodeUEXnAPID
                                                                                                           PRESENCE mandatory }
                                               CRITICALITY reject
     ID id-S-NG-RANnodeUEXnAPID
                                               CRITICALITY reject
                                                                 TYPE NG-RANnodeUEXnAPID
                                                                                                           PRESENCE mandatory}
     ID id-PDUSessionToBeReleasedList-RelRqd
                                               CRITICALITY ignore
                                                                                                           PRESENCE optional
                                                                    TYPE PDUSessionToBeReleasedList-RelRqd
                                                                                                           PRESENCE mandatory
     ID id-Cause
                                               CRITICALITY ignore
                                                                    TYPE Cause
   { ID id-SN-to-MN-Container
                                               CRITICALITY ignore
                                                                 TYPE OCTET STRING
                                                                                                           PRESENCE optional },
PDUSessionToBeReleasedList-RelRqd ::= SEQUENCE {
                                               PDUSession-List-withDataForwardingRequest
   pduSessionsToBeReleasedList-SNterminated
                                                                                                  OPTIONAL,
                                ProtocolExtensionContainer { {PDUSessionToBeReleasedList-RelRqd-ExtIEs} } OPTIONAL,
   iE-Extensions
PDUSessionToBeReleasedList-RelRqd-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- S-NODE RELEASE CONFIRM
```

```
__ *********************
SNodeReleaseConfirm ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ SNodeReleaseConfirm-IEs}},
   . . .
SNodeReleaseConfirm-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                       TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory}
     ID id-S-NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory
                                                 CRITICALITY ignore
                                                                       TYPE NG-RANnodeUEXnAPID
     ID id-PDUSessionReleasedList-RelConf
                                                 CRITICALITY ignore
                                                                                                                PRESENCE optional }
                                                                       TYPE PDUSessionReleasedList-RelConf
    { ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore
                                                                       TYPE CriticalityDiagnostics
                                                                                                                PRESENCE optional },
    . . .
PDUSessionReleasedList-RelConf ::= SEQUENCE {
   pduSessionsReleasedList-SNterminated
                                             PDUSession-List-withDataForwardingFromTarget
                                                                                                     OPTIONAL,
                                  ProtocolExtensionContainer { {PDUSessionReleasedList-RelConf-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
PDUSessionReleasedList-RelConf-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
  ****************
-- S-NODE COUNTER CHECK REQUEST
__ **********************
SNodeCounterCheckRequest ::= SEQUENCE {
                                             {{ SNodeCounterCheckRequest-IEs}},
   protocolIEs
                      ProtocolIE-Container
   . . .
SNodeCounterCheckRequest-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                                       TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory}
                                                 CRITICALITY ignore
     ID id-S-NG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                       TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory}
                                                                                                                PRESENCE mandatory },
    ID id-BearersSubjectToCounterCheck
                                                 CRITICALITY ignore
                                                                       TYPE BearersSubjectToCounterCheck-List
BearersSubjectToCounterCheck-List ::= SEOUENCE (SIZE(1..maxnoofDRBs)) OF BearersSubjectToCounterCheck-Item
BearersSubjectToCounterCheck-Item ::= SEQUENCE {
   drb-ID
                                  DRB-ID,
   ul-count
                                 INTEGER (0.. 4294967295),
                                 INTEGER (0.. 4294967295),
   dl-count
                                  ProtocolExtensionContainer { {BearersSubjectToCounterCheck-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
```

```
BearersSubjectToCounterCheck-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    *******************
-- S-NODE CHANGE REQUIRED
__ **********************
SNodeChangeRequired ::= SEQUENCE {
                                            {{ SNodeChangeRequired-IEs}},
   protocolIEs
                      ProtocolIE-Container
SNodeChangeRequired-IEs XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                                      TYPE NG-RANnodeUEXnAPID
                                                                                                              PRESENCE mandatory}
                                                CRITICALITY reject
     ID id-S-NG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                      TYPE NG-RANnodeUEXnAPID
                                                                                                               PRESENCE mandatory}
     ID id-target-S-NG-RANnodeID
                                                CRITICALITY reject
                                                                      TYPE GlobalNG-RANNode-ID
                                                                                                              PRESENCE mandatory
     ID id-Cause
                                                CRITICALITY ignore
                                                                      TYPE Cause
                                                                                                              PRESENCE mandatory
     ID id-PDUSession-SNChangeRequired-List
                                                CRITICALITY ignore
                                                                      TYPE PDUSession-SNChangeRequired-List
                                                                                                              PRESENCE optional }
    ID id-SN-to-MN-Container
                                                                                                               PRESENCE mandatory },
                                                CRITICALITY reject
                                                                      TYPE OCTET STRING
   . . .
PDUSession-SNChangeRequired-List ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSession-SNChangeRequired-Item
PDUSession-SNChangeRequired-Item ::= SEQUENCE {
   pduSessionId
                             PDUSession-ID,
   sn-terminated
                          PDUSessionResourceChangeRequiredInfo-SNterminated
                                                                          OPTIONAL,
                          PDUSessionResourceChangeRequiredInfo-MNterminated
   mn-terminated
                                                                          OPTIONAL,
-- NOTE: If the PDU Session Resource Change Required Info - SN terminated IE is not present,
-- abnormal conditions as specified in clause 8.3.5.4 apply.
                          ProtocolExtensionContainer { {PDUSession-SNChangeRequired-Item-ExtIEs} } OPTIONAL,
   iE-Extension
PDUSession-SNChangeRequired-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- S-NODE CHANGE CONFIRM
__ *******************
SNodeChangeConfirm ::= SEQUENCE {
                                            {{ SNodeChangeConfirm-IEs}},
   protocolIEs
                      ProtocolIE-Container
   . . .
```

```
SNodeChangeConfirm-IEs XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory}
     ID id-S-NG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory}
     ID id-PDUSession-SNChangeConfirm-List
                                                 CRITICALITY ignore
                                                                        TYPE PDUSession-SNChangeConfirm-List
                                                                                                                PRESENCE optional }
     ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore
                                                                        TYPE CriticalityDiagnostics
                                                                                                                PRESENCE optional },
PDUSession-SNChangeConfirm-List ::= SEOUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSession-SNChangeConfirm-Item
PDUSession-SNChangeConfirm-Item ::= SEQUENCE {
   pduSessionId
                              PDUSession-ID,
   sn-terminated
                          PDUSessionResourceChangeConfirmInfo-SNterminated
                                                                            OPTIONAL,
                          PDUSessionResourceChangeConfirmInfo-MNterminated
   mn-terminated
                                                                            OPTIONAL,
-- NOTE: If the PDU Session Resource Change Confirm Info - SN terminated IE is not present,
-- abnormal conditions as specified in clause 8.3.5.4 apply.
   iE-Extension
                          ProtocolExtensionContainer { {PDUSession-SNChangeConfirm-Item-ExtIEs} } OPTIONAL,
    . . .
PDUSession-SNChangeConfirm-Item-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
      *****************
-- S-NODE CHANGE REFUSE
__ ********************************
SNodeChangeRefuse ::= SEQUENCE
   protocolIEs
                      ProtocolIE-Container
                                             {{ SNodeChangeRefuse-IEs}},
   . . .
SNodeChangeRefuse-IEs XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory}
     ID id-S-NG-RANnodeUEXnAPID
                                                                                                                PRESENCE mandatory }
                                                 CRITICALITY ignore
                                                                        TYPE NG-RANnodeUEXnAPID
     ID id-Cause
                                                                                                                PRESENCE mandatory}
                                                 CRITICALITY ignore
                                                                        TYPE Cause
    ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore
                                                                        TYPE CriticalityDiagnostics
                                                                                                                 PRESENCE optional },
-- RRC TRANSFER
__ *******************
RRCTransfer ::= SEOUENCE {
                                             {{ RRCTransfer-IEs}},
   protocolIEs
                      ProtocolIE-Container
    . . .
```

PRESENCE mandatory }

PRESENCE mandatory }

PRESENCE optional }

PRESENCE optional }
PRESENCE optional } |

PRESENCE optional },

```
RRCTransfer-IES XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                   CRITICALITY reject
                                                                          TYPE NG-RANnodeUEXnAPID
     ID id-S-NG-RANnodeUEXnAPID
                                                   CRITICALITY reject
                                                                          TYPE NG-RANnodeUEXnAPID
     ID id-SplitSRB-RRCTransfer
                                                   CRITICALITY reject
                                                                          TYPE SplitSRB-RRCTransfer
     ID id-UEReportRRCTransfer
                                                   CRITICALITY reject
                                                                         TYPE UEReportRRCTransfer
     ID id-FastMCGRecoveryRRCTransfer-SN-to-MN
                                                  CRITICALITY ignore
                                                                         TYPE FastMCGRecoveryRRCTransfer
     ID id-FastMCGRecoveryRRCTransfer-MN-to-SN
                                                  CRITICALITY ignore
                                                                          TYPE FastMCGRecoveryRRCTransfer
SplitSRB-RRCTransfer ::= SEQUENCE {
   rrcContainer
                                   OCTET STRING
                                                                      OPTIONAL,
                                   ENUMERATED {srb1, srb2, ...},
   srbType
   deliveryStatus
                                   DeliveryStatus
                                                                      OPTIONAL.
   iE-Extensions
                                   ProtocolExtensionContainer { {SplitSRB-RRCTransfer-ExtIEs} } OPTIONAL,
SplitSRB-RRCTransfer-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
UEReportRRCTransfer::= SEQUENCE {
   rrcContainer
                                   OCTET STRING,
   iE-Extensions
                                   ProtocolExtensionContainer { {UEReportRRCTransfer-ExtIEs} } OPTIONAL,
    . . .
UEReportRRCTransfer-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
FastMCGRecoveryRRCTransfer::= SEQUENCE {
   rrcContainer
                                   ProtocolExtensionContainer { { FastMCGRecoveryRRCTransfer-ExtIEs} } OPTIONAL,
   iE-Extensions
FastMCGRecoveryRRCTransfer-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- NOTIFICATION CONTROL INDICATION
  *****************
NotificationControlIndication ::= SEQUENCE {
                                               {{NotificationControlIndication-IEs}},
   protocolIEs
                       ProtocolIE-Container
NotificationControlIndication-IES XNAP-PROTOCOL-IES ::=
```

```
ID id-M-NG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory }
     ID id-S-NG-RANnodeUEXnAPID
                                                CRITICALITY reject
                                                                        TYPE NG-RANnodeUEXnAPID
                                                                                                                 PRESENCE mandatory}
     ID id-PDUSessionResourcesNotifyList
                                                CRITICALITY reject
                                                                        TYPE PDUSessionResourcesNotifyList
                                                                                                                 PRESENCE optional },
PDUSessionResourcesNotifyList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourcesNotify-Item
PDUSessionResourcesNotify-Item ::= SEQUENCE {
    pduSessionId
                                        PDUSession-ID.
    gosFlowsNotificationContrIndInfo
                                        QoSFlowNotificationControlIndicationInfo,
                                        ProtocolExtensionContainer { {PDUSessionResourcesNotify-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
PDUSessionResourcesNotify-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- ACTIVITY NOTIFICATION
ActivityNotification ::= SEQUENCE {
                                                {{ActivityNotification-IEs}},
    protocolIEs
                       ProtocolIE-Container
ActivityNotification-IEs XNAP-PROTOCOL-IES ::= {
     ID id-M-NG-RANnodeUEXnAPID
                                                    CRITICALITY ignore
                                                                                                                       PRESENCE mandatory }
                                                                            TYPE NG-RANnodeUEXnAPID
     ID id-S-NG-RANnodeUEXnAPID
                                                    CRITICALITY ignore
                                                                           TYPE NG-RANnodeUEXnAPID
                                                                                                                       PRESENCE mandatory}
     ID id-UserPlaneTrafficActivityReport
                                                    CRITICALITY ignore
                                                                           TYPE UserPlaneTrafficActivityReport
                                                                                                                       PRESENCE optional
     ID id-PDUSessionResourcesActivityNotifyList CRITICALITY ignore
                                                                           TYPE PDUSessionResourcesActivityNotifyList PRESENCE optional }
    { ID id-RANPagingFailure
                                                    CRITICALITY ignore
                                                                           TYPE RANPagingFailure
                                                                                                                       PRESENCE optional },
PDUSessionResourcesActivityNotifyList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourcesActivityNotify-Item
PDUSessionResourcesActivityNotify-Item ::= SEQUENCE {
    pduSessionId
                                        PDUSession-ID,
    pduSessionLevelUPactivityreport
                                        UserPlaneTrafficActivityReport
                                                                                                           OPTIONAL,
                                        OoSFlowsActivityNotifyList
    qosFlowsActivityNotifyList
    iE-Extensions
                                        ProtocolExtensionContainer { {PDUSessionResourcesActivityNotify-Item-ExtIEs} } OPTIONAL,
    . . .
PDUSessionResourcesActivityNotify-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
QoSFlowsActivityNotifyList ::= SEQUENCE (SIZE(1..maxnoofQoSFlows)) OF QoSFlowsActivityNotifyItem
```

```
OoSFlowsActivityNotifyItem ::= SEOUENCE
    gosFlowIdentifier
                                        OoSFlowIdentifier.
    pduSessionLevelUPactivityreport
                                        UserPlaneTrafficActivityReport,
    iE-Extensions
                                        ProtocolExtensionContainer { {OOSFlowsActivityNotifyItem-ExtIEs} } OPTIONAL,
QoSFlowsActivityNotifyItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- XN SETUP REQUEST
XnSetupRequest ::= SEQUENCE {
                        ProtocolIE-Container
                                                {{ XnSetupRequest-IEs}},
    protocolIEs
XnSetupRequest-IEs XNAP-PROTOCOL-IES ::= {
     ID id-GlobalNG-RAN-node-ID
                                                    CRITICALITY reject TYPE GlobalNG-RANNode-ID
                                                                                                        PRESENCE mandatory } |
     ID id-TAISupport-list
                                                CRITICALITY reject TYPE TAISupport-List
                                                                                                             PRESENCE mandatory
     ID id-AMF-Region-Information
                                                                                                             PRESENCE mandatory }
                                                CRITICALITY reject TYPE AMF-Region-Information
     ID id-List-of-served-cells-NR
                                                CRITICALITY reject TYPE ServedCells-NR
                                                                                                             PRESENCE optional
     ID id-List-of-served-cells-E-UTRA
                                                CRITICALITY reject TYPE ServedCells-E-UTRA
                                                                                                             PRESENCE optional
     ID id-InterfaceInstanceIndication
                                                CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                             PRESENCE optional
     ID id-TNLConfigurationInfo
                                                CRITICALITY ignore TYPE TNLConfigurationInfo
                                                                                                             PRESENCE optional}
     ID id-PartialListIndicator-NR
                                                CRITICALITY ignore TYPE PartialListIndicator
                                                                                                             PRESENCE optional
     ID id-CellAndCapacityAssistanceInfo-NR
                                                CRITICALITY ignore TYPE CellAndCapacityAssistanceInfo-NR
                                                                                                             PRESENCE optional
                                                                                                             PRESENCE optional }
     ID id-PartialListIndicator-EUTRA
                                                CRITICALITY ignore TYPE PartialListIndicator
     ID id-CellAndCapacityAssistanceInfo-EUTRA CRITICALITY ignore TYPE CellAndCapacityAssistanceInfo-EUTRA PRESENCE optional },
-- XN SETUP RESPONSE
XnSetupResponse ::= SEOUENCE {
    protocolIEs
                        ProtocolIE-Container
                                                {{ XnSetupResponse-IEs}},
    . . .
XnSetupResponse-IEs XNAP-PROTOCOL-IES ::= {
     ID id-GlobalNG-RAN-node-ID
                                                CRITICALITY reject TYPE GlobalNG-RANNode-ID
                                                                                                             PRESENCE mandatory }
     ID id-TAISupport-list
                                                CRITICALITY reject TYPE TAISupport-List
                                                                                                             PRESENCE mandatory }
     ID id-List-of-served-cells-NR
                                                CRITICALITY reject TYPE ServedCells-NR
                                                                                                             PRESENCE optional }
     ID id-List-of-served-cells-E-UTRA
                                                                                                             PRESENCE optional }
                                                CRITICALITY reject TYPE ServedCells-E-UTRA
```

```
ID id-CriticalityDiagnostics
                                             CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                        PRESENCE optional }
     ID id-AMF-Region-Information
                                             CRITICALITY reject TYPE AMF-Region-Information
                                                                                                        PRESENCE optional
     ID id-InterfaceInstanceIndication
                                             CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                        PRESENCE optional
     ID id-TNLConfigurationInfo
                                             CRITICALITY ignore TYPE TNLConfigurationInfo
                                                                                                        PRESENCE optional
     ID id-PartialListIndicator-NR
                                             CRITICALITY ignore TYPE PartialListIndicator
                                                                                                        PRESENCE optional
     ID id-CellAndCapacityAssistanceInfo-NR
                                             CRITICALITY ignore TYPE CellAndCapacityAssistanceInfo-NR
                                                                                                        PRESENCE optional
     ID id-PartialListIndicator-EUTRA
                                             CRITICALITY ignore TYPE PartialListIndicator
                                                                                                        PRESENCE optional }
     ID id-CellAndCapacityAssistanceInfo-EUTRA CRITICALITY ignore TYPE CellAndCapacityAssistanceInfo-EUTRA PRESENCE optional },
    -- XN SETUP FAILURE
XnSetupFailure ::= SEOUENCE {
                                             {{ XnSetupFailure-IEs}},
   protocolIEs
                      ProtocolIE-Container
    . . .
XnSetupFailure-IEs XNAP-PROTOCOL-IES ::= {
     ID id-Cause
                                      CRITICALITY ignore TYPE Cause
                                                                                           PRESENCE mandatory }
     ID id-TimeToWait.
                                     CRITICALITY ignore TYPE TimeToWait
                                                                                           PRESENCE optional
     ID id-CriticalityDiagnostics
                                     CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                           PRESENCE optional
     ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                           PRESENCE optional
     ID id-MessageOversizeNotification CRITICALITY ignore TYPE MessageOversizeNotification
                                                                                           PRESENCE optional },
         ************
-- NG-RAN NODE CONFIGURATION UPDATE
  *****************
NGRANNodeConfigurationUpdate ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ NGRANNodeConfigurationUpdate-IEs}},
    . . .
NGRANNodeConfigurationUpdate-IEs XNAP-PROTOCOL-IES ::= {
     ID id-TAISupport-list
                                                 CRITICALITY reject TYPE TAISupport-List
                                                                                                                PRESENCE optional }
     ID id-ConfigurationUpdateInitiatingNodeChoice CRITICALITY ignore TYPE ConfigurationUpdateInitiatingNodeChoice
                                                                                                                PRESENCE mandatory }
     ID id-TNLA-To-Add-List
                                                 CRITICALITY ignore TYPE TNLA-To-Add-List
                                                                                                                PRESENCE optional
     ID id-TNLA-To-Remove-List
                                                 CRITICALITY ignore TYPE TNLA-To-Remove-List
                                                                                                                PRESENCE optional
     ID id-TNLA-To-Update-List
                                                 CRITICALITY ignore TYPE TNLA-To-Update-List
                                                                                                                PRESENCE optional
     ID id-GlobalNG-RAN-node-ID
                                                 CRITICALITY reject TYPE GlobalNG-RANNode-ID
                                                                                                                PRESENCE optional
     ID id-AMF-Region-Information-To-Add
                                                 CRITICALITY reject TYPE AMF-Region-Information
                                                                                                                PRESENCE optional
     ID id-AMF-Region-Information-To-Delete
                                                 CRITICALITY reject TYPE AMF-Region-Information
                                                                                                                PRESENCE optional
     ID id-InterfaceInstanceIndication
                                                 CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                                PRESENCE optional }
     ID id-TNLConfigurationInfo
                                                 CRITICALITY ignore TYPE TNLConfigurationInfo
                                                                                                                PRESENCE optional },
```

```
ConfigurationUpdateInitiatingNodeChoice ::= CHOICE
                                     ProtocolIE-Container
                                                             {ConfigurationUpdate-gNB} },
                                     ProtocolIE-Container
                                                           { {ConfigurationUpdate-ng-eNB} },
   nq-eNB
   choice-extension
                                     ProtocolIE-Single-Container { {ServedCellsToUpdateInitiatingNodeChoice-ExtIEs} }
ServedCellsToUpdateInitiatingNodeChoice-ExtIEs XNAP-PROTOCOL-IES ::= {
ConfigurationUpdate-gNB XNAP-PROTOCOL-IES ::= {
     ID id-servedCellsToUpdate-NR
                                        CRITICALITY ignore TYPE ServedCellsToUpdate-NR
                                                                                                PRESENCE optional }
     ID id-cellAssistanceInfo-NR
                                        CRITICALITY ignore TYPE CellAssistanceInfo-NR
                                                                                                PRESENCE optional }
     ID id-cellAssistanceInfo-EUTRA
                                            CRITICALITY ignore TYPE CellAssistanceInfo-EUTRA
                                                                                                     PRESENCE optional },
ConfigurationUpdate-ng-eNB XNAP-PROTOCOL-IES ::= {
     ID id-servedCellsToUpdate-E-UTRA CRITICALITY ignore TYPE ServedCellsToUpdate-E-UTRA
                                                                                             PRESENCE optional } |
                                                                                         PRESENCE optional } |
     ID id-cellAssistanceInfo-NR
                                     CRITICALITY ignore TYPE CellAssistanceInfo-NR
     ID id-cellAssistanceInfo-EUTRA
                                            CRITICALITY ignore TYPE CellAssistanceInfo-EUTRA
                                                                                                     PRESENCE optional },
-- NG-RAN NODE CONFIGURATION UPDATE ACKNOWLEDGE
  NGRANNodeConfigurationUpdateAcknowledge ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                            {{ NGRANNodeConfigurationUpdateAcknowledge-IEs}},
   . . .
NGRANNodeConfigurationUpdateAcknowledge-IEs XNAP-PROTOCOL-IES ::= {
     PRESENCE mandatory
     ID id-TNLA-Setup-List
                                            CRITICALITY ignore TYPE TNLA-Setup-List
                                                                                                     PRESENCE optional
     ID id-TNLA-Failed-To-Setup-List
                                            CRITICALITY ignore TYPE TNLA-Failed-To-Setup-List
                                                                                                     PRESENCE optional
     ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                     PRESENCE optional
     ID id-InterfaceInstanceIndication
                                            CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                     PRESENCE optional }
     ID id-TNLConfigurationInfo
                                            CRITICALITY ignore TYPE TNLConfigurationInfo
                                                                                                     PRESENCE optional },
RespondingNodeTypeConfigUpdateAck ::= CHOICE {
                          RespondingNodeTypeConfigUpdateAck-ng-eNB,
   nq-eNB
   qNB
                          RespondingNodeTypeConfigUpdateAck-gNB,
   choice-extension
                          ProtocolIE-Single-Container { {RespondingNodeTypeConfigUpdateAck-ExtIEs} }
```

```
RespondingNodeTypeConfigUpdateAck-ExtIEs XNAP-PROTOCOL-IES ::= {
RespondingNodeTypeConfigUpdateAck-ng-eNB ::= SEQUENCE {
                   ProtocolExtensionContainer { RespondingNodeTypeConfigUpdateAck-ng-eNB-ExtIEs} } OPTIONAL,
RespondingNodeTypeConfigUpdateAck-ng-eNB-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RespondingNodeTypeConfigUpdateAck-qNB ::= SEQUENCE {
   served-NR-Cells
                  ServedCells-NR
   iE-Extension
                   ProtocolExtensionContainer { RespondingNodeTypeConfigUpdateAck-qNB-ExtIEs} } OPTIONAL,
   . . .
RespondingNodeTypeConfigUpdateAck-gNB-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    ID id-PartialListIndicator-NR CRITICALITY ignore EXTENSION PartialListIndicator
                                                                                             PRESENCE optional }
    PRESENCE optional },
  -- NG-RAN NODE CONFIGURATION UPDATE FAILURE
  NGRANNodeConfigurationUpdateFailure ::= SEQUENCE
   protocolIEs
                  ProtocolIE-Container
                                      {{NGRANNodeConfigurationUpdateFailure-IEs}},
NGRANNodeConfigurationUpdateFailure-IEs XNAP-PROTOCOL-IES ::= {
    ID id-Cause
                                CRITICALITY ignore TYPE Cause
                                                                             PRESENCE mandatory }
    ID id-TimeToWait
                                CRITICALITY ignore TYPE TimeToWait
                                                                             PRESENCE optional
    ID id-CriticalityDiagnostics
                                CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                             PRESENCE optional }
   { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                             PRESENCE optional },
-- E-UTRA NR CELL RESOURCE COORDINATION REQUEST
```

```
E-UTRA-NR-CellResourceCoordinationRequest ::= SEOUENCE {
   protocolIEs
                       ProtocolIE-Container
                                              {{E-UTRA-NR-CellResourceCoordinationRequest-IEs}},
    . . .
E-UTRA-NR-CellResourceCoordinationRequest-IES XNAP-PROTOCOL-IES ::= {
     ID id-initiatingNodeType-ResourceCoordRequest CRITICALITY reject TYPE InitiatingNodeType-ResourceCoordRequest
                                                                                                                      PRESENCE mandatory } |
    { ID id-InterfaceInstanceIndication
                                                  CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                                      PRESENCE optional },
InitiatingNodeType-ResourceCoordRequest ::= CHOICE {
   ng-eNB
                                      ResourceCoordRequest-ng-eNB-initiated,
   aNB
                                      ResourceCoordRequest-gNB-initiated,
   choice-extension
                                      ProtocolIE-Single-Container { {InitiatingNodeType-ResourceCoordRequest-ExtIEs} }
InitiatingNodeType-ResourceCoordRequest-ExtIEs XNAP-PROTOCOL-IES ::= {
ResourceCoordRequest-ng-eNB-initiated ::= SEQUENCE {
   dataTrafficResourceIndication
                                      DataTrafficResourceIndication,
    spectrumSharingGroupID
                                      SpectrumSharingGroupID,
   listofE-UTRACells
                                      SEQUENCE (SIZE(1.. maxnoofCellsinNG-RANnode)) OF E-UTRA-CGI
                                                                                                                   OPTIONAL,
                                      ProtocolExtensionContainer { {ResourceCoordRequest-ng-eNB-initiated-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
ResourceCoordRequest-ng-eNB-initiated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ResourceCoordRequest-qNB-initiated ::= SEOUENCE {
   dataTrafficResourceIndication
                                      DataTrafficResourceIndication,
   listofE-UTRACells
                                      SEQUENCE (SIZE(1.. maxnoofCellsinNG-RANnode)) OF E-UTRA-CGI
                                                                                                                OPTIONAL,
    spectrumSharingGroupID
                                      SpectrumSharingGroupID,
                                      SEQUENCE (SIZE(1.. maxnoofCellsinNG-RANnode)) OF NR-CGI
   listofNRCells
                                                                                                                OPTIONAL,
                                      ProtocolExtensionContainer { {ResourceCoordRequest-gNB-initiated-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
ResourceCoordRequest-gNB-initiated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- E-UTRA NR CELL RESOURCE COORDINATION RESPONSE
```

```
E-UTRA-NR-CellResourceCoordinationResponse::= SEOUENCE {
   protocolIEs
                    ProtocolIE-Container
                                         {{E-UTRA-NR-CellResourceCoordinationResponse-IEs}},
   . . .
E-UTRA-NR-CellResourceCoordinationResponse-IEs XNAP-PROTOCOL-IES ::= {
     { ID id-InterfaceInstanceIndication
                                            CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                                         PRESENCE optional },
RespondingNodeType-ResourceCoordResponse ::= CHOICE
   ng-eNB
                                  ResourceCoordResponse-ng-eNB-initiated,
   qNB
                                  ResourceCoordResponse-gNB-initiated,
                                  ProtocolIE-Single-Container { {RespondingNodeType-ResourceCoordResponse-ExtIEs} }
   choice-extension
RespondingNodeType-ResourceCoordResponse-ExtIEs XNAP-PROTOCOL-IES ::= {
ResourceCoordResponse-ng-eNB-initiated ::= SEQUENCE {
                                  DataTrafficResourceIndication,
   dataTrafficResourceIndication
   spectrumSharingGroupID
                                  SpectrumSharingGroupID,
   listofE-UTRACells
                                  SEQUENCE (SIZE(1.. maxnoofCellsinNG-RANnode)) OF E-UTRA-CGI
                                                                                                         OPTIONAL,
                                  ProtocolExtensionContainer { {ResourceCoordResponse-ng-eNB-initiated-ExtIEs} }
   iE-Extensions
                                                                                                         OPTIONAL,
   . . .
ResourceCoordResponse-ng-eNB-initiated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ResourceCoordResponse-gNB-initiated ::= SEQUENCE
   dataTrafficResourceIndication
                                  DataTrafficResourceIndication,
   spectrumSharingGroupID
                                  SpectrumSharingGroupID,
   listofNRCells
                                  SEQUENCE (SIZE(1.. maxnoofCellsinNG-RANnode)) OF NR-CGI
                                                                                                       OPTIONAL,
                                  iE-Extensions
                                                                                                       OPTIONAL,
   . . .
ResourceCoordResponse-gNB-initiated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    *****************
-- SECONDARY RAT DATA USAGE REPORT
SecondaryRATDataUsageReport ::= SEQUENCE {
                                         {{SecondaryRATDataUsageReport-IEs}},
   protocolIEs
                 ProtocolIE-Container
```

```
SecondaryRATDataUsageReport-IEs XNAP-PROTOCOL-IES ::= {
                                             CRITICALITY reject
     ID id-M-NG-RANnodeUEXnAPID
                                                                 TYPE NG-RANnodeUEXnAPID
                                                                                                         PRESENCE mandatory}
     ID id-S-NG-RANnodeUEXnAPID
                                                                                                         PRESENCE mandatory}
                                             CRITICALITY reject
                                                                 TYPE NG-RANnodeUEXnAPID
    ID id-PDUSessionResourceSecondaryRATUsageList CRITICALITY reject
                                                                  TYPE PDUSessionResourceSecondaryRATUsageList PRESENCE mandatory },
  -- XN REMOVAL REQUEST
XnRemovalRequest ::= SEOUENCE {
   protocolIEs
                    ProtocolIE-Container
                                         {{ XnRemovalRequest-IEs}},
XnRemovalRequest-IEs XNAP-PROTOCOL-IES ::= {
   { ID id-GlobalNG-RAN-node-ID
                                  CRITICALITY reject TYPE GlobalNG-RANNode-ID
                                                                                    PRESENCE mandatory}
     ID id-XnRemovalThreshold
                                  CRITICALITY reject TYPE XnBenefitValue
                                                                                    PRESENCE optional }
   { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                   PRESENCE optional },
-- XN REMOVAL RESPONSE
__ *********************
XnRemovalResponse ::= SEQUENCE {
                    ProtocolIE-Container
                                         {{ XnRemovalResponse-IEs}},
   protocolIEs
   . . .
XnRemovalResponse-IEs XNAP-PROTOCOL-IES ::= {
     ID id-GlobalNG-RAN-node-ID CRITICALITY reject TYPE GlobalNG-RANNode-ID
                                                                                    PRESENCE mandatory}
     ID id-CriticalityDiagnostics
                                  CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                    PRESENCE optional }
   { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                    PRESENCE optional },
   -- XN REMOVAL FAILURE
__ ********************************
XnRemovalFailure ::= SEQUENCE {
```

```
protocolIEs
                                            {{ XnRemovalFailure-IEs}},
                      ProtocolIE-Container
XnRemovalFailure-IEs XNAP-PROTOCOL-IES ::= {
     ID id-Cause
                                                                                        PRESENCE mandatory}
                                    CRITICALITY ignore TYPE Cause
     ID id-CriticalityDiagnostics
                                    CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                        PRESENCE optional }
    { ID id-InterfaceInstanceIndication CRITICALITY reject TYPE InterfaceInstanceIndication
                                                                                        PRESENCE optional },
  *****************
-- CELL ACTIVATION REQUEST
        *****************
CellActivationRequest ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                            {{ CellActivationRequest-IEs}},
   . . .
CellActivationRequest-IEs XNAP-PROTOCOL-IES ::= {
     ID id-ServedCellsToActivate
                                                CRITICALITY reject
                                                                      TYPE ServedCellsToActivate
                                                                                                             PRESENCE mandatory
     ID id-ActivationIDforCellActivation
                                                                     TYPE ActivationIDforCellActivation
                                                                                                             PRESENCE mandatory}
                                                CRITICALITY reject
    { ID id-InterfaceInstanceIndication
                                                                     TYPE InterfaceInstanceIndication
                                                                                                             PRESENCE optional },
                                                CRITICALITY reject
ServedCellsToActivate ::= CHOICE {
   nr-cells
                                    SEQUENCE (SIZE(1..maxnoofCellsinNG-RANnode)) OF NR-CGI,
   e-utra-cells
                                    SEQUENCE (SIZE(1..maxnoofCellsinNG-RANnode)) OF E-UTRA-CGI,
   choice-extension
                                    ServedCellsToActivate-ExtIEs XNAP-PROTOCOL-IES ::= {
-- CELL ACTIVATION RESPONSE
CellActivationResponse ::= SEOUENCE {
   protocolIEs
                     ProtocolIE-Container
                                            {{CellActivationResponse-IEs}},
   . . .
CellActivationResponse-IEs XNAP-PROTOCOL-IES ::= {
     ID id-ActivatedServedCells
                                                                      TYPE ActivatedServedCells
                                                                                                             PRESENCE mandatory }
                                                CRITICALITY reject
    { ID id-ActivationIDforCellActivation
                                                CRITICALITY reject
                                                                      TYPE ActivationIDforCellActivation
                                                                                                             PRESENCE mandatory}
```

```
ID id-CriticalityDiagnostics
                                                                 TYPE CriticalityDiagnostics
                                                                                                      PRESENCE optional }
                                            CRITICALITY ignore
   ID id-InterfaceInstanceIndication
                                         CRITICALITY reject
                                                              TYPE InterfaceInstanceIndication
                                                                                                   PRESENCE optional },
ActivatedServedCells ::= CHOICE {
   nr-cells
                                  SEQUENCE (SIZE(1..maxnoofCellsinNG-RANnode)) OF NR-CGI,
   e-utra-cells
                                  SEOUENCE (SIZE(1..maxnoofCellsinNG-RANnode)) OF E-UTRA-CGI,
   choice-extension
                                  ProtocolIE-Single-Container { {ActivatedServedCells-ExtIEs} }
ActivatedServedCells-ExtIEs XNAP-PROTOCOL-IES ::= {
  CELL ACTIVATION FAILURE
  ····
CellActivationFailure ::= SEQUENCE {
   protocolIEs
                    ProtocolIE-Container
                                         {{CellActivationFailure-IEs}},
CellActivationFailure-IEs XNAP-PROTOCOL-IES ::= {
     ID id-ActivationIDforCellActivation
                                            CRITICALITY reject
                                                                 TYPE ActivationIDforCellActivation
                                                                                                      PRESENCE mandatory }
                                                                                                      PRESENCE mandatory
    ID id-Cause
                                            CRITICALITY ignore
                                                                 TYPE Cause
     ID id-CriticalityDiagnostics
                                            CRITICALITY ignore
                                                                 TYPE CriticalityDiagnostics
                                                                                                      PRESENCE optional }
   ID id-InterfaceInstanceIndication
                                            CRITICALITY reject
                                                                 TYPE InterfaceInstanceIndication
                                                                                                      PRESENCE optional },
  *****************
-- RESET REQUEST
  ResetRequest ::= SEOUENCE {
                                         {{ResetRequest-IEs}},
   protocolIEs
                    ProtocolIE-Container
ResetRequest-IEs XNAP-PROTOCOL-IES ::= {
    ID id-ResetRequestTypeInfo
                                            CRITICALITY reject
                                                                 TYPE ResetRequestTypeInfo
                                                                                                      PRESENCE mandatory}
     ID id-Cause
                                            CRITICALITY ignore
                                                                 TYPE Cause
                                                                                                      PRESENCE mandatory}
   { ID id-InterfaceInstanceIndication
                                            CRITICALITY reject
                                                                 TYPE InterfaceInstanceIndication
                                                                                                      PRESENCE optional },
__ ********************************
```

```
-- RESET RESPONSE
__ **********************
ResetResponse ::= SEQUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ResetResponse-IEs}},
ResetResponse-IEs XNAP-PROTOCOL-IES ::= {
                                                                       TYPE ResetResponseTypeInfo
     ID id-ResetResponseTypeInfo
                                                 CRITICALITY reject
                                                                                                               PRESENCE mandatory }
     ID id-CriticalityDiagnostics
                                                CRITICALITY ignore
                                                                       TYPE CriticalityDiagnostics
                                                                                                               PRESENCE optional }
    { ID id-InterfaceInstanceIndication
                                                CRITICALITY reject
                                                                       TYPE InterfaceInstanceIndication
                                                                                                               PRESENCE optional },
-- ERROR INDICATION
ErrorIndication ::= SEOUENCE {
   protocolIEs
                      ProtocolIE-Container
                                             {{ErrorIndication-IEs}},
ErrorIndication-IEs XNAP-PROTOCOL-IES ::= {
     ID id-oldNG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                       TYPE NG-RANnodeUEXnAPID
                                                                                                               PRESENCE optional }
     ID id-newNG-RANnodeUEXnAPID
                                                 CRITICALITY ignore
                                                                       TYPE NG-RANnodeUEXnAPID
                                                                                                               PRESENCE optional
     ID id-Cause
                                                 CRITICALITY ignore
                                                                                                               PRESENCE optional
                                                                       TYPE Cause
     ID id-CriticalityDiagnostics
                                                 CRITICALITY ignore
                                                                       TYPE CriticalityDiagnostics
                                                                                                               PRESENCE optional }
    ID id-InterfaceInstanceIndication
                                                CRITICALITY reject
                                                                       TYPE InterfaceInstanceIndication
                                                                                                               PRESENCE optional },
-- PRIVATE MESSAGE
PrivateMessage ::= SEQUENCE {
   privateIEs
                  PrivateIE-Container {{PrivateMessage-IEs}},
PrivateMessage-IEs XNAP-PRIVATE-IES ::= {
__ **********************
```

```
-- TRACE START
__ **********************
TraceStart ::= SEQUENCE {
   protocolIEs
                ProtocolIE-Container
                                       { {TraceStartIEs} },
TraceStartIEs XNAP-PROTOCOL-IES ::= {
    ID id-M-NG-RANnodeUEXnAPID
                                          CRITICALITY reject TYPE NG-RANnodeUEXnAPID
                                                                                            PRESENCE mandatory }
    ID id-S-NG-RANnodeUEXnAPID
                                          CRITICALITY reject TYPE NG-RANnodeUEXnAPID
                                                                                            PRESENCE mandatory }
   { ID id-TraceActivation
                                          CRITICALITY ignore TYPE TraceActivation
                                                                                            PRESENCE optional },
  -- DEACTIVATE TRACE
__ *********************
DeactivateTrace ::= SEOUENCE {
                                       { {DeactivateTraceIEs} },
   protocolIEs
                ProtocolIE-Container
DeactivateTraceIEs XNAP-PROTOCOL-IES ::= {
   { ID id-M-NG-RANnodeUEXnAPID
                                          CRITICALITY reject TYPE NG-RANnodeUEXnAPID
                                                                                            PRESENCE mandatory}
    ID id-S-NG-RANnodeUEXnAPID
                                          CRITICALITY reject TYPE NG-RANnodeUEXnAPID
                                                                                            PRESENCE mandatory }
   ID id-NG-RANTraceID
                                          CRITICALITY ignore TYPE NG-RANTraceID
                                                                                            PRESENCE mandatory },
   . . .
  *****************
-- FAILURE INDICATION
  ******************
FailureIndication ::= SEQUENCE {
                  ProtocolIE-Container
                                      {{FailureIndication-IEs}},
   protocolIEs
FailureIndication-IEs XNAP-PROTOCOL-IES ::= {
   { ID id-InitiatingCondition-FailureIndication
                                                    CRITICALITY reject
                                                                        TYPE InitiatingCondition-FailureIndication
   PRESENCE mandatory },
   . . .
  *****************
```

```
-- HANDOVER REPORT
HandoverReport ::= SEQUENCE {
                                               {{ HandoverReport-IEs}},
    protocolIEs
                       ProtocolIE-Container
    . . .
HandoverReport-IES XNAP-PROTOCOL-IES ::= {
     ID id-HandoverReportType
                                               CRITICALITY ignore
                                                                       TYPE HandoverReportType PRESENCE mandatory } |
     ID id-HandoverCause
                                           CRITICALITY ignore
                                                                   TYPE Cause
                                                                                          PRESENCE mandatory } |
                                       CRITICALITY ignore
                                                                                                PRESENCE mandatory }
     ID id-SourceCellCGI
                                                              TYPE GlobalNG-RANCell-ID
     ID id-TargetCellCGI
                                       CRITICALITY ignore
                                                              TYPE GlobalNG-RANCell-ID
                                                                                                PRESENCE mandatory }
     ID id-ReEstablishmentCellCGI
                                       CRITICALITY ignore
                                                                                                PRESENCE conditional } |
                                                              TYPE GlobalNG-RANCell-ID
-- This IE shall be present if the Handover Report Type IE is set to the value "HO to wrong cell"
     ID id-TargetCellinEUTRAN
                                       CRITICALITY ignore
                                                              TYPE TargetCellinEUTRAN PRESENCE conditional }
-- This IE shall be present if the Handover Report Type IE is set to the value "Inter-system ping-pong"
                                                                                      PRESENCE optional }
     ID id-SourceCellCRNTI
                                       CRITICALITY ignore
                                                              TYPE C-RNTI
     ID id-MobilityInformation
                                       CRITICALITY ignore
                                                               TYPE MobilityInformation
                                                                                          PRESENCE optional }
    { ID id-UERLFReportContainer
                                       CRITICALITY ignore
                                                              TYPE UERLFReportContainer PRESENCE optional },
-- RESOURCE STATUS REQUEST
ResourceStatusRequest ::= SEQUENCE {
    protocolIEs
                   ProtocolIE-Container
                                           {{ResourceStatusRequest-IEs}},
    . . .
ResourceStatusRequest-IEs XNAP-PROTOCOL-IES ::= {
     ID id-NGRAN-Nodel-Measurement-ID
                                                                                                   PRESENCE mandatory }
                                               CRITICALITY reject TYPE Measurement-ID
     ID id-NGRAN-Node2-Measurement-ID
                                           CRITICALITY ignore TYPE Measurement-ID
                                                                                                PRESENCE conditional |
-- This IE shall be present if the Registration Request IE is set to the value "stop", "partial stop" or "add".
     ID id-RegistrationRequest
                                               CRITICALITY reject TYPE RegistrationRequest
                                                                                                      PRESENCE mandatory } |
                                                                                                PRESENCE conditional | |
     ID id-ReportCharacteristics
                                           CRITICALITY reject TYPE ReportCharacteristics
-- This IE shall be present if the Registration Request IE is set to the value "start".
     ID id-CellToReport
                                                   CRITICALITY ignore TYPE CellToReport
                                                                                                      PRESENCE optional } |
    { ID id-ReportingPeriodicity
                                              CRITICALITY ignore TYPE ReportingPeriodicity
                                                                                                   PRESENCE optional },
-- RESOURCE STATUS RESPONSE
```

```
ResourceStatusResponse ::= SEOUENCE {
   protocolIEs
                 ProtocolIE-Container
                                      {{ResourceStatusResponse-IEs}},
ResourceStatusResponse-IEs XNAP-PROTOCOL-IES ::= {
    ID id-NGRAN-Nodel-Measurement-ID
                                                                                           PRESENCE mandatory }
                                         CRITICALITY reject TYPE Measurement-ID
    ID id-NGRAN-Node2-Measurement-ID
                                         CRITICALITY reject TYPE Measurement-ID
                                                                                           PRESENCE mandatory } |
   { ID id-CriticalityDiagnostics
                                         CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                           PRESENCE optional },
-- RESOURCE STATUS FAILURE
__ *********************
ResourceStatusFailure ::= SEQUENCE {
   protocolIEs
                 ProtocolIE-Container
                                     {{ResourceStatusFailure-IEs}},
   . . .
ResourceStatusFailure-IEs XNAP-PROTOCOL-IES ::= {
     ID id-NGRAN-Nodel-Measurement-ID
                                            CRITICALITY reject TYPE Measurement-ID
                                                                                                   PRESENCE mandatory}
    ID id-NGRAN-Node2-Measurement-ID
                                                                                                   PRESENCE mandatory }
                                            CRITICALITY reject TYPE Measurement-ID
     ID id-Cause
                                            CRITICALITY ignore TYPE Cause
                                                                                                   PRESENCE mandatory}
   { ID id-CriticalityDiagnostics
                                            CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                                   PRESENCE optional },
__ ********************************
-- RESOURCE STATUS UPDATE
*******************
ResourceStatusUpdate ::= SEOUENCE {
                                     {{ResourceStatusUpdate-IEs}},
   protocolIEs
               ProtocolIE-Container
ResourceStatusUpdate-IEs XNAP-PROTOCOL-IES ::= {
    ID id-NGRAN-Nodel-Measurement-ID
                                     CRITICALITY reject TYPE Measurement-ID
                                                                                    PRESENCE mandatory }
     ID id-NGRAN-Node2-Measurement-ID
                                     CRITICALITY reject TYPE Measurement-ID
                                                                                    PRESENCE mandatory } |
    PRESENCE mandatory },
  *****************
-- MOBILITY CHANGE REQUEST
```

```
MobilityChangeRequest ::= SEOUENCE {
   protocolIEs
             ProtocolIE-Container
                                 {{MobilityChangeRequest-IEs}},
MobilityChangeRequest-IEs XNAP-PROTOCOL-IES ::= {
    ID id-NG-RANnodelCellID CRITICALITY reject TYPE GlobalNG-RANCell-ID
                                                                                 PRESENCE mandatory }
    ID id-NG-RANnode2CellID
                              CRITICALITY reject TYPE GlobalNG-RANCell-ID
                                                                                 PRESENCE mandatory }
    { ID id-Cause
                              CRITICALITY ignore TYPE Cause
                                                                   PRESENCE mandatory },
-- MOBILITY CHANGE ACKNOWLEDGE
  MobilityChangeAcknowledge ::= SEQUENCE {
  protocolIEs
               ProtocolIE-Container
                                 {{MobilityChangeAcknowledge-IEs}},
MobilityChangeAcknowledge-IEs XNAP-PROTOCOL-IES ::= {
    ID id-NG-RANnodelCellID CRITICALITY reject TYPE GlobalNG-RANCell-ID
                                                                                 PRESENCE mandatory }
    ID id-NG-RANnode2CellID
                              CRITICALITY reject TYPE GlobalNG-RANCell-ID
                                                                                 PRESENCE mandatory}
   { ID id-CriticalityDiagnostics
                             CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                 PRESENCE optional },
   . . .
-- MOBILITY CHANGE FAILURE
  *******************
MobilityChangeFailure ::= SEQUENCE {
  protocolIEs ProtocolIE-Container
                                 {{MobilityChangeFailure-IEs}},
MobilityChangeFailure-IEs XNAP-PROTOCOL-IES ::= {
    ID id-NG-RANnodelCellID
                              CRITICALITY reject TYPE GlobalNG-RANCell-ID
                                                                                 PRESENCE mandatory }
    ID id-NG-RANnode2CellID
                              CRITICALITY reject TYPE GlobalNG-RANCell-ID
                                                                                 PRESENCE mandatory |
    ID id-Cause
                                       CRITICALITY ignore TYPE Cause
                                                                                        PRESENCE mandatory}
    TYPE MobilityParametersModificationRange PRESENCE optional | |
    ID id-CriticalityDiagnostics
                                       CRITICALITY ignore TYPE CriticalityDiagnostics
                                                                                        PRESENCE optional },
```

## 9.3.5 Information Element definitions

```
-- ASN1START
  *****************
-- Information Element Definitions
__ ********************
XnAP-IEs {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) xnap (2) version1 (1) xnap-IEs (2)
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
IMPORTS
   id-CNTypeRestrictionsForEquivalent,
   id-CNTypeRestrictionsForServing,
   id-Additional-UL-NG-U-TNLatUPF-List,
   id-AlternativeQoSParaSetList,
   id-CurrentQoSParaSetIndex,
   id-DefaultDRB-Allowed,
   id-DLCarrierList,
   id-EndpointIPAddressAndPort,
   id-ExtendedTAISliceSupportList,
   id-FiveGCMobilityRestrictionListContainer,
```

```
id-SecondarydataForwardingInfoFromTarget-List,
id-LastE-UTRANPLMNIdentity,
id-IntendedTDD-DL-ULConfiguration-NR,
id-MaxIPrate-DL,
id-SecurityResult,
id-OldQoSFlowMap-ULendmarkerexpected,
id-PDUSessionCommonNetworkInstance,
id-BPLMN-ID-Info-EUTRA,
id-BPLMN-ID-Info-NR,
id-DRBsNotAdmittedSetupModifyList,
id-Secondary-MN-Xn-U-TNLInfoatM,
id-ULForwardingProposal,
id-DRB-IDs-takenintouse,
id-SplitSessionIndicator,
id-NonGBRResources-Offered,
id-MDT-Configuration,
id-TraceCollectionEntityURI,
id-NPN-Broadcast-Information,
id-NPNPagingAssistanceInformation,
id-NPNMobilityInformation,
id-NPN-Support,
id-LTEUESidelinkAggregateMaximumBitRate,
id-NRUESidelinkAggregateMaximumBitRate,
id-ExtendedRATRestrictionInformation.
id-OoSMonitoringRequest,
id-DAPSRequestInfo,
id-OffsetOfNbiotChannelNumberToDL-EARFCN,
id-OffsetOfNbiotChannelNumberToUL-EARFCN.
id-NBIoT-UL-DL-AlignmentOffset,
id-TDDULDLConfigurationCommonNR,
id-CarrierList,
id-ULCarrierList,
id-FrequencyShift7p5khz,
id-SSB-PositionsInBurst,
id-NRCellPRACHConfig,
id-Redundant-UL-NG-U-TNLatUPF,
id-Redundant-DL-NG-U-TNLatNG-RAN,
id-CNPacketDelayBudgetDownlink,
id-CNPacketDelayBudgetUplink,
id-ExtendedPacketDelayBudget,
id-Additional-Redundant-UL-NG-U-TNLatUPF-List,
id-RedundantCommonNetworkInstance.
id-TSCTrafficCharacteristics,
id-RedundantOoSFlowIndicator,
id-Additional-PDCP-Duplication-TNL-List,
id-RedundantPDUSessionInformation,
id-UsedRSNInformation,
id-RLCDuplicationInformation,
id-CSI-RSTransmissionIndication,
id-UERadioCapabilityID,
maxEARFCN,
maxnoofAllowedAreas,
maxnoofAMFRegions,
maxnoofAoIs,
```

```
maxnoofBPLMNs,
maxnoofCAGs,
maxnoofCAGsperPLMN,
maxnoofCellsinAoI,
maxnoofCellsinNG-RANnode,
maxnoofCellsinRNA,
maxnoofCellsinUEHistoryInfo,
maxnoofCellsUEMovingTrajectory,
maxnoofDRBs,
maxnoofEPLMNs,
maxnoofEPLMNsplus1,
maxnoofEUTRABands,
maxnoofEUTRABPLMNs,
maxnoofForbiddenTACs.
maxnoofMBSFNEUTRA,
maxnoofMultiConnectivityMinusOne,
maxnoofNeighbours,
maxnoofNIDs,
maxnoofNRCellBands,
maxnoofPDUSessions,
maxnoofPLMNs,
maxnoofProtectedResourcePatterns,
maxnoofQoSFlows,
maxnoofOoSParaSets,
maxnoofRANAreaCodes,
maxnoofRANAreasinRNA,
maxnoofSCellGroups,
maxnoofSCellGroupsplus1,
maxnoofSliceItems,
maxnoofExtSliceItems,
maxnoofSNPNIDs,
maxnoofsupportedTACs,
maxnoofsupportedPLMNs,
maxnoofTAI,
maxnoofTAIsinAoI,
maxnoofTNLAssociations,
maxnoofUEContexts,
maxNRARFCN,
maxNrOfErrors,
maxnoofRANNodesinAoI,
maxnooftimeperiods,
maxnoofslots,
maxnoofExtTLAs,
maxnoofGTPTLAs,
maxnoofCHOcells,
maxnoofPC5QoSFlows,
maxnoofSSBAreas,
maxnoofNRSCSs,
maxnoofPhysicalResourceBlocks,
maxnoofRACHReports,
maxnoofAdditionalPDCPDuplicationTNL,
maxnoofRLCDuplicationstate,
maxnoofBluetoothName,
maxnoofCellIDforMDT,
```

```
maxnoofMDTPLMNs,
    maxnoofTAforMDT,
    maxnoofWLANName.
    maxnoofSensorName,
    maxnoofNeighPCIforMDT,
    maxnoofFreqforMDT
FROM XnAP-Constants
    Criticality,
    ProcedureCode,
    ProtocolIE-ID,
    TriggeringMessage
FROM XnAP-CommonDataTypes
    ProtocolExtensionContainer{},
    ProtocolIE-Single-Container{},
    XNAP-PROTOCOL-EXTENSION,
    XNAP-PROTOCOL-IES
FROM XnAP-Containers;
-- A
Additional-PDCP-Duplication-TNL-List ::= SEQUENCE (SIZE(1..maxnoofAdditionalPDCPDuplicationTNL)) OF Additional-PDCP-Duplication-TNL-Item
Additional-PDCP-Duplication-TNL-Item ::= SEQUENCE {
    additional-PDCP-Duplication-UP-TNL-Information UPTransportLayerInformation,
    iE-Extensions
                        ProtocolExtensionContainer { { Additional-PDCP-Duplication-TNL-ExtIEs} } OPTIONAL,
Additional-PDCP-Duplication-TNL-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
Additional-UL-NG-U-TNLatUPF-Item ::= SEQUENCE {
    additional-UL-NG-U-TNLatUPF
                                            UPTransportLayerInformation,
    iE-Extensions ProtocolExtensionContainer { { Additional-UL-NG-U-TNLatUPF-Item-ExtIEs} } OPTIONAL,
Additional-UL-NG-U-TNLatUPF-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
Additional-UL-NG-U-TNLatUPF-List ::= SEQUENCE (SIZE(1..maxnoofMultiConnectivityMinusOne)) OF Additional-UL-NG-U-TNLatUPF-Item
ActivationIDforCellActivation ::= INTEGER (0..255)
AllocationandRetentionPriority ::= SEQUENCE {
    priorityLevel
                                   INTEGER (0..15,...),
    pre-emption-capability
                                   ENUMERATED {shall-not-trigger-preemptdatDion, may-trigger-preemption, ...},
    pre-emption-vulnerability
                                   ENUMERATED {not-preemptable, preemptable, ...},
```

```
ProtocolExtensionContainer { {AllocationandRetentionPriority-ExtIEs} } OPTIONAL,
    iE-Extensions
AllocationandRetentionPriority-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ActivationSFN ::= INTEGER (0..1023)
AllowedCAG-ID-List-perPLMN ::= SEQUENCE (SIZE(1..maxnoofCAGsperPLMN)) OF CAG-Identifier
AllowedPNI-NPN-ID-List ::= SEQUENCE (SIZE(1..maxnoofEPLMNsplus1)) OF AllowedPNI-NPN-ID-Item
AllowedPNI-NPN-ID-Item ::= SEQUENCE {
    plmn-id
                                        PLMN-Identity,
    pni-npn-restricted-information
                                        PNI-NPN-Restricted-Information,
    allowed-CAG-id-list-per-plmn
                                        AllowedCAG-ID-List-perPLMN,
                                        ProtocolExtensionContainer { {AllowedPNI-NPN-ID-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
AllowedPNI-NPN-ID-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
AlternativeOoSParaSetList ::= SEOUENCE (SIZE(1..maxnoofOoSParaSets)) OF AlternativeOoSParaSetItem
AlternativeQoSParaSetItem ::= SEQUENCE {
    alternativeQoSParaSetIndex
                                        OoSParaSetIndex,
    guaranteedFlowBitRateDL
                                                                OPTIONAL,
                                        BitRate
    guaranteedFlowBitRateUL
                                        BitRate
                                                                OPTIONAL,
                                                                OPTIONAL,
    packetDelayBudget
                                        PacketDelayBudget
    packetErrorRate
                                        PacketErrorRate
                                                                OPTIONAL,
                        ProtocolExtensionContainer { {AlternativeQoSParaSetItem-ExtIEs} }
    iE-Extensions
                                                                                            OPTIONAL,
AlternativeOoSParaSetItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
AMF-Region-Information ::= SEQUENCE (SIZE (1..maxnoofAMFRegions)) OF GlobalAMF-Region-Information
GlobalAMF-Region-Information ::= SEOUENCE {
    plmn-ID
                        PLMN-Identity,
    amf-region-id
                        BIT STRING (SIZE (8)),
                                    ProtocolExtensionContainer { {GlobalAMF-Region-Information-ExtIEs} } OPTIONAL,
    iE-Extensions
GlobalAMF-Region-Information-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
AMF-UE-NGAP-ID ::= INTEGER (0..1099511627775)
AreaOfInterestInformation ::= SEQUENCE (SIZE(1..maxnoofAoIs)) OF AreaOfInterest-Item
AreaOfInterest-Item ::= SEQUENCE {
   listOfTAIsinAoI
                                    ListOfTAIsinAoI
                                                                                                 OPTIONAL,
   listOfCellsinAoI
                                    ListOfCells
                                                                                                 OPTIONAL,
   listOfRANNodesinAoI
                                    ListOfRANNodesinAoI
                                                                                                 OPTIONAL,
    requestReferenceID RequestReferenceID,
    iE-Extensions
                                    ProtocolExtensionContainer { {AreaOfInterest-Item-ExtIEs} } OPTIONAL,
AreaOfInterest-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
AreaScopeOfMDT-NR ::= CHOICE {
    cellBased
                                CellBasedMDT-NR,
    t.ABased
                                TABasedMDT,
                                TAIBasedMDT,
    tAIBased
AreaScopeOfMDT-EUTRA ::= CHOICE {
    cellBased
                                CellBasedMDT-EUTRA,
    tABased
                                TABasedMDT,
    tAIBased
                                TAIBasedMDT,
AreaScopeOfNeighCellsList ::= SEQUENCE (SIZE(1..maxnoofFreqforMDT)) OF AreaScopeOfNeighCellsItem
AreaScopeOfNeighCellsItem ::= SEQUENCE {
    nrFrequencyInfo
                                NRFrequencyInfo,
                                PCIListForMDT
    pciListForMDT
                                                    OPTIONAL,
                        ProtocolExtensionContainer { { AreaScopeOfNeighCellsItem-ExtIEs} } OPTIONAL,
    iE-Extensions
AreaScopeOfNeighCellsItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
AS-SecurityInformation ::= SEQUENCE {
    key-NG-RAN-Star
                                    BIT STRING (SIZE(256)),
    ncc
                                    INTEGER (0..7),
    iE-Extensions
                                    ProtocolExtensionContainer { {AS-SecurityInformation-ExtIEs} } OPTIONAL,
```

```
AS-SecurityInformation-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
AssistanceDataForRANPaging ::= SEQUENCE {
    ran-paging-attempt-info
                                   RANPagingAttemptInfo OPTIONAL,
    iE-Extensions
                                   ProtocolExtensionContainer { {AssistanceDataForRANPaging-ExtIEs} } OPTIONAL,
AssistanceDataForRANPaging-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
    { ID id-NPNPagingAssistanceInformation CRITICALITY ignore EXTENSION NPNPagingAssistanceInformation PRESENCE optional },
AvailableCapacity ::= INTEGER (1.. 100,...)
AvailableRRCConnectionCapacityValue ::= INTEGER (0..100)
AveragingWindow ::= INTEGER (0..4095, ...)
-- B
BluetoothMeasurementConfiguration ::= SEQUENCE {
    bluetoothMeasConfig
                                   BluetoothMeasConfig,
    bluetoothMeasConfigNameList BluetoothMeasConfigNameList
                                                                    OPTIONAL,
                                   ENUMERATED {true, ...}
   bt-rssi
                                                                    OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { BluetoothMeasurementConfiguration-ExtIEs } } OPTIONAL,
{\tt BluetoothMeasurementConfiguration-Extles \ XNAP-PROTOCOL-EXTENSION ::= \{}
BluetoothMeasConfigNameList ::= SEQUENCE (SIZE(1..maxnoofBluetoothName)) OF BluetoothName
BluetoothMeasConfig::= ENUMERATED {setup,...}
BluetoothName ::= OCTET STRING (SIZE (1..248))
BPLMN-ID-Info-EUTRA ::= SEQUENCE (SIZE(1..maxnoofEUTRABPLMNs)) OF BPLMN-ID-Info-EUTRA-Item
BPLMN-ID-Info-EUTRA-Item ::= SEQUENCE {
    broadcastPLMNs
                                    BroadcastEUTRAPLMNs,
                                    TAC,
    tac
```

```
e-utraCI
                                 E-UTRA-Cell-Identity,
                                 RANAC OPTIONAL,
   ranac
   iE-Extension
                                 ProtocolExtensionContainer { {BPLMN-ID-Info-EUTRA-Item-ExtIEs} } OPTIONAL,
BPLMN-ID-Info-EUTRA-Item-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
BPLMN-ID-Info-NR ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF BPLMN-ID-Info-NR-Item
BPLMN-ID-Info-NR-Item ::= SEQUENCE {
   broadcast.PLMNs
                                 BroadcastPLMNs,
                                 TAC,
   tac
   nr-CI
                                 NR-Cell-Identity,
   ranac
                                 RANAC OPTIONAL,
                                 ProtocolExtensionContainer { {BPLMN-ID-Info-NR-Item-ExtIEs} } OPTIONAL,
   iE-Extension
BPLMN-ID-Info-NR-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   . . .
BitRate ::= INTEGER (0..400000000000,...)
BroadcastCAG-Identifier-List ::= SEQUENCE (SIZE(1..maxnoofCAGs)) OF BroadcastCAG-Identifier-Item
BroadcastCAG-Identifier-Item ::= SEQUENCE {
   cag-Identifier
   iE-Extension
                                 ProtocolExtensionContainer { {BroadcastCAG-Identifier-Item-ExtIEs} } OPTIONAL,
BroadcastCAG-Identifier-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
BroadcastNID-List ::= SEQUENCE (SIZE(1..maxnoofNIDs)) OF BroadcastNID-Item
BroadcastNID-Item ::= SEOUENCE {
   iE-Extension
                             ProtocolExtensionContainer { {BroadcastNID-Item-ExtIEs} } OPTIONAL,
BroadcastNID-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
BroadcastPLMNs ::= SEOUENCE (SIZE(1..maxnoofBPLMNs)) OF PLMN-Identity
BroadcastEUTRAPLMNs ::= SEQUENCE (SIZE(1..maxnoofEUTRABPLMNs)) OF PLMN-Identity
BroadcastPLMNinTAISupport-Item ::= SEQUENCE {
    plmn-id
                                    PLMN-Identity,
    tAISliceSupport-List
                                    SliceSupport-List,
                                    ProtocolExtensionContainer { {BroadcastPLMNinTAISupport-Item-ExtIEs} } OPTIONAL,
   iE-Extension
BroadcastPLMNinTAISupport-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    {ID id-NPN-Support CRITICALITY reject EXTENSION NPN-Support
                                                                        PRESENCE optional } |
    { ID id-ExtendedTAISliceSupportList
                                           CRITICALITY reject EXTENSION ExtendedSliceSupportList
                                                                                                        PRESENCE optional },
BroadcastPNI-NPN-ID-Information ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF BroadcastPNI-NPN-ID-Information-Item
BroadcastPNI-NPN-ID-Information-Item ::= SEQUENCE {
    plmn-id
                                    PLMN-Identity,
   broadcastCAG-Identifier-List
                                   BroadcastCAG-Identifier-List,
    iE-Extension
                                    ProtocolExtensionContainer { {BroadcastPNI-NPN-ID-Information-Item-ExtIEs} } OPTIONAL,
    . . .
BroadcastPNI-NPN-ID-Information-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
BroadcastSNPNID-List ::= SEQUENCE (SIZE(1..maxnoofSNPNIDs)) OF BroadcastSNPNID
BroadcastSNPNID ::= SEQUENCE {
   plmn-id
                                    PLMN-Identity,
   broadcastNID-List
                                                    BroadcastNID-List,
                                    ProtocolExtensionContainer { {BroadcastSNPNID-ExtIEs} } OPTIONAL,
   iE-Extension
BroadcastSNPNID-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- C
CAG-Identifier ::= BIT STRING (SIZE (32))
```

```
CapacityValue ::= INTEGER (0..100)
CapacityValueInfo ::= SEOUENCE {
    capacityValue
                                CapacityValue,
    ssbAreaCapacityValueList
                                SSBAreaCapacityValue-List,
                                ProtocolExtensionContainer { {CapacityValueInfo-ExtIEs} } OPTIONAL,
    iE-Extension
CapacityValueInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
Cause ::= CHOICE {
    radioNetwork
                        CauseRadioNetworkLayer,
    transport
                        CauseTransportLayer,
                        CauseProtocol,
    protocol
                        CauseMisc.
    misc
                        ProtocolIE-Single-Container { {Cause-ExtIEs} }
    choice-extension
Cause-ExtIEs XNAP-PROTOCOL-IES ::= {
CauseRadioNetworkLayer ::= ENUMERATED {
    cell-not-available,
    handover-desirable-for-radio-reasons,
    handover-target-not-allowed,
    invalid-AMF-Set-ID,
    no-radio-resources-available-in-target-cell,
    partial-handover,
    reduce-load-in-serving-cell,
    resource-optimisation-handover,
    time-critical-handover,
    tXnRELOCoverall-expiry,
    tXnRELOCprep-expiry,
    unknown-GUAMI-ID,
    unknown-local-NG-RAN-node-UE-XnAP-ID,
    inconsistent-remote-NG-RAN-node-UE-XnAP-ID,
    \verb|encryption-and-or-integrity-protection-algorithms-not-supported|,
    protection-algorithms-not-supported,
    multiple-PDU-session-ID-instances,
    unknown-PDU-session-ID,
    unknown-OoS-Flow-ID,
    multiple-QoS-Flow-ID-instances,
    switch-off-ongoing,
    not-supported-5QI-value,
    tXnDCoverall-expiry,
```

```
tXnDCprep-expiry,
    action-desirable-for-radio-reasons,
    reduce-load.
    resource-optimisation,
    time-critical-action,
    target-not-allowed,
    no-radio-resources-available,
    invalid-OoS-combination,
    encryption-algorithms-not-supported,
    procedure-cancelled,
    rRM-purpose,
    improve-user-bit-rate,
    user-inactivity,
    radio-connection-with-UE-lost,
    failure-in-the-radio-interface-procedure,
    bearer-option-not-supported,
    up-integrity-protection-not-possible,
    up-confidentiality-protection-not-possible,
    resources-not-available-for-the-slice-s,
    ue-max-IP-data-rate-reason,
    cP-integrity-protection-failure,
    uP-integrity-protection-failure,
    slice-not-supported-by-NG-RAN,
    mN-Mobility,
    sN-Mobility,
    count-reaches-max-value,
    unknown-old-NG-RAN-node-UE-XnAP-ID,
    pDCP-Overload,
    drb-id-not-available,
    unspecified,
    . . . ,
    ue-context-id-not-known,
    non-relocation-of-context,
    cho-cpc-resources-tobechanged,
    rSN-not-available-for-the-UP.
    npn-access-denied
CauseTransportLayer ::= ENUMERATED {
    transport-resource-unavailable,
    unspecified,
    . . .
CauseProtocol ::= ENUMERATED {
    transfer-syntax-error,
    abstract-syntax-error-reject,
    abstract-syntax-error-ignore-and-notify,
    message-not-compatible-with-receiver-state,
    semantic-error,
    abstract-syntax-error-falsely-constructed-message,
    unspecified,
```

```
CauseMisc ::= ENUMERATED {
    control-processing-overload,
   hardware-failure,
    o-and-M-intervention.
    not-enough-user-plane-processing-resources,
    unspecified,
CellAssistanceInfo-NR ::= CHOICE {
                                SEQUENCE (SIZE(1..maxnoofCellsinNG-RANnode)) OF NR-CGI,
   limitedNR-List
    full-List
                                ENUMERATED {all-served-cells-NR, ...},
    choice-extension
                                ProtocolIE-Single-Container { {CellAssistanceInfo-NR-ExtIEs} }
CellAssistanceInfo-NR-ExtIEs XNAP-PROTOCOL-IES ::= {
CellAndCapacityAssistanceInfo-NR
                                   ::= SEQUENCE {
    maximumCellListSize
                                        MaximumCellListSize
                                                                                        OPTIONAL,
    cellAssistanceInfo-NR
                                CellAssistanceInfo-NR
                                                                    OPTIONAL,
                                        ProtocolExtensionContainer { { CellAndCapacityAssistanceInfo-NR-ExtIEs} } OPTIONAL,
   iE-Extensions
CellAndCapacityAssistanceInfo-NR-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CellAndCapacityAssistanceInfo-EUTRA ::= SEQUENCE
    maximumCellListSize
                                        MaximumCellListSize
                                                                                        OPTIONAL,
    cellAssistanceInfo-EUTRA
                                        CellAssistanceInfo-EUTRA
                                                                                OPTIONAL,
                                        ProtocolExtensionContainer { { CellAndCapacityAssistanceInfo-EUTRA-ExtIEs} } OPTIONAL,
    iE-Extensions
CellAndCapacityAssistanceInfo-EUTRA-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CellAssistanceInfo-EUTRA
                           ::= CHOICE {
   limitedEUTRA-List
                                SEOUENCE (SIZE(1..maxnoofCellsinNG-RANnode)) OF E-UTRA-CGI,
    full-List
                                ENUMERATED {all-served-cells-NR, ...},
    choice-extension
                                ProtocolIE-Single-Container { {CellAssistanceInfo-EUTRA-ExtIEs} }
CellAssistanceInfo-EUTRA-ExtIEs XNAP-PROTOCOL-IES ::= {
```

```
CellBasedMDT-NR::= SEQUENCE {
    cellIdListforMDT-NR CellIdListforMDT-NR.
   iE-Extensions
                      ProtocolExtensionContainer { {CellBasedMDT-NR-ExtIEs} } OPTIONAL,
CellBasedMDT-NR-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CellIdListforMDT-NR ::= SEQUENCE (SIZE(1..maxnoofCellIDforMDT)) OF NR-CGI
CellBasedMDT-EUTRA::= SEQUENCE {
   cellIdListforMDT-EUTRA CellIdListforMDT-EUTRA,
                      ProtocolExtensionContainer { {CellBasedMDT-EUTRA-ExtIEs} } OPTIONAL,
CellBasedMDT-EUTRA-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CellIdListforMDT-EUTRA ::= SEQUENCE (SIZE(1..maxnoofCellIDforMDT)) OF E-UTRA-CGI
CellCapacityClassValue ::= INTEGER (1..100,...)
CellGroupID ::= INTEGER (0..maxnoofSCellGroups)
CellMeasurementResult ::= SEQUENCE (SIZE(1..maxnoofCellsinNG-RANnode)) OF CellMeasurementResult-Item
CellMeasurementResult-Item ::= SEQUENCE {
   cell-ID
                                      GlobalNG-RANCell-ID,
   radioResourceStatus
                                      RadioResourceStatus
                                                                      OPTIONAL,
    tNLCapacityIndicator
                                          TNLCapacityIndicator
                                                                         OPTIONAL,
    compositeAvailableCapacityGroup
                                      CompositeAvailableCapacityGroup OPTIONAL,
    sliceAvailableCapacity
                                          SliceAvailableCapacity
                                                                         OPTIONAL,
   numberofActiveUEs
                                      NumberofActiveUEs
                                                                      OPTIONAL,
   rRCConnections
                                      RRCConnections
                                                                      OPTIONAL,
   iE-Extensions
                                      OPTIONAL,
CellMeasurementResult-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CellToReport ::= SEQUENCE (SIZE(1..maxnoofCellsinNG-RANnode)) OF CellToReport-Item
CellToReport-Item ::= SEQUENCE {
```

```
cell-ID
                                          GlobalNG-RANCell-ID,
   sSBToReport-List
                                          SSBToReport-List,
   sliceToReport-List
                                          SliceToReport-List,
   iE-Extensions
                                      ProtocolExtensionContainer { { CellToReport-Item-ExtIEs} } OPTIONAL,
CellToReport-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CompositeAvailableCapacityGroup ::= SEQUENCE
   compositeAvailableCapacityDownlink
                                          CompositeAvailableCapacity,
   compositeAvailableCapacityUplink
                                          CompositeAvailableCapacity,
                              ProtocolExtensionContainer { { CompositeAvailableCapacityGroup-ExtIEs} } OPTIONAL,
   iE-Extensions
CompositeAvailableCapacityGroup-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CompositeAvailableCapacity ::= SEQUENCE {
   cellCapacityClassValue CellCapacityClassValue
                                                            OPTIONAL,
    capacityValueInfo
                              CapacityValueInfo, -- this IE represents the IE "CapacityValue" in 9.2.2.a, it's used to distinguish the
"CapacityValue" in 9.2.2.c
                              ProtocolExtensionContainer { { CompositeAvailableCapacity-ExtIEs} }OPTIONAL,
   iE-Extensions
CompositeAvailableCapacity-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CHO-MRDC-Indicator ::= ENUMERATED {true, ...}
CHOtrigger ::= ENUMERATED {
   cho-initiation,
   cho-replace,
    . . .
CHOinformation-Req ::= SEQUENCE {
   cho-trigger
                                  CHOtrigger,
   targetNG-RANnodeUEXnAPID
                                  NG-RANnodeUEXnAPID
                                                                                        OPTIONAL
       -- This IE shall be present if the cho-trigger IE is present and set to "CHO-replace" --,
    CHO-EstimatedArrivalProbability CHO-Probability
                                  iE-Extensions
    . . .
```

```
CHOinformation-Reg-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CHOinformation-Ack ::= SEQUENCE {
    requestedTargetCellGlobalID
                                    Target-CGI,
    maxCHOoperations
                                    MaxCHOpreparations
                                                                                                 OPTIONAL,
   iE-Extensions
                                    ProtocolExtensionContainer { { CHOinformation-Ack-ExtIEs} } OPTIONAL,
    . . .
CHOinformation-Ack-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
CHO-Probability ::= INTEGER (1..100)
Connectivity-Support
                           ::= SEQUENCE {
    eNDC-Support
                            ENUMERATED {supported, not-supported, ...},
    iE-Extensions
                            ProtocolExtensionContainer { {Connectivity-Support-ExtIEs} }
                                                                                             OPTIONAL,
    . . .
Connectivity-Support-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
COUNT-PDCP-SN12 ::= SEQUENCE {
    pdcp-SN12
                                    INTEGER (0..4095),
   hfn-PDCP-SN12
                                    INTEGER (0..1048575),
                                    ProtocolExtensionContainer { {COUNT-PDCP-SN12-ExtIEs} } OPTIONAL,
   iE-Extensions
COUNT-PDCP-SN12-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
COUNT-PDCP-SN18 ::= SEQUENCE {
    pdcp-SN18
                                    INTEGER (0..262143),
   hfn-PDCP-SN18
                                    INTEGER (0..16383),
   iE-Extensions
                                    ProtocolExtensionContainer { {COUNT-PDCP-SN18-ExtIEs} } OPTIONAL,
COUNT-PDCP-SN18-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
CPTransportLayerInformation ::= CHOICE {
    endpoint.IPAddress
                                TransportLayerAddress,
    choice-extension
                                ProtocolIE-Single-Container { {CPTransportLayerInformation-ExtIEs} }
CPTransportLayerInformation-ExtIEs XNAP-PROTOCOL-IES ::= {
    { ID id-EndpointIPAddressAndPort
                                            CRITICALITY reject TYPE EndpointIPAddressAndPort
                                                                                                   PRESENCE mandatory },
CriticalityDiagnostics ::= SEQUENCE {
   procedureCode
                                    ProcedureCode
                                                                     OPTIONAL,
    triggeringMessage
                                    TriggeringMessage
                                                                     OPTIONAL,
    procedureCriticality
                                    Criticality
                                                                     OPTIONAL,
    iEsCriticalityDiagnostics
                                    CriticalityDiagnostics-IE-List OPTIONAL,
                                    ProtocolExtensionContainer { {CriticalityDiagnostics-ExtIEs} }
    iE-Extensions
    . . .
CriticalityDiagnostics-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
CriticalityDiagnostics-IE-List ::= SEQUENCE (SIZE (1..maxNrOfErrors)) OF
    SEQUENCE {
                                Criticality,
        iECriticality
                                ProtocolIE-ID,
       iE-ID
                                TypeOfError,
       typeOfError
                                ProtocolExtensionContainer { {CriticalityDiagnostics-IE-List-ExtIEs} } OPTIONAL,
       iE-Extensions
CriticalityDiagnostics-IE-List-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
C-RNTI ::= BIT STRING (SIZE(16))
CyclicPrefix-E-UTRA-DL ::= ENUMERATED {
   normal,
    extended
CyclicPrefix-E-UTRA-UL ::= ENUMERATED {
   normal,
    extended,
```

```
CSI-RSTransmissionIndication ::= ENUMERATED {
    activated.
   deactivated.
-- D
XnuAddressInfoperPDUSession-List ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF XnuAddressInfoperPDUSession-Item
XnUAddressInfoperPDUSession-Item ::= SEQUENCE {
   pduSession-ID
                          PDUSession-ID,
   dataForwardingInfoFromTargetNGRANnode
                                              DataForwardingInfoFromTargetNGRANnode
                                                                                                               OPTIONAL,
   pduSessionResourceSetupCompleteInfo-SNterm
                                                      PDUSessionResourceBearerSetupCompleteInfo-SNterminated
                                                                                                               OPTIONAL,
                          ProtocolExtensionContainer { { XnUAddressInfoperPDUSession-Item-ExtIEs} }
                                                                                                               OPTIONAL,
   iE-Extension
    . . .
XnuAddressInfoperPDUSession-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
 ID id-SecondarydataForwardingInfoFromTarget-List CRITICALITY ignore EXTENSION SecondarydataForwardingInfoFromTarget-List PRESENCE optional}
 ID id-DRB-IDs-takenintouse
                                                  CRITICALITY reject EXTENSION DRB-List
                                                                                                                        PRESENCE optional },
DataForwardingAccepted ::= ENUMERATED {data-forwarding-accepted, ...}
DataForwardingInfoFromTargetNGRANnode ::= SEQUENCE {
    qosFlowsAcceptedForDataForwarding-List
                                                  QoSFLowsAcceptedToBeForwarded-List,
   pduSessionLevelDLDataForwardingInfo
                                                  UPTransportLayerInformation
                                                                                                    OPTIONAL,
   pduSessionLevelULDataForwardingInfo
                                                  UPTransportLayerInformation
                                                                                                    OPTIONAL,
    dataForwardingResponseDRBItemList
                                                  DataForwardingResponseDRBItemList
                                                                                                    OPTIONAL,
                       iE-Extension
                                                                                                   OPTIONAL,
DataForwardingInfoFromTargetNGRANnode-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
QoSFLowsAcceptedToBeForwarded-List ::= SEQUENCE (SIZE(1.. maxnoofQoSFlows)) OF QoSFLowsAcceptedToBeForwarded-Item
QoSFLowsAcceptedToBeForwarded-Item ::= SEQUENCE {
   gosFlowIdentifier
                              QoSFlowIdentifier,
   iE-Extension
                              ProtocolExtensionContainer { QoSFLowsAcceptedToBeForwarded-Item-ExtIEs} } OPTIONAL,
    . . .
QoSFLowsAcceptedToBeForwarded-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
DataforwardingandOffloadingInfofromSource ::= SEQUENCE {
   gosFlowsToBeForwarded
                                  OoSFLowsToBeForwarded-List,
   sourceDRBtoOoSFlowMapping
                                  DRBToOoSFlowMapping-List
                                                                                                      OPTIONAL,
   iE-Extension
                      ProtocolExtensionContainer { {DataforwardingandOffloadingInfofromSource-ExtIEs} } OPTIONAL,
DataforwardingandOffloadingInfofromSource-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
OOSFLowsToBeForwarded-List ::= SEQUENCE (SIZE(1.. maxnoofOoSFlows)) OF OoSFLowsToBeForwarded-Item
OoSFLowsToBeForwarded-Item ::= SEQUENCE {
   gosFlowIdentifier
                              OoSFlowIdentifier,
                              DLForwarding,
   dl-dataforwarding
   ul-dataforwarding
                              ULForwarding,
   iE-Extension
                      ProtocolExtensionContainer { {QOSFLowsToBeForwarded-Item-ExtIEs} } OPTIONAL,
QoSFLowsToBeForwarded-Item-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
{ ID id-ULForwardingProposal
                            CRITICALITY ignore EXTENSION ULForwardingProposal PRESENCE optional },
DataForwardingResponseDRBItemList ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF DataForwardingResponseDRBItem
DataForwardingResponseDRBItem ::= SEQUENCE {
   drb-ID
                      DRB-ID,
   dlForwardingUPTNL UPTransportLayerInformation
                                                                                            OPTIONAL,
   ulForwardingUPTNL UPTransportLayerInformation
                                                                                            OPTIONAL,
                      ProtocolExtensionContainer { {DataForwardingResponseDRBItem-ExtIEs} }
   iE-Extension
                                                                                            OPTIONAL,
DataForwardingResponseDRBItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DataTrafficResources ::= BIT STRING (SIZE(6..17600))
DataTrafficResourceIndication ::= SEQUENCE
   activationSFN
                                  ActivationSFN,
    sharedResourceType
                                  SharedResourceType,
   reservedSubframePattern
                                  ReservedSubframePattern
                                                                                            OPTIONAL,
                      iE-Extension
                                                                                            OPTIONAL,
```

```
DataTrafficResourceIndication-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DAPSRequestInfo ::= SEQUENCE {
   dapsIndicator
                              ENUMERATED {daps-HO-required, ...},
   iE-Extensions
                             ProtocolExtensionContainer { [DAPSRequestInfo-ExtIEs] } OPTIONAL,
   . . .
DAPSRequestInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DAPSResponseInfo-List ::= SEQUENCE (SIZE (1..maxnoofDRBs)) OF DAPSResponseInfo-Item
DAPSResponseInfo-Item ::= SEQUENCE {
   drbID
                             ENUMERATED {daps-HO-accepted, daps-HO-not-accepted, ...},
   dapsResponseIndicator
                             iE-Extensions
    . . .
DAPSResponseInfo-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DeliveryStatus ::= INTEGER (0..4095, ...)
DesiredActNotificationLevel ::= ENUMERATED {none, qos-flow, pdu-session, ue-level, ...}
DefaultDRB-Allowed ::= ENUMERATED {true, false, ...}
DLCountChoice ::= CHOICE {
   count12bits
                          COUNT-PDCP-SN12,
   count18bits
                          COUNT-PDCP-SN18,
   choice-extension
                          ProtocolIE-Single-Container { {DLCountChoice-ExtIEs} }
DLCountChoice-ExtIEs XNAP-PROTOCOL-IES ::= {
DLForwarding
             ::= ENUMERATED {dl-forwarding-proposed, ...}
```

```
DL-GBR-PRB-usage::= INTEGER (0..100)
DL-non-GBR-PRB-usage::= INTEGER (0..100)
DL-Total-PRB-usage::= INTEGER (0..100)
DRB-ID ::= INTEGER (1...32, ...)
DRB-List ::= SEQUENCE (SIZE (1..maxnoofDRBs)) OF DRB-ID
DRB-List-withCause ::= SEQUENCE (SIZE (1..maxnoofDRBs)) OF DRB-List-withCause-Item
DRB-List-withCause-Item ::= SEQUENCE {
               DRB-ID,
    drb-id
    cause
               Cause,
   rLC-Mode RLCMode
                                                    OPTIONAL,
                     ProtocolExtensionContainer { {DRB-List-withCause-Item-ExtIEs} } OPTIONAL,
   iE-Extension
    . . .
DRB-List-withCause-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRB-Number ::= INTEGER (1..32, ...)
DRBsSubjectToDLDiscarding-List ::= SEQUENCE (SIZE (1..maxnoofDRBs)) OF DRBsSubjectToDLDiscarding-Item
DRBsSubjectToDLDiscarding-Item ::= SEQUENCE {
    drbID
                       DRB-ID,
    dlCount
                       DLCountChoice,
    iE-Extension
                       ProtocolExtensionContainer { { DRBsSubjectToDLDiscarding-Item-ExtIEs} } OPTIONAL,
DRBsSubjectToDLDiscarding-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBsSubjectToEarlyStatusTransfer-List ::= SEQUENCE (SIZE (1..maxnoofDRBs)) OF DRBsSubjectToEarlyStatusTransfer-Item
DRBsSubjectToEarlyStatusTransfer-Item ::= SEQUENCE {
    drbID
                       DRB-ID,
    dlCount
                       DLCountChoice,
    iE-Extension
                       ProtocolExtensionContainer { { DRBsSubjectToEarlyStatusTransfer-Item-ExtIEs} } OPTIONAL,
```

```
DRBsSubjectToEarlyStatusTransfer-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBsSubjectToStatusTransfer-List ::= SEQUENCE (SIZE (1..maxnoofDRBs)) OF DRBsSubjectToStatusTransfer-Item
DRBsSubjectToStatusTransfer-Item ::= SEQUENCE {
                       DRB-ID,
    pdcpStatusTransfer-UL DRBBStatusTransferChoice,
    pdcpStatusTransfer-DL DRBBStatusTransferChoice,
                       ProtocolExtensionContainer { {DRBsSubjectToStatusTransfer-Item-ExtIEs} } OPTIONAL,
DRBsSubjectToStatusTransfer-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    { ID id-OldQoSFlowMap-ULendmarkerexpected CRITICALITY reject
                                                                        EXTENSION QoSFlows-List
                                                                                                           PRESENCE optional },
    . . .
DRBBStatusTransferChoice ::= CHOICE {
    pdcp-sn-12bits
                       DRBBStatusTransfer12bitsSN,
   pdcp-sn-18bits
                       DRBBStatusTransfer18bitsSN,
    choice-extension
                           ProtocolIE-Single-Container { {DRBBStatusTransferChoice-ExtIEs} }
DRBBStatusTransferChoice-ExtIEs XNAP-PROTOCOL-IES ::= {
DRBBStatusTransfer12bitsSN ::= SEQUENCE {
   receiveStatusofPDCPSDU BIT STRING (SIZE(1..2048))
                                                                                                OPTIONAL,
    cOUNTValue
                           COUNT-PDCP-SN12,
                           ProtocolExtensionContainer { {DRBBStatusTransfer12bitsSN-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
DRBBStatusTransfer12bitsSN-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBBStatusTransfer18bitsSN ::= SEQUENCE {
   receiveStatusofPDCPSDU BIT STRING (SIZE(1..131072))
                                                                                                OPTIONAL.
    cOUNTValue
                           COUNT-PDCP-SN18,
                           ProtocolExtensionContainer { {DRBBStatusTransfer18bitsSN-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
```

```
DRBBStatusTransfer18bitsSN-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBToOoSFlowMapping-List ::= SEOUENCE (SIZE (1..maxnoofDRBs)) OF DRBToOoSFlowMapping-Item
DRBToQoSFlowMapping-Item ::= SEQUENCE {
   drb-ID
                                DRB-ID,
   gosFlows-List
                                OoSFlows-List,
   rLC-Mode
                                RLCMode
                                                                 OPTIONAL,
                     ProtocolExtensionContainer { {DRBToQoSFlowMapping-Item-ExtIEs} }
   iE-Extension
                                                                                   OPTIONAL,
DRBToOosFlowMapping-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   { ID id-DAPSRequestInfo
                            CRITICALITY ignore
                                                                               PRESENCE optional },
                                                  EXTENSION DAPSRequestInfo
DuplicationActivation ::= ENUMERATED {active, inactive, ...}
Dynamic5QIDescriptor ::= SEQUENCE {
   priorityLevelQoS
                             PriorityLevelOoS,
   packetDelayBudget
                             PacketDelayBudget,
   packetErrorRate
                            PacketErrorRate,
   fiveOI
                            FiveOI
                                                                               OPTIONAL,
                             ENUMERATED {delay-critical, non-delay-critical, ...}
   delayCritical
                                                                               OPTIONAL,
-- This IE shall be present if the GBR QoS Flow Information IE is present in the QoS Flow Level QoS Parameters IE.
   averagingWindow
                            AveragingWindow
                                                                               OPTIONAL,
-- This IE shall be present if the GBR QoS Flow Information IE is present in the QoS Flow Level QoS Parameters IE.
                            MaximumDataBurstVolume
   maximumDataBurstVolume
                                                                               OPTIONAL,
                     iE-Extension
                                                                               OPTIONAL,
Dynamic5OIDescriptor-ExtIEs XNAP-PROTOCOL-EXTENSION ::=
     ID id-CNPacketDelayBudgetDownlink
                                                                                             PRESENCE optional } |
                                       CRITICALITY ignore EXTENSION ExtendedPacketDelayBudget
    ID id-CNPacketDelayBudgetUplink
                                       CRITICALITY ignore EXTENSION ExtendedPacketDelayBudget
                                                                                             PRESENCE optional },
-- E
E-RAB-ID
              ::= INTEGER (0..15, ...)
E-UTRAARFCN ::= INTEGER (0..maxEARFCN)
```

```
E-UTRA-Cell-Identity
                               ::= BIT STRING (SIZE(28))
E-UTRA-CGI ::= SEOUENCE {
   plmn-id
                        PLMN-Identity,
    e-utra-CI
                       E-UTRA-Cell-Identity,
                        ProtocolExtensionContainer { {E-UTRA-CGI-ExtIEs} } OPTIONAL,
   iE-Extension
E-UTRA-CGI-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
E-UTRAFrequencyBandIndicator ::= INTEGER (1..256, ...)
E-UTRAMultibandInfoList ::= SEQUENCE (SIZE(1..maxnoofEUTRABands)) OF E-UTRAFrequencyBandIndicator
E-UTRAPCI ::= INTEGER (0..503, ...)
E-UTRAPRACHConfiguration ::= SEQUENCE {
    rootSequenceIndex
                                            INTEGER (0..837),
    zeroCorrelationIndex
                                            INTEGER (0..15),
   highSpeedFlag
                                            ENUMERATED {true, false, ...},
   prach-FreqOffset
                                            INTEGER (0..94),
    prach-ConfigIndex
                                            INTEGER (0..63)
                                                                                        OPTIONAL,
-- C-ifTDD: This IE shall be present if the EUTRA-Mode-Info IE in the Served Cell Information IE is set to the value "TDD" --
   iE-Extensions
                                            ProtocolExtensionContainer { {E-UTRAPRACHConfiguration-ExtIEs} } OPTIONAL,
E-UTRAPRACHConfiguration-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
E-UTRATransmissionBandwidth ::= ENUMERATED {bw6, bw15, bw25, bw50, bw75, bw100, ..., bw1}
EndpointIPAddressAndPort ::=SEQUENCE {
    endpointIPAddress
                                    TransportLayerAddress,
    portNumber
                                    PortNumber,
    iE-Extensions
                                    ProtocolExtensionContainer { { EndpointIPAddressAndPort-ExtIEs} } OPTIONAL
EndpointIPAddressAndPort-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

352

```
EventTriggered ::= SEQUENCE {
    loggedEventTriggeredConfig
                                        LoggedEventTriggeredConfig,
                       ProtocolExtensionContainer { { EventTriggered-ExtIEs} } OPTIONAL,
    iE-Extensions
EventTriggered-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
EventType ::= ENUMERATED {
    report-upon-change-of-serving-cell,
    report-UE-moving-presence-into-or-out-of-the-Area-of-Interest,
EventTypeTrigger ::= CHOICE {
                                    ENUMERATED {true, ...},
    outOfCoverage
    eventL1
                EventL1,
    choice-Extensions
                           ProtocolIE-Single-Container { {EventTypeTrigger-ExtIEs} }
EventTypeTrigger-ExtIEs XNAP-PROTOCOL-IES ::= {
EventL1 ::= SEQUENCE {
   11Threshold
                                MeasurementThresholdL1LoggedMDT,
   hysteresis
                                Hysteresis,
    timeToTrigger
                                TimeToTrigger,
    iE-Extensions
                        ProtocolExtensionContainer { { EventL1-ExtIEs} } OPTIONAL,
    . . .
EventL1-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
MeasurementThresholdL1LoggedMDT ::= CHOICE
    threshold-RSRP
                                Threshold-RSRP,
                                Threshold-RSRO,
    threshold-RSRO
    . . .
ExpectedActivityPeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181, ...)
ExpectedHOInterval ::= ENUMERATED {
    sec15, sec30, sec60, sec90, sec120, sec180, long-time,
    . . .
ExpectedIdlePeriod ::= INTEGER (1..30|40|50|60|80|100|120|150|180|181, ...)
```

```
ExpectedUEActivityBehaviour ::= SEOUENCE {
    expectedActivityPeriod
                                                 ExpectedActivityPeriod
                                                                                              OPTIONAL,
    expectedIdlePeriod
                                                 ExpectedIdlePeriod
                                                                                              OPTIONAL.
    sourceOfUEActivityBehaviourInformation
                                                 SourceOfUEActivityBehaviourInformation
                                                                                              OPTIONAL,
    iE-Extensions
                        ProtocolExtensionContainer { {ExpectedUEActivityBehaviour-ExtIEs} } OPTIONAL,
ExpectedUEActivityBehaviour-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ExpectedUEBehaviour ::= SEQUENCE {
    expectedUEActivityBehaviour
                                    ExpectedUEActivityBehaviour
                                                                                      OPTIONAL,
    expectedH0Interval
                                    ExpectedH0Interval
                                                                                      OPTIONAL,
    expectedUEMobility
                                     ExpectedUEMobility
                                                                                      OPTIONAL,
                                     ExpectedUEMovingTrajectory
    expectedUEMovingTrajectory
                                                                                      OPTIONAL,
                        ProtocolExtensionContainer { {ExpectedUEBehaviour-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
ExpectedUEBehaviour-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ExpectedUEMobility ::= ENUMERATED {
    stationary,
    mobile,
    . . .
ExpectedUEMovingTrajectory ::= SEQUENCE (SIZE(1..maxnoofCellsUEMovingTrajectory)) OF ExpectedUEMovingTrajectoryItem
ExpectedUEMovingTrajectoryItem ::= SEQUENCE {
    nGRAN-CGI
                            GlobalNG-RANCell-ID.
    timeStayedInCell
                            INTEGER (0..4095)
                                                                                                  OPTIONAL.
    iE-Extensions
                        ProtocolExtensionContainer { {ExpectedUEMovingTrajectoryItem-ExtIEs} }
                                                                                                 OPTIONAL,
    . . .
ExpectedUEMovingTrajectoryItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SourceOfUEActivityBehaviourInformation ::= ENUMERATED {
    subscription-information,
    statistics.
ExtendedRATRestrictionInformation ::= SEQUENCE {
    primaryRATRestriction
                                BIT STRING (SIZE(8, ...)),
    secondaryRATRestriction
                                BIT STRING (SIZE(8, ...)),
                        ProtocolExtensionContainer { {ExtendedRATRestrictionInformation-ExtIEs} } OPTIONAL,
    iE-Extensions
```

```
ExtendedRATRestrictionInformation-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
ExtendedPacketDelayBudget ::= INTEGER (0..65535, ...)
ExtendedSliceSupportList ::= SEQUENCE (SIZE(1..maxnoofExtSliceItems)) OF S-NSSAI
ExtTLAs ::= SEQUENCE (SIZE(1..maxnoofExtTLAs)) OF ExtTLA-Item
ExtTLA-Item ::= SEQUENCE {
   iPsecTLA
                                       TransportLayerAddress
                                                                   OPTIONAL,
                                       GTPTLAs
                                                                       OPTIONAL,
    qTPTransportLayerAddresses
                      ProtocolExtensionContainer { {ExtTLA-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
ExtTLA-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
GTPTLAS ::= SEOUENCE (SIZE(1.. maxnoofGTPTLAS)) OF GTPTLA-Item
GTPTLA-Item ::= SEQUENCE {
    gTPTransportLayerAddresses
                                           TransportLayerAddress,
    iE-Extensions ProtocolExtensionContainer { { GTPTLA-Item-ExtIEs } }
                                                                                 OPTIONAL,
GTPTLA-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- F
FiveGCMobilityRestrictionListContainer ::= OCTET STRING
-- This octets of the OCTET STRING contain the Mobility Restriction List IE as specified in TS 38.413 [5]. --
FiveQI ::= INTEGER (0..255, ...)
FrequencyShift7p5khz ::= ENUMERATED {false, true, ...}
-- G
GBROOSFlowInfo ::= SEOUENCE {
    maxFlowBitRateDL
                               BitRate,
    maxFlowBitRateUL
                               BitRate,
```

```
quaranteedFlowBitRateDL
                             BitRate,
   quaranteedFlowBitRateUL
                             BitRate,
   notificationControl
                             ENUMERATED {notification-requested, ...}
                                                                                 OPTIONAL.
   maxPacketLossRateDL
                             PacketLossRate
                                                                                 OPTIONAL,
   maxPacketLossRateUL
                             PacketLossRate
                                                                                 OPTIONAL.
                             ProtocolExtensionContainer { GBROOSFlowInfo-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
GBRQoSFlowInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
GlobalqNB-ID
              ::= SEOUENCE {
   plmn-id
                  PLMN-Identity,
   gnb-id
                  GNB-ID-Choice,
   iE-Extensions
                      ProtocolExtensionContainer { {GlobalgNB-ID-ExtIEs} } OPTIONAL,
   . . .
GlobalqNB-ID-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
GNB-ID-Choice ::= CHOICE {
   anb-ID
                         BIT STRING (SIZE(22..32)),
                         ProtocolIE-Single-Container { GNB-ID-Choice-ExtIEs} }
   choice-extension
GNB-ID-Choice-ExtIEs XNAP-PROTOCOL-IES ::= {
GNB-RadioResourceStatus ::= SEQUENCE {
   ssbAreaRadioResourceStatus-List
                                          SSBAreaRadioResourceStatus-List,
                                        ProtocolExtensionContainer { GNB-RadioResourceStatus-ExtIEs} },
   iE-Extensions
   . . .
GNB-RadioResourceStatus-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
GlobalngeNB-ID ::= SEQUENCE {
   plmn-id
                  PLMN-Identity,
   enb-id
                  ENB-ID-Choice,
   iE-Extensions
                      ProtocolExtensionContainer { {GlobaleNB-ID-ExtIEs} } OPTIONAL,
GlobaleNB-ID-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
ENB-ID-Choice ::= CHOICE {
    enb-ID-macro
                          BIT STRING (SIZE(20)),
    enb-ID-shortmacro
                        BIT STRING (SIZE(18)),
    enb-ID-longmacro
                     BIT STRING (SIZE(21)),
                      ProtocolIE-Single-Container { {ENB-ID-Choice-ExtIEs} }
    choice-extension
ENB-ID-Choice-ExtIEs XNAP-PROTOCOL-IES ::= {
GlobalNG-RANCell-ID ::= SEQUENCE {
   plmn-id
             PLMN-Identity,
                   NG-RAN-Cell-Identity,
   ng-RAN-Cell-id
                   ProtocolExtensionContainer { {GlobalNG-RANCell-ID-ExtIEs} } OPTIONAL,
   iE-Extensions
GlobalNG-RANCell-ID-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
GlobalNG-RANNode-ID ::= CHOICE {
                          GlobalgNB-ID,
   ng-eNB
                          GlobalngeNB-ID,
                          ProtocolIE-Single-Container { {GlobalNG-RANNode-ID-ExtIEs} }
    choice-extension
GlobalNG-RANNode-ID-ExtIEs XNAP-PROTOCOL-IES ::= {
GTP-TEID
          ::= OCTET STRING (SIZE(4))
GTPtunnelTransportLayerInformation ::= SEQUENCE {
    tnl-address
                      TransportLayerAddress,
    atp-teid
                      GTP-TEID,
                      ProtocolExtensionContainer { {GTPtunnelTransportLayerInformation-ExtIEs} } OPTIONAL,
    iE-Extensions
GTPtunnelTransportLayerInformation-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
GUAMI ::= SEOUENCE {
   plmn-ID
                        PLMN-Identity,
    amf-region-id
                        BIT STRING (SIZE (8)),
    amf-set-id
                        BIT STRING (SIZE (10)),
    amf-pointer
                        BIT STRING (SIZE (6)),
                        ProtocolExtensionContainer { {GUAMI-ExtIEs} } OPTIONAL,
    iE-Extensions
GUAMI-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- H
HandoverReportType ::= ENUMERATED {
   hoTooEarly,
   hoToWrongCell,
    intersystempingpong,
Hysteresis ::=
                                    INTEGER (0..30)
-- I
IABNodeIndication ::= ENUMERATED {true,...}
ImmediateMDT-EUTRA ::= OCTET STRING
ImmediateMDT-NR ::= SEQUENCE {
   measurementsToActivate
                                MeasurementsToActivate,
   mlConfiguration
                                M1Configuration
                                                            OPTIONAL,
   m4Configuration
                                M4Configuration
                                                            OPTIONAL,
   m5Configuration
                                M5Configuration
                                                            OPTIONAL,
                                MDT-Location-Info
   mDT-Location-Info
                                                            OPTIONAL,
   m6Configuration
                                M6Configuration
                                                            OPTIONAL,
    m7Configuration
                                M7Configuration
                                                            OPTIONAL,
    bluetoothMeasurementConfiguration
                                                    BluetoothMeasurementConfiguration
                                                                                                   OPTIONAL,
    wLANMeasurementConfiguration
                                                    WLANMeasurementConfiguration
                                                                                                   OPTIONAL,
    sensorMeasurementConfiguration
                                                    SensorMeasurementConfiguration
                                                                                                   OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { { ImmediateMDT-NR-ExtIEs} } OPTIONAL,
ImmediateMDT-NR-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
InitiatingCondition-FailureIndication ::= CHOICE {
    rRCReestab
                                RRCReestab-initiated,
```

```
rRCSetup
                               RRCSetup-initiated,
    choice-extension
                                   ProtocolIE-Single-Container { {InitiatingCondition-FailureIndication-ExtIEs} }
InitiatingCondition-FailureIndication-ExtIES XNAP-PROTOCOL-IES ::= {
IntendedTDD-DL-ULConfiguration-NR ::= SEQUENCE {
    nrCyclicPrefix
                                    NRCyclicPrefix,
    nrDL-ULTransmissionPeriodicity NRDL-ULTransmissionPeriodicity,
    slotConfiguration-List
                                    SlotConfiguration-List,
    iE-Extensions
                                    ProtocolExtensionContainer { {IntendedTDD-DL-ULConfiguration-NR-ExtIEs} } OPTIONAL,
IntendedTDD-DL-ULConfiguration-NR-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
InterfaceInstanceIndication ::= INTEGER (0..255, ...)
InterfacesToTrace ::= BIT STRING { ng-c(0), x-nc(1), uu(2), f1-c(3), e1(4)} (SIZE(8))
I-RNTI ::= CHOICE {
   i-RNTI-full
                        BIT STRING (SIZE(40)),
   i-RNTI-short
                        BIT STRING (SIZE(24)),
                       ProtocolIE-Single-Container { {I-RNTI-ExtIEs} }
    choice-extension
I-RNTI-ExtIEs XNAP-PROTOCOL-IES ::= {
-- K
-- L
LastVisitedCell-Item ::= CHOICE {
    nG-RAN-Cell
                                    LastVisitedNGRANCellInformation,
    e-UTRAN-Cell
                                    LastVisitedEUTRANCellInformation,
    uTRAN-Cell
                                    LastVisitedUTRANCellInformation,
                                    LastVisitedGERANCellInformation,
    qERAN-Cell
    choice-extension
                                    ProtocolIE-Single-Container { { LastVisitedCell-Item-ExtIEs} }
```

```
LastVisitedCell-Item-ExtIEs XNAP-PROTOCOL-IES ::= {
LastVisitedEUTRANCellInformation ::= OCTET STRING
LastVisitedGERANCellInformation ::= OCTET STRING
LastVisitedNGRANCellInformation ::= OCTET STRING
LastVisitedUTRANCellInformation ::= OCTET STRING
LCID ::= INTEGER (1..32, ...)
Links-to-log ::= ENUMERATED {uplink, downlink, both-uplink-and-downlink, ...}
ListOfCells ::= SEQUENCE (SIZE(1..maxnoofCellsinAoI)) OF CellsinAoI-Item
CellsinAoI-Item ::= SEQUENCE {
    pLMN-Identity
                           PLMN-Identity,
                           NG-RAN-Cell-Identity,
   ng-ran-cell-id
                           ProtocolExtensionContainer { {CellsinAoI-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
CellsinAoI-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ListOfRANNodesinAoI ::= SEQUENCE (SIZE(1.. maxnoofRANNodesinAoI)) OF GlobalNG-RANNodesinAoI-Item
GlobalNG-RANNodesinAoI-Item ::= SEOUENCE {
    global-NG-RAN-Node-ID
                                GlobalNG-RANNode-ID,
    iE-Extensions
                       ProtocolExtensionContainer { {GlobalNG-RANNodesinAoI-Item-ExtIEs} } OPTIONAL,
GlobalnG-RANNodesinAoI-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ListOfTAIsinAoI ::= SEQUENCE (SIZE(1..maxnoofTAIsinAoI)) OF TAIsinAoI-Item
TAIsinAoI-Item ::= SEQUENCE {
    pLMN-Identity
                       PLMN-Identity,
    tAC
                       ProtocolExtensionContainer { {TAIsinAoI-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
```

```
TAISinAoI-Item-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
LocationInformationSNReporting ::= ENUMERATED {
    pSCell,
    . . .
LocationReportingInformation ::= SEQUENCE {
                        EventType,
    eventType
    reportArea
                        ReportArea,
                        AreaOfInterestInformation
    areaOfInterest
                                                             OPTIONAL,
    iE-Extensions
                        ProtocolExtensionContainer { {LocationReportingInformation-ExtIEs} } OPTIONAL,
LocationReportingInformation-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
LoggedMDT-EUTRA ::= SEQUENCE {
    loggingInterval
                                                LoggingInterval,
    loggingDuration
                                                LoggingDuration,
    bluetoothMeasurementConfiguration
                                                BluetoothMeasurementConfiguration
                                                                                         OPTIONAL,
    wLANMeasurementConfiguration
                                                WLANMeasurementConfiguration
                                                                                         OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { {LoggedMDT-EUTRA-ExtIEs} } OPTIONAL,
    . . .
LoggedMDT-EUTRA-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
LoggedEventTriggeredConfig ::= SEQUENCE {
    eventTypeTrigger
                                        EventTypeTrigger,
                        ProtocolExtensionContainer { { LoggedEventTriggeredConfig-ExtIEs} } OPTIONAL,
    iE-Extensions
LoggedEventTriggeredConfig-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
LoggedMDT-NR ::= SEQUENCE {
    loggingInterval
                                        LoggingInterval,
    loggingDuration
                                        LoggingDuration,
    reportType
                                        ReportType,
    bluetoothMeasurementConfiguration
                                        BluetoothMeasurementConfiguration
                                                                                      OPTIONAL,
    wLANMeasurementConfiguration
                                        WLANMeasurementConfiguration
                                                                                      OPTIONAL,
    sensorMeasurementConfiguration
                                        SensorMeasurementConfiguration
                                                                                      OPTIONAL,
    areaScopeOfNeighCellsList
                                        AreaScopeOfNeighCellsList
                                                                                     OPTIONAL,
                                                                                                 iE-Extensions
    ProtocolExtensionContainer { {LoggedMDT-NR-ExtIEs} } OPTIONAL,
```

```
LoggedMDT-NR-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
LoggingInterval ::= ENUMERATED { ms320, ms640, ms1280, ms5120, ms5120, ms10240, ms20480, ms30720, ms40960, ms61440}
LoggingDuration ::= ENUMERATED {m10, m20, m40, m60, m90, m120}
LowerLayerPresenceStatusChange ::= ENUMERATED {
    release-lower-layers,
    re-establish-lower-layers,
    suspend-lower-layers,
    resume-lower-layers
LTEV2XServicesAuthorized ::= SEQUENCE {
    vehicleUE
                        VehicleUE
                                                                             OPTIONAL,
pedestrianUE
                    PedestrianUE
                                                        OPTIONAL,
                        ProtocolExtensionContainer { {LTEV2XServicesAuthorized-ExtIEs} }
   iE-Extensions
                                                                                             OPTIONAL,
    . . .
LTEV2XServicesAuthorized-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
LTEUESidelinkAggregateMaximumBitRate ::= SEQUENCE {
    uESidelinkAggregateMaximumBitRate
                                            BitRate,
                                    ProtocolExtensionContainer { {LTEUESidelinkAggregateMaximumBitRate-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
LTEUESidelinkAggregateMaximumBitRate-ExtIEs XNAP-PROTOCOL-EXTENSION ::=
-- M
M1Configuration ::= SEQUENCE {
    mlreportingTrigger
                                MlReportingTrigger,
    m1thresholdeventA2
                                M1ThresholdEventA2
                                                                OPTIONAL,
-- Included in case of event-triggered, or event-triggered periodic reporting for measurement M1
                                MlPeriodicReporting
    mlperiodicReporting
                                                                OPTIONAL,
-- Included in case of periodic or event-triggered periodic reporting
   iE-Extensions
                                ProtocolExtensionContainer { { M1Configuration-ExtIEs} } OPTIONAL,
```

```
M1Configuration-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
M1PeriodicReporting ::= SEOUENCE {
    reportInterval
                               ReportIntervalMDT,
    reportAmount
                               ReportAmountMDT,
                               ProtocolExtensionContainer { { MlPeriodicReporting-ExtIEs} } OPTIONAL,
    iE-Extensions
MlPeriodicReporting-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
MlReportingTrigger ::= ENUMERATED{
    periodic,
    a2eventtriggered,
    a2eventtriggered-periodic,
    . . .
M1ThresholdEventA2 ::= SEQUENCE {
    measurementThreshold
                         MeasurementThresholdA2,
    iE-Extensions
                           ProtocolExtensionContainer { { M1ThresholdEventA2-ExtIEs} } OPTIONAL,
MlThresholdEventA2-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
M4Configuration ::= SEQUENCE
    m4period
                      M4period,
    m4-links-to-log Links-to-log,
                       ProtocolExtensionContainer { { M4Configuration-ExtIEs} } OPTIONAL,
    iE-Extensions
M4Configuration-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
M4period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }
M5Configuration ::= SEQUENCE {
    m5period
                       M5period,
   m5-links-to-log
                       Links-to-log,
   iE-Extensions
                       ProtocolExtensionContainer { { M5Configuration-ExtIEs} } OPTIONAL,
```

```
M5Configuration-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
M5period ::= ENUMERATED {ms1024, ms2048, ms5120, ms10240, min1, ... }
M6Configuration ::= SEQUENCE {
    m6report-Interval M6report-Interval,
    m6-links-to-log
                       Links-to-log,
                       ProtocolExtensionContainer { { M6Configuration-ExtIEs} } OPTIONAL,
    iE-Extensions
M6Configuration-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
M6report-Interval ::= ENUMERATED { ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, ms20480, ms40960, min1, min6, min12, min30,... }
M7Configuration ::= SEQUENCE {
    m7period
                       M7period,
    m7-links-to-log
                       Links-to-log,
                       ProtocolExtensionContainer { { M7Configuration-ExtIEs} } OPTIONAL,
    iE-Extensions
M7Configuration-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
M7period ::= INTEGER(1..60, ...)
MAC-I ::= BIT STRING (SIZE(16))
MaskedIMEISV
              ::= BIT STRING (SIZE(64))
MaxCHOpreparations ::= INTEGER (1..8, ...)
MaximumDataBurstVolume ::= INTEGER (0..4095, ..., 4096.. 2000000)
MaximumIPdatarate ::= SEOUENCE {
    maxIPrate-UL
                           MaxIPrate,
    iE-Extensions
                       ProtocolExtensionContainer { {MaximumIPdatarate-ExtIEs} } OPTIONAL,
```

```
MaximumIPdatarate-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
MaxIPrate ::= ENUMERATED {
   bitrate64kbs.
   max-UErate,
MBSFNControlRegionLength ::= INTEGER (0..3)
MBSFNSubframeAllocation-E-UTRA ::= CHOICE {
   oneframe
                         BIT STRING (SIZE(6)),
   fourframes
                          BIT STRING (SIZE(24)),
                       ProtocolIE-Single-Container { {MBSFNSubframeAllocation-E-UTRA-ExtIEs} }
   choice-extension
MBSFNSubframeAllocation-E-UTRA-ExtIEs XNAP-PROTOCOL-IES ::= {
    . . .
MBSFNSubframeInfo-E-UTRA ::= SEOUENCE (SIZE(1..maxnoofMBSFNEUTRA)) OF MBSFNSubframeInfo-E-UTRA-Item
MBSFNSubframeInfo-E-UTRA-Item ::= SEQUENCE {
   radioframeAllocationPeriod
                                  ENUMERATED{n1,n2,n4,n8,n16,n32,...},
   radioframeAllocationOffset
                                 INTEGER (0..7, ...),
   subframeAllocation
                                  MBSFNSubframeAllocation-E-UTRA,
                                  ProtocolExtensionContainer { {MBSFNSubframeInfo-E-UTRA-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
MBSFNSubframeInfo-E-UTRA-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
MDT-Activation ::= ENUMERATED
   immediate-MDT-only,
   immediate-MDT-and-Trace,
   logged-MDT-only,
   . . .
MDT-Configuration ::= SEQUENCE {
   mDT-Configuration-NR
                              MDT-Configuration-NR
                                                         OPTIONAL,
   mDT-Configuration-EUTRA
                              MDT-Configuration-EUTRA
                                                         OPTIONAL,
iE-Extensions
                  ProtocolExtensionContainer { { MDT-Configuration-ExtIEs} } OPTIONAL,
    . . .
```

```
MDT-Configuration-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
MDT-Configuration-NR ::= SEQUENCE {
    mdt-Activation
                               MDT-Activation,
    areaScopeOfMDT-NR
                               AreaScopeOfMDT-NR OPTIONAL,
   mDTMode-NR
                               MDTMode-NR,
    signallingBasedMDTPLMNList MDTPLMNList,
                       ProtocolExtensionContainer { { MDT-Configuration-NR-ExtIEs} } OPTIONAL,
    iE-Extensions
MDT-Configuration-NR-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
MDT-Configuration-EUTRA ::= SEQUENCE {
    mdt-Activation
                               MDT-Activation,
    areaScopeOfMDT-EUTRA
                               AreaScopeOfMDT-EUTRA
                                                       OPTIONAL,
    mDTMode-EUTRA
                               MDTMode-EUTRA,
    signallingBasedMDTPLMNList MDTPLMNList,
                       ProtocolExtensionContainer { { MDT-Configuration-EUTRA-ExtIEs} } OPTIONAL,
    iE-Extensions
MDT-Configuration-EUTRA-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
MDT-Location-Info ::= BIT STRING (SIZE (8))
MDTPLMNList ::= SEQUENCE (SIZE(1..maxnoofMDTPLMNs)) OF PLMN-Identity
MDTMode-NR ::= CHOICE {
    immediateMDT
                                ImmediateMDT-NR,
    loggedMDT
                                LoggedMDT-NR,
    mDTMode-NR-Extension
                                    MDTMode-NR-Extension
MDTMode-NR-Extension ::= ProtocolIE-Single-Container {{ MDTMode-NR-ExtensionIE }}
MDTMode-NR-ExtensionIE XNAP-PROTOCOL-IES ::= {
MDTMode-EUTRA ::= CHOICE {
    immediateMDT
                                ImmediateMDT-EUTRA,
   loggedMDT
                                LoggedMDT-EUTRA,
    mDTMode-EUTRA-Extension
                                    MDTMode-EUTRA-Extension
```

```
MDTMode-EUTRA-Extension ::= ProtocolIE-Single-Container {{ MDTMode-EUTRA-ExtensionIE }}
MDTMode-EUTRA-ExtensionIE XNAP-PROTOCOL-IES ::= {
MeasurementsToActivate ::= BIT STRING (SIZE (8))
MeasurementThresholdA2 ::= CHOICE {
    threshold-RSRP
                                Threshold-RSRP,
    threshold-RSRO
                                Threshold-RSRQ,
    threshold-SINR
                                Threshold-SINR,
    choice-extension
                      ProtocolIE-Single-Container { { MeasurementThresholdA2-ExtIEs} }
MeasurementThresholdA2-ExtIEs XNAP-PROTOCOL-IES ::= {
Measurement-ID ::= INTEGER (1..4095,...)
MobilityInformation ::= BIT STRING (SIZE(32))
MobilityParametersModificationRange ::= SEQUENCE {
    handoverTriggerChangeLowerLimit
                                        INTEGER (-20..20),
   handoverTriggerChangeUpperLimit
                                        INTEGER (-20..20),
MobilityParametersInformation ::= SEQUENCE {
    handoverTriggerChange
                                    INTEGER (-20..20),
    . . .
MobilityRestrictionList ::= SEQUENCE {
    serving-PLMN
                                        PLMN-Identity,
    equivalent-PLMNs
                                        SEQUENCE (SIZE(1..maxnoofEPLMNs)) OF PLMN-Identity
                                                                                                  OPTIONAL,
    rat-Restrictions
                                        RAT-RestrictionsList
                                                                                                  OPTIONAL,
    forbiddenAreaInformation
                                        ForbiddenAreaList
                                                                                                  OPTIONAL,
    serviceAreaInformation
                                        ServiceAreaList
                                                                                                  OPTIONAL,
                        ProtocolExtensionContainer { {MobilityRestrictionList-ExtIEs} }
    iE-Extensions
                                                                                                  OPTIONAL,
MobilityRestrictionList-ExtlEs XNAP-PROTOCOL-EXTENSION ::={
 ID id-LastE-UTRANPLMNIdentity
                                                CRITICALITY ignore EXTENSION PLMN-Identity
                                                                                                                    PRESENCE optional
 ID id-CNTypeRestrictionsForServing
                                                CRITICALITY ignore EXTENSION CNTypeRestrictionsForServing
                                                                                                                    PRESENCE optional
 ID id-CNTypeRestrictionsForEquivalent
                                                CRITICALITY ignore EXTENSION CNTypeRestrictionsForEquivalent
                                                                                                                    PRESENCE optional
 ID id-NPNMobilityInformation
                                                CRITICALITY reject EXTENSION NPNMobilityInformation
                                                                                                                    PRESENCE optional
    . . .
```

```
CNTypeRestrictionsForEquivalent ::= SEQUENCE (SIZE(1..maxnoofEPLMNs)) OF CNTypeRestrictionsForEquivalentItem
CNTypeRestrictionsForEquivalentItem ::= SEOUENCE {
   plmn-Identity
                                     PLMN-Identity,
   cn-Type
                                     ENUMERATED {epc-forbidden, fiveGC-forbidden, ...},
                                     iE-Extensions
                                                                                                                      OPTIONAL,
CNTypeRestrictionsForEquivalentItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
CNTypeRestrictionsForServing ::= ENUMERATED {
   epc-forbidden,
RAT-RestrictionsList ::= SEQUENCE (SIZE(1..maxnoofPLMNs)) OF RAT-RestrictionsItem
RAT-RestrictionsItem ::= SEQUENCE {
   plmn-Identity
                                  PLMN-Identity,
   rat-RestrictionInformation
                                  RAT-RestrictionInformation,
   iE-Extensions
                     ProtocolExtensionContainer { {RAT-RestrictionsItem-ExtIEs} } OPTIONAL,
RAT-RestrictionsItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
    { ID id-ExtendedRATRestrictionInformation CRITICALITY ignore EXTENSION ExtendedRATRestrictionInformation
                                                                                                             PRESENCE optional },
   . . .
RAT-RestrictionInformation ::= BIT STRING {e-UTRA (0), nR (1)} (SIZE(8, ...))
ForbiddenAreaList ::= SEOUENCE (SIZE(1..maxnoofPLMNs)) OF ForbiddenAreaItem
ForbiddenAreaItem ::= SEQUENCE {
   plmn-Identity
                      PLMN-Identity,
   forbidden-TACs
                      SEOUENCE (SIZE(1..maxnoofForbiddenTACs)) OF TAC,
                      ProtocolExtensionContainer { {ForbiddenAreaItem-ExtIEs} } OPTIONAL,
   iE-Extensions
ForbiddenAreaItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
```

```
ServiceAreaList ::= SEOUENCE (SIZE(1..maxnoofPLMNs)) OF ServiceAreaItem
ServiceAreaItem ::= SEQUENCE {
         plmn-Identity
                                                                                            PLMN-Identity,
                                                                                            SEQUENCE (SIZE(1..maxnoofAllowedAreas)) OF TAC
         allowed-TACs-ServiceArea
                                                                                                                                                                                                                    OPTIONAL,
         not-allowed-TACs-ServiceArea
                                                                                            SEQUENCE (SIZE(1..maxnoofAllowedAreas)) OF TAC
                                                                                                                                                                                                                    OPTIONAL,
         iE-Extensions
                                                      ProtocolExtensionContainer { {ServiceAreaItem-ExtIEs} }
                                                                                                                                                                                                                    OPTIONAL,
ServiceAreaItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
MR-DC-ResourceCoordinationInfo ::= SEOUENCE {
                  ng-RAN-Node-ResourceCoordinationInfo
                                                                                                                                 NG-RAN-Node-ResourceCoordinationInfo,
                  iE-Extension
                                                                                                                                                   ProtocolExtensionContainer { {MR-DC-ResourceCoordinationInfo-ExtIEs}}OPTIONAL,
                  . . .
MR-DC-ResourceCoordinationInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NG-RAN-Node-ResourceCoordinationInfo ::= CHOICE {
                  eutra-resource-coordination-info
                                                                                                                                          E-UTRA-ResourceCoordinationInfo,
                  nr-resource-coordination-info
                                                                                                                                          NR-ResourceCoordinationInfo
E-UTRA-ResourceCoordinationInfo ::= SEQUENCE {
                  e-utra-cell
                                                                                                                                                   E-UTRA-CGI,
                  ul-coordination-info
                                                                                                                                                   BIT STRING (SIZE (6..4400)),
                  dl-coordination-info
                                                                                                                                                   BIT STRING (SIZE (6..4400)) OPTIONAL,
                 nr-cell
                                                                                                                                                   NR-CGI OPTIONAL,
                  e-utra-coordination-assistance-info
                                                                                                                                 E-UTRA-CoordinationAssistanceInfo OPTIONAL,
                                                                         ProtocolExtensionContainer { {E-UTRA-ResourceCoordinationInfo-ExtIEs} }
                                                                                                                                                                                                                                                      OPTIONAL,
         . . .
{\tt E-UTRA-ResourceCoordinationInfo-Extles} \  \, {\tt XNAP-PROTOCOL-EXTENSION} \  \, ::= \  \, \{ \  \, {\tt Constant} \  \, {\tt 
E-UTRA-CoordinationAssistanceInfo ::= ENUMERATED {coordination-not-required, ...}
NR-ResourceCoordinationInfo ::= SEOUENCE {
                 nr-cell
                                                                                                                                                   NR-CGI,
                  ul-coordination-info
                                                                                                                                                   BIT STRING (SIZE (6..4400)),
                  dl-coordination-info
                                                                                                                                                   BIT STRING (SIZE (6..4400)) OPTIONAL,
                  e-utra-cell
                                                                                                                                                   E-UTRA-CGI OPTIONAL,
                  nr-coordination-assistance-info
                                                                                                                                 NR-CoordinationAssistanceInfo
                                                                                                                                                                                                                    OPTIONAL,
                  iE-Extension
                                                                         ProtocolExtensionContainer { {NR-ResourceCoordinationInfo-ExtIEs} } OPTIONAL,
         . . .
```

ETSI TS 138 423 V16.2.0 (2020-07)

```
NR-ResourceCoordinationInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NR-CoordinationAssistanceInfo ::= ENUMERATED {coordination-not-required, ...}
MessageOversizeNotification ::= SEQUENCE {
    maximumCellListSize
                                                    MaximumCellListSize,
                                ProtocolExtensionContainer { {MessageOversizeNotification-ExtIEs}} OPTIONAL,
    iE-Extension
MessageOversizeNotification-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
MaximumCellListSize ::= INTEGER(1..16384, ...)
-- N
NBIOT-UL-DL-AlignmentOffset ::= ENUMERATED {
    khz-7dot5,
    khz0.
    khz7dot5,
NE-DC-TDM-Pattern ::= SEQUENCE {
        subframeAssignment
                                    ENUMERATED {sa0,sa1,sa2,sa3,sa4,sa5,sa6},
       harqOffset
                                    INTEGER (0..9),
       iE-Extension
                                    ProtocolExtensionContainer { {NE-DC-TDM-Pattern-ExtIEs}}
                                                                                                 OPTIONAL,
NE-DC-TDM-Pattern-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
NeighbourInformation-E-UTRA ::= SEQUENCE (SIZE(1..maxnoofNeighbours)) OF NeighbourInformation-E-UTRA-Item
NeighbourInformation-E-UTRA-Item ::= SEQUENCE {
    e-utra-PCI
                       E-UTRAPCI,
    e-utra-cgi
                        E-UTRA-CGI,
    earfcn
                        E-UTRAARFCN,
    tac
                        TAC,
                        RANAC
                                                                                                   OPTIONAL,
    ranac
    iE-Extensions
                        ProtocolExtensionContainer { {NeighbourInformation-E-UTRA-Item-ExtIEs} } OPTIONAL,
    . . .
NeighbourInformation-E-UTRA-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
    . . .
```

```
NeighbourInformation-NR ::= SEQUENCE (SIZE(1..maxnoofNeighbours)) OF NeighbourInformation-NR-Item
NeighbourInformation-NR-Item ::= SEQUENCE {
    nr-PCI
                                      NRPCI,
    nr-cqi
                                      NR-CGI,
                                      TAC,
    tac
    ranac
                                      RANAC
                                                                                              OPTIONAL,
                                      NeighbourInformation-NR-ModeInfo,
    nr-mode-info
    connectivitySupport
                                      Connectivity-Support,
    measurementTimingConfiguration
                                      OCTET STRING,
    iE-Extensions
                          ProtocolExtensionContainer { {NeighbourInformation-NR-Item-ExtIEs} } OPTIONAL,
NeighbourInformation-NR-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::={
NeighbourInformation-NR-ModeInfo ::= CHOICE {
    fdd-info
                          NeighbourInformation-NR-ModeFDDInfo,
    t.dd-info
                          NeighbourInformation-NR-ModeTDDInfo,
    choice-extension
                          NeighbourInformation-NR-ModeInfo-ExtIEs XNAP-PROTOCOL-IES ::= {
NeighbourInformation-NR-ModeFDDInfo ::= SEQUENCE {
    ul-NR-FreqInfo
                      NRFrequencyInfo,
    dl-NR-FequInfo
                      NRFrequencyInfo,
    ie-Extensions
                      ProtocolExtensionContainer { {NeighbourInformation-NR-ModeFDDInfo-ExtIEs} } OPTIONAL,
    . . .
NeighbourInformation-NR-ModeFDDInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NeighbourInformation-NR-ModeTDDInfo ::= SEQUENCE {
    nr-FregInfo
                      NRFrequencyInfo,
                      ProtocolExtensionContainer { {NeighbourInformation-NR-ModeTDDInfo-ExtIEs} } OPTIONAL,
    ie-Extensions
NeighbourInformation-NR-ModeTDDInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
NID ::= BIT STRING (SIZE(44))
NRCarrierList ::= SEOUENCE (SIZE(1..maxnoofNRSCSs)) OF NRCarrierItem
NRCarrierItem ::= SEOUENCE {
   carrierSCS
                             NRSCS,
   offsetToCarrier
                            INTEGER (0..2199, ...),
   carrierBandwidth
                            INTEGER (0..maxnoofPhysicalResourceBlocks, ...),
   iE-Extension ProtocolExtensionContainer { {NRCarrierItem-ExtIEs} }
                                                                            OPTIONAL,
NRCarrierItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NRCellPRACHConfig ::= OCTET STRING
NG-RAN-Cell-Identity ::= CHOICE {
   nr
                         NR-Cell-Identity,
                         E-UTRA-Cell-Identity,
   e-utra
   choice-extension
                         ProtocolIE-Single-Container { {NG-RAN-Cell-Identity-ExtIEs} }
NG-RAN-Cell-Identity-ExtIEs XNAP-PROTOCOL-IES ::= {
NG-RAN-CellPCI ::= CHOICE {
   nr
                     NRPCI,
                    E-UTRAPCI,
   NG-RAN-CellPCI-ExtIEs XNAP-PROTOCOL-IES ::= {
NG-RANnodeUEXnAPID ::= INTEGER (0.. 4294967295)
NumberofActiveUEs::= INTEGER(0..16777215, ...)
NoofRRCConnections ::= INTEGER (1..65536,...)
NonDynamic5QIDescriptor ::= SEQUENCE {
```

```
fiveOI
                              FiveOI,
   priorityLevelQoS
                             PriorityLevelOoS
                                                                                           OPTIONAL,
   averagingWindow
                             AveragingWindow
                                                                                           OPTIONAL,
   maximumDataBurstVolume
                             MaximumDataBurstVolume
                                                                                           OPTIONAL,
   iE-Extension
                              OPTIONAL,
NonDynamic5QIDescriptor-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-CNPacketDelayBudgetDownlink
                                         CRITICALITY ignore EXTENSION ExtendedPacketDelayBudget PRESENCE optional | |
     ID id-CNPacketDelayBudgetUplink
                                         CRITICALITY ignore EXTENSION ExtendedPacketDelayBudget PRESENCE optional },
    . . .
NRARFCN ::= INTEGER (0.. maxNRARFCN)
NG-eNB-RadioResourceStatus ::= SEOUENCE {
   dL-GBR-PRB-usage
                                             DL-GBR-PRB-usage,
   uL-GBR-PRB-usage
                                             UL-GBR-PRB-usage,
   dL-non-GBR-PRB-usage
                                             DL-non-GBR-PRB-usage,
   uL-non-GBR-PRB-usage
                                            UL-non-GBR-PRB-usage,
   dL-Total-PRB-usage
                                         DL-Total-PRB-usage,
   uL-Total-PRB-usage
                                         UL-Total-PRB-usage,
                                         ProtocolExtensionContainer { { NG-eNB-RadioResourceStatus-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
NG-eNB-RadioResourceStatus-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TNLCapacityIndicator ::= SEQUENCE {
   dLTNLOfferedCapacity
                                         OfferedCapacity,
   dLTNLAvailableCapacity
                                         AvailableCapacity,
   uLTNLOfferedCapacity
                                         OfferedCapacity,
   uLTNLAvailableCapacity
                                         AvailableCapacity,
   iE-Extensions
                                         ProtocolExtensionContainer { { TNLCapacityIndicator-ExtIEs} } OPTIONAL,
    . . .
TNLCapacityIndicator-ExtIEs XNAP-PROTOCOL-EXTENSION ::=
NPN-Broadcast-Information ::= CHOICE {
    snpn-Information
                                     NPN-Broadcast-Information-SNPN,
   pni-npn-Information
                                     NPN-Broadcast-Information-PNI-NPN,
    choice-extension
```

```
NPN-Broadcast-Information-ExtIEs XNAP-PROTOCOL-IES ::= {
NPN-Broadcast-Information-SNPN ::= SEQUENCE
    broadcastSNPNID-List
                              BroadcastSNPNID-List,
   iE-Extension
                              ProtocolExtensionContainer { {NPN-Broadcast-Information-SNPN-ExtIEs} } OPTIONAL,
NPN-Broadcast-Information-SNPN-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NPN-Broadcast-Information-PNI-NPN ::= SEQUENCE {
   broadcastPNI-NPN-ID-Information
                                      BroadcastPNI-NPN-ID-Information,
   iE-Extension
                                      ProtocolExtensionContainer { {NPN-Broadcast-Information-PNI-NPN-ExtIEs} } OPTIONAL,
    . . .
NPN-Broadcast-Information-PNI-NPN-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
NPNMobilityInformation::= CHOICE {
    snpn-mobility-information
                                      NPNMobilityInformation-SNPN,
    pni-npn-mobility-information
                                      NPNMobilityInformation-PNI-NPN,
    choice-extension
                                      NPNMobilityInformation-ExtIEs XNAP-PROTOCOL-IES ::= {
    . . .
NPNMobilityInformation-SNPN ::= SEQUENCE {
    serving-NID
                              ProtocolExtensionContainer { {NPNMobilityInformation-SNPN-ExtIEs} } OPTIONAL,
   iE-Extension
NPNMobilityInformation-SNPN-ExtIES XNAP-PROTOCOL-EXTENSION ::=
NPNMobilityInformation-PNI-NPN ::= SEQUENCE {
                              AllowedPNI-NPN-ID-List
    allowedPNI-NPN-ID-List
                              ProtocolExtensionContainer { {NPNMobilityInformation-PNI-NPN-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
NPNMobilityInformation-PNI-NPN-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
```

```
NPNPagingAssistanceInformation ::= CHOICE {
   pni-npn-Information
                                   NPNPagingAssistanceInformation-PNI-NPN,
   choice-extension
                                   NPNPagingAssistanceInformation-ExtIEs XNAP-PROTOCOL-IES ::= {
NPNPagingAssistanceInformation-PNI-NPN ::= SEQUENCE
   allowedPNI-NPN-ID-List
                          AllowedPNI-NPN-ID-List,
                                ProtocolExtensionContainer { {NPNPagingAssistanceInformation-PNI-NPN-ExtIEs} } OPTIONAL,
   iE-Extension
NPNPagingAssistanceInformation-PNI-NPN-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NPN-Support ::= CHOICE {
   sNPN
                        NPN-Support-SNPN,
   choice-Extensions
                         ProtocolIE-Single-Container { {NPN-Support-ExtIEs} }
NPN-Support-ExtIEs XNAP-PROTOCOL-IES ::= {
NPN-Support-SNPN ::= SEQUENCE {
   nid
   ie-Extension
                     NPN-Support-SNPN-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NR-Cell-Identity
                    ::= BIT STRING (SIZE (36))
NG-RAN-Cell-Identity-ListinRANPagingArea ::= SEQUENCE (SIZE (1..maxnoofCellsinRNA)) OF NG-RAN-Cell-Identity
NR-CGI ::= SEOUENCE {
   plmn-id
                     PLMN-Identity,
   nr-CI
                     NR-Cell-Identity,
   iE-Extension
                     ProtocolExtensionContainer { {NR-CGI-ExtIEs} } OPTIONAL,
NR-CGI-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
NRCyclicPrefix ::= ENUMERATED {normal, extended, ...}
NRDL-ULTransmissionPeriodicity ::= ENUMERATED {ms0p5, ms0p625, ms1, ms1p25, ms2, ms2p5, ms3, ms4, ms5, ms10, ms20, ms40, ms60, ms80, ms100, ms120,
ms140, ms160, ...}
NRFrequencyBand ::= INTEGER (1..1024, ...)
NRFrequencyBand-List ::= SEQUENCE (SIZE(1..maxnoofNRCellBands)) OF NRFrequencyBandItem
NRFrequencyBandItem ::= SEQUENCE {
   nr-frequency-band
                             NRFrequencyBand,
   supported-SUL-Band-List
                             SupportedSULBandList
                                                                                         OPTIONAL,
   iE-Extension
                             ProtocolExtensionContainer { {NRFrequencyBandItem-ExtIEs} }
                                                                                         OPTIONAL,
NRFrequencyBandItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NRFrequencyInfo ::= SEQUENCE +
   nrARFCN
                      NRARFCN,
                      SUL-Information
    sul-information
                                                                              OPTIONAL,
   frequencyBand-List
                          NRFrequencyBand-List,
                      ProtocolExtensionContainer { {NRFrequencyInfo-ExtIEs} }
   iE-Extension
                                                                              OPTIONAL,
NRFrequencyInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    NRMobilityHistoryReport ::= OCTET STRING
NRFrequencyInfoforMDT ::= SEQUENCE {
   nrARFCN
                      NRARFCN,
   frequencyBand-List
                          NRFrequencyBand-List,
                      ProtocolExtensionContainer { {NRFrequencyInfoforMDT-ExtIEs} }
   iE-Extension
                                                                                      OPTIONAL,
NRFrequencyInfoforMDT-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NRModeInfo ::= CHOICE {
                             NRModeInfoFDD,
    fdd
    tdd
                             NRModeInfoTDD
    choice-extension
                             ProtocolIE-Single-Container { {NRModeInfo-ExtIEs} }
```

```
NRModeInfo-ExtIEs XNAP-PROTOCOL-IES ::= {
NRModeInfoFDD ::= SEOUENCE {
    ulNRFrequencyInfo
                              NRFrequencyInfo,
    dlNRFrequencyInfo
                              NRFrequencyInfo,
    ulNRTransmissonBandwidth
                              NRTransmissionBandwidth,
    dlNRTransmissonBandwidth
                              NRTransmissionBandwidth,
    iE-Extension
                       . . .
NRModeInfoFDD-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    { ID id-ULCarrierList
                                  CRITICALITY ignore EXTENSION NRCarrierList
                                                                                    PRESENCE optional },
NRModeInfoTDD ::= SEQUENCE {
    nrFrequencyInfo
                          NRFrequencyInfo,
   nrTransmissonBandwidth NRTransmissionBandwidth,
                           ProtocolExtensionContainer { {NRModeInfoTDD-ExtIEs} }
   iE-Extension
NRModeInfoTDD-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    {ID id-IntendedTDD-DL-ULConfiguration-NR
                                              CRITICALITY ignore EXTENSION IntendedTDD-DL-ULConfiguration-NR PRESENCE optional }
                                                                                                            PRESENCE optional }
    {ID id-TDDULDLConfigurationCommonNR
                                              CRITICALITY ignore EXTENSION TDDULDLConfigurationCommonNR
                                  CRITICALITY ignore EXTENSION NRCarrierList
    { ID id-CarrierList
                                                                                    PRESENCE optional },
NRNRB ::= ENUMERATED { nrb11, nrb18, nrb24, nrb25, nrb31, nrb32, nrb38, nrb51, nrb52, nrb65, nrb66, nrb78, nrb79, nrb93, nrb106, nrb107, nrb121,
nrb132, nrb133, nrb135, nrb160, nrb162, nrb189, nrb216, nrb217, nrb245, nrb264, nrb270, nrb273, ...}
NRPCI ::= INTEGER (0..1007, ...)
NRSCS ::= ENUMERATED { scs15, scs30, scs60, scs120, ...}
NRTransmissionBandwidth ::= SEQUENCE {
    nRSCS NRSCS,
   nRNRB NRNRB,
    iE-Extensions
                              ProtocolExtensionContainer { {NRTransmissionBandwidth-ExtIEs} } OPTIONAL,
NRTransmissionBandwidth-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
NumberOfAntennaPorts-E-UTRA ::= ENUMERATED {an1, an2, an4, ...}
NG-RANTraceID
                           ::=OCTET STRING (SIZE (8))
NonGBRResources-Offered ::= ENUMERATED {true, ...}
NRV2XServicesAuthorized ::= SEQUENCE {
    vehicleUE
                      VehicleUE
                                                                            OPTIONAL,
    pedestrianUE
                       PedestrianUE
                                                                                      OPTIONAL,
    iE-Extensions
                       ProtocolExtensionContainer { {NRV2XServicesAuthorized-ExtIEs} } OPTIONAL,
NRV2XServicesAuthorized-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
NRUESidelinkAggregateMaximumBitRate ::= SEQUENCE {
    uESidelinkAggregateMaximumBitRate
                                            BitRate,
    iE-Extensions
                                    ProtocolExtensionContainer { {NRUESidelinkAggregateMaximumBitRate-ExtIEs} } OPTIONAL,
NRUESidelinkAggregateMaximumBitRate-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- O
OfferedCapacity ::= INTEGER (1.. 16777216,...)
OffsetOfNbiotChannelNumberToEARFCN ::= ENUMERATED {
       minusTen,
        minusNine,
        minusEightDotFive,
        minusEight,
        minusSeven,
        minusSix,
        minusFive,
        minusFourDotFive,
        minusFour,
        minusThree,
        minusTwo,
        minusOne,
        minusZeroDotFive,
        zero,
        one,
        two,
        three,
        threeDotFive,
```

```
four,
       five,
       six,
       seven,
       sevenDotFive,
       eight,
       nine,
        . . .
-- P
PacketDelayBudget ::= INTEGER (0..1023, ...)
PacketErrorRate ::= SEQUENCE {
                      PER-Scalar,
    pER-Scalar
                       PER-Exponent,
    pER-Exponent
                       ProtocolExtensionContainer { {PacketErrorRate-ExtIEs} } OPTIONAL,
   iE-Extensions
PacketErrorRate-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PedestrianUE ::= ENUMERATED {
    authorized,
   not-authorized,
    . . .
PER-Scalar ::= INTEGER (0..9, ...)
PER-Exponent ::= INTEGER (0..9, ...)
PacketLossRate ::= INTEGER (0..1000, ...)
PagingDRX
          ::= ENUMERATED {
   v32,
    v64,
    v128,
   v256,
    ...,
   v512,
   v1024
PagingPriority ::= ENUMERATED {
   priolevel1,
```

```
priolevel2,
   priolevel3,
    priolevel4,
   priolevel5,
   priolevel6,
   priolevel7,
   priolevel8,
    . . .
PartialListIndicator ::= ENUMERATED {partial, ...}
PC5QoSParameters ::= SEQUENCE {
    pc5QoSFlowList
                                PC5QoSFlowList,
   pc5LinkAggregatedBitRates BitRate
                                                     OPTIONAL,
   iE-Extensions
                        ProtocolExtensionContainer { { PC50oSParameters-ExtIEs} }
                                                                                     OPTIONAL,
PC5QoSParameters-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PC5QoSFlowList ::= SEQUENCE (SIZE(1..maxnoofPC5QoSFlows)) OF PC5QoSFlowItem
PC5OoSFlowItem::= SEOUENCE {
   pQI
                                FiveOI,
   pc5FlowBitRates
                                PC5FlowBitRates
                                                             OPTIONAL,
   range
                                Range
                                                             OPTIONAL,
    iE-Extensions
                        ProtocolExtensionContainer { { PC5QoSFlowItem-ExtIEs} } OPTIONAL,
PC5QoSFlowItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PC5FlowBitRates ::= SEOUENCE {
    quaranteedFlowBitRate
                                BitRate,
    maximumFlowBitRate
                                BitRate,
    iE-Extensions
                        ProtocolExtensionContainer { { PC5FlowBitRates-ExtIEs} }
                                                                                     OPTIONAL,
PC5FlowBitRates-ExtIEs XNAP-PROTOCOL-EXTENSION ::=
PDCPChangeIndication ::= CHOICE {
    from-S-NG-RAN-node
                                    ENUMERATED \{s-ng-ran-node-key-update-required, pdcp-data-recovery-required, ...\},
    from-M-NG-RAN-node
                                    ENUMERATED {pdcp-data-recovery-required, ...},
    choice-extension
                                    ProtocolIE-Single-Container { {PDCPChangeIndication-ExtIEs} }
```

```
PDCPChangeIndication-ExtIEs XNAP-PROTOCOL-IES ::= {
PDCPDuplicationConfiguration ::= ENUMERATED {
    configured,
    de-configured,
PDCPSNLength ::= SEQUENCE {
    ulPDCPSNLength
                            ENUMERATED {v12bits, v18bits, ...},
                            ENUMERATED {v12bits, v18bits, ...},
    dlPDCPSNLength
                            ProtocolExtensionContainer { {PDCPSNLength-ExtIEs} }
    iE-Extension
                                                                                        OPTIONAL,
    . . .
PDCPSNLength-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionAggregateMaximumBitRate ::= SEQUENCE {
    downlink-session-AMBR
                                        BitRate,
    uplink-session-AMBR
                                        BitRate,
    iE-Extensions
                                        ProtocolExtensionContainer { {PDUSessionAggregateMaximumBitRate-ExtIEs} } OPTIONAL,
PDUSessionAggregateMaximumBitRate-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSession-List ::= SEQUENCE (SIZE (1.. maxnoofPDUSessions)) OF PDUSession-ID
PDUSession-List-withCause ::= SEQUENCE (SIZE (1.. maxnoofPDUSessions)) OF PDUSession-List-withCause-Item
PDUSession-List-withCause-Item ::= SEOUENCE {
    pduSessionId
                       PDUSession-ID,
                                            OPTIONAL,
    iE-Extension
                        ProtocolExtensionContainer { {PDUSession-List-withCause-Item-ExtIEs} } OPTIONAL,
PDUSession-List-withCause-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
PDUSession-List-withDataForwardingFromTarget ::= SEOUENCE (SIZE (1.. maxnoofPDUSessions)) OF
                                                   PDUSession-List-withDataForwardingFromTarget-Item
PDUSession-List-withDataForwardingFromTarget-Item ::= SEQUENCE {
   pduSessionId
                                  PDUSession-ID,
   dataforwardinginfoTarget
                                  DataForwardingInfoFromTargetNGRANnode,
   iE-Extension
                    ProtocolExtensionContainer { {PDUSession-List-withDataForwardingFromTarget-Item-ExtIEs} } OPTIONAL,
PDUSession-List-withDataForwardingFromTarget-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   { ID id-DRB-IDs-takenintouse
                                  CRITICALITY reject EXTENSION DRB-List PRESENCE optional },
PDUSession-List-withDataForwardingRequest ::= SEQUENCE (SIZE (1.. maxnoofPDUSessions)) OF
                                                   PDUSession-List-withDataForwardingRequest-Item
PDUSession-List-withDataForwardingRequest-Item ::= SEQUENCE {
   pduSessionId
                                     PDUSession-ID,
   dataforwardingInfofromSource
                                     DataforwardingandOffloadingInfofromSource
                                                                                      OPTIONAL,
   dRBtoBeReleasedList
                                     DRBToQoSFlowMapping-List
                                                                                      OPTIONAL,
   iE-Extension
                    . . .
PDUSession-List-withDataForwardingRequest-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
  ******************
-- PDU Session related message level IEs BEGIN
  -- PDU Session Resources Admitted List
  *****************
PDUSessionResourcesAdmitted-List ::= SEOUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourcesAdmitted-Item
PDUSessionResourcesAdmitted-Item ::= SEQUENCE {
   pduSessionId
                                  PDUSession-ID,
   pduSessionResourceAdmittedInfo
                                  PDUSessionResourceAdmittedInfo,
```

```
iE-Extensions
PDUSessionResourcesAdmitted-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionResourceAdmittedInfo ::= SEQUENCE
                                ENUMERATED {true, ...}
   dL-NG-U-TNL-Information-Unchanged
                                                                                    OPTIONAL,
   qosFlowsAdmitted-List
                                QoSFlowsAdmitted-List,
                                QoSFlows-List-withCause
   qosFlowsNotAdmitted-List
                                                                                    OPTIONAL,
   dataForwardingInfoFromTarget
                                DataForwardingInfoFromTargetNGRANnode
                                                                                    OPTIONAL,
                             iE-Extensions
                                                                                    OPTIONAL,
PDUSessionResourceAdmittedInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
{ ID id-SecondarydataForwardingInfoFromTarget-List CRITICALITY ignore EXTENSION SecondarydataForwardingInfoFromTarget-ListPRESENCE optional},
     -- PDU Session Resources Not Admitted List
PDUSessionResourcesNotAdmitted-List ::= SEQUENCE (SIZE (1..maxnoofPDUSessions)) OF PDUSessionResourcesNotAdmitted-Item
PDUSessionResourcesNotAdmitted-Item ::= SEQUENCE {
   pduSessionId
                       PDUSession-ID,
                                       OPTIONAL,
   cause
                 iE-Extension
PDUSessionResourcesNotAdmitted-Item-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   -- PDU Session Resources To Be Setup List
 *****************
PDUSessionResourcesToBeSetup-List ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourcesToBeSetup-Item
```

```
PDUSessionResourcesToBeSetup-Item ::= SEQUENCE {
    pduSessionId
                                    PDUSession-ID.
    s-NSSAI
                                    S-NSSAI.
    pduSessionAMBR
                                    PDUSessionAggregateMaximumBitRate
                                                                                                                OPTIONAL,
    uL-NG-U-TNLatUPF
                                    UPTransportLayerInformation,
    source-DL-NG-U-TNL-Information UPTransportLayerInformation
                                                                                                                OPTIONAL,
    securityIndication
                                    SecurityIndication
                                                                                                                OPTIONAL,
    pduSessionType
                                    PDUSessionType,
    pduSessionNetworkInstance
                                    PDUSessionNetworkInstance
                                                                                                                OPTIONAL,
    gosFlowsToBeSetup-List
                                    OoSFlowsToBeSetup-List,
                                   DataforwardingandOffloadingInfofromSource
    dataforwardinginfofromSource
                                                                                                                OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { { PDUSessionResourcesToBeSetup-Item-ExtIEs} }
                                                                                                                OPTIONAL,
    . . .
PDUSessionResourcesToBeSetup-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
                                           CRITICALITY ignore EXTENSION Additional-UL-NG-U-TNLatUPF-List
 ID id-Additional-UL-NG-U-TNLatUPF-List
                                                                                                             PRESENCE optional }
  ID id-PDUSessionCommonNetworkInstance
                                           CRITICALITY ignore EXTENSION PDUSessionCommonNetworkInstance
                                                                                                             PRESENCE optional}
 ID id-Redundant-UL-NG-U-TNLatUPF
                                            CRITICALITY ignore EXTENSION UPTransportLayerInformation
                                                                                                          PRESENCE optional } |
 ID id-Additional-Redundant-UL-NG-U-TNLatUPF-List CRITICALITY ignore EXTENSION Additional-UL-NG-U-TNLatUPF-List PRESENCE optional}
 ID id-RedundantCommonNetworkInstance
                                           CRITICALITY ignore EXTENSION PDUSessionCommonNetworkInstance PRESENCE optional}
 ID id-RedundantPDUSessionInformation
                                           CRITICALITY ignore EXTENSION RedundantPDUSessionInformation PRESENCE optional },
-- PDU Session Resource Setup Info - SN terminated
  *****************
PDUSessionResourceSetupInfo-SNterminated ::= SEQUENCE {
    uL-NG-U-TNLatUPF
                                    UPTransportLaverInformation.
    pduSessionType
                                    PDUSessionType,
    pduSessionNetworkInstance
                                    PDUSessionNetworkInstance
                                                                                                                      OPTIONAL,
    qosFlowsToBeSetup-List
                                    OoSFlowsToBeSetup-List-Setup-SNterminated,
                                   DataforwardingandOffloadingInfofromSource
    dataforwardinginfofromSource
                                                                                                                      OPTIONAL,
    securityIndication
                                    SecurityIndication
                                                                                                                      OPTIONAL,
                                    ProtocolExtensionContainer { {PDUSessionResourceSetupInfo-SNterminated-ExtIEs} }
    iE-Extensions
                                                                                                                      OPTIONAL,
    . . .
PDUSessionResourceSetupInfo-SNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-SecurityResult
                                               CRITICALITY reject EXTENSION SecurityResult
                                                                                                                PRESENCE optional }
     ID id-PDUSessionCommonNetworkInstance
                                               CRITICALITY ignore EXTENSION PDUSessionCommonNetworkInstance
                                                                                                                PRESENCE optional }
    ID id-DefaultDRB-Allowed
                                               CRITICALITY ignore EXTENSION DefaultDRB-Allowed
                                                                                                                PRESENCE optional}
     ID id-SplitSessionIndicator
                                               CRITICALITY reject EXTENSION SplitSessionIndicator
                                                                                                                PRESENCE optional}
                                                                                                                PRESENCE optional}
    ID id-NonGBRResources-Offered
                                               CRITICALITY ignore EXTENSION NonGBRResources-Offered
     ID id-Redundant-UL-NG-U-TNLatUPF
                                               CRITICALITY ignore EXTENSION UPTransportLayerInformation
                                                                                                                PRESENCE optional}
     ID id-RedundantCommonNetworkInstance
                                               CRITICALITY ignore EXTENSION PDUSessionCommonNetworkInstance
                                                                                                                PRESENCE optional}
     ID id-RedundantPDUSessionInformation
                                               CRITICALITY ignore EXTENSION RedundantPDUSessionInformation
                                                                                                                PRESENCE optional },
    . . .
```

```
OosFlowsToBeSetup-List-Setup-SNterminated ::= SEOUENCE (SIZE(1..maxnoofOosFlows)) OF OosFlowsToBeSetup-List-Setup-Snterminated-Item
OoSFlowsToBeSetup-List-Setup-SNterminated-Item ::= SEOUENCE {
                                  OoSFlowIdentifier,
    gosFlowLevelOoSParameters
                                  QoSFlowLevelQoSParameters,
    offeredGBROoSFlowInfo
                                  GBROoSFlowInfo
                                                                                                                        OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {QoSFlowsToBeSetup-List-Setup-SNterminated-Item-ExtIEs} } OPTIONAL,
QoSFlowsToBeSetup-List-Setup-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-TSCTrafficCharacteristics
                                          CRITICALITY ignore EXTENSION TSCTrafficCharacteristics PRESENCE optional |
     ID id-RedundantOoSFlowIndicator
                                          CRITICALITY ignore EXTENSION RedundantOoSFlowIndicator PRESENCE optional },
    *****************
-- PDU Session Resource Setup Response Info - SN terminated
     PDUSessionResourceSetupResponseInfo-SNterminated ::= SEQUENCE {
   dL-NG-U-TNLatNG-RAN
                                  UPTransportLayerInformation,
   dRBsToBeSetup
                                  DRBsToBeSetupList-SetupResponse-SNterminated
                                                                                 OPTIONAL,
   dataforwardinginfoTarget
                                  DataForwardingInfoFromTargetNGRANnode
                                                                                 OPTIONAL,
                                  OoSFlows-List-withCause
    qosFlowsNotAdmittedList
                                                                                 OPTIONAL,
    securityResult
                                   SecurityResult
                                                                                 OPTIONAL,
                                  ProtocolExtensionContainer { {PDUSessionResourceSetupResponseInfo-SNterminated-ExtIEs} }
   iE-Extensions
                                                                                                                          OPTIONAL,
    . . .
PDUSessionResourceSetupResponseInfo-SNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-Redundant-DL-NG-U-TNLatNG-RAN
                                                     CRITICALITY ignore EXTENSION UPTransportLayerInformation PRESENCE optional |
                                                     CRITICALITY ignore EXTENSION RedundantPDUSessionInformation PRESENCE optional },
     ID id-UsedRSNInformation
DRBsToBeSetupList-SetupResponse-SNterminated ::= SEOUENCE (SIZE(1..maxnoofDRBs)) OF DRBsToBeSetupList-SetupResponse-SNterminated-Item
DRBsToBeSetupList-SetupResponse-SNterminated-Item ::= SEQUENCE {
   drb-ID
                                                          DRB-ID.
   sN-UL-PDCP-UP-TNLInfo
                                                         UPTransportParameters,
   dRB-0oS
                                                         OoSFlowLevelOoSParameters,
   pDCP-SNLength
                                                         PDCPSNLength
                                                                                            OPTIONAL,
   rLC-Mode
                                                         RLCMode,
       uL-Configuration
                                                         ULConfiguration
                                                                                            OPTIONAL,
    secondary-SN-UL-PDCP-UP-TNLInfo
                                                         UPTransportParameters
                                                                                            OPTIONAL,
    duplicationActivation
                                                         DuplicationActivation
                                                                                            OPTIONAL,
    qoSFlowsMappedtoDRB-SetupResponse-SNterminated
                                                          QoSFlowsMappedtoDRB-SetupResponse-SNterminated,
    iE-Extensions
                                  ProtocolExtensionContainer { {DRBsToBeSetupList-SetupResponse-SNterminated-Item-ExtIEs} } OPTIONAL,
```

```
DRBsToBeSetupList-SetupResponse-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-RLCDuplicationInformation
                                                 CRITICALITY ignore EXTENSION RLCDuplicationInformation PRESENCE optional },
QoSFlowsMappedtoDRB-SetupResponse-SNterminated ::= SEQUENCE (SIZE(1..maxnoofQoSFlows)) OF
                                                                QoSFlowsMappedtoDRB-SetupResponse-SNterminated-Item
QoSFlowsMappedtoDRB-SetupResponse-SNterminated-Item ::= SEQUENCE {
   goSFlowIdentifier
                               OoSFlowIdentifier,
   mCGRequestedGBROoSFlowInfo
                               GBROoSFlowInfo
                                                                                         OPTIONAL,
   gosFlowMappingIndication
                               OoSFlowMappingIndication
                                                                                         OPTIONAL,
                    ProtocolExtensionContainer { {OOSFlowsMappedtoDRB-SetupResponse-SNterminated-Item-ExtIEs} }
   iE-Extensions
QoSFlowsMappedtoDRB-SetupResponse-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    -- PDU Session Resource Setup Info - MN terminated
PDUSessionResourceSetupInfo-MNterminated ::= SEQUENCE {
   pduSessionType
                                PDUSessionType,
   dRBsToBeSetup
                               DRBsToBeSetupList-Setup-MNterminated,
   iE-Extensions
                               ProtocolExtensionContainer { {PDUSessionResourceSetupInfo-MNterminated-ExtIEs} } OPTIONAL,
PDUSessionResourceSetupInfo-MNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBsToBeSetupList-Setup-MNterminated ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF DRBsToBeSetupList-Setup-MNterminated-Item
DRBsToBeSetupList-Setup-MNterminated-Item ::= SEQUENCE {
   drb-ID
                                                     DRB-ID,
   mN-UL-PDCP-UP-TNLInfo
                                                     UPTransportParameters,
   rLC-Mode
                                                     RLCMode,
   uL-Configuration
                                                     ULConfiguration
                                                                                     OPTIONAL,
                                                     QoSFlowLevelQoSParameters,
   dRB-0oS
   pDCP-SNLength
                                                     PDCPSNLength
                                                                                     OPTIONAL,
   secondary-MN-UL-PDCP-UP-TNLInfo
                                                     UPTransportParameters
                                                                                     OPTIONAL,
   duplicationActivation
                                                     DuplicationActivation
                                                                                     OPTIONAL,
```

```
goSFlowsMappedtoDRB-Setup-MNterminated
                                        OoSFlowsMappedtoDRB-Setup-MNterminated,
   iE-Extensions
                              ProtocolExtensionContainer { {DRBsToBeSetupList-Setup-MNterminated-Item-ExtIEs} } OPTIONAL,
DRBsToBeSetupList-Setup-MNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-Additional-PDCP-Duplication-TNL-List
                                               CRITICALITY ignore EXTENSION Additional-PDCP-Duplication-TNL-List PRESENCE optional |
   { ID id-RLCDuplicationInformation
                                               CRITICALITY ignore EXTENSION RLCDuplicationInformation PRESENCE optional },
QoSFlowsMappedtoDRB-Setup-MNterminated ::= SEQUENCE (SIZE(1..maxnoofQoSFlows)) OF QoSFlowsMappedtoDRB-Setup-MNterminated-Item
QoSFlowsMappedtoDRB-Setup-MNterminated-Item ::= SEQUENCE {
                              OoSFlowIdentifier,
   goSFlowIdentifier
   goSFlowLevelOoSParameters
                              OoSFlowLevelOoSParameters,
                              OoSFlowMappingIndication
   gosFlowMappingIndication
                                                          OPTIONAL,
                    ProtocolExtensionContainer { {OOSFlowsMappedtoDRB-Setup-MNterminated-Item-ExtIEs} }
   iE-Extensions
                                                                                             OPTIONAL,
   . . .
QoSFlowsMappedtoDRB-Setup-MNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   { ID id-TSCTrafficCharacteristics
                                     CRITICALITY ignore EXTENSION TSCTrafficCharacteristics PRESENCE optional },
   . . .
     **********************
-- PDU Session Resource Setup Response Info - MN terminated
  *****************
PDUSessionResourceSetupResponseInfo-MNterminated ::= SEQUENCE {
   dRBsAdmittedList
                              DRBsAdmittedList-SetupResponse-MNterminated,
   iE-Extensions
                              OPTIONAL,
PDUSessionResourceSetupResponseInfo-MNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   PRESENCE optional },
   . . .
DRBsAdmittedList-SetupResponse-MNterminated ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF DRBsAdmittedList-SetupResponse-MNterminated-Item
DRBsAdmittedList-SetupResponse-MNterminated-Item ::= SEQUENCE {
   drb-ID
                                     DRB-ID,
   sN-DL-SCG-UP-TNLInfo
                                     UPTransportParameters,
   secondary-SN-DL-SCG-UP-TNLInfo
                                     UPTransportParameters
                                                                    OPTIONAL,
   lCID
                                     LCID
                                                                    OPTIONAL,
   iE-Extensions
                              OPTIONAL,
```

```
DRBsAdmittedList-SetupResponse-MNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    { ID id-Additional-PDCP-Duplication-TNL-List
                                                      CRITICALITY ignore EXTENSION Additional-PDCP-Duplication-TNL-List PRESENCE optional },
         -- PDU Session Resource Modification Info - SN terminated
      PDUSessionResourceModificationInfo-SNterminated ::= SEQUENCE {
                                  UPTransportLayerInformation
   uL-NG-U-TNLatUPF
                                                                                 OPTIONAL,
   pduSessionNetworkInstance
                                  PDUSessionNetworkInstance
                                                                                 OPTIONAL,
    qosFlowsToBeSetup-List
                                  OoSFlowsToBeSetup-List-Setup-SNterminated
                                                                                 OPTIONAL,
    dataforwardinginfofromSource
                                  DataforwardingandOffloadingInfofromSource
                                                                                 OPTIONAL,
    qosFlowsToBeModified-List
                                  QoSFlowsToBeSetup-List-Modified-SNterminated
                                                                                 OPTIONAL,
    goSFlowsToBeReleased-List
                                  OoSFlows-List-withCause
                                                                                 OPTIONAL,
    drbsToBeModifiedList
                                  DRBsToBeModified-List-Modified-SNterminated
                                                                                 OPTIONAL,
    dRBsToBeReleased
                                  DRB-List-withCause
                                                                                 OPTIONAL,
    iE-Extensions
                                  ProtocolExtensionContainer { {PDUSessionResourceModificationInfo-SNterminated-ExtIEs} } OPTIONAL,
    . . .
PDUSessionResourceModificationInfo-SNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-PDUSessionCommonNetworkInstance
                                              CRITICALITY ignore EXTENSION PDUSessionCommonNetworkInstance
                                                                                                            PRESENCE optional }
    ID id-DefaultDRB-Allowed
                                              CRITICALITY ignore EXTENSION DefaultDRB-Allowed
                                                                                                            PRESENCE optional }
    ID id-NonGBRResources-Offered
                                              CRITICALITY ignore EXTENSION NonGBRResources-Offered
                                                                                                            PRESENCE optional }
    {ID id-Redundant-UL-NG-U-TNLatUPF
                                              CRITICALITY ignore EXTENSION UPTransportLayerInformation PRESENCE optional \|
                                              CRITICALITY ignore EXTENSION PDUSessionCommonNetworkInstance PRESENCE optional },
    {ID id-RedundantCommonNetworkInstance
    . . .
OOSFlowsToBeSetup-List-Modified-SNterminated ::= SEQUENCE (SIZE(1..maxnoofOoSFlows)) OF OOSFlowsToBeSetup-List-Modified-SNterminated-Item
OosflowsToBeSetup-List-Modified-SNterminated-Item ::= SEQUENCE {
                                  OoSFlowIdentifier,
    gosFlowLevelOoSParameters
                                  OoSFlowLevelOoSParameters
                                                                                     OPTIONAL,
    offeredGBRQoSFlowInfo
                                  GBROoSFlowInfo
                                                                                     OPTIONAL,
                                  QoSFlowMappingIndication
    qosFlowMappingIndication
                                                                                     OPTIONAL,
   iE-Extensions
                                  ProtocolExtensionContainer { {OoSFlowsToBeSetup-List-Modified-SNterminated-Item-ExtIEs} } OPTIONAL.
QosFlowsToBeSetup-List-Modified-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-TSCTrafficCharacteristics
                                          CRITICALITY ignore EXTENSION TSCTrafficCharacteristics PRESENCE optional |
     ID id-RedundantOoSFlowIndicator
                                          CRITICALITY ignore EXTENSION RedundantQoSFlowIndicator PRESENCE optional },
    . . .
```

```
DRBsToBeModified-List-Modified-SNterminated ::= SEOUENCE (SIZE(1..maxnoofDRBs)) OF DRBsToBeModified-List-Modified-SNterminated-Item
DRBsToBeModified-List-Modified-SNterminated-Item ::= SEOUENCE {
   drb-ID
   mN-DL-SCG-UP-TNLInfo
                                        UPTransportParameters
                                                                  OPTIONAL.
   secondary-MN-DL-SCG-UP-TNLInfo
                                        UPTransportParameters
                                                                  OPTIONAL,
   1CID
                                        LCID
                                                                  OPTIONAL,
   rlc-status
                                        RLC-Status
                                                                  OPTIONAL,
   iE-Extensions
                                 ProtocolExtensionContainer { {DRBsToBeModified-List-Modified-SNterminated-Item-ExtIEs} }
                                                                                                                     OPTIONAL,
DRBsToBeModified-List-Modified-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   { ID id-Additional-PDCP-Duplication-TNL-List
                                                   CRITICALITY ignore EXTENSION Additional-PDCP-Duplication-TNL-List PRESENCE optional },
    *******************
  PDU Session Resource Modification Response Info - SN terminated
  PDUSessionResourceModificationResponseInfo-SNterminated ::= SEQUENCE {
   dL-NG-U-TNLatNG-RAN
                                 UPTransportLayerInformation
                                                                                    OPTIONAL,
   dRBsToBeSetup
                                 DRBsToBeSetupList-SetupResponse-SNterminated
                                                                                    OPTIONAL,
   dataforwardinginfoTarget
                                 DataForwardingInfoFromTargetNGRANnode
                                                                                    OPTIONAL,
                                 DRBsToBeModifiedList-ModificationResponse-SNterminated OPTIONAL,
   dRBsToBeModified
                                                                                    OPTIONAL,
   dRBsToBeReleased
                                 DRB-List-withCause
   dataforwardinginfofromSource
                                 DataforwardingandOffloadingInfofromSource
                                                                                    OPTIONAL,
                                 QoSFlows-List-withCause
   gosFlowsNotAdmittedTBAdded
                                                                                    OPTIONAL,
   gosFlowsReleased
                                 OoSFlows-List-withCause
                                                                                    OPTIONAL,
                                 ProtocolExtensionContainer { {PDUSessionResourceModificationResponseInfo-SNterminated-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
PDUSessionResourceModificationResponseInfo-SNterminated-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
                                    CRITICALITY reject EXTENSION DRB-List PRESENCE optional }
     ID id-DRB-IDs-takenintouse
    . . .
DRBsToBeModifiedList-ModificationResponse-SNterminated ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF
                                                                         DRBsToBeModifiedList-ModificationResponse-SNterminated-Item
DRBsToBeModifiedList-ModificationResponse-SNterminated-Item ::= SEQUENCE {
   drb-ID
                                                       DRB-ID,
   sN-UL-PDCP-UP-TNLInfo
                                                       UPTransportParameters
                                                                                                    OPTIONAL.
   dRB-0oS
                                                       OoSFlowLevelOoSParameters
                                                                                                    OPTIONAL,
   qoSFlowsMappedtoDRB-SetupResponse-SNterminated
                                                       QoSFlowsMappedtoDRB-SetupResponse-SNterminated
                                                                                                    OPTIONAL,
   iE-Extensions
                      ProtocolExtensionContainer { {DRBsToBeModifiedList-ModificationResponse-SNterminated-Item-ExtIEs} } OPTIONAL,
```

```
DRBsToBeModifiedList-ModificationResponse-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-Additional-PDCP-Duplication-TNL-List
                                                CRITICALITY ignore EXTENSION Additional-PDCP-Duplication-TNL-List PRESENCE optional |
     ID id-RLCDuplicationInformation
                                                CRITICALITY ignore EXTENSION RLCDuplicationInformation PRESENCE optional },
       -- PDU Session Resource Modification Info - MN terminated
    ----
PDUSessionResourceModificationInfo-MNterminated ::= SEQUENCE {
   pduSessionType
                               PDUSessionType,
   dRBsToBeSetup
                               DRBsToBeSetupList-Setup-MNterminated
                                                                                   OPTIONAL,
                               DRBsToBeModifiedList-Modification-MNterminated
   dRBsToBeModified
                                                                                   OPTIONAL,
   dRBsToBeReleased
                               DRB-List-withCause
                                                                                   OPTIONAL,
   iE-Extensions
                               ProtocolExtensionContainer { {PDUSessionResourceModificationInfo-MNterminated-ExtIEs} } OPTIONAL,
PDUSessionResourceModificationInfo-MNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBsToBeModifiedList-Modification-MNterminated ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF
                                                                         DRBsToBeModifiedList-Modification-MNterminated-Item
DRBsToBeModifiedList-Modification-MNterminated-Item ::= SEQUENCE
   drb-ID
                                                    DRB-ID.
   mN-UL-PDCP-UP-TNLInfo
                                                    UPTransportParameters
                                                                                       OPTIONAL,
   dRB-0oS
                                                    OoSFlowLevelOoSParameters
                                                                                       OPTIONAL,
   secondary-MN-UL-PDCP-UP-TNLInfo
                                                    UPTransportParameters  
                                                                                       OPTIONAL,
   uL-Configuration
                                                    ULConfiguration
                                                                                       OPTIONAL,
   pdcpDuplicationConfiguration
                                                    PDCPDuplicationConfiguration
                                                                                       OPTIONAL,
   duplicationActivation
                                                    DuplicationActivation
                                                                                       OPTIONAL,
   goSFlowsMappedtoDRB-Setup-MNterminated
                                                    OoSFlowsMappedtoDRB-Setup-MNterminated OPTIONAL,
                               ProtocolExtensionContainer { {DRBsToBeModifiedList-Modification-MNterminated-Item-ExtIEs} }
   iE-Extensions
                                                                                                                OPTIONAL,
DRBsToBeModifiedList-Modification-MNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     { ID id-RLCDuplicationInformation
                                                CRITICALITY ignore EXTENSION RLCDuplicationInformation PRESENCE optional },
  *****************
-- PDU Session Resource Modification Response Info - MN terminated
```

```
PDUSessionResourceModificationResponseInfo-MNterminated ::= SEQUENCE {
   dRBsAdmittedList
                                    DRBsAdmittedList-ModificationResponse-MNterminated,
   dRBsReleasedList.
                                    DRB-List
                                                                                                OPTIONAL,
   dRBsNotAdmittedSetupModifyList
                                    DRB-List-withCause
                                                                                                OPTIONAL,
   iE-Extensions
                              ProtocolExtensionContainer { {PDUSessionResourceModificationResponseInfo-MNterminated-ExtIEs} } OPTIONAL,
   . . .
PDUSessionResourceModificationResponseInfo-MNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBsAdmittedList-ModificationResponse-MNterminated ::= SEOUENCE (SIZE(1..maxnoofDRBs)) OF DRBsAdmittedList-ModificationResponse-MNterminated-Item
DRBsAdmittedList-ModificationResponse-MNterminated-Item ::= SEQUENCE {
   drb-ID
                                    DRB-ID,
   sN-DL-SCG-UP-TNLInfo
                                    UPTransportParameters
                                                                   OPTIONAL,
   secondary-SN-DL-SCG-UP-TNLInfo
                                    UPTransportParameters
                                                                   OPTIONAL,
   lCID
                                    LCID
                                                                   OPTIONAL,
   iE-Extensions
                              ProtocolExtensionContainer { {DRBsAdmittedList-ModificationResponse-MNterminated-Item-ExtIEs} } OPTIONAL,
DRBsAdmittedList-ModificationResponse-MNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   -- PDU Session Resource Change Required Info - SN terminated
  ***********************
PDUSessionResourceChangeRequiredInfo-SNterminated ::= SEQUENCE
   dataforwardinginfofromSource DataforwardingandOffloadingInfofromSource
                                                                                              OPTIONAL,
   iE-Extensions
                              ProtocolExtensionContainer { {PDUSessionResourceChangeRequiredInfo-SNterminated-ExtIEs} } OPTIONAL,
PDUSessionResourceChangeRequiredInfo-SNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
  -- PDU Session Resource Change Confirm Info - SN terminated
```

```
PDUSessionResourceChangeConfirmInfo-SNterminated ::= SEQUENCE {
                         DataForwardingInfoFromTargetNGRANnode
  dataforwardinginfoTarget
                                                              OPTIONAL,
  iE-Extensions
                         ProtocolExtensionContainer { { PDUSessionResourceChangeConfirmInfo-SNterminated-ExtIEs} }
                                                                                          OPTIONAL,
PDUSessionResourceChangeConfirmInfo-SNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   . . .
  -- PDU Session Resource Change Required Info - MN terminated
  *****************
PDUSessionResourceChangeRequiredInfo-MNterminated ::= SEQUENCE
  iE-Extensions
                         ProtocolExtensionContainer { {PDUSessionResourceChangeRequiredInfo-MNterminated-ExtIEs} } OPTIONAL,
   . . .
PDUSessionResourceChangeRequiredInfo-MNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   -- PDU Session Resource Change Confirm Info - MN terminated
  ******************
PDUSessionResourceChangeConfirmInfo-MNterminated ::= SEQUENCE {
                         iE-Extensions
   . . .
PDUSessionResourceChangeConfirmInfo-MNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ***********************
-- PDU Session Resource Modification Required Info - SN terminated
```

```
__ **********************
PDUSessionResourceModRqdInfo-SNterminated ::= SEQUENCE {
    dL-NG-U-TNLatNG-RAN
                                   UPTransportLayerInformation
                                                                                   OPTIONAL.
                                   OoSFlows-List-withCause
    goSFlowsToBeReleased-List
                                                                                   OPTIONAL,
    dataforwardinginfofromSource
                                   DataforwardingandOffloadingInfofromSource
                                                                                   OPTIONAL,
    drbsToBeSetupList
                                   DRBsToBeSetup-List-ModRad-SNterminated
                                                                                   OPTIONAL,
    drbsToBeModifiedList
                                   DRBsToBeModified-List-ModRqd-SNterminated
                                                                                   OPTIONAL,
    dRBsToBeReleased
                                   DRB-List-withCause
                                                                                   OPTIONAL,
    iE-Extensions
                                   ProtocolExtensionContainer { {PDUSessionResourceModRqdInfo-SNterminated-ExtIEs} } OPTIONAL,
    . . .
PDUSessionResourceModRqdInfo-SNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBsToBeSetup-List-ModRqd-SNterminated ::= SEOUENCE (SIZE(1..maxnoofDRBs)) OF DRBsToBeSetup-List-ModRqd-SNterminated-Item
DRBsToBeSetup-List-ModRqd-SNterminated-Item ::= SEQUENCE {
    drb-ID
                                                    DRB-ID,
    pDCP-SNLength
                                                    PDCPSNLength
                                                                                                       OPTIONAL,
    sn-UL-PDCP-UPTNLinfo
                                                   UPTransportParameters,
    dRB-OoS
                                                    OoSFlowLevelOoSParameters,
    secondary-SN-UL-PDCP-UP-TNLInfo
                                                    UPTransportParameters
                                                                                                    OPTIONAL,
    duplicationActivation
                                                    DuplicationActivation
                                                                                                    OPTIONAL,
    uL-Configuration
                                                   ULConfiguration
                                                                                                    OPTIONAL,
    goSFlowsMappedtoDRB-ModRgd-SNterminated
                                                   OoSFlowsSetupMappedtoDRB-ModRgd-SNterminated,
    rLC-Mode
                                                    RLCMode,
    iE-Extensions
                                   ProtocolExtensionContainer { | DRBsToBeSetup-List-ModRqd-SNterminated-Item-ExtIEs } } OPTIONAL,
DRBsToBeSetup-List-ModRqd-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    { ID id-Additional-PDCP-Duplication-TNL-List
                                                       CRITICALITY ignore EXTENSION Additional-PDCP-Duplication-TNL-List PRESENCE optional },
OoSFlowsSetupMappedtoDRB-ModRqd-SNterminated ::= SEQUENCE (SIZE(1..maxnoofOoSFlows)) OF
                                                                       QoSFlowsSetupMappedtoDRB-ModRqd-SNterminated-Item
QoSFlowsSetupMappedtoDRB-ModRqd-SNterminated-Item ::= SEQUENCE {
    qoSFlowIdentifier
                                   OoSFlowIdentifier,
                                   GBROoSFlowInfo
    mCGRequestedGBROoSFlowInfo
    iE-Extensions
                       ProtocolExtensionContainer { {QoSFlowsSetupMappedtoDRB-ModRqd-SNterminated-Item-ExtIEs} }
                                                                                                                  OPTIONAL,
    . . .
OosflowsSetupMappedtoDRB-ModRqd-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBsToBeModified-List-ModRqd-SNterminated ::= SEQUENCE (SIZE(1..maxnoofDRBs)) OF DRBsToBeModified-List-ModRqd-SNterminated-Item
```

```
DRBsToBeModified-List-ModRqd-SNterminated-Item ::= SEQUENCE {
   drb-ID
                                               DRB-ID.
   sN-UL-PDCP-UP-TNLInfo
                                               UPTransportParameters
                                                                                              OPTIONAL,
   dRB-OoS
                                               OoSFlowLevelOoSParameters
                                                                                              OPTIONAL.
   secondary-SN-UL-PDCP-UP-TNLInfo
                                               UPTransportParameters
                                                                                              OPTIONAL,
   uL-Configuration
                                               ULConfiguration
                                                                                              OPTIONAL,
   pdcpDuplicationConfiguration
                                               PDCPDuplicationConfiguration
                                                                                              OPTIONAL,
   duplicationActivation
                                               DuplicationActivation
                                                                                              OPTIONAL,
                                           QoSFlowsModifiedMappedtoDRB-ModRqd-SNterminated
   qoSFlowsMappedtoDRB-ModRqd-SNterminated
                                                                                              OPTIONAL,
                                iE-Extensions
   . . .
DRBsToBeModified-List-ModRqd-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    { ID id-Additional-PDCP-Duplication-TNL-List
                                                  CRITICALITY ignore EXTENSION Additional-PDCP-Duplication-TNL-List PRESENCE optional },
   . . .
QoSFlowsModifiedMappedtoDRB-ModRqd-SNterminated ::= SEQUENCE (SIZE(1..maxnoofQoSFlows)) OF
                                                                 QoSFlowsModifiedMappedtoDRB-ModRgd-SNterminated-Item
QoSFlowsModifiedMappedtoDRB-ModRqd-SNterminated-Item ::= SEQUENCE {
   goSFlowIdentifier
                                    OoSFlowIdentifier,
   mCGRequestedGBROoSFlowInfo
                                    GBROoSFlowInfo
                                                                                              OPTIONAL,
                     ProtocolExtensionContainer { {QOSFlowsModifiedMappedtoDRB-ModRqd-SNterminated-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
QoSFlowsModifiedMappedtoDRB-ModRqd-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- PDU Session Resource Modification Confirm Info - SN terminated
     ********************
PDUSessionResourceModConfirmInfo-SNterminated ::= SEQUENCE {
   uL-NG-U-TNLatUPF
                                        UPTransportLayerInformation
                                                                                         OPTIONAL,
   dRBsAdmittedList
                                        DRBsAdmittedList-ModConfirm-SNterminated,
                                        DRB-List-withCause
   dRBsNotAdmittedSetupModifyList
                                                                                         OPTIONAL,
   dataforwardinginfoTarget
                                        DataForwardingInfoFromTargetNGRANnode
                                                                                         OPTIONAL,
   iE-Extensions
                                 OPTIONAL,
   . . .
PDUSessionResourceModConfirmInfo-SNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    { ID id-DRB-IDs-takenintouse
                                    CRITICALITY reject EXTENSION DRB-List PRESENCE optional },
```

```
DRBsAdmittedList-ModConfirm-SNterminated ::= SEOUENCE (SIZE(1..maxnoofDRBs)) OF
                                                                       DRBsAdmittedList-ModConfirm-SNterminated-Item
DRBsAdmittedList-ModConfirm-SNterminated-Item ::= SEQUENCE {
   drb-ID
   mN-DL-CG-UP-TNLInfo
                                              UPTransportParameters
                                                                                       OPTIONAL,
   secondary-MN-DL-CG-UP-TNLInfo
                                              UPTransportParameters
                                                                                       OPTIONAL,
   1CTD
                                              LCTD
                                                                                       OPTIONAL,
                            ProtocolExtensionContainer { {DRBsAdmittedList-ModConfirm-SNterminated-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
DRBsAdmittedList-ModConfirm-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   { ID id-Additional-PDCP-Duplication-TNL-List
                                                CRITICALITY ignore EXTENSION Additional-PDCP-Duplication-TNL-List PRESENCE optional },
  *****************
-- PDU Session Resource Modification Required Info - MN terminated
__ *********************
PDUSessionResourceModRqdInfo-MNterminated ::= SEQUENCE {
   dRBsToBeModified
                               DRBsToBeModified-List-ModRgd-MNterminated
                                                                                  OPTIONAL,
   dRBsToBeReleased
                               DRB-List-withCause
                                                                                     OPTIONAL,
                                ProtocolExtensionContainer { {PDUSessionResourceModRqdInfo-MNterminated-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
PDUSessionResourceModRqdInfo-MNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBsToBeModified-List-ModRqd-MNterminated ::= SEOUENCE (SIZE(1..maxnoofDRBs)) OF DRBsToBeModified-List-ModRqd-MNterminated-Item
DRBsToBeModified-List-ModRqd-MNterminated-Item ::= SEQUENCE {
   drb-ID
                                   DRB-ID.
   sN-DL-SCG-UP-TNLInfo
                                   UPTransportLayerInformation,
                                   UPTransportLayerInformation
   secondary-SN-DL-SCG-UP-TNLInfo
                                                                OPTIONAL,
   lCID
                                   LCID
                                                                OPTIONAL,
   rlc-status
                                   RLC-Status
                                                                OPTIONAL,
   iE-Extensions
                                ProtocolExtensionContainer { {DRBsToBeModified-List-ModRqd-MNterminated-Item-ExtIEs} } OPTIONAL,
DRBsToBeModified-List-ModRqd-MNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
*****************
-- PDU Session Resource Modification Confirm Info - MN terminated
  *******************
PDUSessionResourceModConfirmInfo-MNterminated ::= SEQUENCE {
                               ProtocolExtensionContainer { {PDUSessionResourceModConfirmInfo-MNterminated-ExtIEs} }
   iE-Extensions
                                                                                                              OPTIONAL,
   . . .
PDUSessionResourceModConfirmInfo-MNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- PDU Session Resource Setup Complete Info - SN terminated
__ *********************
PDUSessionResourceBearerSetupCompleteInfo-SNterminated ::= SEQUENCE {
                            SEQUENCE (SIZE(1..maxnoofDRBs)) OF DRBsToBeSetupList-BearerSetupComplete-SNterminated-Item,
   dRBsToBeSetupList
   iE-Extensions
                            ProtocolExtensionContainer { {PDUSessionResourceBearerSetupCompleteInfo-SNterminated-ExtIEs} } OPTIONAL,
PDUSessionResourceBearerSetupCompleteInfo-SNterminated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
DRBsToBeSetupList-BearerSetupComplete-SNterminated-Item ::= SEQUENCE {
   dRB-ID
                            DRB-ID,
   mN-Xn-U-TNLInfoatM
                            UPTransportLayerInformation,
                            ProtocolExtensionContainer { | DRBsToBeSetupList-BearerSetupComplete-SNterminated-Item-ExtIEs} }
   iE-Extensions
                                                                                                                    OPTIONAL,
   . . .
DRBsToBeSetupList-BearerSetupComplete-SNterminated-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   {ID id-Secondary-MN-Xn-U-TNLInfoatM CRITICALITY ignore EXTENSION UPTransportLayerInformation PRESENCE optional},
   . . .
  *****************
-- PDU Session related message level IEs END
__ ********************************
PDUSessionResourceSecondaryRATUsageList ::= SEQUENCE (SIZE(1..maxnoofPDUSessions)) OF PDUSessionResourceSecondaryRATUsageItem
```

```
PDUSessionResourceSecondaryRATUsageItem ::= SEQUENCE {
    pDUSessionID
                                                PDUSession-ID.
    secondaryRATUsageInformation
                                                        SecondaryRATUsageInformation,
   iE-Extensions
                       ProtocolExtensionContainer { {PDUSessionResourceSecondaryRATUsageItem-ExtIEs} } OPTIONAL,
PDUSessionResourceSecondaryRATUsageItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionUsageReport ::= SEQUENCE {
   rATType
                                        ENUMERATED {nr, eutra, ..., nr-unlicensed, e-utra-unlicensed},
   pDUSessionTimedReportList
                                        VolumeTimedReportList,
   iE-Extensions
                                        ProtocolExtensionContainer { {PDUSessionUsageReport-ExtIEs} } OPTIONAL,
PDUSessionUsageReport-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
PDUSessionType ::= ENUMERATED {ipv4, ipv6, ipv4v6, ethernet, unstructured, ...}
PDUSession-ID ::= INTEGER (0..255)
PDUSessionNetworkInstance ::= INTEGER (1..256, ...)
PDUSessionCommonNetworkInstance ::= OCTET STRING
Periodical ::= SEQUENCE {
   iE-Extensions
                       ProtocolExtensionContainer { { Periodical-ExtIEs} } OPTIONAL,
Periodical-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
PLMN-Identity ::= OCTET STRING (SIZE(3))
PCIListForMDT ::= SEQUENCE (SIZE(1.. maxnoofNeighPCIforMDT)) OF NRPCI
PNI-NPN-Restricted-Information ::= ENUMERATED { restriced, not-restricted, ...}
PortNumber ::= BIT STRING (SIZE (16))
PriorityLevelQoS ::= INTEGER (1..127, ...)
ProtectedE-UTRAResourceIndication ::= SEQUENCE {
```

```
activationSFN
                                    ActivationSFN,
    protectedResourceList
                                    ProtectedE-UTRAResourceList,
    mbsfnControlRegionLength
                                    MBSFNControlRegionLength
                                                                                 OPTIONAL.
    pDCCHRegionLength
                                    INTEGER (1..3),
    iE-Extensions
                                    ProtocolExtensionContainer { {ProtectedE-UTRAResourceIndication-ExtIEs} } }
ProtectedE-UTRAResourceIndication-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ProtectedE-UTRAResourceList ::= SEQUENCE (SIZE (1.. maxnoofProtectedResourcePatterns)) OF ProtectedE-UTRAResource-Item
ProtectedE-UTRAResource-Item ::= SEOUENCE {
    resourceType
                                            ENUMERATED {downlinknonCRS, cRS, uplink, ...},
                                            BIT STRING (SIZE(84, ...)),
    intra-PRBProtectedResourceFootprint
    protectedFootprintFrequencyPattern
                                            BIT STRING (SIZE(6..110, ...)),
                                            ProtectedE-UTRAFootprintTimePattern,
    protectedFootprintTimePattern
                                    ProtocolExtensionContainer { {ProtectedE-UTRAResource-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
ProtectedE-UTRAResource-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ProtectedE-UTRAFootprintTimePattern ::= SEQUENCE {
    protectedFootprintTimeperiodicity
                                                INTEGER (1..320, ...),
    protectedFootrpintStartTime
                                                INTEGER (1..20, ...),
    iE-Extensions
                                    ProtocolExtensionContainer { {ProtectedE-UTRAFootprintTimePattern-ExtIEs} } OPTIONAL,
    . . .
ProtectedE-UTRAFootprintTimePattern-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- Q
QoSCharacteristics ::= CHOICE {
    non-dynamic
                                    NonDynamic50IDescriptor,
    dvnamic
                                    Dynamic5QIDescriptor,
    choice-extension
                                    ProtocolIE-Single-Container { {QoSCharacteristics-ExtIEs} }
OoSCharacteristics-ExtIEs XNAP-PROTOCOL-IES ::= {
```

```
OoSFlowIdentifier ::= INTEGER (0..63, ...)
QoSFlowLevelQoSParameters ::= SEQUENCE {
   gos-characteristics
                              OoSCharacteristics,
   allocationAndRetentionPrio AllocationandRetentionPriority,
   qBROoSFlowInfo
                             GBROoSFlowInfo
                                                                                           OPTIONAL,
   relectiveOoS
                             ReflectiveOoSAttribute
                                                                                           OPTIONAL,
   additionalQoSflowInfo
                             ENUMERATED {more-likely, ...}
                                                                                           OPTIONAL,
                             ProtocolExtensionContainer { {QoSFlowLevelQoSParameters-ExtIEs} } OPTIONAL,
   iE-Extensions
QoSFlowLevelQoSParameters-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   {ID id-QoSMonitoringRequest CRITICALITY ignore EXTENSION QosMonitoringRequest PRESENCE optional},
QoSFlowMappingIndication ::= ENUMERATED {
   ul.
   dl,
    . . .
OoSFlowNotificationControlIndicationInfo ::= SEQUENCE (SIZE (1..maxnoofOoSFlows)) OF OoSFlowNotify-Item
OoSFlowNotify-Item ::= SEOUENCE {
   gosFlowIdentifier
                             OoSFlowIdentifier,
                              ENUMERATED {fulfilled, not-fulfilled, ...},
   notificationInformation
                             ProtocolExtensionContainer { {QOSFlowNotificationControlIndicationInfo-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
QoSFlowNotificationControlIndicationInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   . . .
QoSFlows-List ::= SEQUENCE (SIZE (1..maxnoofQoSFlows)) OF QoSFlow-Item
QoSFlow-Item ::= SEQUENCE {
                                 OoSFlowIdentifier,
   qosFlowMappingIndication
                                 QoSFlowMappingIndication
                                                                           OPTIONAL,
   iE-Extension
                      ProtocolExtensionContainer { {QoSFlow-Item-ExtIEs} }
                                                                          OPTIONAL,
QoSFlow-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
OoSFlows-List-withCause ::= SEOUENCE (SIZE (1..maxnoofOoSFlows)) OF OoSFlowwithCause-Item
OoSFlowwithCause-Item ::= SEOUENCE {
                      OoSFlowIdentifier,
   qfi
   cause
                      Cause
                                             OPTIONAL,
                      ProtocolExtensionContainer { {OOSFlowwithCause-Item-ExtIEs} }
   iE-Extension
                                                                                  OPTIONAL.
QoSFlowwithCause-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
OoSParaSetIndex ::= INTEGER (1..8,...)
OoSParaSetNotifyIndex ::= INTEGER (0..8,...)
OoSFlowsAdmitted-List ::= SEOUENCE (SIZE (1..maxnoofOoSFlows)) OF OoSFlowsAdmitted-Item
QoSFlowsAdmitted-Item ::= SEQUENCE {
                                  QoSFlowIdentifier,
                      ProtocolExtensionContainer { {QoSFlowsAdmitted-Item-ExtIEs} }
   iE-Extension
                                                                                  OPTIONAL,
    . . .
OosflowsAdmitted-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
QoSFlowsToBeSetup-List ::= SEQUENCE (SIZE (1..maxnoofQoSFlows)) OF QoSFlowsToBeSetup-Item
OoSFlowsToBeSetup-Item ::= SEOUENCE {
                                  QoSFlowIdentifier,
                                 QoSFlowLevelQoSParameters,
   qosFlowLevelQoSParameters
    e-RAB-ID
                                  E-RAB-ID
                                                                                   OPTIONAL,
                      ProtocolExtensionContainer { QoSFlowsToBeSetup-Item-ExtIEs} } OPTIONAL,
   iE-Extension
    . . .
QoSFlowsToBeSetup-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-TSCTrafficCharacteristics
                                         CRITICALITY ignore EXTENSION TSCTrafficCharacteristics PRESENCE optional}
     ID id-RedundantQoSFlowIndicator
                                         CRITICALITY ignore EXTENSION RedundantQoSFlowIndicator PRESENCE optional },
QoSFlowsUsageReportList ::= SEQUENCE (SIZE(1..maxnoofQoSFlows)) OF QoSFlowsUsageReport-Item
QoSFlowsUsageReport-Item ::= SEQUENCE {
   qosFlowIdentifier
                                     OoSFlowIdentifier,
                                     ENUMERATED {nr, eutra, ..., nr-unlicensed, e-utra-unlicensed},
   rATType
                                     VolumeTimedReportList,
    qoSFlowsTimedReportList
```

```
iE-Extensions
                                     ProtocolExtensionContainer { {OoSFlowsUsageReport-Item-ExtIEs} } OPTIONAL,
OosflowsUsageReport-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
QosMonitoringRequest ::= ENUMERATED {ul, dl, both}
-- R
RACHReportInformation ::= SEQUENCE (SIZE(1.. maxnoofRACHReports)) OF RACHReportList-Item
RACHReportList-Item ::= SEQUENCE {
   rACHReport
                          RACHReportContainer,
   iE-Extensions
                                     . . .
RACHReportList-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RACHReportContainer ::= OCTET STRING
RadioResourceStatus ::= CHOICE {
   ng-eNB-RadioResourceStatus NG-eNB-RadioResourceStatus,
   qNB-RadioResourceStatus
                                 GNB-RadioResourceStatus
   choice-extension
                              ProtocolIE-Single-Container { { RadioResourceStatus-ExtIEs} }
RadioResourceStatus-ExtIEs XNAP-PROTOCOL-IES ::= {
RANAC ::= INTEGER (0..255)
RANAreaID ::= SEQUENCE {
   tAC
                      TAC,
   rANAC
                      RANAC
                                                                       OPTIONAL,
                      ProtocolExtensionContainer { {RANAreaID-ExtIEs} } OPTIONAL,
   iE-Extensions
RANAreaID-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RANAreaID-List ::= SEQUENCE (SIZE(1..maxnoofRANAreasinRNA)) OF RANAreaID
```

```
Range ::= ENUMERATED {m50, m80, m180, m200, m350, m400, m500, m700, m1000, ...}
RANPagingArea ::= SEQUENCE {
   pLMN-Identity
                           PLMN-Identity,
   rANPagingAreaChoice
                           RANPagingAreaChoice,
   iE-Extensions
                           ProtocolExtensionContainer { {RANPagingArea-ExtIEs} } OPTIONAL,
RANPagingArea-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RANPagingAreaChoice ::= CHOICE {
    cell-List
                 NG-RAN-Cell-Identity-ListinRANPagingArea,
   rANAreaID-List
                       RANAreaID-List,
    choice-extension ProtocolIE-Single-Container { {RANPagingAreaChoice-ExtIEs} }
RANPagingAreaChoice-ExtIEs XNAP-PROTOCOL-IES ::= {
RANPagingAttemptInfo ::= SEQUENCE {
    pagingAttemptCount
                                        INTEGER (1..16, ...),
    intendedNumberOfPagingAttempts
                                        INTEGER (1..16, ...),
                                        ENUMERATED {same, changed, ...} OPTIONAL,
    nextPagingAreaScope
                           ProtocolExtensionContainer { {RANPagingAttemptInfo-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
RANPagingAttemptInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
                                ENUMERATED {
RANPagingFailure
                      ::=
    true,
    . . .
RedundantQoSFlowIndicator ::= ENUMERATED {true, false}
RedundantPDUSessionInformation ::= SEOUENCE {
   rSN
   iE-Extensions
                       ProtocolExtensionContainer { RedundantPDUSessionInformation-ExtIEs} } OPTIONAL,
RedundantPDUSessionInformation-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
RSN ::= ENUMERATED {v1, v2, ...}
ReferenceID ::= INTEGER (1...64, ...) -- This IE may need to be refined.
ReflectiveOoSAttribute ::= ENUMERATED {subject-to-reflective-OoS, ...}
ReportAmountMDT ::= ENUMERATED{r1, r2, r4, r8, r16, r32, r64, infinity, ...}
ReportArea ::= ENUMERATED {
    cell,
    . . .
ReportIntervalMDT ::= ENUMERATED {ms120, ms240, ms480, ms640, ms1024, ms2048, ms5120, ms10240, min1, min6, min12, min30, min60, ...}
ReportType ::= CHOICE {
                                Periodical,
    periodical
    eventTriggered
                                EventTriggered,
ReportCharacteristics ::= BIT STRING(SIZE(32))
ReportingPeriodicity ::= ENUMERATED {
    half-thousand-ms,
    one-thousand-ms,
    two-thousand-ms,
    five-thousand-ms,
    ten-thousand-ms,
RegistrationRequest ::= ENUMERATED {start, stop, add, ... }
RequestReferenceID ::= INTEGER (1..64, ...)
ReservedSubframePattern ::= SEQUENCE {
    subframeType
                                    ENUMERATED {mbsfn, non-mbsfn, ...},
    reservedSubframePattern
                                    BIT STRING (SIZE(10..160)),
    mbsfnControlRegionLength
                                    MBSFNControlRegionLength
                                    ProtocolExtensionContainer { {ReservedSubframePattern-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
ReservedSubframePattern-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
ResetRequestTypeInfo ::= CHOICE {
    fullReset
                        ResetRequestTypeInfo-Full,
    partialReset
                        ResetRequestTypeInfo-Partial,
    choice-extension
                        ProtocolIE-Single-Container { {ResetRequestTypeInfo-ExtIEs} }
ResetRequestTypeInfo-ExtIEs XNAP-PROTOCOL-IES ::= {
ResetRequestTypeInfo-Full ::= SEQUENCE {
                                    ProtocolExtensionContainer { {ResetRequestTypeInfo-Full-ExtIEs} } OPTIONAL,
    iE-Extension
ResetRequestTypeInfo-Full-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ResetRequestTypeInfo-Partial ::= SEQUENCE {
    ue-contexts-ToBeReleasedList
                                    ResetRequestPartialReleaseList,
                                    ProtocolExtensionContainer { {ResetRequestTypeInfo-Partial-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
ResetRequestTypeInfo-Partial-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ResetRequestPartialReleaseList ::= SEQUENCE (SIZE(1..maxnoofUEContexts)) OF ResetRequestPartialReleaseItem
ResetRequestPartialReleaseItem ::= SEQUENCE {
                                                NG-RANnodeUEXnAPID
    ng-ran-node1UEXnAPID
                                                                            OPTIONAL,
    ng-ran-node2UEXnAPID
                                                NG-RANnodeUEXnAPID
                                                                            OPTIONAL,
   iE-Extensions
                                            ProtocolExtensionContainer { {ResetRequestPartialReleaseItem-ExtIEs} } OPTIONAL,
ResetRequestPartialReleaseItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ResetResponseTypeInfo ::= CHOICE {
    fullReset
                       ResetResponseTypeInfo-Full,
    partialReset
                        ResetResponseTypeInfo-Partial,
    choice-extension ProtocolIE-Single-Container { {ResetResponseTypeInfo-ExtIEs} }
ResetResponseTypeInfo-ExtIEs XNAP-PROTOCOL-IES ::= {
    . . .
```

```
ResetResponseTypeInfo-Full ::= SEQUENCE {
    iE-Extension
                                    ProtocolExtensionContainer { {ResetResponseTypeInfo-Full-ExtIEs} } OPTIONAL,
    . . .
ResetResponseTypeInfo-Full-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ResetResponseTypeInfo-Partial ::= SEQUENCE {
    ue-contexts-AdmittedToBeReleasedList
                                            ResetResponsePartialReleaseList,
                                    ProtocolExtensionContainer { ResetResponseTypeInfo-Partial-ExtIEs} } OPTIONAL,
    iE-Extension
ResetResponseTypeInfo-Partial-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ResetResponsePartialReleaseList ::= SEQUENCE (SIZE(1..maxnoofUEContexts)) OF ResetResponsePartialReleaseItem
ResetResponsePartialReleaseItem ::= SEQUENCE {
    ng-ran-node1UEXnAPID
                                                NG-RANnodeUEXnAPID
                                                                        OPTIONAL,
    ng-ran-node2UEXnAPID
                                                NG-RANnodeUEXnAPID
                                                                         OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { ResetResponsePartialReleaseItem-ExtIEs} } OPTIONAL,
    . . .
ResetResponsePartialReleaseItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RLCMode ::= ENUMERATED {
   rlc-am,
    rlc-um-bidirectional,
   rlc-um-unidirectional-ul,
   rlc-um-unidirectional-dl,
RLC-Status ::= SEQUENCE {
    reestablishment-Indication Reestablishment-Indication,
                                    ProtocolExtensionContainer { {RLC-Status-ExtIEs} } OPTIONAL,
    iE-Extensions
RLC-Status-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RLCDuplicationInformation ::=
                                    SEQUENCE {
    rLCDuplicationStateList
                                    RLCDuplicationStateList,
```

```
rLC-PrimaryIndicator
                                ENUMERATED {true, false}
                                                                OPTIONAL,
    iE-Extensions
                                    ProtocolExtensionContainer { {RLCDuplicationInformation-ItemExtIEs} } OPTIONAL
RLCDuplicationInformation-ItemExtIEs
                                       XNAP-PROTOCOL-EXTENSION ::= {
RLCDuplicationStateList ::=
                                SEQUENCE (SIZE(1..maxnoofRLCDuplicationstate)) OF RLCDuplicationState-Item
RLCDuplicationState-Item ::=
                                SEQUENCE {
    duplicationState
                                ENUMERATED {active, inactive, ...},
    iE-Extensions ProtocolExtensionContainer { {RLCDuplicationState-ItemExtIEs } }
                                                                                        OPTIONAL,
RLCDuplicationState-ItemExtIEs XNAP-PROTOCOL-EXTENSION ::= {
Reestablishment-Indication ::= ENUMERATED {
   reestablished,
RFSP-Index ::= INTEGER (1..256)
RRCConfigIndication ::= ENUMERATED {
    full-config,
    delta-config,
    . . .
RRCConnections::= SEQUENCE {
    noofRRCConnections
                                            NoofRRCConnections,
    availableRRCConnectionCapacityValue AvailableRRCConnectionCapacityValue,
                                ProtocolExtensionContainer { { RRCConnections-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
RRCConnections-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RRCReestab-initiated ::= SEQUENCE {
    failureCellPCI
                     NG-RAN-CellPCI
                                       ,-- This IE shall be present if the UE RLF Report Container IE is absent
                     GlobalNG-RANCell-ID, -- This IE shall be present if the UE RLF Report Container IE is absent
    reestabCellCGI
    c-RNTI
                      C-RNTI, -- This IE shall be present if the UE RLF Report Container IE is absent
    shortMAC-I
                      MAC-I, -- This IE shall be present if the UE RLF Report Container IE is absent
                                UERLFReportContainer
                                                                OPTIONAL,
    uERLFReportContainer
                            ProtocolExtensionContainer { { RRCReestab-initiated-ExtIEs} } OPTIONAL,
    iE-Extensions
```

```
RRCReestab-initiated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RRCSetup-initiated ::= SEQUENCE {
    uERLFReportContainer UERLFReportContainer
                                                            OPTIONAL,
                           ProtocolExtensionContainer { { RRCSetup-initiated-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
RRCSetup-initiated-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
RRCResumeCause ::= ENUMERATED {
    rna-Update,
-- S
SecondarydataForwardingInfoFromTarget-Item::= SEQUENCE {
    secondarydataForwardingInfoFromTarget
                                                        DataForwardingInfoFromTargetNGRANnode,
                       ProtocolExtensionContainer { { SecondarydataForwardingInfoFromTarget-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
SecondarydataForwardingInfoFromTarget-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SecondarydataForwardingInfoFromTarget-List ::= SEQUENCE (SIZE(1..maxnoofMultiConnectivityMinusOne)) OF SecondarydataForwardingInfoFromTarget-Item
SCGConfigurationQuery ::= ENUMERATED {true, ...}
SecondaryRATUsageInformation ::= SEQUENCE {
    pDUSessionUsageReport
                               PDUSessionUsageReport
                                                                    OPTIONAL,
                                                                    OPTIONAL,
    qosFlowsUsageReportList
                               QoSFlowsUsageReportList
                               ProtocolExtensionContainer { {SecondaryRATUsageInformation-ExtIEs} } OPTIONAL,
    iE-Extension
    . . .
SecondaryRATUsageInformation-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
SecurityIndication ::= SEQUENCE {
    integrityProtectionIndication
                                            ENUMERATED {required, preferred, not-needed, ...},
                                            ENUMERATED {required, preferred, not-needed, ...},
    confidentialityProtectionIndication
```

ServedCellInformation-E-UTRA ::= SEQUENCE {

```
MaximumIPdatarate
    maximumIPdatarate
                                                                                                        OPTIONAL,
-- This IE shall be present if the Integrity Protection IE within the Security Indication IE is present and set to "required" or "preferred". --
   iE-Extensions
                                            ProtocolExtensionContainer { {SecurityIndication-ExtIEs} } OPTIONAL,
SecurityIndication-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SecurityResult ::= SEQUENCE {
    integrityProtectionResult
                                            ENUMERATED {performed, not-performed, ...},
    confidentialityProtectionResult
                                            ENUMERATED {performed, not-performed, ...},
    iE-Extensions
                                            ProtocolExtensionContainer { {SecurityResult-ExtIEs} } OPTIONAL,
SecurityResult-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SensorMeasurementConfiguration ::= SEQUENCE {
    sensorMeasConfig
                                    SensorMeasConfig,
                                    SensorMeasConfigNameList
    sensorMeasConfigNameList
                                                                        OPTIONAL,
   iE-Extensions
                        ProtocolExtensionContainer { { SensorMeasurementConfiguration-ExtIEs } } OPTIONAL,
SensorMeasurementConfiguration-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    . . .
SensorMeasConfigNameList ::= SEQUENCE (SIZE(1..maxnoofSensorName)) OF SensorName
SensorMeasConfig::= ENUMERATED {setup,...}
SensorName ::= SEOUENCE {
    uncompensatedBarometricConfig ENUMERATED {true, ...}
                                                                   OPTIONAL,
    ueSpeedConfig
                                    ENUMERATED {true, ...}
                                                                   OPTIONAL,
    ueOrientationConfig
                                    ENUMERATED {true, ...}
                                                                   OPTIONAL,
    iE-Extensions
                                ProtocolExtensionContainer { {SensorNameConfig-ExtIEs} } OPTIONAL,
SensorNameConfig-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
-- Served Cells E-UTRA IEs
```

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

OPTIONAL,

```
e-utra-pci
                                            E-UTRAPCI,
    e-utra-cgi
                                            E-UTRA-CGI,
                                            TAC.
    tac
    ranac
                                            RANAC
    broadcast.PLMNs
                                            SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF ServedCellInformation-E-UTRA-perBPLMN,
    e-utra-mode-info
                                            ServedCellInformation-E-UTRA-ModeInfo,
    numberofAntennaPorts
                                            NumberOfAntennaPorts-E-UTRA
    prach-configuration
                                            E-UTRAPRACHConfiguration
   mBSFNsubframeInfo
                                            MBSFNSubframeInfo-E-UTRA
    multibandInfo
                                            E-UTRAMultibandInfoList
                                            ENUMERATED {not-broadcast, broadcast, ...}
    freqBandIndicatorPriority
    bandwidthReducedSI
                                            ENUMERATED {scheduled, ...}
    protectedE-UTRAResourceIndication
                                            ProtectedE-UTRAResourceIndication
    iE-Extensions
                                ProtocolExtensionContainer { {ServedCellInformation-E-UTRA-ExtIEs} }
                                                                                                                  OPTIONAL.
ServedCellInformation-E-UTRA-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
                                                                                             PRESENCE optional },
    { ID id-BPLMN-ID-Info-EUTRA
                                    CRITICALITY ignore EXTENSION BPLMN-ID-Info-EUTRA
    . . .
ServedCellInformation-E-UTRA-perBPLMN ::= SEOUENCE {
    plmn-id
                            PLMN-Identity,
    iE-Extensions
                            ProtocolExtensionContainer { {ServedCellInformation-E-UTRA-perBPLMN-ExtIEs} } OPTIONAL,
ServedCellInformation-E-UTRA-perBPLMN-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ServedCellInformation-E-UTRA-ModeInfo ::= CHOICE {
    fdd
                        ServedCellInformation-E-UTRA-FDDInfo,
    t.dd
                        ServedCellInformation-E-UTRA-TDDInfo,
                        ProtocolIE-Single-Container{ {ServedCellInformation-E-UTRA-ModeInfo-ExtIEs} }
    choice-extension
ServedCellInformation-E-UTRA-ModeInfo-ExtIEs XNAP-PROTOCOL-IES ::= {
ServedCellInformation-E-UTRA-FDDInfo ::= SEQUENCE {
   ul-earfcn
                        E-UTRAARFCN,
   dl-earfcn
                        E-UTRAARFCN,
    ul-e-utraTxBW
                        E-UTRATransmissionBandwidth,
    dl-e-utraTxBW
                        E-UTRATransmissionBandwidth,
                        ProtocolExtensionContainer { {ServedCellInformation-E-UTRA-FDDInfo-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
```

```
ServedCellInformation-E-UTRA-FDDInfo-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
     PRESENCE optional |
                                                                                                      PRESENCE optional).
    ServedCellInformation-E-UTRA-TDDInfo ::= SEOUENCE {
   earfcn
                       E-UTRAARFCN,
   e-utraTxBW
                       E-UTRATransmissionBandwidth,
                       ENUMERATED {sa0,sa1,sa2,sa3,sa4,sa5,sa6,...},
   subframeAssignmnet
   specialSubframeInfo
                       SpecialSubframeInfo-E-UTRA,
                       ProtocolExtensionContainer { {ServedCellInformation-E-UTRA-TDDInfo-ExtIEs} } OPTIONAL,
   iE-Extensions
ServedCellInformation-E-UTRA-TDDInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::=
     PRESENCE optional |
   { ID id-NBIoT-UL-DL-AlignmentOffset
                                           CRITICALITY reject EXTENSION NBIOT-UL-DL-AlignmentOffset
                                                                                                      PRESENCE optional },
   . . .
ServedCells-E-UTRA ::= SEOUENCE (SIZE (1..maxnoofCellsinNG-RANnode)) OF ServedCells-E-UTRA-Item
ServedCells-E-UTRA-Item ::= SEQUENCE
   served-cell-info-E-UTRA
                           ServedCellInformation-E-UTRA,
   neighbour-info-NR
                          NeighbourInformation-NR
                                                                          OPTIONAL,
                          NeighbourInformation-E-UTRA
   neighbour-info-E-UTRA
                                                                          OPTIONAL,
                    ProtocolExtensionContainer { {ServedCells-E-UTRA-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
ServedCells-E-UTRA-Item-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
ServedCellsToUpdate-E-UTRA ::= SEOUENCE {
   served-Cells-ToAdd-E-UTRA
                              ServedCells-E-UTRA
                                                                                            OPTIONAL,
   served-Cells-ToModify-E-UTRA
                              ServedCells-ToModify-E-UTRA
                                                                                            OPTIONAL,
   served-Cells-ToDelete-E-UTRA
                              SEQUENCE (SIZE (1..maxnoofCellsinNG-RANnode)) OF E-UTRA-CGI
                                                                                            OPTIONAL,
iE-Extensions
                          ProtocolExtensionContainer { {ServedCellsToUpdate-E-UTRA-ExtIEs} }
ServedCellsToUpdate-E-UTRA-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
ServedCells-ToModify-E-UTRA ::= SEQUENCE (SIZE (1..maxnoofCellsinNG-RANnode)) OF ServedCells-ToModify-E-UTRA-Item
ServedCells-ToModify-E-UTRA-Item ::= SEQUENCE {
```

```
old-ECGI
                          E-UTRA-CGI.
   served-cell-info-E-UTRA
                          ServedCellInformation-E-UTRA,
   neighbour-info-NR
                          NeighbourInformation-NR
                                                                               OPTIONAL.
   neighbour-info-E-UTRA
                          NeighbourInformation-E-UTRA
                                                                               OPTIONAL,
   deactivation-indication
                          ENUMERATED {deactivated, ...}
                                                                               OPTIONAL.
                   ProtocolExtensionContainer { {Served-cells-ToModify-E-UTRA-Item-ExtIEs} } OPTIONAL,
   iE-Extensions
   . . .
Served-cells-ToModify-E-UTRA-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- Served Cells NR IEs
ServedCellInformation-NR ::= SEQUENCE
   nrPCI
                                 NRPCI,
   cellID
                                 NR-CGI,
   tac
                                 TAC.
                                 RANAC
                                                        OPTIONAL,
   ranac
   broadcast PLMN
                                 BroadcastPLMNs,
   nrModeInfo
                                 NRModeInfo,
   measurementTimingConfiguration
                                 OCTET STRING,
   connectivitySupport
                                 Connectivity-Support,
   iE-Extensions
                                 ProtocolExtensionContainer { {ServedCellInformation-NR-ExtIEs} } OPTIONAL,
   . . .
ServedCellInformation-NR-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
    ID id-BPLMN-ID-Info-NR
                                 CRITICALITY ignore EXTENSION BPLMN-ID-Info-NR
                                                                                 PRESENCE optional } |
    ID id-NRCellPRACHConfig
                             CRITICALITY ignore EXTENSION NRCellPRACHConfig
                                                                         PRESENCE optional }
    PRESENCE optional },
ServedCells-NR ::= SEQUENCE (SIZE (1..maxnoofCellsinNG-RANnode)) OF ServedCells-NR-Item
ServedCells-NR-Item ::= SEQUENCE {
   served-cell-info-NR
                          ServedCellInformation-NR,
   neighbour-info-NR
                          NeighbourInformation-NR
                                                        OPTIONAL,
   neighbour-info-E-UTRA
                          NeighbourInformation-E-UTRA
                                                        OPTIONAL,
   iE-Extensions
                   ProtocolExtensionContainer { {ServedCells-NR-Item-ExtIEs} } OPTIONAL,
ServedCells-NR-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
   . . .
```

```
ServedCells-ToModify-NR ::= SEOUENCE (SIZE (1..maxnoofCellsinNG-RANnode)) OF ServedCells-ToModify-NR-Item
ServedCells-ToModify-NR-Item ::= SEQUENCE {
   old-NR-CGI
                              NR-CGI.
   served-cell-info-NR
                              ServedCellInformation-NR,
   neighbour-info-NR
                              NeighbourInformation-NR
                                                                                            OPTIONAL,
   neighbour-info-E-UTRA
                              NeighbourInformation-E-UTRA
                                                                                            OPTIONAL,
   deactivation-indication
                              ENUMERATED {deactivated, ...}
                                                                                            OPTIONAL,
                       iE-Extensions
                                                                                            OPTIONAL.
Served-cells-ToModify-NR-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ServedCellsToUpdate-NR ::= SEOUENCE {
   served-Cells-ToAdd-NR
                              ServedCells-NR
                                                                                                 OPTIONAL,
   served-Cells-ToModify-NR
                              ServedCells-ToModify-NR
                                                                                                 OPTIONAL,
   served-Cells-ToDelete-NR
                              SEQUENCE (SIZE (1..maxnoofCellsinNG-RANnode)) OF NR-CGI
                                                                                                 OPTIONAL,
                      ProtocolExtensionContainer { {ServedCellsToUpdate-NR-ExtIEs} } OPTIONAL,
   iE-Extensions
    . . .
ServedCellsToUpdate-NR-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ServingSNPNID ::= SEQUENCE {
   plmn-id
                                  PLMN-Identity,
   nid
                                  ProtocolExtensionContainer { {ServingSNPNID-ExtIEs} } OPTIONAL,
   iE-Extension
ServingSNPNID-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SharedResourceType ::= CHOICE {
   ul-onlySharing
                               SharedResourceType-UL-OnlySharing,
   ul-and-dl-Sharing
                               SharedResourceType-ULDL-Sharing,
    choice-extension
                              ProtocolIE-Single-Container { {SharedResourceType-ExtIEs} }
SharedResourceType-ExtIEs XNAP-PROTOCOL-IES ::= {
SharedResourceType-UL-OnlySharing ::= SEQUENCE {
```

```
ul-resourceBitmap
                                DataTrafficResources,
    iE-Extensions
                            ProtocolExtensionContainer { {SharedResourceType-UL-OnlySharing-ExtIEs} } OPTIONAL,
SharedResourceType-UL-OnlySharing-ExtlEs XNAP-PROTOCOL-EXTENSION ::= {
SharedResourceType-ULDL-Sharing ::= CHOICE {
    ul-resources
                                SharedResourceType-ULDL-Sharing-UL-Resources,
    dl-resources
                                SharedResourceType-ULDL-Sharing-DL-Resources,
    choice-extension
                                ProtocolIE-Single-Container { {SharedResourceType-ULDL-Sharing-ExtIEs} }
SharedResourceType-ULDL-Sharing-ExtIEs XNAP-PROTOCOL-IES ::= {
SharedResourceType-ULDL-Sharing-UL-Resources ::= CHOICE {
    unchanged
                                NULL,
    changed
                                SharedResourceType-ULDL-Sharing-UL-ResourcesChanged,
                                ProtocolIE-Single-Container { {SharedResourceType-ULDL-Sharing-UL-Resources-ExtIEs} }
    choice-extension
SharedResourceType-ULDL-Sharing-UL-Resources-ExtIEs XNAP-PROTOCOL-IES ::= {
SharedResourceType-ULDL-Sharing-UL-ResourcesChanged ::= SEQUENCE {
    ul-resourceBitmap
                                DataTrafficResources.
                            ProtocolExtensionContainer { {SharedResourceType-ULDL-Sharing-UL-ResourceSChanged-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
SharedResourceType-ULDL-Sharing-UL-ResourcesChanged-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SharedResourceType-ULDL-Sharing-DL-Resources ::= CHOICE
    unchanged
    changed
                                SharedResourceType-ULDL-Sharing-DL-ResourcesChanged,
    choice-extension
                                ProtocolIE-Single-Container { {SharedResourceType-ULDL-Sharing-DL-Resources-ExtIEs} }
SharedResourceType-ULDL-Sharing-DL-Resources-ExtIEs XNAP-PROTOCOL-IES ::= {
SharedResourceType-ULDL-Sharing-DL-ResourcesChanged ::= SEOUENCE
    dl-resourceBitmap
                                DataTrafficResources,
    iE-Extensions
                            ProtocolExtensionContainer { {SharedResourceType-ULDL-Sharing-DL-ResourceSChanged-ExtIEs} } OPTIONAL,
```

```
SharedResourceType-ULDL-Sharing-DL-ResourcesChanged-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SliceAvailableCapacity ::= SEOUENCE (SIZE(1..maxnoofBPLMNs)) OF SliceAvailableCapacity-Item
SliceAvailableCapacity-Item ::= SEQUENCE {
    pLMNIdentity
                                        PLMN-Identity,
    sNSSAIAvailableCapacity-List
                                        SNSSAIAvailableCapacity-List,
    iE-Extensions
                                        ProtocolExtensionContainer { { SliceAvailableCapacity-Item-ExtIEs} } OPTIONAL,
    . . .
SliceAvailableCapacity-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SNSSAIAvailableCapacity-List ::= SEQUENCE (SIZE(1.. maxnoofSliceItems)) OF SNSSAIAvailableCapacity-Item
SNSSAIAvailableCapacity-Item ::= SEQUENCE {
    sNSSAI
               S-NSSAI,
    sliceAvailableCapacityValueDownlink INTEGER (0..100),
    sliceAvailableCapacityValueUplink INTEGER (0..100),
    iE-Extensions
                               ProtocolExtensionContainer { { SNSSAIAvailableCapacity-Item-ExtIEs } } OPTIONAL
SNSSAIAvailableCapacity-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SliceSupport-List ::= SEQUENCE (SIZE(1..maxnoofSliceItems)) OF S-NSSAI
SliceToReport-List ::= SEQUENCE (SIZE(1..maxnoofBPLMNs)) OF SliceToReport-List-Item
SliceToReport-List-Item ::= SEQUENCE {
    pLMNIdentity
                               PLMN-Identity,
                                SNSSAI-list,
    sNSSAIlist
    iE-Extensions
                                        ProtocolExtensionContainer { { SliceToReport-List-Item-ExtIEs} } OPTIONAL,
SliceToReport-List-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SNSSAI-list ::= SEQUENCE (SIZE(1.. maxnoofSliceItems)) OF SNSSAI-Item
SNSSAI-Item ::= SEQUENCE {
    sNSSAI
                S-NSSAI,
    iE-Extensions
                                ProtocolExtensionContainer { { SNSSAI-Item-ExtIEs } }  OPTIONAL
```

```
SNSSAI-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SlotConfiguration-List ::= SEQUENCE (SIZE (1..maxnoofslots)) OF SlotConfiguration-List-Item
SlotConfiguration-List-Item ::= SEQUENCE {
    slotIndex
                                   INTEGER (0..5119),
    symbolAllocation-in-Slot
                                    SymbolAllocation-in-Slot,
    iE-Extensions
                               ProtocolExtensionContainer { {SlotConfiguration-List-Item-ExtIEs} } OPTIONAL,
SlotConfiguration-List-Item-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
S-NG-RANnode-SecurityKey ::= BIT STRING (SIZE(256))
S-NG-RANnode-Addition-Trigger-Ind ::= ENUMERATED {
    sn-change,
    inter-MN-HO,
    intra-MN-HO,
S-NSSAI ::= SEQUENCE {
    sst
                           OCTET STRING (SIZE(1)),
    sd
                           OCTET STRING (SIZE(3))
                                                                           OPTIONAL,
    iE-Extensions
                           ProtocolExtensionContainer { {S-NSSAI-ExtIEs} } OPTIONAL,
S-NSSAI-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SNTriggered ::=ENUMERATED{
    true,
    . . .
SpecialSubframeInfo-E-UTRA ::= SEQUENCE {
    specialSubframePattern SpecialSubframePatterns-E-UTRA,
                     CyclicPrefix-E-UTRA-DL,
    cyclicPrefixDL
                      CyclicPrefix-E-UTRA-UL,
    cyclicPrefixUL
                           ProtocolExtensionContainer { {SpecialSubframeInfo-E-UTRA-ExtIEs} } OPTIONAL,
    iE-Extensions
SpecialSubframeInfo-E-UTRA-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
```

```
SpecialSubframePatterns-E-UTRA ::= ENUMERATED {
    ssp0,
    ssp1,
    ssp2,
    ssp3,
    ssp4,
    ssp5,
    ssp6,
    ssp7,
    ssp8,
    ssp9,
    ssp10,
    . . .
SpectrumSharingGroupID ::= INTEGER (1..maxnoofCellsinNG-RANnode)
SplitSessionIndicator ::= ENUMERATED {
   split,
    . . .
SplitSRBsTypes ::= ENUMERATED {srb1, srb2, srb1and2, ...}
SSBAreaCapacityValue-List ::= SEOUENCE (SIZE(1..maxnoofSSBAreas)) OF SSBAreaCapacityValue-List-Item
SSBAreaCapacityValue-List-Item ::= SEQUENCE {
    sSBIndex
                           INTEGER(0..63),
    ssbAreaCapacityValue INTEGER (0..100),
    iE-Extensions
                                        ProtocolExtensionContainer { { SSBAreaCapacityValue-List-Item-ExtIEs} } OPTIONAL,
SSBAreaCapacityValue-List-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SSBAreaRadioResourceStatus-List ::= SEQUENCE (SIZE(1..maxnoofSSBAreaR)) OF SSBAreaRadioResourceStatus-List-Item
SSBAreaRadioResourceStatus-List-Item
                                        ::= SEOUENCE {
    sSBIndex
                                         INTEGER(0..63),
    ssb-Area-DL-GBR-PRB-usage DL-GBR-PRB-usage,
    ssb-Area-UL-GBR-PRB-usage UL-GBR-PRB-usage,
    ssb-Area-dL-non-GBR-PRB-usage
                                        DL-non-GBR-PRB-usage,
    ssb-Area-uL-non-GBR-PRB-usage
                                        UL-non-GBR-PRB-usage,
    ssb-Area-dL-Total-PRB-usage
                                        DL-Total-PRB-usage,
    ssb-Area-uL-Total-PRB-usage
                                        UL-Total-PRB-usage,
    iE-Extensions
                                        ProtocolExtensionContainer { { SSBAreaRadioResourceStatus-List-Item-ExtIEs} } OPTIONAL,
    . . .
```

```
SSBAreaRadioResourceStatus-List-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SSB-PositionsInBurst ::= CHOICE {
   shortBitmap
                                   BIT STRING (SIZE (4)),
   mediumBitmap
                                  BIT STRING (SIZE (8)),
   longBitmap
                                  BIT STRING (SIZE (64)),
   choice-extension
                                  ProtocolIE-Single-Container { {SSB-PositionsInBurst-ExtIEs} }
SSB-PositionsInBurst-ExtIEs XNAP-PROTOCOL-IES ::= {
SSBToReport-List ::= SEQUENCE (SIZE(1..maxnoofSSBAreas)) OF SSBToReport-List-Item
SSBToReport-List-Item ::= SEQUENCE {
   sSBIndex
                       INTEGER(0..63),
   iE-Extensions
                                       ProtocolExtensionContainer { { SSBTOReport-List-Item-ExtIEs} } OPTIONAL,
SSBToReport-List-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SUL-FrequencyBand ::= INTEGER (1..1024)
SUL-Information ::= SEQUENCE {
   sulFrequencyInfo
                               NRARFCN,
   sulTransmissionBandwidth NRTransmissionBandwidth,
                               ProtocolExtensionContainer { {SUL-Information-ExtIEs} } OPTIONAL,
   iE-Extensions
SUL-Information-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
     ID id-CarrierList
                         CRITICALITY ignore EXTENSION NRCarrierList
                                                                                      PRESENCE optional } |
     ID id-FrequencyShift7p5khz CRITICALITY ignore EXTENSION FrequencyShift7p5khz PRESENCE optional },
SupportedSULBandList ::= SEQUENCE (SIZE(1..maxnoofNRCellBands)) OF SupportedSULBandItem
```

```
SupportedSULBandItem ::= SEQUENCE {
    sulBandItem
                                SUL-FrequencyBand,
    iE-Extensions
                                ProtocolExtensionContainer { {SupportedSULBandItem-ExtIEs} } OPTIONAL,
SupportedSULBandItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
SymbolAllocation-in-Slot ::= CHOICE {
    allDL
                        SymbolAllocation-in-Slot-AllDL,
    allUL
                        SymbolAllocation-in-Slot-AllUL,
   bothDLandUL
                        SymbolAllocation-in-Slot-BothDLandUL,
    choice-extension ProtocolIE-Single-Container { {SymbolAllocation-in-Slot-ExtIEs} }
SymbolAllocation-in-Slot-ExtIES XNAP-PROTOCOL-IES ::= {
SymbolAllocation-in-Slot-AllDL ::= SEQUENCE {
    iE-Extension
                       ProtocolExtensionContainer { {SymbolAllocation-in-Slot-AllDL-ExtIEs} } OPTIONAL,
    . . .
SymbolAllocation-in-Slot-AllDL-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
SymbolAllocation-in-Slot-AllUL ::= SEQUENCE {
                       ProtocolExtensionContainer { {SymbolAllocation-in-Slot-AllUL-ExtIEs} } OPTIONAL,
SymbolAllocation-in-Slot-AllUL-ExtIES XNAP-PROTOCOL-EXTENSION ::= {
SymbolAllocation-in-Slot-BothDLandUL ::= SEQUENCE {
    numberofDLSymbols INTEGER (0..13),
   numberofULSymbols INTEGER (0..13),
                       ProtocolExtensionContainer { {SymbolAllocation-in-Slot-BothDLandUL-ExtIEs} } OPTIONAL,
SymbolAllocation-in-Slot-BothDLandUL-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
-- T
TABasedMDT ::= SEOUENCE {
    tAListforMDT
                        TAListforMDT,
    iE-Extensions
                        ProtocolExtensionContainer { {TABasedMDT-ExtIEs} } OPTIONAL,
TABasedMDT-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TAIBasedMDT ::= SEQUENCE {
    tAIListforMDT
                             TAIListforMDT,
                             ProtocolExtensionContainer { {TAIBasedMDT-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
TAIBasedMDT-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TAIListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAIforMDT-Item
TAIforMDT-Item ::= SEQUENCE {
    plmn-ID
                        PLMN-Identity,
    tAC
                             TAC,
    iE-Extensions
                             ProtocolExtensionContainer { {TAIforMDT-Item-ExtIEs} } OPTIONAL,
TAIforMDT-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TAC ::= OCTET STRING (SIZE (3))
TAISupport-List ::= SEQUENCE (SIZE(1..maxnoofsupportedTACs)) OF TAISupport-Item
TAISupport-Item ::= SEQUENCE {
                                      {\tt SEQUENCE} \ ({\tt SIZE} ({\tt 1..max} noof supported {\tt PLMNs})) \ {\tt OF} \ {\tt BroadcastPLMN} in {\tt TAIS} upport-{\tt Item},
    broadcastPLMNs
                                     ProtocolExtensionContainer { {TAISupport-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
TAISupport-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
    . . .
```

```
TAListforMDT ::= SEQUENCE (SIZE(1..maxnoofTAforMDT)) OF TAC
TargetCellinEUTRAN ::= OCTET STRING -- This IE is to be encoded according to Global Cell ID in the Last Visited E-UTRAN Cell Information IE, as
defined in in TS 36.413 [31]
Target-CGI ::= CHOICE {
                                NR-CGI,
    nr
                                E-UTRA-CGI,
    e-utra
                                ProtocolIE-Single-Container { {TargetCGI-ExtIEs} }
    choice-extension
TargetCGI-ExtIEs XNAP-PROTOCOL-IES ::= {
TDDULDLConfigurationCommonNR ::= OCTET STRING
TargetCellList ::= SEQUENCE (SIZE(1..maxnoofCHOcells)) OF TargetCellList-Item
TargetCellList-Item ::= SEQUENCE {
    target-cell
                                             NR-CGI,
    iE-Extensions
                                             ProtocolExtensionContainer { { TargetCellList-Item-ExtIEs} } OPTIONAL
TargetCellList-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
Threshold-RSRQ ::= INTEGER(0..34)
Threshold-RSRP ::= INTEGER(0..97)
Threshold-SINR ::= INTEGER(0..127)
TimeToTrigger ::= ENUMERATED {ms0, ms40, ms64, ms80, ms100, ms128, ms160, ms256, ms320, ms480, ms512, ms640, ms1024, ms1024, ms1280, ms5120}
TimeToWait ::= ENUMERATED {
    vls,
    v2s.
    v5s,
    v10s,
    v20s,
    v60s,
    . . .
TNLConfigurationInfo ::= SEQUENCE {
    \verb|extendedUPTransportLayerAddressesToAdd|\\
                                                     ExtTLAs
                                                                                                  OPTIONAL,
    extendedUPTransportLayerAddressesToRemove
                                                     ExtTLAs
                                                                                                  OPTIONAL,
    iE-Extensions
                        ProtocolExtensionContainer { {TNLConfigurationInfo-ExtIEs} }
                                                                                          OPTIONAL,
    . . .
```

```
TNLConfigurationInfo-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TNLA-To-Add-List ::= SEOUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-To-Add-Item
TNLA-To-Add-Item ::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
    tNLAssociationUsage
                                            TNLAssociationUsage,
                                            ProtocolExtensionContainer { { TNLA-To-Add-Item-ExtIEs} } OPTIONAL
    iE-Extensions
TNLA-To-Add-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TNLA-To-Update-List ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-To-Update-Item
TNLA-To-Update-Item::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
    tNLAssociationUsage
                                            TNLAssociationUsage
                                                                    OPTIONAL,
    iE-Extensions
                                            ProtocolExtensionContainer { { TNLA-To-Update-Item-ExtIEs} } OPTIONAL
TNLA-To-Update-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TNLA-To-Remove-List ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-To-Remove-Item
TNLA-To-Remove-Item::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
                                            ProtocolExtensionContainer { { TNLA-To-Remove-Item-ExtIEs} } OPTIONAL
    iE-Extensions
TNLA-To-Remove-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TNLA-Setup-List ::= SEQUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-Setup-Item
TNLA-Setup-Item ::= SEQUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
                                            ProtocolExtensionContainer { { TNLA-Setup-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
TNLA-Setup-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
TNLA-Failed-To-Setup-List ::= SEOUENCE (SIZE(1..maxnoofTNLAssociations)) OF TNLA-Failed-To-Setup-Item
TNLA-Failed-To-Setup-Item ::= SEOUENCE {
    tNLAssociationTransportLayerAddress
                                            CPTransportLayerInformation,
    cause
                                            Cause,
    iE-Extensions
                                            ProtocolExtensionContainer { { TNLA-Failed-To-Setup-Item-ExtIEs} } OPTIONAL
TNLA-Failed-To-Setup-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TNLAssociationUsage ::= ENUMERATED {
    ue,
    non-ue,
    both,
    . . .
TransportLayerAddress ::= BIT STRING (SIZE(1..160, ...))
TraceActivation ::= SEQUENCE {
    ng-ran-TraceID
                            NG-RANTraceID,
                            BIT STRING { nq-c (0), x-nc (1), uu (2), f1-c (3), e1 (4)} (SIZE(8)),
    interfaces-to-trace
    trace-depth
                            Trace-Depth,
    trace-coll-address
                            TransportLayerAddress,
    ie-Extension
                            ProtocolExtensionContainer { {TraceActivation-ExtIEs} } OPTIONAL,
    . . .
TraceActivation-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
-- Extension to support MDT -
      ID id-TraceCollectionEntityURI
                                        CRITICALITY ignore EXTENSION URladdress
                                                                                                  PRESENCE optional } |
     ID id-MDT-Configuration
                                        CRITICALITY ignore EXTENSION MDT-Configuration
                                                                                                  PRESENCE optional },
    . . .
Trace-Depth ::= ENUMERATED {
    minimum,
    medium,
    maximum,
    minimumWithoutVendorSpecificExtension,
    mediumWithoutVendorSpecificExtension,
    maximumWithoutVendorSpecificExtension,
```

```
TSCTrafficCharacteristics ::= SEQUENCE {
    tSCAssistanceInformationDownlink
                                       TSCAssistanceInformation OPTIONAL,
    tSCAssistanceInformationUplink
                                        TSCAssistanceInformation OPTIONAL,
                           ProtocolExtensionContainer { {TSCTrafficCharacteristics-ExtIEs} } OPTIONAL,
    ie-Extension
TSCTrafficCharacteristics-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TSCAssistanceInformation ::= SEQUENCE
    periodicity
                   INTEGER (0.. 640000, ...),
    burstArrivalTime OCTET STRING
                                                    OPTIONAL,
    ie-Extension
                            ProtocolExtensionContainer { { TSCAssistanceInformation-ExtIEs} } OPTIONAL,
TSCAssistanceInformation-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
TypeOfError ::= ENUMERATED {
    not-understood,
   missing,
    . . .
UEAggregateMaximumBitRate ::= SEQUENCE {
    dl-UE-AMBR
                            BitRate,
    ul-UE-AMBR
                            BitRate,
    iE-Extension
                            ProtocolExtensionContainer { {UEAggregateMaximumBitRate-ExtIEs} } OPTIONAL,
    . . .
UEAggregateMaximumBitRate-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
UEContextKeptIndicator ::= ENUMERATED {true, ...}
UEContextID ::= CHOICE {
                            UEContextIDforRRCResume,
    rRCResume
    rRRCReestablishment
                            UEContextIDforRRCReestablishment,
    choice-extension
                            ProtocolIE-Single-Container { {UEContextID-ExtIEs} }
```

```
UEContextID-ExtIEs XNAP-PROTOCOL-IES ::= {
UEContextIDforRRCResume ::= SEQUENCE {
   i-rnt.i
   allocated-c-rnti
                            C-RNTI,
   accessPCT
                        NG-RAN-CellPCI,
                        ProtocolExtensionContainer { {UEContextIDforRRCResume-ExtIEs} } OPTIONAL,
   iE-Extension
UEContextIDforRRCResume-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
UEContextIDforRRCReestablishment ::= SEQUENCE {
   c-rnti
                        C-RNTI,
   failureCellPCI
                        NG-RAN-CellPCI,
                        ProtocolExtensionContainer { {UEContextIDforRRCReestablishment-ExtIEs} } OPTIONAL,
   iE-Extension
UEContextIDforRRCReestablishment-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
UEContextInfoRetrUECtxtResp ::= SEQUENCE {
   ng-c-UE-signalling-ref
                                       AMF-UE-NGAP-ID,
   signalling-TNL-at-source
                                       CPTransportLayerInformation,
   ueSecurityCapabilities
                                       UESecurityCapabilities,
   securityInformation
                                       AS-SecurityInformation,
   ue-AMBR
                                       UEAggregateMaximumBitRate,
   pduSessionResourcesToBeSetup-List
                                       PDUSessionResourcesToBeSetup-List,
   rrc-Context
                                       OCTET STRING,
   mobilityRestrictionList
                                       MobilityRestrictionList
                                                                                       OPTIONAL,
   indexToRatFrequencySelectionPriority
                                       RFSP-Index
                                                                                       OPTIONAL,
                        iE-Extension
                                                                                       OPTIONAL,
   . . .
UEContextInfoRetrUECtxtResp-ExtIEs XNAP-PROTOCOL-EXTENSION ::=
   { ID id-FiveGCMobilityRestrictionListContainer CRITICALITY ignore EXTENSION FiveGCMobilityRestrictionListContainer
                                                                                                               PRESENCE optional }
{ ID id-NRUESidelinkAggregateMaximumBitRate CRITICALITY ignore EXTENSION NRUESidelinkAggregateMaximumBitRate PRESENCE optional}
{ ID id-UERadioCapabilityID
                                              CRITICALITY reject EXTENSION UERadioCapabilityID
                                                                                                               PRESENCE optional },
   . . .
UEHistoryInformation ::= SEQUENCE (SIZE(1..maxnoofCellsinUEHistoryInfo)) OF LastVisitedCell-Item
```

```
UEHistoryInformationFromTheUE ::= CHOICE {
                           NRMobilityHistoryReport,
    choice-extension
                                ProtocolIE-Single-Container { {UEHistoryInformationFromTheUE-ExtIEs} }
UEHistoryInformationFromTheUE-ExtIEs XNAP-PROTOCOL-IES ::= {
UEIdentityIndexValue ::= CHOICE {
    indexLength10
                                BIT STRING (SIZE(10)),
    choice-extension
                                ProtocolIE-Single-Container { {UEIdentityIndexValue-ExtIEs} }
UEIdentityIndexValue-ExtIEs XNAP-PROTOCOL-IES ::= {
UERadioCapabilityForPaging ::= SEQUENCE {
    uERadioCapabilityForPagingOfNR
                                            UERadioCapabilityForPagingOfNR
                                                                                     OPTIONAL,
    uERadioCapabilityForPagingOfEUTRA
                                            UERadioCapabilityForPagingOfEUTRA
                                                                                     OPTIONAL,
                        ProtocolExtensionContainer { {UERadioCapabilityForPaging-ExtIEs} } OPTIONAL,
    iE-Extensions
    . . .
UERadioCapabilityForPaging-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
UERadioCapabilityForPagingOfNR ::= OCTET STRING
UERadioCapabilityForPagingOfEUTRA ::= OCTET STRING
UERadioCapabilityID ::= OCTET STRING
UERANPagingIdentity ::= CHOICE {
   i-RNTI-full
                        BIT STRING ( SIZE (40)),
    choice-extension ProtocolIE-Single-Container { {UERANPagingIdentity-ExtIEs} }
UERANPagingIdentity-ExtIEs XNAP-PROTOCOL-IES ::= {
UERLFReportContainer ::= CHOICE {
    nR-UERLFReportContainer
                                    UERLFReportContainerNR,
   lTE-UERLFReportContainer
                                    UERLFReportContainerLTE,
    choice-Extension
                            ProtocolIE-Single-Container { {UERLFReportContainer-ExtIEs} }
UERLFReportContainer-ExtIEs XNAP-PROTOCOL-IES ::= {
```

```
UERLFReportContainerLTE ::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the RLF-Report-r9 IE contained in the UEInformationResponse message (TS 36.331 [14])
UERLFReportContainerNR ::= OCTET STRING
-- This IE is a transparent container and shall be encoded as the nr-RLF-Report-r16 IE contained in the UEInformationResponse message (TS 38.331
[10])
UESecurityCapabilities ::= SEQUENCE {
    nr-EncyptionAlgorithms
                                            BIT STRING {neal-128(1),
                                                        nea2-128(2),
                                                        nea3-128(3)} (SIZE(16, ...)),
    nr-IntegrityProtectionAlgorithms
                                            BIT STRING {nia1-128(1),
                                                        nia2-128(2),
                                                        nia3-128(3)} (SIZE(16, ...)),
    e-utra-EncyptionAlgorithms
                                            BIT STRING {eeal-128(1),
                                                        eea2-128(2),
                                                        eea3-128(3)} (SIZE(16, ...)),
    e-utra-IntegrityProtectionAlgorithms
                                            BIT STRING {eia1-128(1),
                                                        eia2-128(2),
                                                        eia3-128(3)} (SIZE(16, ...)),
    iE-Extension
                            ProtocolExtensionContainer { {UESecurityCapabilities-ExtIEs} } OPTIONAL,
UESecurityCapabilities-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
ULConfiguration::= SEQUENCE {
    uL-PDCP
                                    UL-UE-Configuration,
                                    ProtocolExtensionContainer { {ULConfiguration-ExtIEs} } OPTIONAL,
   iE-Extensions
ULConfiguration-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
UL-UE-Configuration::= ENUMERATED {no-data, shared, only, ...}
               ::= ENUMERATED {ul-forwarding-proposed, ...}
ULForwarding
ULForwardingProposal
                       ::= ENUMERATED {ul-forwarding-proposed, ...}
UL-GBR-PRB-usage::= INTEGER (0..100)
UL-non-GBR-PRB-usage::= INTEGER (0..100)
```

```
UL-Total-PRB-usage::= INTEGER (0..100)
UPTransportLayerInformation ::= CHOICE {
    qtpTunnel
                                GTPtunnelTransportLayerInformation,
    choice-extension
                                ProtocolIE-Single-Container { {UPTransportLayerInformation-ExtIEs} }
UPTransportLayerInformation-ExtIEs XNAP-PROTOCOL-IES ::= {
UPTransportParameters ::= SEOUENCE (SIZE(1..maxnoofSCellGroupsplus1)) OF UPTransportParametersItem
UPTransportParametersItem ::= SEQUENCE {
                    UPTransportLayerInformation,
    upTNLInfo
    cellGroupID
                    CellGroupID,
    iE-Extension ProtocolExtensionContainer { {UPTransportParametersItem-ExtIEs} } OPTIONAL,
UPTransportParametersItem-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
UserPlaneTrafficActivityReport ::= ENUMERATED {inactive, re-activated, ...}
URIaddress ::= VisibleString
-- V
VehicleUE ::= ENUMERATED {
    authorized,
    not-authorized,
VolumeTimedReportList ::= SEQUENCE (SIZE(1..maxnooftimeperiods)) OF VolumeTimedReport-Item
VolumeTimedReport-Item ::= SEQUENCE {
    startTimeStamp
                     OCTET STRING (SIZE(4)),
                            OCTET STRING (SIZE(4)),
INTEGER (0..18446744073709551615),
INTEGER (0..18446744073709551615),
    endTimeStamp
    usageCountUL
    usageCountDL
                             ProtocolExtensionContainer { {VolumeTimedReport-Item-ExtIEs} } OPTIONAL,
    iE-Extensions
VolumeTimedReport-Item-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
```

```
WLANMeasurementConfiguration ::= SEQUENCE
    wlanMeasConfig
                              WLANMeasConfig,
    wlanMeasConfigNameList
                           WLANMeasConfigNameList
                                                                OPTIONAL,
                              ENUMERATED {true, ...}
    wlan-rssi
                                                                OPTIONAL,
    wlan-rtt
                              ENUMERATED {true, ...}
                                                                OPTIONAL,
    iE-Extensions ProtocolExtensionContainer { { WLANMeasurementConfiguration-ExtIEs } } OPTIONAL,
WLANMeasurementConfiguration-ExtIEs XNAP-PROTOCOL-EXTENSION ::= {
WLANMeasConfigNameList ::= SEOUENCE (SIZE(1..maxnoofWLANName)) OF WLANName
WLANMeasConfig::= ENUMERATED {setup,...}
WLANName ::= OCTET STRING (SIZE (1..32))
-- X
XnBenefitValue ::= INTEGER (1..8, ...)
-- Y
-- Z
END
-- ASN1STOP
```

## 9.3.6 Common definitions

```
BEGIN
__ *********************
-- Extension constants
  *******************
maxPrivateIEs
                                     INTEGER ::= 65535
maxProtocolExtensions
                                     INTEGER ::= 65535
maxProtocolIEs
                                     INTEGER ::= 65535
__ ********************
-- Common Data Types
__ **********************
            ::= ENUMERATED { reject, ignore, notify }
Criticality
Presence
            ::= ENUMERATED { optional, conditional, mandatory }
PrivateIE-ID ::= CHOICE {
   local
                  INTEGER (0.. maxPrivateIEs),
   global
                  OBJECT IDENTIFIER
ProcedureCode
             ::= INTEGER (0..255)
ProtocolIE-ID
             ::= INTEGER (0..maxProtocolIEs)
TriggeringMessage ::= ENUMERATED { initiating-message, successful-outcome, unsuccessful-outcome}
END
-- ASN1STOP
```

## 9.3.7 Constant definitions

BEGIN

```
IMPORTS
   ProcedureCode,
    ProtocolIE-ID
FROM XnAP-CommonDataTypes;
__ ********************
-- Elementary Procedures
  ***************
id-handoverPreparation
                                                               ProcedureCode ::= 0
id-sNStatusTransfer
                                                              ProcedureCode ::= 1
id-handoverCancel
                                                               ProcedureCode ::= 2
id-retrieveUEContext
                                                              ProcedureCode ::= 3
                                                              ProcedureCode ::= 4
id-rANPaging
id-xnUAddressIndication
                                                              ProcedureCode ::= 5
id-uEContextRelease
                                                              ProcedureCode ::= 6
id-sNGRANnodeAdditionPreparation
                                                              ProcedureCode ::= 7
id-sNGRANnodeReconfigurationCompletion
                                                              ProcedureCode ::= 8
\verb|id-mNGRAN| node in \verb|itiatedSNGRAN| node \verb|ModificationPreparation| \\
                                                               ProcedureCode ::= 9
id-sNGRANnodeinitiatedSNGRANnodeModificationPreparation
                                                              ProcedureCode ::= 10
id-mNGRANnodeinitiatedSNGRANnodeRelease
                                                              ProcedureCode ::= 11
id-sNGRANnodeinitiatedSNGRANnodeRelease
                                                               ProcedureCode ::= 12
id-sNGRANnodeCounterCheck
                                                              ProcedureCode ::= 13
id-sNGRANnodeChange
                                                              ProcedureCode ::= 14
                                                              ProcedureCode ::= 15
id-rRCTransfer
id-xnRemoval
                                                               ProcedureCode ::= 16
                                                              ProcedureCode ::= 17
id-xnSetup
id-nGRANnodeConfigurationUpdate
                                                              ProcedureCode ::= 18
id-cellActivation
                                                              ProcedureCode ::= 19
id-reset
                                                              ProcedureCode ::= 20
id-errorIndication
                                                              ProcedureCode ::= 21
                                                              ProcedureCode ::= 22
id-privateMessage
id-notificationControl
                                                              ProcedureCode ::= 23
id-activityNotification
                                                              ProcedureCode ::= 24
                                                              ProcedureCode ::= 25
id-e-UTRA-NR-CellResourceCoordination
id-secondaryRATDataUsageReport
                                                              ProcedureCode ::= 26
id-deactivateTrace
                                                              ProcedureCode ::= 27
id-traceStart
                                                              ProcedureCode ::= 28
id-handoverSuccess
                                                              ProcedureCode ::= 29
id-conditional Handover Cancel
                                                              ProcedureCode ::= 30
id-earlyStatusTransfer
                                                           ProcedureCode ::= 31
id-failureIndication
                                                              ProcedureCode ::= 32
id-handoverReport
                                                           ProcedureCode ::= 33
id-resourceStatusReportingInitiation
                                                                  ProcedureCode ::= 34
id-resourceStatusReporting
                                                              ProcedureCode ::= 35
id-mobilitySettingsChange
                                                              ProcedureCode ::= 36
id-accessAndMobilityIndication
                                                               ProcedureCode ::= 37
```

```
__ *********************
-- Lists
__ **********************
maxEARFCN
                                          INTEGER ::= 262143
maxnoofAllowedAreas
                                          INTEGER ::= 16
maxnoofAMFRegions
                                          INTEGER ::= 16
                                          INTEGER ::= 64
maxnoofAoIs
maxnoofBluetoothName
                                          INTEGER ::= 4
maxnoofBPLMNs
                                          INTEGER ::= 12
maxnoofCAGs
                                          INTEGER ::= 12
maxnoofCAGsperPLMN
                                          INTEGER ::= 256
maxnoofCellIDforMDT
                                          INTEGER ::= 32
maxnoofCellsinAoI
                                          INTEGER ::= 256
maxnoofCellsinUEHistoryInfo
                                          INTEGER ::= 16
maxnoofCellsinNG-RANnode
                                          INTEGER ::= 16384
maxnoofCellsinRNA
                                          INTEGER ::= 32
maxnoofCellsUEMovingTrajectory
                                          INTEGER ::= 16
maxnoofDRBs
                                          INTEGER ::= 32
maxnoofEUTRABands
                                          INTEGER ::= 16
maxnoof EUTRARPLMNs
                                          INTEGER ::= 6
                                          INTEGER ::= 15
maxnoofEPLMNs
maxnoofExtSliceItems
                                          INTEGER ::= 65535
maxnoofEPLMNsplus1
                                          INTEGER ::= 16
maxnoofForbiddenTACs
                                              INTEGER ::= 4096
maxnoofFreqforMDT
                                          INTEGER ::= 8
maxnoofMBSFNEUTRA
                                          INTEGER ::= 8
maxnoofMDTPLMNs
                                          INTEGER ::= 16
maxnoofMultiConnectivityMinusOne
                                          INTEGER ::= 3
maxnoofNeighbours
                                          INTEGER ::= 1024
maxnoofNeighPCIforMDT
                                          INTEGER ::= 32
maxnoofNIDs
                                          INTEGER ::= 12
maxnoofNRCellBands
                                          INTEGER ::= 32
maxnoofPLMNs
                                          INTEGER ::= 16
maxnoofPDUSessions
                                          INTEGER ::= 256
                                          INTEGER ::= 16
maxnoofProtectedResourcePatterns
maxnoofOoSFlows
                                          INTEGER ::= 64
maxnoofOoSParaSets
                                          INTEGER ::= 8
maxnoofRANAreaCodes
                                          INTEGER ::= 32
maxnoofRANAreasinRNA
                                          INTEGER ::= 16
maxnoofRANNodesinAoI
                                          INTEGER ::= 64
maxnoofSCellGroups
                                          INTEGER ::= 3
maxnoofSCellGroupsplus1
                                          INTEGER ::= 4
maxnoofSensorName
                                          INTEGER ::= 3
maxnoofSliceItems
                                          INTEGER ::= 1024
maxnoofSNPNIDs
                                          INTEGER ::= 12
maxnoofsupportedPLMNs
                                          INTEGER ::= 12
maxnoofsupportedTACs
                                          INTEGER ::= 256
maxnoofTAforMDT
                                          INTEGER ::= 8
maxnoofTAI
                                          INTEGER ::= 16
maxnoofTAIsinAoI
                                          INTEGER ::= 16
maxnooftimeperiods
                                          INTEGER ::= 2
```

```
maxnoofTNLAssociations
                                         INTEGER ::= 32
maxnoofUEContexts
                                         INTEGER ::= 8192
maxNRARFCN
                                         INTEGER ::= 3279165
maxNrOfErrors
                                         INTEGER ::= 256
maxnoofslots
                                         INTEGER ::= 5120
maxnoofExtTLAs
                                         INTEGER ::= 16
maxnoofGTPTLAs
                                         INTEGER ::= 16
maxnoofCHOcells
                                         INTEGER ::= 8
maxnoofPC5OoSFlows
                                         INTEGER ::= 2064
maxnoofSSBAreas
                                         INTEGER ::= 64
maxnoofRACHReports
                                         INTEGER ::= 64
maxnoofNRSCSs
                                         INTEGER ::= 5
maxnoofPhysicalResourceBlocks
                                         INTEGER ::= 275
maxnoofAdditionalPDCPDuplicationTNL
                                         INTEGER ::= 2
maxnoofRLCDuplicationstate
                                         INTEGER ::= 3
maxnoofWLANName
                                         INTEGER ::= 4
  ******************
-- IEs
*****************
id-ActivatedServedCells
id-ActivationIDforCellActivation
id-admittedSplitSRB
id-admittedSplitSRBrelease
id-AMF-Region-Information
id-AssistanceDataForRANPaging
id-BearersSubjectToCounterCheck
id-Cause
id-cellAssistanceInfo-NR
id-ConfigurationUpdateInitiatingNodeChoice
id-CriticalityDiagnostics
id-XnUAddressInfoperPDUSession-List
id-DRBsSubjectToStatusTransfer-List
id-ExpectedUEBehaviour
id-GlobalNG-RAN-node-ID
id-GUAMI
id-indexToRatFrequSelectionPriority
id-initiatingNodeType-ResourceCoordRequest
id-List-of-served-cells-E-UTRA
id-List-of-served-cells-NR
id-LocationReportingInformation
id-MAC-I
id-MaskedIMEISV
id-M-NG-RANnodeUEXnAPID
id-MN-to-SN-Container
id-MobilityRestrictionList
id-new-NG-RAN-Cell-Identity
id-newNG-RANnodeUEXnAPID
id-UEReportRRCTransfer
id-oldNG-RANnodeUEXnAPID
id-OldtoNewNG-RANnodeResumeContainer
```

ProtocolIE-ID ::= 0 ProtocolIE-ID ::= 1 ProtocolIE-ID ::= 2 ProtocolIE-ID ::= 3 ProtocolIE-ID ::= 4 ProtocolIE-ID ::= 5 ProtocolIE-ID ::= 6 ProtocolIE-ID ::= 7 ProtocolIE-ID ::= 8 ProtocolIE-ID ::= 9 ProtocolIE-ID ::= 10 ProtocolIE-ID ::= 11 ProtocolIE-ID ::= 12 ProtocolIE-ID ::= 13 ProtocolIE-ID ::= 14 ProtocolIE-ID ::= 15 ProtocolIE-ID ::= 16 ProtocolIE-ID ::= 17 ProtocolIE-ID ::= 18 ProtocolIE-ID ::= 19 ProtocolIE-ID ::= 20 ProtocolIE-ID ::= 21 ProtocolIE-ID ::= 22 ProtocolIE-ID ::= 23 ProtocolIE-ID ::= 24 ProtocolIE-ID ::= 25 ProtocolIE-ID ::= 26 ProtocolIE-ID ::= 27 ProtocolIE-ID ::= 28 ProtocolIE-ID ::= 29 ProtocolIE-ID ::= 30

id-PagingDRX
id-PCellID
id-PDCPChangeIndication
id-PDUSessionAdmittedAddedAddReqAck
id-PDUSessionAdmittedModSNModConfirm
id-PDUSessionAdmitted-SNModResponse
id-PDUSessionNotAdmittedAddReqAck
id-PDUSessionNotAdmitted-SNModResponse
id-PDUSessionReleasedList-RelConf
id-PDUSessionReleasedSNModConfirm
id-PDUSessionResourcesActivityNotifyList
id-PDUSessionResourcesAdmitted-List
id-PDUSessionResourcesNotAdmitted-List
id-PDUSessionResourcesNotifyList
id-PDUSession-SNChangeConfirm-List
id-PDUSession-SNChangeRequired-List
id-PDUSessionToBeAddedAddReq
id-PDUSessionToBeModifiedSNModRequired
id-PDUSessionToBeReleasedList-RelRqd
id-PDUSessionToBeReleased-RelReg
id-PDUSessionToBeReleasedSNModRequired
id-RANPagingArea
id-PagingPriority
id-requestedSplitSRB
id-requestedSplitSRBrelease
id-ResetRequestTypeInfo
id-ResetResponseTypeInfo
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck
<pre>id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse</pre>
<pre>id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl</pre>
<pre>id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication</pre>
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RCCGonfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RCCGonfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RCCOnfigIndication id-RCCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXNAPID
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXnAPID id-SN-to-MN-Container
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXNAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXNAPID
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXnAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXnAPID id-SplitSRB-RRCTransfer
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXnAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXnAPID id-SplitSRB-RRCTransfer id-TAISupport-list
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdateNR id-s-ng-RANnodeUscurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXNAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXNAPID id-SplitSRB-RRCTransfer id-TAISupport-list id-TimeToWait
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXNAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXNAPID id-SplitSRB-RRCTransfer id-TAISupport-list id-TimeToWait id-Target2SourceNG-RANnodeTranspContainer
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXNAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXNAPID id-SplitSRB-RRCTransfer id-TAISupport-list id-TimeToWait id-Target2SourceNG-RANnodeTranspContainer id-targetCellGlobalID
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXNAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXNAPID id-SplitSRB-RRCTransfer id-TAISupport-list id-TimeToWait id-Target2SourceNG-RANnodeTranspContainer id-targetCellGlobalID id-targetNG-RANNodeUEXNAPID
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXNAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXNAPID id-SplitSRB-RRCTransfer id-TAISupport-list id-TimeToWait id-Target2SourceNG-RANnodeTranspContainer id-targetCellGlobalID
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXnAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXnAPID id-TAISupport-list id-TimeToWait id-Target2SourceNG-RANnodeTranspContainer id-targetCellGlobalID id-targetMG-RANnodeUEXNAPID id-targetMG-RANnodeUEXNAPID id-targetCellGlobalID id-targetS-NG-RANnodeUEXNAPID id-targetCelRANnodeUEXNAPID id-targetS-NG-RANnodeUEXNAPID
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXNAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXNAPID id-TAISupport-list id-TimeToWait id-Target2SourceNG-RANnodeTranspContainer id-targetCellGlobalID id-targetMG-RANnodeUEXNAPID id-targetCR-RANnodeUEXNAPID id-targetCR-RANnodeUEXNAPID id-targetCR-RANnodeUEXNAPID id-targetCR-RANnodeUEXNAPID id-targetCR-RANnodeUEXNAPID id-targetAG-RANnodeUEXNAPID id-targetAG-RANnodeUEXNAPID id-targetAG-RANnodeUEXNAPID id-targetAG-RANnodeUEXNAPID id-TraceActivation id-UEContextID
id-ResetResponseTypeInfo id-RespondingNodeTypeConfigUpdateAck id-respondingNodeType-ResourceCoordResponse id-ResponseInfo-ReconfCompl id-RRCConfigIndication id-RRCResumeCause id-SCGConfigurationQuery id-selectedPLMN id-ServedCellsToActivate id-servedCellsToUpdate-E-UTRA id-ServedCellsToUpdateInitiatingNodeChoice id-servedCellsToUpdate-NR id-s-ng-RANnode-SecurityKey id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUE-AMBR id-S-NG-RANnodeUEXnAPID id-SN-to-MN-Container id-sourceNG-RANnodeUEXnAPID id-TAISupport-list id-TimeToWait id-Target2SourceNG-RANnodeTranspContainer id-targetCellGlobalID id-targetMG-RANnodeUEXNAPID id-targetMG-RANnodeUEXNAPID id-targetCellGlobalID id-targetS-NG-RANnodeUEXNAPID id-targetCelRANnodeUEXNAPID id-targetS-NG-RANnodeUEXNAPID

ProtocolIE-ID ::= 31 ProtocolIE-ID ::= 32 ProtocolIE-ID ::= 33 ProtocolIE-ID ::= 34 ProtocolIE-ID ::= 35 ProtocolIE-ID ::= 36 ProtocolIE-ID ::= 37 ProtocolIE-ID ::= 38 ProtocolIE-ID ::= 39 ProtocolIE-ID ::= 40 ProtocolIE-ID ::= 41 ProtocolIE-ID ::= 42 ProtocolIE-ID ::= 43 ProtocolIE-ID ::= 44 ProtocolIE-ID ::= 45 ProtocolIE-ID ::= 46 ProtocolIE-ID ::= 47 ProtocolIE-ID ::= 48 ProtocolIE-ID ::= 49 ProtocolIE-ID ::= 50 ProtocolIE-ID ::= 51 ProtocolIE-ID ::= 52 ProtocolIE-ID ::= 53 ProtocolIE-ID ::= 54 ProtocolIE-ID ::= 55 ProtocolIE-ID ::= 56 ProtocolIE-ID ::= 57 ProtocolIE-ID ::= 58 ProtocolIE-ID ::= 59 ProtocolIE-ID ::= 60 ProtocolIE-ID ::= 61 ProtocolIE-ID ::= 62 ProtocolIE-ID ::= 63 ProtocolIE-ID ::= 64 ProtocolIE-ID ::= 65 ProtocolIE-ID ::= 66 ProtocolIE-ID ::= 67 ProtocolIE-ID ::= 68 ProtocolIE-ID ::= 69 ProtocolIE-ID ::= 70 ProtocolIE-ID ::= 71 ProtocolIE-ID ::= 72 ProtocolIE-ID ::= 73 ProtocolIE-ID ::= 74 ProtocolIE-ID ::= 75 ProtocolIE-ID ::= 76 ProtocolIE-ID ::= 77 ProtocolIE-ID ::= 78 ProtocolIE-ID ::= 79 ProtocolIE-ID ::= 80 ProtocolIE-ID ::= 81 ProtocolIE-ID ::= 82 ProtocolIE-ID ::= 83 ProtocolIE-ID ::= 84

id-UEContextInfo-SNModRequest
id-UEContextKeptIndicator
id-UEContextRefAtSN-HORequest
id-UEHistoryInformation
id-UEIdentityIndexValue
id-UERANPagingIdentity
id-UESecurityCapabilities
id-UserPlaneTrafficActivityReport
id-XnRemovalThreshold
id-DesiredActNotificationLevel
id-AvailableDRBIDs
id-AdditionalDRBIDs
id-SpareDRBIDs
id-RequiredNumberOfDRBIDs
id-TNLA-To-Add-List
id-TNLA-To-Update-List
id-TNLA-To-Remove-List
id-TNLA-Setup-List
id-TNLA-Failed-To-Setup-List
id-PDUSessionToBeReleased-RelRegAck
id-S-NG-RANnodeMaxIPDataRate-UL
id-PDUSessionResourceSecondaryRATUsageList
id-Additional-UL-NG-U-TNLatUPF-List
id-SecondarydataForwardingInfoFromTarget-List
id-LocationInformationSNReporting
id-LocationInformationSN
id-LastE-UTRANPLMNIdentity
id-S-NG-RANnodeMaxIPDataRate-DL
id-MaxIPrate-DL
id-SecurityResult
id-S-NSSAI
id-MR-DC-ResourceCoordinationInfo
id-AMF-Region-Information-To-Add
id-AMF-Region-Information-To-Delete
id-OldQoSFlowMap-ULendmarkerexpected
id-RANPagingFailure
id-UERadioCapabilityForPaging
id-PDUSessionDataForwarding-SNModResponse
id-DRBsNotAdmittedSetupModifyList
id-Secondary-MN-Xn-U-TNLInfoatM
id-NE-DC-TDM-Pattern
id-PDUSessionCommonNetworkInstance
id-BPLMN-ID-Info-EUTRA
id-BPLMN-ID-Info-NR
id-InterfaceInstanceIndication
id-S-NG-RANnode-Addition-Trigger-Ind
id-DefaultDRB-Allowed
id-DelaultDrB-Allowed id-DRB-IDs-takenintouse
id-SplitSessionIndicator
id-CNTypeRestrictionsForEquivalent
<pre>id-CNTypeRestrictionsForServing id-DRBs-transferred-to-MN</pre>
id-ULForwardingProposal
id-EndpointIPAddressAndPort

ProtocolIE-ID ::= 85 ProtocolIE-ID ::= 86 ProtocolIE-ID ::= 87 ProtocolIE-ID ::= 88 ProtocolIE-ID ::= 89 ProtocolIE-ID ::= 90 ProtocolIE-ID ::= 91 ProtocolIE-ID ::= 92 ProtocolIE-ID ::= 93 ProtocolIE-ID ::= 94 ProtocolIE-ID ::= 95 ProtocolIE-ID ::= 96 ProtocolIE-ID ::= 97 ProtocolIE-ID ::= 98 ProtocolIE-ID ::= 99 ProtocolIE-ID ::= 100 ProtocolIE-ID ::= 101 ProtocolIE-ID ::= 102 ProtocolIE-ID ::= 103 ProtocolIE-ID ::= 104 ProtocolIE-ID ::= 105 ProtocolIE-ID ::= 107 ProtocolIE-ID ::= 108 ProtocolIE-ID ::= 109 ProtocolIE-ID ::= 110 ProtocolIE-ID ::= 111 ProtocolIE-ID ::= 112 ProtocolIE-ID ::= 113 ProtocolIE-ID ::= 114 ProtocolIE-ID ::= 115 ProtocolIE-ID ::= 116 ProtocolIE-ID ::= 117 ProtocolIE-ID ::= 118 ProtocolIE-ID ::= 119 ProtocolIE-ID ::= 120 ProtocolIE-ID ::= 121 ProtocolIE-ID ::= 122 ProtocolIE-ID ::= 123 ProtocolIE-ID ::= 124 ProtocolIE-ID ::= 125 ProtocolIE-ID ::= 126 ProtocolIE-ID ::= 127 ProtocolIE-ID ::= 128 ProtocolIE-ID ::= 129 ProtocolIE-ID ::= 130 ProtocolIE-ID ::= 131 ProtocolIE-ID ::= 132 ProtocolIE-ID ::= 133 ProtocolIE-ID ::= 134 ProtocolIE-ID ::= 135 ProtocolIE-ID ::= 136 ProtocolIE-ID ::= 137 ProtocolIE-ID ::= 138 ProtocolIE-ID ::= 139

```
id-IntendedTDD-DL-ULConfiguration-NR
id-TNLConfigurationInfo
id-PartialListIndicator-NR
id-MessageOversizeNotification
id-CellAndCapacityAssistanceInfo-NR
id-NG-RANTraceID
id-NonGBRResources-Offered
id-FastMCGRecovervRRCTransfer-SN-to-MN
id-RequestedFastMCGRecoveryViaSRB3
id-AvailableFastMCGRecovervViaSRB3
id-RequestedFastMCGRecoveryViaSRB3Release
id-ReleaseFastMCGRecoveryViaSRB3
id-FastMCGRecovervRRCTransfer-MN-to-SN
id-ExtendedRATRestrictionInformation
id-OoSMonitoringRequest
id-FiveGCMobilityRestrictionListContainer
id-PartialListIndicator-EUTRA
id-CellAndCapacityAssistanceInfo-EUTRA
id-CHOinformation-Req
id-CHOinformation-Ack
id-targetCellsToCancel
id-requestedTargetCellGlobalID
id-procedureStage
id-DAPSRequestInfo
id-DAPSResponseInfo-List
id-CHO-MRDC-Indicator
id-OffsetOfNbiotChannelNumberToDL-EARFCN
id-OffsetOfNbiotChannelNumberToUL-EARFCN
id-NBIoT-UL-DL-AlignmentOffset
id-LTEV2XServicesAuthorized
id-NRV2XServicesAuthorized
id-LTEUESidelinkAggregateMaximumBitRate
id-NRUESidelinkAggregateMaximumBitRate
id-PC5QoSParameters
id-AlternativeOoSParaSetList
id-CurrentOoSParaSetIndex
id-MobilityInformation
id-InitiatingCondition-FailureIndication
id-UEHistoryInformationFromTheUE
id-HandoverReportType
id-HandoverCause
id-SourceCellCGI
id-TargetCellCGI
id-ReEstablishmentCellCGI
id-TargetCellinEUTRAN
id-SourceCellCRNTI
id-UERLFReportContainer
id-NGRAN-Nodel-Measurement-ID
id-NGRAN-Node2-Measurement-ID
id-RegistrationReguest
id-ReportCharacteristics
id-CellToReport
id-ReportingPeriodicity
id-CellMeasurementResult
```

ProtocolIE-ID ::= 140 ProtocolIE-ID ::= 141 ProtocolIE-ID ::= 142 ProtocolIE-ID ::= 143 ProtocolIE-ID ::= 144 ProtocolIE-ID ::= 145 ProtocolIE-ID ::= 146 ProtocolIE-ID ::= 147 ProtocolTE-TD ::= 148ProtocolIE-ID ::= 149 ProtocolIE-ID ::= 150 ProtocolIE-ID ::= 151 ProtocolIE-ID ::= 152 ProtocolIE-ID ::= 153 ProtocolIE-ID ::= 154 ProtocolIE-ID ::= 155 ProtocolIE-ID ::= 156 ProtocolIE-ID ::= 157 ProtocolIE-ID ::= 158 ProtocolIE-ID ::= 159 ProtocolTE-TD ::= 160 ProtocolIE-ID ::= 161 ProtocolIE-ID ::= 162 ProtocolIE-ID ::= 163 ProtocolIE-ID ::= 164 ProtocolIE-ID ::= 165 ProtocolIE-ID ::= 166 ProtocolIE-ID ::= 167 ProtocolIE-ID ::= 168 ProtocolIE-ID ::= 169 ProtocolIE-ID ::= 170 ProtocolIE-ID ::= 171 ProtocolIE-ID ::= 172 ProtocolIE-ID ::= 173 ProtocolIE-ID ::= 174 ProtocolIE-ID ::= 175 ProtocolIE-ID ::= 176 ProtocolIE-ID ::= 177 ProtocolIE-ID ::= 178 ProtocolIE-ID ::= 179 ProtocolIE-ID ::= 180 ProtocolIE-ID ::= 181 ProtocolIE-ID ::= 182 ProtocolIE-ID ::= 183 ProtocolIE-ID ::= 184 ProtocolIE-ID ::= 185 ProtocolIE-ID ::= 186 ProtocolIE-ID ::= 187 ProtocolIE-ID ::= 188 ProtocolIE-ID ::= 189 ProtocolIE-ID ::= 190 ProtocolIE-ID ::= 191 ProtocolIE-ID ::= 192 ProtocolIE-ID ::= 193

```
id-NG-RANnode1CellID
id-NG-RANnode2CellID
id-NG-RANnodelMobilityParameters
id-NG-RANnode2ProposedMobilityParameters
id-MobilityParametersModificationRange
id-TDDULDLConfigurationCommonNR
id-CarrierList
id-ULCarrierList
id-FrequencyShift7p5khz
id-SSB-PositionsInBurst
id-NRCellPRACHConfig
id-RACHReportInformation
id-IABNodeIndication
id-Redundant-UL-NG-U-TNLatUPF
id-CNPacketDelayBudgetDownlink
id-CNPacketDelayBudgetUplink
id-Additional-Redundant-UL-NG-U-TNLatUPF-List
id-RedundantCommonNetworkInstance
id-TSCTrafficCharacteristics
id-RedundantOoSFlowIndicator
id-Redundant-DL-NG-U-TNLatNG-RAN
id-ExtendedPacketDelayBudget
id-Additional-PDCP-Duplication-TNL-List
id-RedundantPDUSessionInformation
id-UsedRSNInformation
id-RLCDuplicationInformation
id-NPN-Broadcast-Information
id-NPNPagingAssistanceInformation
id-NPNMobilityInformation
id-NPN-Support
id-MDT-Configuration
id-MDTPLMNList
id-TraceCollectionEntityURI
id-UERadioCapabilityID
id-CSI-RSTransmissionIndication
id-SNTriggered
id-DLCarrierList
id-ExtendedTAISliceSupportList
id-cellAssistanceInfo-EUTRA
END
-- ASN1STOP
```

### 9.3.8 Container definitions

 ASN1START
 **************
 Container definitions
 *****************

ProtocolIE-ID ::= 194 ProtocolIE-ID ::= 195 ProtocolIE-ID ::= 196 ProtocolIE-ID ::= 197 ProtocolIE-ID ::= 198 ProtocolIE-ID ::= 199 ProtocolIE-ID ::= 200 ProtocolIE-ID ::= 201 ProtocolIE-ID ::= 202 ProtocolIE-ID ::= 203 ProtocolIE-ID ::= 204 ProtocolIE-ID ::= 205 ProtocolIE-ID ::= 206 ProtocolIE-ID ::= 207 ProtocolIE-ID ::= 208 ProtocolIE-ID ::= 209 ProtocolIE-ID ::= 210 ProtocolIE-ID ::= 211 ProtocolIE-ID ::= 212 ProtocolIE-ID ::= 213 ProtocolIE-ID ::= 214 ProtocolIE-ID ::= 215 ProtocolIE-ID ::= 216 ProtocolIE-ID ::= 217 ProtocolIE-ID ::= 218 ProtocolIE-ID ::= 219 ProtocolIE-ID ::= 220 ProtocolIE-ID ::= 221 ProtocolIE-ID ::= 222 ProtocolIE-ID ::= 223 ProtocolIE-ID ::= 224 ProtocolIE-ID ::= 225 ProtocolIE-ID ::= 226 ProtocolIE-ID ::= 227 ProtocolIE-ID ::= 228 ProtocolIE-ID ::= 229 ProtocolIE-ID ::= 230 ProtocolIE-ID ::= 231 ProtocolIE-ID ::= 232

```
XnAP-Containers {
itu-t (0) identified-organization (4) etsi (0) mobileDomain (0)
ngran-access (22) modules (3) xnap (2) version1 (1) xnap-Containers (5) }
DEFINITIONS AUTOMATIC TAGS ::=
BEGIN
       ******************
-- IE parameter types from other modules.
__ ********************
IMPORTS
   maxPrivateIEs,
   maxProtocolExtensions,
   maxProtocolIEs,
   Criticality,
   Presence,
   PrivateIE-ID,
   ProtocolIE-ID
FROM XnAP-CommonDataTypes;
__ ********************
-- Class Definition for Protocol IEs
__ ********************************
XNAP-PROTOCOL-IES ::= CLASS {
   &id
                ProtocolIE-ID
                                   UNIQUE,
   &criticality
                Criticality,
   &Value,
   &presence
                Presence
WITH SYNTAX {
                &id
   CRITICALITY
                &criticality
   TYPE
                &Value
   PRESENCE
                &presence
     *******************
-- Class Definition for Protocol IE pairs
__ ********************
XNAP-PROTOCOL-IES-PAIR ::= CLASS {
                      ProtocolIE-ID
                                      UNIQUE,
   &firstCriticality
                      Criticality,
   &FirstValue,
   &secondCriticality
                      Criticality,
```

```
&SecondValue,
    &presence
                           Presence
WITH SYNTAX {
    FIRST CRITICALITY
                          &firstCriticality
    FIRST TYPE
                          &FirstValue
                          &secondCriticality
    SECOND CRITICALITY
    SECOND TYPE
                          &SecondValue
                           &presence
    PRESENCE
-- Class Definition for Protocol Extensions
XNAP-PROTOCOL-EXTENSION ::= CLASS {
    &id
                       ProtocolIE-ID
                                          UNIQUE,
    &criticality
                       Criticality,
    &Extension,
    &presence
                       Presence
WITH SYNTAX {
    ID
                       &id
    CRITICALITY
                       &criticality
    EXTENSION
                       &Extension
    PRESENCE
                       &presence
-- Class Definition for Private IEs
__ ********************
XNAP-PRIVATE-IES ::= CLASS {
                       PrivateIE-ID,
   &id
   &criticality
                       Criticality,
    &Value,
    &presence
                       Presence
WITH SYNTAX {
                       &id
    CRITICALITY
                       &criticality
                       &Value
    PRESENCE
                       &presence
-- Container for Protocol IEs
```

ETSI TS 138 423 V16.2.0 (2020-07)

```
__ *********************
ProtocolIE-Container {XNAP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Single-Container {XNAP-PROTOCOL-IES : IEsSetParam} ::= ProtocolIE-Field {{IEsSetParam}}
ProtocolIE-Field {XNAP-PROTOCOL-IES : IEsSetParam} ::= SEQUENCE {
                                                 ({IEsSetParam}),
              XNAP-PROTOCOL-IES.&id
   criticality XNAP-PROTOCOL-IES.&criticality
                                                 ({IEsSetParam}{@id}),
                                                 ({IEsSetParam}{@id})
              XNAP-PROTOCOL-IES.&Value
  *****************
-- Container for Protocol IE Pairs
  ProtocolIE-ContainerPair {XNAP-PROTOCOL-IES-PAIR : IEsSetParam} ::=
   SEQUENCE (SIZE (0..maxProtocolIEs)) OF
   ProtocolIE-FieldPair {{IEsSetParam}}
ProtocolIE-FieldPair {XNAP-PROTOCOL-IES-PAIR : IESSetParam} ::= SEQUENCE {
                                                        ({IEsSetParam}),
          XNAP-PROTOCOL-IES-PAIR.&id
   firstCriticality XNAP-PROTOCOL-IES-PAIR.&firstCriticality
                                                        ({IEsSetParam}{@id}),
   firstValue
             XNAP-PROTOCOL-IES-PAIR.&FirstValue
                                                        ({IEsSetParam}{@id}),
   secondCriticality XNAP-PROTOCOL-IES-PAIR.&secondCriticality
                                                        ({IEsSetParam}{@id}),
                                                        ({IEsSetParam}{@id})
   secondValue
                   XNAP-PROTOCOL-IES-PAIR.&SecondValue
  *****************
-- Container Lists for Protocol IE Containers
     ******************
ProtocolIE-ContainerList {INTEGER : lowerBound, INTEGER : upperBound, XNAP-PROTOCOL-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-Container {{IEsSetParam}}
ProtocolIE-ContainerPairList {INTEGER : lowerBound, INTEGER : upperBound, XNAP-PROTOCOL-IES-PAIR : IESSetParam} ::=
   SEQUENCE (SIZE (lowerBound..upperBound)) OF
   ProtocolIE-ContainerPair {{IEsSetParam}}
   -- Container for Protocol Extensions
    *******************
ProtocolExtensionContainer {XNAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::=
                                                                  SEQUENCE (SIZE (1..maxProtocolExtensions)) OF
   ProtocolExtensionField {{ExtensionSetParam}}
```

439

```
ProtocolExtensionField {XNAP-PROTOCOL-EXTENSION : ExtensionSetParam} ::= SEQUENCE {
                                                        ({ExtensionSetParam}),
                    XNAP-PROTOCOL-EXTENSION.&id
   criticality
                                                       ({ExtensionSetParam}{@id}),
                    XNAP-PROTOCOL-EXTENSION.&criticality
                                                       ({ExtensionSetParam}{@id})
   extensionValue
                    XNAP-PROTOCOL-EXTENSION. & Extension
    -- Container for Private IEs
__ ********************
PrivateIE-Container {XNAP-PRIVATE-IES : IEsSetParam} ::=
   SEQUENCE (SIZE (1..maxPrivateIEs)) OF
   PrivateIE-Field {{IEsSetParam}}
PrivateIE-Field {XNAP-PRIVATE-IES : IEsSetParam} ::= SEQUENCE {
                 XNAP-PRIVATE-IES.&id
                                             ({IEsSetParam}),
                 XNAP-PRIVATE-IES.&criticality ({IEsSetParam}{@id}),
   criticality
   value
                 XNAP-PRIVATE-IES.&Value
                                             ({IEsSetParam}{@id})
END
-- ASN1STOP
```

### 9.4 Message transfer syntax

XnAP shall use the ASN.1 Basic Packed Encoding Rules (BASIC-PER) Aligned Variant as transfer syntax, as specified in ITU-T Rec. X.691 [15].

#### 9.5 Timers

#### TXn<sub>RELOCprep</sub>

- Specifies the maximum time for the Handover Preparation procedure in the source NG-RAN node.

#### $TXn_{RELOCoverall} \\$

- Specifies the maximum time for the protection of the overall handover procedure in the source NG-RAN node.

#### $TXn_{DCprep}$

- Specifies the maximum time for the S-NG-RAN node Addition Preparation or M-NG-RAN node initiated S-NG-RAN node Modification Preparation.

#### $TXn_{DCoverall} \\$

Specifies the maximum time in the S-NG-RAN node for either the S-NG-RAN node initiated S-NG-RAN node
 Modification procedure or the protection of the NG-RAN actions necessary to configure UE resources at S-NG-RAN node Addition or M-NG-RAN node initiated S-NG-RAN node Modification.

# Handling of unknown, unforeseen and erroneous protocol data

Section 10 of TS 38.413 [5] is applicable for the purposes of the present document.

# Annex A (informative): Change history

Change history							
Date	Meeting	TDoc	CR	Rev	Cat	Subject/Comment	New version
2017-04	RAN3#95bis	R3-171316				Implementing agreements from meeting RAN3#95bis: R3-171147 (removing last two IEs and FFS on NG-C UE), R3- 171372, R3-171351 (only NSSAI related text), R3-171338 (with Editor's Note on text and message structure), R3-171371 (with Editor's Note in generic section and name for RAN Paging FFS), R3-171345, R3-171347	0.0.1
2017-05	RAN3#96					Add SGNB MODIFICATION REQUEST in tabular. Editorial change	0.0.2
2017-05	RAN3#96					Implementing agreements from meeting RAN3#96: R3-171925 (Handover messages – tabular format), R3-171928 (additions for RAN Paging) Editorials (remove highlight, change style sheet assignments, correcting and adding references to other TSs and TRs, replacing some FFSs by Editor's Notes)	0.1.0
2017-06	RAN3#ad- hoc2	R3-172548				Submission	0.1.1
2017-06	RAN3#ad- hoc2	R3-173452				Implementing agreed R3-172612 and agreed node naming conventions.	0.2.0
2017-08	RAN3#97	R3-173462				Implement the agreed pCRs from RAN3#97 meeting: R3-173237, R3-173337, R3-173416, R3-173429, R3-173431	0.3.0
2017-10	RAN3#97bis	R3-174242				Implementing the agreed pCRs from RAN3#97bis meeting: R3-173976, R3-174097, R3-174183, R3-174192, R3-174205	0.4.0
2017-12	RAN3#98	R3-175058				Implementing agreed pCRs from RAN3#98 meeting: R3-175024, R3-174817, R3-174920, R3-174920, R3-174924, R3-174934, R3-174837, R3-175077	0.5.0
2018.01	RAN3 AH 1801	R3-180656				Implementing agreed pCRs from RAN3 AH 1801: R3-180114, R3-180545, R3-180548, R3-180561, R3-180569, R3-180601, R3-180607, R3-180615, R3-180629, R3-180631, R3-180638	0.6.0
2018-03	RAN3#99	R3-181593				Implementing agreed pCRs from RAN3#99: R3-180850, R3-180980, R3-181247, R3-181280, R3-181350, R3-181385, R3-181390, R3-181415, R3-181418, R3-181461, R3-181504, R3-181509	0.7.0
2018-04	RAN3#99bis	R3-182527				Implementing agreements from RAN3#99bis: R3-182213, R3-182396, R3-182401, R3-181855, R3-182488, R3-182371, R3-182157, R3-182373, R3-182375, R3-182376, R3-182163, R3-182384, R3-182392, R3-181825, R3-182494, R3-181980, R3-182433, update along R3-182378, update along R3-182344, update along R3-181899	0.8.0
2018-05	RAN3#100	R3-183597				Implementing agreements from RAN3#100: R3-182614, R3-182615, R3-182635, R3-182815, R3-182935, R3-183091, R3-183154, R3-183165, R3-183252, R3-183314, R3-183369, R3-183376, R3-183386, R3-183389, R3-183393, R3-183404, R3-183407, R3-183411, R3-183441, R3-183442, R3-183444, R3-183450, R3-183455, R3-183497, R3-183511, R3-183517, R3-183519, R3-183534, R3-183541. Adding ASN.1 and performing editorial cleanups.	0.9.0
2018-06	RAN#80	RP-180816				Submission to TSG RAN for approval	1.0.0
2018-06	RAN#80		-	-	-	Specification approved at TSG-RAN and placed under change control	15.0.0
2018-09	RAN#81	RP-181922	8000	2		Collected corrections for XnAP version 15.0.0	15.1.0
2018-09 2018-12	RAN#81 RAN#82	RP-181921 RP-182448	0002	4		Addition of MCG cell ID to solve the PCI confusion at SN NR Corrections (TS 38.423 Baseline CR covering RAN3-101Bis	15.1.0 15.2.0
2019-03	RAN#83	RP-190555	0012	3	F	and RAN3-102 agreements)  Correction to RRC transfer	15.3.0
2019-03	RAN#83	RP-190201		3		Transfer of the PSCell information for LI purposes	15.3.0
2019-03	RAN#83	RP-190555		1		Missing causes for context retrieval failure	15.3.0
2019-03	RAN#83	RP-190554		1	F	Data volume reporting for MR-DC with 5GC	15.3.0
2019-03	RAN#83	RP-190555		2	F	Separate UL/DL limits for UE's maximum IP rate	15.3.0
2019-03	RAN#83	RP-190555		2		LTE-NR UE Level Resource Coordination	15.3.0
2019-03	RAN#83	RP-190555		2		Support of PDU session split during handover procedure	15.3.0
2019-03 2019-03	RAN#83 RAN#83	RP-190554 RP-190555		-	F	Correction of RAN triggered PDU Session split Correction of Slice Support over Xn	15.3.0 15.3.0
2019-03	RAN#83	RP-190555		2		Correction of Silce Support over Xn  Correction of QoS Flow Mapping Indication	15.3.0
2019-03	RAN#83	RP-190555	0041	-	F	Correction or QGS Flow Mapping Indication  Correction for RRC container in SN MODIFICATION CONFIRM message	15.3.0
2019-03	RAN#83	RP-190555	0048	-	F	Clarification on Inter-node message for NE-DC	15.3.0
2019-03	RAN#83	RP-190555		_	F	Introduce IMEISV to addition request to Xn	15.3.0
2019-03	RAN#83	RP-190555	0051	2		Support of integrity protection for Option 4&7	15.3.0
2019-03	RAN#83	RP-190555		1	F	Correction on partial reset	15.3.0
2019-03	RAN#83	RP-190555		1		Correction on TAI Support List	15.3.0
2019-03	RAN#83	RP-190555	0061	1	F	Rapporteur updates on version 15.2.0	15.3.0

2040.02	D V VI#03	DD 100556	0065	1 21	_	C NCCAL undete during FDC to ECC handover	15 2 0
2019-03 2019-03	RAN#83 RAN#83	RP-190556 RP-190556	0065	2 1	<u> </u>	S-NSSAI update during EPS to 5GS handover  Correction of EPC interworking	15.3.0 15.3.0
2019-03	RAN#84	RP-190556		3	F	Correction on AMF connectivity	15.3.0
2019-07	RAN#84	RP-191394 RP-191397	0059	2	F	Support of ongoing re-mapping on source side during SDAP	15.4.0
2019-01	11/11/11/104	101-191391	0033		•	Imobility	13.4.0
2019-07	RAN#84	RP-191397	0068	1	F	XnAP Alignment of MN Triggered PDU Session Split	15.4.0
2019-07	RAN#84	RP-191395	0071	2	F	CR38423 for Addition of MN (MeNB) cell ID to solve the PCI	15.4.0
2010 01	10 11 11 0 1	141 101000	007.	_	•	confusion in SN(SgNB) modification Request message	10.1.0
2019-07	RP-84	RP-191394	0076	1	F	RAN paging failure handling in SN in case of MR-DC	15.4.0
2019-07	RP-84	RP-191397		3	F	Correction to behaviour of SN for security handling	15.4.0
20.00.	• .		0002			This CR was not implemented as is was not based on the latest	
						version of the spec.	
2019-07	RP-84	RP-191395	0083	-	F	Support for delivering UE band information in RAN paging	15.4.0
2019-07	RP-84	RP-191396		-	F	Corrections for support of data forwarding for reestablishment UE	15.4.0
2019-07	RP#84		0096	2	F	Rapporteur's corrections to version 15.3.0	15.4.0
2019-07	RP-84	RP-191395	0099	1	F	Correction for SN terminated DRB To Be Setup in SN Addition	15.4.0
					-	Response	
2019-07	RP-84	RP-191395	0100	2	F	CR for TS 38.423 for Data Forwarding Proposal	15.4.0
2019-07	RP-84		0102	5	F	RAN sharing with multiple Cell ID broadcast	15.4.0
2019-07	RP-84	RP-191397		1	F	Correction of Core Network Type Restriction	15.4.0
20.00.	• .		0.0.	•		This CR was not implemented as is was not based on the latest	
						version of the spec.	
2019-07	RP-84	RP-191397	0105	2	F	Data forwarding and QoS flow remapping	15.4.0
2019-07	RP-84		0112	1	F	XnAP Correction of PDU Session Resource Setup Response Info	15.4.0
	51		<del>-</del>		•	- MN terminated	
2019-07	RP-84	RP-191395	0113	1	F	XnAP Correction of PDU Session Resource Setup Complete Info –	15.4.0
20.00.	• .		00	•		SN terminated	
2019-07	RP-84	RP-191395	0125	-	F	Support of single UL transmission for NE-DC	15.4.0
2019-07	RP-84	RP-191395		1	F	In-order delivery when QoS flows offloaded from SN	15.4.0
2019-07	RP-84		0132	-	F	Transferring of RRC message from Master node to Secondary	15.4.0
						node	
2019-07	RP-84	RP-191395	0133	1	F	Clarification on Retrieve UE Context procedure	15.4.0
2019-07	RP-84		0135	1	F	PDCP SN length related clean-up over To Be Modified structure in	15.4.0
					-	MN initiated SN Modification procedure	
2019-07	RP-84	RP-191397	0140		F	Correction of Network Instance	15.4.0
2019-09	RP-85	RP-192166		2	F	Correction of handling of the Location Information at the MN	15.5.0
2019-09	RP-85		0146	_	F	XnAP Rel-15 Leftover Clean-ups	15.5.0
					-		
2019-09	RP-85	RP-192167	0147	1	F	XnAP Corrections of Activity Notification Usage	15.5.0
2019-09	RP-85	RP-192167	0153	-	F	Critical correction to the presence of the TAC lists in the Service	15.5.0
						Area Item IE	
2019-09	RP-85	RP-192167	0158	1	F	CR38.423 for Correction on RRC configuration indication	15.5.0
2019-09	RP-85	RP-192166	0170	2	F	Correction on source TNL ADDRESS in NG-C interface	15.5.0
2019-09	RP-85		0173	1	F	Correction on Maximum Integrity Protected Data Rate	15.5.0
2019-09	RP-85	RP-192167		1	F	Rapporteur's corrections for TS 38.423	15.5.0
2019-09	RP-85	RP-192166		1	F	Corrections regarding mandatory statements in Semantics	15.5.0
					-	Descriptions	
2019-09	RP-85	RP-192167	0216	1	F	Support of default DRB coordination in MR-DC with 5GC	15.5.0
2019-12	RP-86	RP-192916		7	F	Correction on DRB ID co-ordination between MN and SN	15.6.0
2019-12	RP-86	RP-192916		4	F	Correction to behaviour of SN for security handling	15.6.0
2019-12	RP-86	RP-192916		2	F	Correction of Core Network Type Restriction	15.6.0
2019-12	RP-86	RP-192916		2	F	SN Status Transfer for bearer reconfiguration during HO with DC	15.6.0
2019-12	RP-86	RP-192915		1	F	Misalignment between tabular and ASN.1	15.6.0
2019-12	RP-86	RP-192915		1	F	Correction of S-NSSAI coding	15.6.0
2019-12	RP-86	RP-192915		2	F	Correction to UL data forwarding	15.6.0
						Add the missing dynamic port support	
2019-12	RP-86	RP-192915 RP-192915			F F	Correction on the data forwarding in S-NG-RAN initiated S-NG-	15.6.0
2019-12	RP-86	KF-192915	0266	-	r	RAN Release	15.6.0
2040 42	DD 06	RP-192916	0272		F		15.0
2019-12	RP-86	1		4		Correction of Xn handover	15.6.0
2019-12 2019-12	RP-86	RP-192916		1	<u>F</u>	Support of delta configuration in MR-DC	15.6.0
	RP-86	RP-192916			F	Missing description of a cause value	15.6.0
2019-12	RP-86	RP-192916		1	F	Correction to SN Status Transfer considering MR-DC operations	15.6.0
2019-12	RP-86	RP-192908		4	В	BL CR to 38.423: CLI support on XnAP	16.0.0
2019-12	RP-86	RP-192693		7	F	Support for setting up IPSec a priori in Xn	16.0.0
2019-12	RP-86	RP-192913		7	<u>F</u>	Xn Setup message size limitation	16.0.0
2019-12	RP-86	RP-192915		2	F	Trace function in MR-DC	16.0.0
2019-12	RP-86	RP-192913		1	C	Extending the MDBV Range	16.0.0
2019-12	RP-86	RP-192910		2	В	Resuming SCG in RRC Resume	16.0.0
2019-12	RP-86	RP-192916		3	F	Correction on the offered non-GBR resources	16.0.0
2019-12	RP-86	RP-192910		2	В	Fast MCG link Recovery with SRB3	16.0.0
2020-03	RP-87-e	RP-200422	0274	2	В	Introduction of NR-U	16.1.0

2020-03	RP-87-e	RP-200423	0300	1	В	Supporting of RACS in XnAP	16.1.0
						(The CR is not implemented. The CR was marked agreed by	
						mistake while the WI is not yet complete)	
2020-03	RP-87-e	RP-200428		-	Α	Correction of the referred RRCResumeRequest1 name	16.1.0
2020-03	RP-87-e	RP-200476	0310	4	В	E2E delay measurement for Qos monitoring for URLLC	16.1.0
2020-03	RP-87-e	RP-200427	0318	1	F	Cleanup for Fast MCG link Recovery with SRB3	16.1.0
2020-03	RP-87-e	RP-200428	0322	1	Α	Misalignment between the tabular and ASN.1 within the SN	16.1.0
						modification procedure	
2020-03	RP-87-e	RP-200428	0327	-	Α	Propagation of Roaming and Access Restriction information in NG-	16.1.0
						RAN in non-homogenous NG-RAN node deployments	
2020-03	RP-87-e		0329	-	Α	Correction of CR0236r2 to explicate procedural interaction	16.1.0
2020-03	RP-87-e	RP-200428		1	Α	Correction of CR0282r1 – procedure text	16.1.0
2020-03	RP-87-e	RP-200429	0334	1	F	Correction of CR0089r4: CLI Support on XnAP	16.1.0
2020-03	RP-87-e	RP-200425	0335	1	F	Correction of CR0208 on Xn Setup Message Size Control	16.1.0
2020-03	RP-87-e	RP-200425	0337	1	D	Rapporteur Corrections Rel-16	16.1.0
2020-07	RP-88-e	RP-201075	0136	13	В	Baseline CR for introducing Rel-16 NR mobility enhancement	16.2.0
2020-07	RP-88-e	RP-201088	0144	7	В	Introduction of CP UP NB-IoT Others	16.2.0
2020-07	RP-88-e	RP-201074	0151	13	В	Support of NR V2X over Xn	16.2.0
2020-07	RP-88-e	RP-201086	0182	8	В	Introduction of Suspend-Resume	16.2.0
2020-07	RP-88-e	RP-201082	0221	12	В	Addition of SON features	16.2.0
2020-07	RP-88-e	RP-201077	0223	6	В	BL CR to 38.423: Support for IAB	16.2.0
2020-07	RP-88-e	RP-201079	0230	11	В	Introduction of NR_IIOT support to TS 38.423	16.2.0
2020-07	RP-88-e	RP-201080	0289	7	В	Introduction of Non-Public Networks	16.2.0
2020-07	RP-88-e	RP-201082	0291	10	В	MDT Configuration support for XnAP	16.2.0
2020-07	RP-88-e	RP-201078	0300	5	В	Supporting of RACS in XnAP	16.2.0
2020-07	RP-88-e	RP-201087	0343	2	В	Introduction of eMTC connected to 5GC	16.2.0
2020-07	RP-88-e		0344	1	В	CR38.423 on TDD pattern for NR-DC power control cordination for	16.2.0
						sol1	
2020-07	RP-88-e	RP-201073	0346	3	F	Slot length correction in Intended TDD UL-DL Configuration	16.2.0
2020-07	RP-88-e		0348	1	F	Introduction of CSI-RS configuration switch on Xn	16.2.0
2020-07	RP-88-e	RP-201090		2	Α	Encoding PLMNs in served cell information NR	16.2.0
2020-07	RP-88-e	RP-201085	0359	1	F	Rapporteur's Correction to XnAP version 16.1.0	16.2.0
2020-07	RP-88-e	RP-201085	0360	-	F	Correctinos to Xn Setup message size limitation solution	16.2.0
2020-07	RP-88-e	RP-201091	0373		F	Correction on nested SN modification procedure	16.2.0
2020-07	RP-88-e	RP-201090	0375	-	Α	Encoding PLMNs in served cell information IEs - semantics	16.2.0
						corrections	
2020-07	RP-88-e	RP-201090	0381	4	Α	Clarification on MIB only scenario	16.2.0
2020-07	RP-88-e	RP-201093	0382		Α	TS38.423 Resolving Erroneous unknown-old-en-gNB-UE-X2AP-ID Rel-16	16.2.0
2020-07	RP-88-e	RP-201076	0388	-	В	Inter-RAT HO support for fast MCG recovery	16.2.0
2020-07	RP-88-e		0393	2	F	Correction on RF parameters in NR cell information	16.2.0
2020-07	RP-88-e		0394	4	F	Correction of S-NSSAI range	16.2.0

## History

Document history								
V16.2.0	July 2020	Publication						