Selectable CAN install guide

Electroniq Buttons Boutique*
(Dated: November 2, 2026)

This guide walks you through the steps needed to install the Selectable CAN harness in your 2021-2024 EV6. See also the video guides (https://youtube.com/playlist?list=PLYCTmVJH4UYqnw87UZAaqMo1GrOv0cJaL):

Step 1: Disconnect 12V: video guide (https://youtu.be/ePBdyeBYKk4)

Step 2: Install Harness: harness install guide (https://youtu.be/yMLuuQDNEs4)

I. INTRODUCTION

This guide describes the steps to install the selectable CAN harness into an EV6 ICU. See also these instructions (https://github.com/dragz/explorationsincarhacking/blob/main/articles/getting_past_the_secure_gateway/getting_past_the_secure_gateway.md) on identifying and accessing the ICU-H connector. Unlike for the Ioniq 5, the EV6 install requires removal of the ICU (yellow box) for installation. More specific written instructions are needed on this. For now, follow Suave's video guide and use this for additional reference.

Necessary tools:

1. 10mm socket or adjustable wrench for 12V battery
2. Scissors

Kit components:

1. Selectable CAN harness
2. WiCAN
3. 60mm OBD mount bracket
4. 70mm double-sided tape (two pieces included for redundancy)
5. 4 zip ties


II. STEP 1: REMOVE 12V NEGATIVE TERMINAL

First, always disconnect the 12V battery before removing any electrical connectors! Removing a live electrical connector could cause a discharge and destroy a connector or ECU in your car.

Step-by-step instructions:

1. Open hood (Figure 1a)
2. Open frunk
3. Remove panel covering 12V (Figure 1b)
4. Loosen nut on negative side with a 10mm socket (Figure 1c)
5. Remove negative terminal (Figure 1d)

* support@electroniqbuttons.com

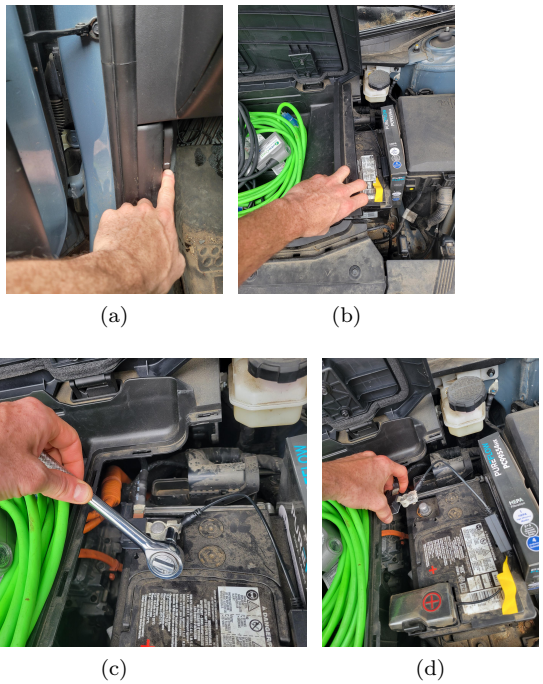

(a) (b)

(c) (d)

Figure 1. (a) Open the hood. (b) Remove panel covering 12V. (c) Loosen nut on negative terminal. (d) Remove negative terminal.

III. STEP 2: HARNESS INSTALL

This step will cover the installation of the harness into the ICU. Note that the harness also fits into ICU-D on the front of the ICU. THIS IS NOT CORRECT. ICU-H is located on the back of the ICU.

Step-by-step instructions:

1. Remove ICU-H following these instructions (https://github.com/dragz/explorationsincarhacking/blob/main/articles/getting_past_the_secure_gateway/getting_past_the_secure_gateway.md)
2. Install the fuse tap into spare 2 for always-on operation, or spare 1 for on-with-car-on operation (Figure 2a)
3. Remove ICU-H connector (Figure 2b)
4. Insert the harness female side into the ICU
5. Insert the female connector you removed into the harness male side
6. Mount bracket on the side of the blue connector, so that the OBD face will point down (Figure 2c)
7. Insert the OBD port into the bracket
8. Insert WiCAN into OBD port

IV. STEP 3: CLEAN UP

Reconnect 12V battery negative terminal. The WiCAN should immediately show a blue light.

A. WiCAN setup

The WiCAN by default provides a WiFi access point. Look for a network named `WiCAN_xxxxxxx`, where `xxxxxxx` is the device ID of your unit, and connect to it with the default password `@meatpi#`. From a phone, the network can take



(a) (b) (c)

Figure 2. (a) Fuse tap doubled with dashcam fuse tap on spare 2. Note that this will not work as depicted and requires a second fuse on the lower fuse tap. (b) ICU-H (green arrow) with harness installed; male harness connector (red arrow) mated with original female connector. (c) OBD port mounted on bracket.

a few seconds to appear, and your phone will warn you that it has no internet access; stay connected anyway. Then open http://192.168.80.1 in a browser to reach the configuration interface. (A WiCAN Pro, not officially supported, uses http://192.168.0.10 instead.)

In the "Settings" tab, change the access point password. With the default password, anyone within WiFi range of your car who knows the default password could unlock your car (yes, this feature is coming!). If you leave the WiCAN in access point mode, we also suggest disabling BLE for now.

Optionally, the WiCAN can be configured in station mode to join your home WiFi so that you can reach it from inside the house. In the "Settings" tab, set "Mode" to "AP+Station", enter your network's "SSID" and "Password", and press "Submit changes". The WiCAN keeps broadcasting its own access point, so you cannot lock yourself out this way. However, access point mode in "AP+Station" can be a bit finicky, so we recommend AP only unless you're using Home Assistant or similar to grab data from your car. The "Status" tab then shows the "Station IP" your router assigned, which is the address to use from your home network.

The full WiCAN WiFi documentation is at https://meatpihq.github.io/wican-fw/config/wifi.