Preconditioning kit install guide: Ioniq 6

Ioniq Guy and Electroniq Buttons Boutique*
(Dated: October 12, 2026)

This guide walks you through the steps needed to install the head unit preconditioning kit in your 2023-2025 Ioniq 6.

Step 1: Disconnect 12V:


Step 2: Trim:

Step 3: Harness Connection:

Step 4: OBD Mount:

Step 4.5: WiCAN Plug-In:

Step 5: Clean up:

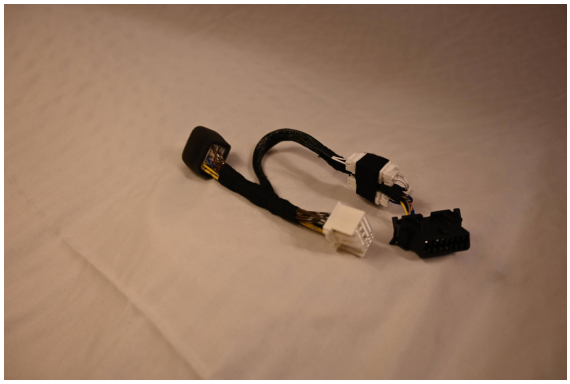

(a)

Figure 1. (a) Man-in-the-middle harness.

I. INTRODUCTION

The purpose of this guide is to illustrate step-by-step instructions for installing the head unit preconditioning kit, or just the head unit man-in-the-middle (MITM) harness, shown in Figure 1a. In section III, we describe the trim removal process to access the head unit. In section IV, we describe the process of plugging in the harness. In section V, we show attachment of the OBD port and how to plug in the microcontroller.

Necessary tools:

1. 10mm socket or adjustable wrench for 12V battery (not included)
2. Trim removal tools (included if selected)

Kit components:

1. Head unit harness
2. WiCAN
3. 70mm OBD mount bracket
4. 70mm double-sided tape (two pieces included for redundancy)
5. 4 zip ties

* support@electroniqbuttons.com

II. STEP 1: REMOVE 12V NEGATIVE TERMINAL

First, always disconnect the 12V battery before removing any electrical connectors! Removing a live electrical connector could cause a discharge and destroy a connector or ECU in your car.

Step-by-step instructions:

1. Open hood
2. Open frunk (Figure 2a)
3. Remove panel covering 12V
4. Loosen nut on negative side with a 10mm socket
5. Remove negative terminal



(a)

Figure 2. (a) Open frunk.

III. STEP 2: TRIM

The goal here is to get to the treasure chest: the head unit. It's behind a single trim panel called the Crash Pad Under Cover, marked with an X in Figure 3.



(a)

Figure 3. X marks the head unit.

Step-by-step instructions:

1. Remove crash pad under cover (Figure 4a):
   (a) Use a trim removal tool to gently pry to expose one of the three clips (Figure 4b)
   (b) Press on the tab on the clip, indicated by the thumb in Figure 4b, to release the clip
2. Remove screws holding head unit in place (Figure 4d)



(a) (b) (c) (d)

Figure 4. (a) Crash pad under cover. (b) Removing crash pad under cover. (c) Head unit exposed. (d) Removing screws holding head unit in place.

IV. STEP 3: HARNESS CONNECTION

This step covers the installation of the harness into the head unit.
Step-by-step instructions:

1. Identify original grey female head unit connector (Figure 5c)
2. Remove it by squeezing the clip and pulling down
3. Insert the female connector you removed into the harness male side (Figure 5d)
4. Insert the harness female side into the head unit (Figure 5e)


V. STEP 4: OBD MOUNT

In this step, we mount the OBD end of the harness securely and plug in the WiCAN.
Step-by-step instructions:

1. Thread OBD end over head unit mount bracket (Figure 6a)
2. Re-mount head unit. (Figure 4d)
3. Plug OBD female into provided bracket, if not already mounted
4. Use double-sided tape to mount bracket to a flat trim surface
5. Use zip ties to attach harness to other wires and mount points
6. While holding bracket, plug in WiCAN (Figure 6c)

VI. STEP 5: CLEAN UP

Reverse the trim removal steps. Make sure trim clips are aligned, and then firmly pop the trim panels back into place. Reconnect 12V battery negative terminal. The WiCAN should immediately show a blue light.

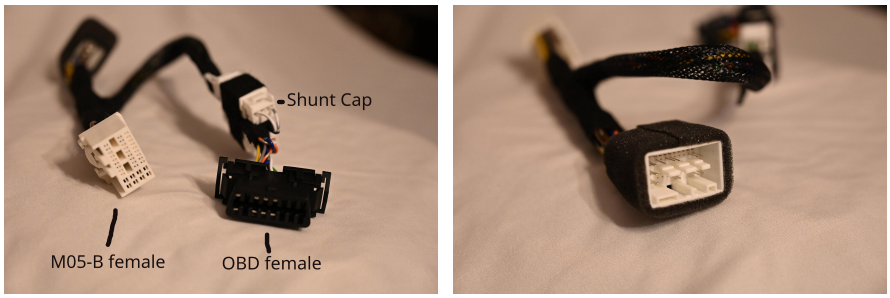

(a) (b)



(c) (d) (e)

Figure 5. (a) Labeled photo showing female harness connector. (b) Male harness connector. (c) Head unit with original connectors plugged in. (d) Female connector (grey) removed from head unit. (e) Harness installed in head unit.



(a) (b) (c)

Figure 6. (a) OBD threaded over head unit mount bracket. (b) Harness zip-tied to existing wire. (c) WiCAN inserted into OBD.

A. WiCAN setup

The WiCAN by default provides a WiFi access point. Look for a network named `WiCAN_xxxxxxx`, where `xxxxxxx` is the device ID of your unit, and connect to it with the default password `@meatpi#`. From a phone, the network can take a few seconds to appear, and your phone will warn you that it has no internet access; stay connected anyway. Then open http://192.168.80.1 in a browser to reach the configuration interface. (A WiCAN Pro, not officially supported, uses http://192.168.0.10 instead.)

In the "Settings" tab, change the access point password. With the default password, anyone within WiFi range of your car who knows the default password could unlock your car (yes, this feature is coming!). If you leave the WiCAN in access point mode, we also suggest disabling BLE for now.

Optionally, the WiCAN can be configured in station mode to join your home WiFi so that you can reach it from inside the house. In the "Settings" tab, set "Mode" to "AP+Station", enter your network's "SSID" and "Password", and press "Submit changes". The WiCAN keeps broadcasting its own access point, so you cannot lock yourself out this way. However, access point mode in "AP+Station" can be a bit finicky, so we recommend AP only unless you're using Home Assistant or similar to grab data from your car. The "Status" tab then shows the "Station IP" your

router assigned, which is the address to use from your home network.

The full WiCAN WiFi documentation is at https://meatpihq.github.io/wican-fw/config/wifi.