#### Disclaimer

The slides presented here are a combination of the CS251 course notes from previous terms, the work of Xiao-Bo Li, and material from the required textbook "Computer Organization and Design, ARM Edition," by David A. Patterson and John L. Hennessy. It is being used here with explicit permission from the authors.

CS251 course policy requires students to delete all course files after the term. Therefore, please do not post these slides to any website or share them.

# CS251 - Computer Organization and Design Data Representation and Manipulation and 1-Bit ALU

Instructor: Zille Huma Kamal

University of Waterloo

Winter 2024

# Data Representation and Manipulation

- How characters and numbers are represented in a typical computer
- Hardware designs which implement arithmetic operations

# Data representation

- ARMv8 is a 64-bit architecture,
   1 byte = 8 bits; 4 bytes = 1 word; 8 bytes = 1 double-word
- Bits numbered 63, 62, ..., 0
- Most significant bit (MSB) is bit 63
- Least significant bit (LSB) is bit 0
- In many examples, we will use only 4 bits for illustration purposes
- Sometimes, numbers are written in hexadecimal:
   0, 1, 2, 3, 4, 5, 6, 7, 8, 9, A, B, C, D, E, F
- 64-bit binary becomes 16 character hexadecimal
   1 hexadecimal digit is 4 binary digits
- Hexadecimal numbers are useful when addressing memory
- Can also be used in other applications, such as representing pixel color (RGB) specifications. For instance, 0x4c00ff = (76, 0, 255) resulting in the colour



#### Characters

- ASCII (American Standard Code for Information Interchange)
- Uses 7 bits to represent 128 different characters
- 8th bit (topmost) used as parity check (error detection)
- 4 characters fit into 32-bit word, 128 possibilities include upper and lower case Roman letters, punctuation marks, some computer control characters

ASCII value	Char- acter										
32	space	48	0	64	0	80	P	96		112	р
33		49	1	65	A	81	Q	97	а	113	q
34		50	2	66	В	82	R	98	b	114	r
35	#	51	3	67	С	83	S	99	С	115	8
36	\$	52	4	68	D	84	T	100	d	116	t
37	%	53	5	69	E	85	U	101	e	117	u
38	&	54	6	70	F	86	V	102	f	118	v
39		55	7	71	G	87	W	103	g	119	w
40	(	56	8	72	н	88	X	104	h	120	x
41	)	57	9	73	- 1	89	Y	105	i	121	у
42		58	:	74	J	90	Z	106	j	122	z
43	+	59	;	75	К	91	1	107	k	123	-{
44	,	60	<	76	L	92	- \	108	- 1	124	-
45		61	=	77	M	93	1	109	m	125	}
46		62	>	78	N	94		110	n	126	~
47	/	63	?	79	0	95	_	111	0	127	DEL

FIGURE 2.16 ASCII representation of characters. Note that uppers and lowercase letters differ by exactly 32; this observation can lead to shortcust in checking or changing uppers and lowercase. Values not shown include formatting characters. For example, 8 represents a backspace, 9 represents a tab character, and 13 a carriage return. Another useful value is 0 for null, the value the programming language C uses to mark the end of a strine.

- Unicode: 16 bits per character
  - ► Many more languages, other than just English

# Numbers - Unsigned Binary Numbers

• With 4 bits, can represent 0 through 15

$$1101_2 = (1 \times 2^3 + 1 \times 2^2 + 0 \times 2^1 + 1 \times 2^0)$$
  
= 13<sub>10</sub>

- With 32 bits, can represent 0 through  $2^{32} 1 = 4,294,967,295$
- With 64 bits, 0 through  $2^{64} 1 = 18,446,774,073,709,551,615$
- Useful powers of 2 for CS 251:

#### Think About It

How can we represent negative numbers?



# Numbers - Signed Binary Numbers

- First idea: use MSB to represent sign of the number, 0 for positive numbers and 1 for negative numbers.
- This approach is called *sign and magnitude*, may also be referred to as signed magnitude or sign-magnitude
- 4-bit example: 1110 is -6
- With 4 bits, can represent -7 (1111) to +7 (0111)
- Problems:
  - two different versions of zero, +0 and -0
  - addition operation requires extra steps



Second (and better) idea: two's complement representation

# Signed Binary Numbers - Two's Complement Representation

- Let MSB represent the negative of a power of 2 the smallest number that will be represented in the binary number
- With 4 bits, bit 3 (MSB) represents  $-2^3$
- $1110 = -2^3 \times 1 + 2^2 \times 1 + 2^1 \times 1 + 2^0 \times 0 = -2$
- With 4 bits, we can represent -8 (1000) to +7 (0111)
- With 32 bits, can represent −2, 147, 483, 648 to 2,147,483,647
- With 64 bits,
   -9.223,372,036,854,775,808 to 9.223,372,036,854,775,807
- Usefulness becomes apparent when we have arithmetic operations on signed numbers

#### Think About It


Using 2's complement representation of a signed binary number, what is the range of number you can represent in base 10 with an N-bit binary number?



# Solution: Range of numbers using 2's complement

- Using 2's complement, an N-bit binary number can represent:  $-2^{(N-1)}$  to  $+2^{(N-1)}-1$
- For example, a 4-bit binary number can represent:  $-2^{(4-1)}$  to  $+2^{(4-1)}-1=-2^3$  to  $+2^3-1=-8$  to +7

# 4 Bit Numbers Comparison

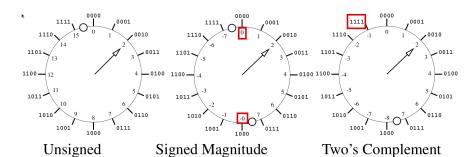

#### Note:

- 0, ..., 7 all look the same, all positive numbers look the same.
- Signed magnitude has 2 zeros. This increases hardware needed for test for zero.
- Bit pattern with all 1's represents -1,
- For two's complement, -8 + 1 = -7 works out nicely.

# Representing a Negative Number using 2's Complement

#### Negating a Two's Complement Number:

- Step 1: Begin with the representation of its absolute value, treat it as an unsigned binary number.
- Step 2: Invert x.
  - Suppose, the bit pattern from Step 1 is x
  - $ightharpoonup \bar{x}$  is the result of inverting each bit
  - Example: x = 0110,  $\bar{x} = 1001$
- Step 3: Add 1.
  - ▶ Observe  $x + \bar{x} = -1$ , then  $-x = \bar{x} + 1$

In short, to negate a number in two's complement representation, invert every bit and add 1 to the result.

# Sign Extension

• With 4 bits, 0110 is +6.

#### Try this

With 8 bits, what is +6?

• With 4 bits, 1010 is −6.

#### Try this

With 8 bits, what is -6?

- To expand number of bits used, copy old MSB into new bit positions.
- Suppose, j is MSB in 4-bit digit and i is MSB in 8-bit digit, then

$$-2^{i} + 2^{i-1} + 2^{i-2} + \dots + 2^{j+1} + 2 \cdot 2^{j} = 0$$



#### Addition

- To add two two's complement numbers, simply use the "elementary school algorithm", throwing away any carry out of the MSB position
- To subtract, simply negate and add

#### Think About It

What if the answer cannot be represented in the number of bits used in the hardware?

- This is an overflow
- Overflow in addition cannot occur if one number is positive and the other negative
- If both addends have same sign but answer has different sign, overflow has occurred

# Two's Complement Arithmetic Examples

$$3 + 3 = 6$$

The result is correct,  $(0110)_2 = (6)_{10}$ .

$$6 - 3 = 3$$

There is a carry out of 1, which we ignore.

The result is correct,  $(0011)_2 = (3)_{10}$ .

$$6 + 3 = 9$$

The result is wrong,  $(1001)_2 = (-7)_{10} \neq 9$ . Since sum of two positive numbers is negative we have an **overflow**.

#### Remember: Overflow Conditions

For three numbers in 2's complement and arithmetic addition:


$$a_1 + a_2 = a_3$$
,

- If the sign of  $a_1$ ,  $a_2$  and  $a_3$  are all the same, there is no overflow.
- The sign of  $a_1$  and  $a_2$  are the same, but  $a_3$  has a different sign, there is overflow.
- The sign of  $a_1$  and  $a_2$  are different, we can never have overflow.

# **Building An Addition Circuit**


Recall adding one bit has three inputs:

- the two numbers we add, and
- a carry in.

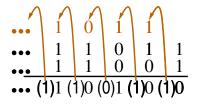

#### Basic building block is a Full Adder:

- 3 bits as inputs: A, B and CarryIn
- 2 bits as outputs: CarryOut and Sum

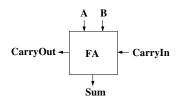

# Implementing a Full Adder

#### Truth table to describe the Full Adder

CarryIn	Α	В	CarryOut	$\operatorname{\mathtt{Sum}}$
0	0	0	0	0
0	0	1	0	1
0	1	0	0	1
0	1	1	1	0
1	0	0	0	1
1	0	1	1	0
1	1	0	1	0
1	1	1	1	1

CarryOut 
$$= A \cdot B$$
  
  $+ A \cdot CarryIn$   
  $+ B \cdot CarryIn$ 

$$Sum = \overline{CarryIn} \cdot \overline{A} \cdot B$$

$$+ \overline{CarryIn} \cdot A \cdot \overline{B}$$

$$+ CarryIn \cdot \overline{A} \cdot \overline{B}$$

$$+ CarryIn \cdot A \cdot B$$

Upon closer inspection: Sum  $= A \oplus B \oplus$  CarryIn

$$Sum = A \oplus B \oplus CarryIr$$

#### Combinational Circuit of Full Adder


#### Try this

Can you implement the combinational circuit of a full adder using only AND and OR gates?

#### Try this


Can you implement the combinational circuit of a full adder using as few logic gates as possible?

## Could this circuit be a solution for the full adder?

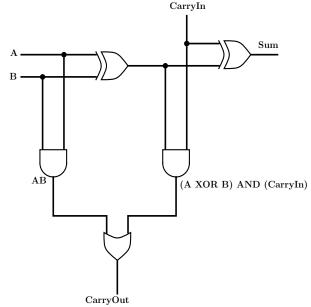

# Ripple-Carry Adder

• 4-bit example

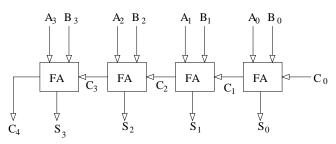

#### Think About It


## What should $C_0$ be?

- ullet A carry out from the least significant bit  $C_1=1$  can "ripple" all the way to make  $C_4=1$ .
- Easy to extend to 64 bits.
- Can be slow; "carry-lookahead" idea improves speed (not in the scope of our course)

# Ripple-Carry Adder for Subtraction?

Recall,  $A - B = A + \bar{B} + 1$ .

Therefore, if we can invert every bit in B and set  $C_0 = 1$ , we can use full adder to accomplish subtraction, such that,  $A - B = A + \bar{B} + 1$ .

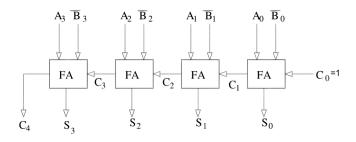

Therefore, for subtraction  $C_0 = 1$ , otherwise  $C_0 = 0$  for addition operation

# **Logical Operations**

#### Logical Shift

- ARMv8 uses LSL (Logic Shift Left) LSR (Logic Shift Right) the shamt field to specify how many bits to shift.
- shift bits in word left or right, fill in with 0's
- Shifting left *i* bits is multiplication by  $2^{i}$ . For e.g.left shift  $(0001)_{2}$  by  $1 \text{ digit} = 1 \times 2^{1} = 2_{10} = (0010)_{2}$

## Arithmetic Shift Right

- ARMv8 uses ASR
- shift right, copy sign bit in the empty bits to the left

Other shifts include: rotate left or right (moving bit rotated out to other side)


Bitwise AND, OR and EOR. EOR is exclusive OR. ORR is inclusive OR.

Logical Operation	Α	В	Result
Bitwise AND	0000 1111	1011 0111	0000 0111
Bitwise OR	1011 1111	0000 0111	1011 1111
Bitwise EOR	1011 0110	1111 1111	0100 1001

Bitwise NOT is just EOR with all-ones



#### A 1-Bit ALU

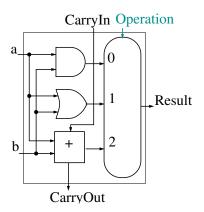


- Extends functionality of full adder
- Performs AND, OR, addition

#### Think About It

How to build a 64-bit ALU?



## A 64-bit ALU from 64 1-Bit ALUs

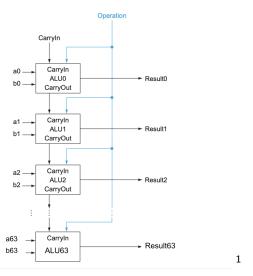

Connect 64 1-Bit ALU as with ripple-carry adder to perform 64-bit operations

<sup>&</sup>lt;sup>1</sup>image modified for correctness

# Improving the 1-Bit ALU

- How to implement subtraction, a b?
- $a + \bar{b} + 1$ .
- How to achieve this using the 1-Bit ALU:
  - lacktriangledown for ar b: add input Binvert to 1-Bit ALU and set Binvert =1
  - ▶ to add 1 to b, set CarryIn = 1 at the top of the chain when ALU operation is subtraction
  - ▶ add b+1 to a, set Operation =  $(10)_2$  to use result of adder by selecting input 2 in MUX to be Result of 1-Bit ALU
- Result =  $a + \bar{b} + 1$ . This is equal to a b

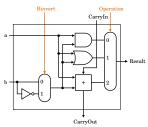


Figure A.5.8 from the text

## 1-Bit ALU for NOR

Notice: a NOR b =  $\overline{a+b} = \overline{a} \cdot \overline{b}$ 

- Compute  $\bar{a}$  with Ainvert=1
- ullet Compute  $ar{b}$  with Binvert=1
- Operation =  $(00)_2$
- Result =  $\bar{a} \cdot \bar{b}$


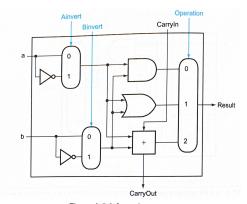


Figure A.5.9 from the text

#### Pass-B

- Pass-B, no ALU operation is needed in B.
- Set Operation =  $(11)_2$
- Set BInvert =  $(0)_2$
- The pass-B operation is needed for CBZ, which tests a single register to see if all 64-bits are zero.

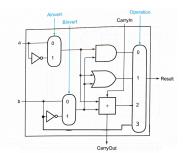

Modified Figure A.5.9 from the text

© 2017 Elsevier. Reproduced with permission from Computer

Organization and Design. ARM edition.

4□▶ 4□▶ 4□▶ 4□▶ □ 90

#### Think About It

How can we use Pass-B to test for zero?

## Solution: Zero Detection Unit


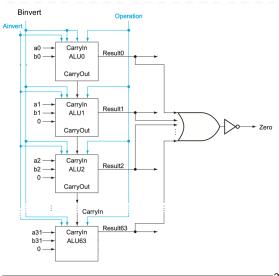


FIGURE A.5.12 The final 64-bit ALU. This adds a Zero detector to Figure A.5.11.

<sup>&</sup>lt;sup>2</sup>image modifed for correctness

# Operation Table

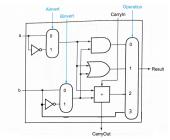


Modified Figure A.5.9 from the text

© 2017 Elsevier. Reproduced with permission from Computer Organization and Design, ARM edition.

Ainvert	Binvert	Operation	Result		
	CarryIn				
0	0	00	a AND b		
0	0	01	a OR b		
0	0	10	a+b		
0	1	10	$a-b=a+\bar{b}+1$		
1	1	00	a NOR b		
0	0	11	b (Pass-B)		

# Abstracting Away ALU Details

- From now on, we use symbol below
- Same shape used for ripple-carry adder, so remember to label them

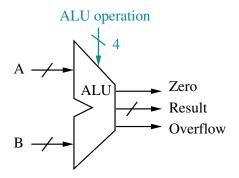

#### Conclusion

#### **Lecture Summary**

Data Representation in signed binary, unsigned, 1s complement

•

#### **Assigned Readings**

- Read
  - Section 2.9 (pages 110 and 111), 2.4, 3.1, 3.2
  - Section 2.6 (pages 90 and 91)
  - Additional details in Appendix A.5, Zero, Overflow, 64-bit Note: Figure A.5.12 wrongly labels pass-B as less

## Next Steps

- Review conversion steps from decimal to binary and back for integers.
- Attempt questions in next week's tutorial.
- Ask questions in office hours or the next tutorial.