

Programming TMS320x28xx and 28xxx Peripherals in C/C++

Lori Heustess AEC C2000

ABSTRACT

This application report explores a hardware abstraction layer implementation to make C/C++ coding easier on C28x[™] devices. This method is compared to traditional #define macros and topics of code efficiency and special case registers are also addressed.

Contents 1 2 3 4 5 6 7 **List of Figures** 1 SCI SCICTL1 Register 9 2 3 4 **List of Tables** 1 2 3 4

1 Introduction

The TMS320x28xx and TMS328x28xxx are members of the C2000™ generation for embedded control applications. To facilitate writing efficient and easy-to-maintain embedded C/C++ code on these devices, Texas Instruments provides a hardware abstraction layer method for accessing memory-mapped peripheral registers. This method is the bit field and register-file structure approach. This application report explains the implementation of this hardware abstraction layer and compares it to traditional #define macros. Topics of code efficiency and special case registers are also addressed.

C28x, C2000, Code Composer Studio are trademarks of Texas Instruments. All other trademarks are the property of their respective owners.



Introduction www.ti.com

The hardware abstraction layer discussed in this application report has been implemented as a collection of C/C++ header files available for download in controlSUITE from Texas Instruments:

Support for all new microcontrollers is available in the device support section of <u>controlSUITE</u>. At this time, this includes the following:

- Concerto Series Microcontrollers (C28x Subsystem)
 - 28M35x
- Piccolo Series Microcontrollers
 - 2806x
 - 2802x
 - 2803x
- Delfino Series
 - C2833x/C2823x
 - C2834x
- Older C28x devices are supported in the following downloads
 - C281x C/C++ Header Files and Peripheral Examples (SPRC097)
 - C280x, C2801x C/C++ Header Files and Peripheral Examples (SPRC191)
 - C2804x C/C++ Header Files and Peripheral Examples (SPRC324)

Depending on your current needs, the software included in these downloads are learning tools or the basis for a development platform.

Learning Tool:

The C/C++ Header Files and Peripheral Examples include several example Code Composer Studio™ projects. These examples explain the steps required to initialize the device and utilize on-chip peripherals. The examples can be copied and modified to quickly experiment with peripheral configurations.

Development Platform:

The header files can be incorporated into a project as a hardware abstraction layer for accessing on-chip peripherals using C or C++ code. You can also pick and choose functions as needed and discard the rest.

This application report does not provide a tutorial on C, C++, C28xx assembly, or emulation tools. You should have a basic understanding of C code and the ability to load and run code using Code Composer Studio. While knowledge of C28xx assembly is not required to understand the hardware abstraction layer, it is useful to understand the code optimization and read-modify-write sections. If you have assembly instruction-related questions, see the *TMS320C28x CPU and Instruction Set Reference Guide* (SPRU430).

Examples are based on the following software versions:

- C281x C/C++ Header Files and Peripheral Examples (SPRC097) V1.00
- C280x, C2801x C/C++ Header Files and Peripheral Examples (SPRC191) V1.41
- C2804x C/C++ Header Files and Peripheral Examples (SPRC324) V1.00
- C28x Compiler V4.1.1

The following abbreviations are used:

- C/C++ Header Files and Peripheral Examples refers to any of the header file or device support packages.
- TMS320x280x and 280x refer to all devices in the TMS320x280x and TMS320x2801x family and the UCD9501. For example: TMS320F2801, TMS320F2806, TMS320F2808, TMS320F28015 and TMS320F28016.
- TMS320x2804x and 2804x refers all devices in the TMS320x2804x family. For example, the TMS320F28044.
- TMS320x281x and 281x refer to all devices in the TMS320x281x family. For example: TMS320F2810, TMS320F2811, and TMS320F2812, TMS320C2810, and so forth.



C28x refers to the TMS320C28x CPU; this CPU is used on all of the above DSPs.

2 Traditional #define Approach

Developers have traditionally used #define macros to access registers in C or C++. To illustrate this approach, consider the SCI-A and SCI-B register files shown in Table 1.

Table 1. SCI-A, SCI-B Configuration and Control Registers

SCI-A Register Name (1)	Address	Description
SCICCRA	0x7050	SCI-A Communications Control Register
SCICTL1A	0x7051	SCI-A Control Register 1
SCIHBAUDA	0x7052	SCI-A Baud Register, High Bits
SCILBAUDA	0x7053	SCI-A Baud Register, Low Bits
SCICTL2A	0x7054	SCI-A Control Register 2
SCIRXSTA	0x7055	SCI-A Receive Status Register
SCIRXEMUA	0x7056	SCI-A Receive Emulation Data Buffer Register
SCIRXBUFA	0x7057	SCI-A Receive Data Buffer Register
SCITXBUFA	0x7059	SCI-A Transmit Data Buffer Register
SCIFFTXA	0x705A	SCI-A FIFO Transmit Register
SCIFFRXA	0x705B	SCI-A FIFO Receive Register
SCIFFCTA	0x705C	SCI-A FIFO Control Register
SCIPRIA	0x705F	SCI-A Priority Control Register
SCI-B Register Name (2)	Address	Description
SCICCRB	0x7750	SCI-B Communications Control Register
SCICTL1B	0x7751	SCI-B Control Register 1
SCICTL1B SCIHBAUDB	0x7751 0x7752	SCI-B Control Register 1 SCI-B Baud Register, High Bits
SCIHBAUDB	0x7752	SCI-B Baud Register, High Bits
SCIHBAUDB SCILBAUDB	0x7752 0x7753	SCI-B Baud Register, High Bits SCI-B Baud Register, Low Bits
SCIHBAUDB SCILBAUDB SCICTL2B	0x7752 0x7753 0x7754	SCI-B Baud Register, High Bits SCI-B Baud Register, Low Bits SCI-B Control Register 2
SCIHBAUDB SCILBAUDB SCICTL2B SCIRXSTB	0x7752 0x7753 0x7754 0x7755	SCI-B Baud Register, High Bits SCI-B Baud Register, Low Bits SCI-B Control Register 2 SCI-B Receive Status Register
SCIHBAUDB SCILBAUDB SCICTL2B SCIRXSTB SCIRXEMUB	0x7752 0x7753 0x7754 0x7755 0x7756	SCI-B Baud Register, High Bits SCI-B Baud Register, Low Bits SCI-B Control Register 2 SCI-B Receive Status Register SCI-B Receive Emulation Data Buffer Register
SCIHBAUDB SCILBAUDB SCICTL2B SCIRXSTB SCIRXEMUB SCIRXBUFB	0x7752 0x7753 0x7754 0x7755 0x7756 0x7757	SCI-B Baud Register, High Bits SCI-B Baud Register, Low Bits SCI-B Control Register 2 SCI-B Receive Status Register SCI-B Receive Emulation Data Buffer Register SCI-B Receive Data Buffer Register
SCIHBAUDB SCILBAUDB SCICTL2B SCIRXSTB SCIRXEMUB SCIRXBUFB SCIRXBUFB	0x7752 0x7753 0x7754 0x7755 0x7756 0x7757 0x7759	SCI-B Baud Register, High Bits SCI-B Baud Register, Low Bits SCI-B Control Register 2 SCI-B Receive Status Register SCI-B Receive Emulation Data Buffer Register SCI-B Receive Data Buffer Register SCI-B Transmit Data Buffer Register
SCIHBAUDB SCILBAUDB SCICTL2B SCIRXSTB SCIRXEMUB SCIRXEMUB SCIRXBUFB SCITXBUFB SCIFTXB	0x7752 0x7753 0x7754 0x7755 0x7756 0x7757 0x7759 0x775A	SCI-B Baud Register, High Bits SCI-B Baud Register, Low Bits SCI-B Control Register 2 SCI-B Receive Status Register SCI-B Receive Emulation Data Buffer Register SCI-B Receive Data Buffer Register SCI-B Transmit Data Buffer Register SCI-B FIFO Transmit Register

These registers are described in the TMS320x281x Serial Communications Interface (SCI) Reference Guide (SPRU051).

A developer can implement #define macros for the SCI peripherals by adding definitions like those in Example 1 to an application header file. These macros provide an address label, or a pointer, to each register location. Even if a peripheral is an identical copy a macro is defined for every register. For example, every register in SCI-A and SCI-B is specified separately.

⁽²⁾ These registers are reserved on devices without the SCI-B peripheral. See the data manual for details.



Example 1. Traditional #define Macros

```
* Traditional header file
*******************
#define Uint16 unsigned int
#define Uint32 unsigned long
                                             // Memory Map
                                            // Addr Register
#define SCICCRA (volatile Uint16 *)0x7050 // 0x7050 SCI-A Communications Control
#define SCILBAUDA (volatile Uint16 *)0x7053 // 0x7053 SCI-A Baud Register, Low Bits
#define SCICTL2A (volatile Uint16 *)0x7054 // 0x7054 SCI-A Control Register 2
#define SCIRXSTA (volatile Uint16 *)0x7055 // 0x7055 SCI-A Receive Status
#define SCIRXEMUA (volatile Uint16 *)0x7056 // 0x7056 SCI-A Receive Emulation Data Buffer
#define SCIRXBUFA (volatile Uint16 *)0x7057 // 0x7057 SCI-A Receive Data Buffer
#define SCITXBUFA (volatile Uint16 *)0x7059 // 0x7059 SCI-A Transmit Data Buffer
\#define SCIFFTXA (volatile Uint16 *)0x705A // 0x705A SCI-A FIFO Transmit
#define SCIFFRXA (volatile Uint16 *)0x705B // 0x705B SCI-A FIFO Receive
#define SCIFFCTA (volatile Uint16 *)0x705C // 0x705C SCI-A FIFO Control
#define SCIPRIA (volatile Uint16 *)0x705F // 0x705F SCI-A Priority Control
#define SCICCRB (volatile Uint16 *)0x7750 // 0x7750 SCI-B Communications Control
#define SCICTL1B (volatile Uint16 *)0x7751 // 0x7751 SCI-B Control Register 1
#define SCIHBAUDB (volatile Uint16 *)0x7752 // 0x7752 SCI-B Baud Register, High Bits
\#define SCILBAUDB (volatile Uint16 *)0x7753 // 0x7753 SCI-B Baud Register, Low Bits
#define SCICTL2B (volatile Uint16 *)0x7754 // 0x7754 SCI-B Control Register 2
\#define SCIRXSTB (volatile Uint16 *)0x7755 // 0x7755 SCI-B Receive Status
#define SCIRXEMUB (volatile Uint16 *)0x7756 // 0x7756 SCI-B Receive Emulation Data Buffer #define SCIRXBUFB (volatile Uint16 *)0x7757 // 0x7757 SCI-B Receive Data Buffer #define SCITXBUFB (volatile Uint16 *)0x7759 // 0x7759 SCI-B Transmit Data Buffer
#define SCIFFTXB (volatile Uint16 *)0x775A // 0x775A SCI-B FIFO Transmit
#define SCIFFRXB (volatile Uint16 *)0x775B // 0x775B SCI-B FIFO Receive
#define SCIFFCTB (volatile Uint16 *)0x775C // 0x775C SCI-B FIFO Control
#define SCIPRIB (volatile Uint16 *)0x775F // 0x775F SCI-B Priority Control
```

Each macro definition can then be used as a pointer to the register's location as shown in Example 2.

Example 2. Accessing Registers Using #define Macros

Some advantages of traditional #define macros are:

- Macros are simple, fast, and easy to type.
- Variable names exactly match register names; variable names are easy to remember.

Disadvantages to traditional #define macros include the following:

- Bit fields are not easily accessible; you must generate masks to manipulate individual bits.
- You cannot easily display bit fields within the Code Composer Studio watch window.
- Macros do not take advantage of Code Composer Studio's auto-completion feature.



Macros do not benefit from duplicate peripheral reuse.

3 Bit Field and Register-File Structure Approach

Instead of accessing registers using #define macros, it is more flexible and efficient to use a bit field and register-file structure approach.

· Register-File Structures:

A register file is the collection of registers belonging to a peripheral. These registers are grouped together in C/C++ as members of a structure; this is called a register-file structure. Each register-file structure is mapped in memory directly over the peripheral registers at compile time. This mapping allows the compiler to efficiently access the registers using the CPU's data page pointer (DP).

Bit Field Definitions:

Bit fields can be used to assign a name and width to each functional field within a register. Registers defined in terms of bit fields allow the compiler to manipulate single elements within a register. For example, a flag can be read by referencing the bit field name corresponding to that flag.

The remainder of this section describes a register-file structure with bit-field implementation for the SCI peripherals. This process consists of the following steps:

- Create a simple SCI register-file structure variable type; this implementation does not include bit fields.
- 2. Create a variable of this new type for each of the SCI instances.
- 3. Map the register-file structure variables to the first address of the registers using the linker.
- 4. Add bit-field definitions for select SCI registers.
- 5. Add union definitions to provide access to either bit fields or the entire register.
- 6. Rewrite the register-file structure type to include the bit-field and union definitions.

In the C/C++ Header Files and Peripheral Examples, the register-file structures and bit fields have been implemented for all peripherals on the TMS320x28xx and TMS320x28xxx devicess.

3.1 Defining A Register-File Structure

Example 1 showed a hardware abstraction implementation using #define macros. In this section, the implementation is changed to a simple register file structure. Table 2 lists the registers that belong to the SCI peripheral. This register file is identical for each instance of the SCI, i.e., SCI-A and SCI-B.

		_
Size	Address Offset	Description
16 bits	0	SCI Communications Control Register
16 bits	1	SCI Control Register 1
16 bits	2	SCI Baud Register, High Bits
16 bits	3	SCI Baud Register, Low Bits
16 bits	4	SCI Control Register 2
16 bits	5	SCI Receive Status Register
16 bits	6	SCI Receive Emulation Data Buffer Register
16 bits	7	SCI Receive Data Buffer Register
16 bits	9	SCI Transmit Data Buffer Register
16 bits	10	SCI FIFO Transmit Register
16 bits	11	SCI FIFO Receive Register
16 bits	12	SCI FIFO Control Register
16 bits	15	SCI Priority Control Register
	16 bits	16 bits 0 16 bits 1 16 bits 2 16 bits 3 16 bits 4 16 bits 5 16 bits 6 16 bits 7 16 bits 9 16 bits 10 16 bits 11 16 bits 12

Table 2. SCI-A and SCI-B Common Register File



The code in Example 3 groups the SCI registers together as members of a C/C++ structure. The register in the lowest memory location is listed first in the structure and the register in the highest memory location is listed last. Reserved memory locations are held with variables that are not used except as space holders, i.e., rsvd1, rsvd2, rsvd3, and so forth. The register's size is indicated by its type: Uint16 for 16-bit (unsigned int) and Uint32 for 32-bit (unsigned long). The SCI peripheral registers are all 16-bits so only Uint16 has been used.

Example 3. SCI Register-File Structure Definition

```
***********
* SCI header file
* Defines a register file structure for the SCI peripheral
*********************
#define Uint16 unsigned int
#define Uint32 unsigned long
struct SCI_REGS {
  union SCICCR_REG SCICCR; // Communications control register union SCICTL1_REG SCICTL1; // Control register 1
Uint16 SCIHBAUD; // Baud rate (high) register
  Uint16 SCIHBAUD; // Baud rate (high) register
Uint16 SCILBAUD; // Baud rate (low) register
union SCICTL2_REG SCICTL2; // Control register 2
union SCIRXST_REG SCIRXST; // Receive status register
                          SCIRXEMU; // Receive emulation buffer register
   Uint16
   union SCIRXBUF_REG SCIRXBUF; // Receive data buffer
   Uint16 rsvdl; // reserved
                           SCITXBUF; // Transmit data buffer
   Uint16
   union SCIFFTX_REG SCIFFTX; // FIFO transmit register union SCIFFRX_REG SCIFFRX; // FIFO receive register union SCIFFCT_REG SCIFFCT; // FIFO control register
               rsvd2;
rsvd3;
                                          // reserved
   Uint.16
                                          // reserved
   Uint16
   union SCIPRI_REG SCIPRI; // FIFO Priority control
};
```

The structure definition in Example 3 creates a new type called *struct SCI_REGS*. The definition alone does not create any variables. Example 4 shows how variables of type struct *SCI_REGS* are created in a way similar to built-in types such as int or unsigned int. Multiple instances of the same peripheral use the same type definition. If there are two SCI peripherals on a device, then two variables are created: *SciaRegs* and *ScibRegs*.

Example 4. SCI Register-File Structure Variables

The volatile keyword is very important in Example 4. A variable is declared as volatile whenever its value can be changed by something outside the control of the code in which it appears. For example, peripheral registers can be changed by the hardware itself or within an interrupt. If volatile is not specified, then it is assumed the variable can only be modified by the code in which it appears and the compiler may optimize out what is seen as an unnecessary access. The compiler will not, however, optimize out any volatile variable access; this is true even if the compiler's optimizer is enabled.



3.2 Using the DATA_SECTION Pragma to Map a Register-File Structure to Memory

The compiler produces relocatable blocks of code and data. These blocks, called sections, are allocated in memory in a variety of ways to conform to different system configurations. The section to memory block assignments are defined in the linker command file.

By default, the compiler assigns global and static variables like *SciaRegs* and *ScibRegs* to the .ebss or .bss section. In the case of the abstraction layer, however, the register-file variables are instead allocated to the same memory as the peripheral's register file. Each variable is assigned to a specific data section outside of .bss/ebss by using the compiler's DATA_SECTION pragma.

The syntax for the DATA_SECTION pragma in C is:

```
#pragma DATA_SECTION (symbol, "section name")
```

The syntax for the DATA_SECTION pragma in C++ is:

```
#pragma DATA_SECTION ("section name")
```

The DATA_SECTION pragma allocates space for the *symbol* in the section called *section name*. In Example 5, the DATA_SECTION pragma is used to assign the variable *SciaRegs* and *ScibRegs* to data sections named *SciaRegsFile* and *ScibRegsFile*. The data sections are then directly mapped to the same memory block occupied by the respective SCI registers.

Example 5. Assigning Variables to Data Sections

```
* Assign variables to data sections using the #pragma compiler statement
* C and C++ use different forms of the #pragma statement
* When compiling a C++ program, the compiler will define __cplusplus automatically
******************************
#ifdef __cplusplus
#pragma DATA_SECTION("SciaRegsFile")
#else
#pragma DATA_SECTION(SciaRegs, "SciaRegsFile");
#endif
volatile struct SCI_REGS SciaRegs;
//-----
#ifdef __cplusplus
#pragma DATA_SECTION("ScibRegsFile")
#else
#pragma DATA_SECTION(ScibRegs, "ScibRegsFile");
#endif
volatile struct SCI_REGS ScibRegs;
```

This data section assignment is repeated for each peripheral. The linker command file is then modified to map each data section directly to the memory space where the registers are mapped. For example, Table 1 indicates that the SCI-A registers are memory mapped starting at address 0x7050. Using the assigned data section, the variable *SciaRegs* is allocated to a memory block starting at address 0x7050. The memory allocation is defined in the linker command file (.cmd) as shown in Example 6. For more information on using the C28x linker and linker command files, see the *TMS320C28x Assembly Language Tools User's Guide* (SPRU513).



Example 6. Mapping Data Sections to Register Memory Locations

```
/*******************
* Memory linker .cmd file
* Assign the SCI register-file structures to the corresponding memory
MEMORY
{
 PAGE 1:
       SCIA
 SCIB
}
SECTIONS
{
 SciaRegsFile : > SCIA,
ScibRegsFile : > SCIB,
                         PAGE = 1
                         PAGE = 1
}
```

By mapping the register-file structure variable directly to the memory address of the peripheral's registers, you can access the registers directly in C/C++ code by simply modifying the required member of the structure. Each member of a structure can be used just like a normal variable, but its name will be a bit longer. For example, to write to the SCI-A Control Register (SCICCR), access the SCICCR member of *SciaRegs* as shown in Example 7. Here the dot is an operator in C that selects a member from a structure.

Example 7. Accessing a Member of the SCI Register-File Structure

3.3 Adding Bit-Field Definitions

Accessing specific bits within the register is often useful; bit-field definitions provide this flexibility. Bit fields are defined within a C/C++ structure by providing a list of bit-field names, each followed by colon and the number of bits the field occupies.


Bit fields are a convenient way to express many difficult operations in C or C++. Bit fields do, however, suffer from a lack of portability between hardware platforms. On the C28x devices, the following rules apply to bit fields:

- Bit field members are stored from right to left in memory. That is, the least significant bit, or bit zero, of the register corresponds to the first bit field.
- The C28x compiler limits the maximum number of bits within a bit field to the size of an integer; no bit field can be greater than 16 bits in length.
- If the total number of bits defined by bit fields within a structure grows above 16 bits, then the next bit field is stored consecutively in the next word of memory.




The SCICCR and SCICTL1 registers in Figure 1 and Figure 2 translate into the C/C++ bit-field definitions in Example 8. Reserved locations within the register are held with bit fields that are not used except as place holders, i.e., rsvd, rsvd1, rsvd2, et cetera. As with other structures, each member is accessed using the dot operator in C or C++.

Figure 1. SCI SCICCR Register

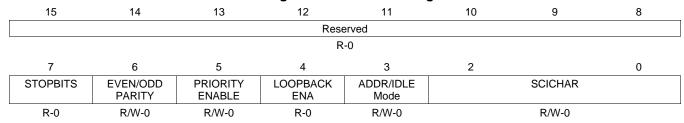

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

Figure 2. SCI SCICTL1 Register



LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

Example 8. SCI Control Registers Defined Using Bit Fields

```
// SCICCR communication control register bit definitions:
struct SCICCR_BITS {
                           // bit
                                     description
  Uint16 SCICHAR:3;
                            // 2:0
                                     Character length control
                           // 3
  Uint16 ADDRIDLE_MODE:1;
                                     ADDR/IDLE Mode control
  Uint16 LOOPBKENA:1;
                           // 4
                                     Loop Back enable
  Uint16 PARITYENA:1;
                           // 5
                                     Parity enable
  Uint16 PARITY:1;
                            // 6
                                     Even or Odd Parity
  Uint16 STOPBITS:1;
                           // 7
                                     Number of Stop Bits
  Uint16 rsvd1:8;
                            // 15:8
                                     reserved
};
//----
// SCICTL1 control register 1 bit definitions:
//
                           // bit
struct SCICTL1_BITS {
                                     description
  Uint16 RXENA:1;
                           // 0
                                     SCI receiver enable
  Uint16 TXENA:1;
                           // 1
                                     SCI transmitter enable
  Uint16 SLEEP:1;
                           // 2
                                     SCI sleep
  Uint16 TXWAKE:1;
                            // 3
                                     Transmitter wakeup method
  Uint16 rsvd:1;
                            // 4
                                     reserved
  Uint16 SWRESET:1;
                           // 5
                                     Software reset
  Uint16 RXERRINTENA:1;
                           // 6
                                     Receive interrupt enable
  Uint16 rsvd1:9;
                            // 15:7
                                     reserved
};
```



3.4 Using Unions

While bit fields provide access to individual bits, you may still want to access the register as a single value. To provide this option, a union declaration is created to allow the register to be accessed in terms of the defined bit fields or as a whole. The union definitions for the SCI communications control register and control register 1 are shown in Example 9.

Example 9. Union Definition to Provide Access to Bit Fields and the Whole Register

Once bit-field and union definitions are established for specific registers, the SCI register-file structure is rewritten in terms of the union definitions as shown in Example 10. Note that not all registers have bit field definitions; some registers, such as SCITXBUF, will always be accessed as a whole and a bit field definition is not necessary.

Example 10. SCI Register-File Structure Using Unions

```
* SCT header file
// SCI Register File:
//
struct SCI_REGS {
  union SCICCR_REG SCICCR; // Communications control register
  union SCICTL1_REG SCICTL1; // Control register 1
             SCIHBAUD; // Baud rate (high) register
  Uint16
  Uint16 SCILBAUD; // Baud rate (low) register
union SCICTL2_REG SCICTL2; // Control register 2
union SCIRXST_REG SCIRXST; // Receive status register
Uint16 SCIRXEMU; // Receive emulation buffer register
  union SCIRXBUF_REG SCIRXBUF; // Receive data buffer
                rsvdl; // reserved
  Uint16
                        SCITXBUF; // Transmit data buffer
  Uint16
  union SCIFFTX_REG SCIFFTX; // FIFO transmit register
  union SCIFFRX_REG SCIFFRX; // FIFO receive register
  union SCIFFCT_REG SCIFFCT; // FIFO control register
             rsvd2; // reserved rsvd3; // reserved
  Uint16
                                     // reserved
   Uint16
   union SCIPRI_REG SCIPRI; // FIFO Priority control
};
```

As with other structures, each member (.all or .bit) is accessed using the dot operator in C/C++ as shown in Example 11. When the .all member is specified, the entire register is accessed. When the .bit member is specified, then the defined bit fields can be directly accessed.



NOTE: Writing to a bit field has the appearance of writing to only the specified field. In reality, however, the CPU performs what is called a read-modify-write operation; the entire register is read, its contents are modified and the entire value is written back. Possible side effects of read-modify-write instructions are discussed in Section 6.

Example 11. Accessing Bit Fields in C/C++

```
* User's source file
// Access registers without a bit field definition (.all, .bit not used)
SciaRegs.SCIHBAUD = 0;
SciaRegs.SCILBAUD = 1;
// Write to bit fields in SCI-A SCICTL1
SciaRegs.SCICTL1.bit.SWRESET = 0;
SciaRegs.SCICTL1.bit.SWRESET = 1;
SciaRegs.SCIFFCT.bit.ABDCLR = 1;
SciaRegs.SCIFFCT.bit.CDC = 1;
// Poll (i.e., read) a bit
while(SciaRegs.SCIFFCT.bit.CDC == 1) { }
// Write to the whole SCI-B SCICTL1/2 registers (use .all)
ScibRegs.SCICTL1.all = 0x0003;
ScibRegs.SCICTL2.all = 0x0000;
```

4 Bit Field and Register-File Structure Advantages

The bit field and register-file structure approach has many advantages that include:

Register-file structures and bit fields are already available from Texas Instruments.

In the C/C++ Header Files and Peripheral Examples, the register-file structures and bit fields have been implemented for all peripherals on the TMS320x28xx and TMS320x28xxx devices. The included header files can be used as-is or extended to suit your particular needs.

The complete implementation is available in the software downloads from TI's website as shown in Section 1.

Using bit fields produces code that is easy-to-write, easy-to-read, easy-to-update, and efficient.

Bit fields can be manipulated quickly without the need to determine a register mask value. In addition, you have the flexibility to access registers either by bit field or as a single quantity as shown in Example 11. Code written using the register file structures also generates very efficient code. Code efficiency will be discussed in Section 5.

Bit fields take advantage of the Code Composer Studio editors auto complete feature.

At first it may seem that variable names are harder to remember and longer to type when using register-file structures and bit fields. The Code Composer Studio editor provides a list of possible structure/bit field elements as you type; this makes it easier to write code without referring to documentation for register and bit field names. An example of the auto completion feature for the CPU-Timer TCR register is shown in Figure 3.



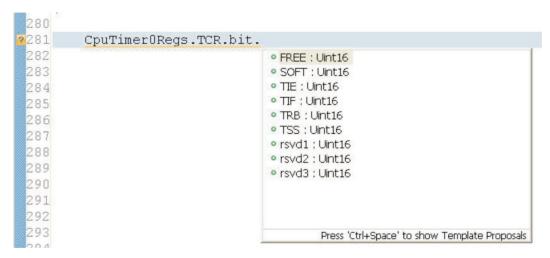


Figure 3. Code Composer Studio v5.1 Autocomplete Feature

Increases the effectiveness of the Code Composer Studio Watch Window.

You can add and expand register-file structures in Code Composer Studio's watch window as shown in Figure 4. Bit field values are read directly without extracting their value by hand.

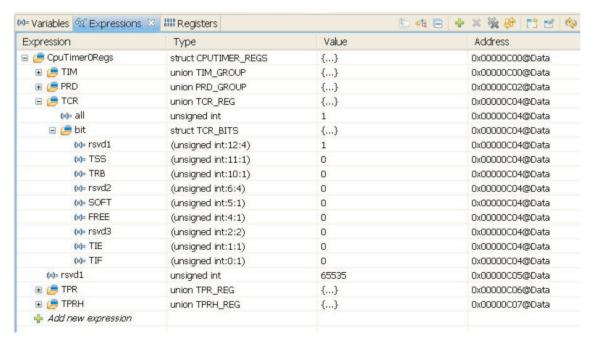


Figure 4. Code Composer Studio v5.1 Expression Window

5 Code Size and Performance Using Bit Fields

The bit field and register-file structure approach is very efficient when accessing a single bit within a register or when polling a bit. As an example, consider code to initialize the PCLKCR0 register on a TMS320x280x device. PCLKCR0 is described in detail in the *TMS320x280x*, 2801x, 2804x System Control and Interrupts Reference Guide (SPRU712). The bit-field definition for this register is shown in Example 12.



		_	•			•	
15	14	13	12	11	10	9	8
ECANBENCLK	ECANAENCLK	Res	erved	SCIBENCLK	SCIAENCLK	SPIBENCLK	SPIAENCLK
R/W-0	R/W-0	R	2-0	R/W-0	R/W-0	R/W-0	R/W-0
7	6	5	4	3	2	1	0
SPIDENCLK	SPICENCLK	Reserved	I2CAENCLK	ADCENCLK	TBCLKSYNC	Rese	erved
R/W-0	R/W-0	R-0	R/W-0	R/W-0	R/W-0	R	-0

LEGEND: R/W = Read/Write; R = Read only; -n = value after reset

Example 12. TMS320x280x PCLKCR0 Bit-Field Definition

The code in Example 13 enables the peripheral clocks on a TMS320x2801 device. The C28x compiler generates one assembly code instruction for each C-code register access. This is very efficient; there is a one-to-one correlation between the C instructions and the assembly instructions. The only overhead is the initial instruction to set the data page pointer (DP).

Example 13. Assembly Code Generated by Bit Field Accesses

C-Source Code	Generat	ed Assembly
	Memory	Instruction
// Enable only 2801 Peripheral Clocks		
EALLOW;	3F82A7	EALLOW
SysCtrlRegs.PCLKCR0.bit.rsvd1 = 0;	3F82A8	MOVW DP,#0x01C0
SysCtrlRegs.PCLKCR0.bit.TBCLKSYNC = 0;	3F82AA	AND @28,#0xFFFC
SysCtrlRegs.PCLKCR0.bit.ADCENCLK = 1;	3F82AC	AND @28,#0xFFFB
SysCtrlRegs.PCLKCR0.bit.I2CAENCLK = 1;	3F82AE	OR @28,#0x0008
SysCtrlRegs.PCLKCR0.bit.rsvd2 = 0;	3F82B0	OR @28,#0x0010
ysCtrlRegs.PCLKCRO.bit.SPICENCLK = 1;	3F82B2	AND @28,#0xFFDF
ysCtrlRegs.PCLKCR0.bit.SPIDENCLK = 1;	3F82B4	OR @28,#0x0040
ysCtrlRegs.PCLKCR0.bit.SPIAENCLK = 1;	3F82B6	OR @28,#0x0080
SysCtrlRegs.PCLKCR0.bit.SPIBENCLK = 1;	3F82B8	OR @28,#0x0100
SysCtrlRegs.PCLKCR0.bit.SCIAENCLK = 1;	3F82BA	OR @28,#0x0200
SysCtrlRegs.PCLKCR0.bit.SCIBENCLK = 0;	3F82BC	OR @28,#0x0400
SysCtrlRegs.PCLKCR0.bit.rsvd3 = 0;	3F82BE	AND @28,#0xF7FF
SysCtrlRegs.PCLKCR0.bit.ECANAENCLK= 1;	3F82C0	AND @28,#0xCFFF
ysCtrlRegs.PCLKCR0.bit.ECANBENCLK= 0;	3F82C2	OR @28,#0x4000
EDIS;	3F82C4	AND @28,#0x7FFF
	3F82C6	EDIS



NOTE: EALLOW and EDIS are macros defined in the C/C++ Header Files and Peripheral Examples. These macros expand to the EALLOW and EDIS assembly instructions.

The EALLOW protection mechanism prevents spurious CPU writes to several registers. Executing EALLOW permits the CPU to write freely to protected registers and executing EDIS protects them once more. For information on EALLOW protection and a list of protected registers, refer to the System Control and Interrupts reference guide specific to your device.

To calculate how many cycles the code in Example 13 will take, you need to know how many wait states are required to access the PCLKCR0 register. Wait state information for all memory blocks and peripheral frames is listed in the device specific data manual. The PCLKCR0 register is in peripheral frame 2; this frame requires two wait states for a read access and no wait states for a write access. This means a read from PCLKCR0 takes three cycles total and a write takes one cycle. In addition, a new access to PCLKCR0 cannot begin until the previous write is complete. This built-in protection mechanism removes pipeline effects and makes sure operations proceed in the correct order; all of the peripheral registers have this protection. In Example 13, each access to the PCLKCR0 register will take six cycles; the pipeline phases are shown in Table 3.

Table 3. CPU-Pipeline Activity For Read-Modify-Write Instructions in Example 13

	C	PU-Pipeline Phase (1)		
Read 1 - Read Begins	Read 2 - Data Latched	Execute - Value Modified	Write - Value written	Cycle
AND @28,#0xFFFC				1
AND @28,#0xFFFC				2
AND @28,#0xFFFC				3
	AND @28,#0xFFFC			4
		AND @28,#0xFFFC		5
			AND @28,#0xFFFC	6
AND @28,#0xFFFB				7
AND @28,#0xFFFB				8
AND @28,#0xFFFB				9
	AND @28,#0xFFFB			10
		AND @28,#0xFFFB		11
			AND @28,#0xFFFB	12
OR @28,#0x0008				13
OR @28,#0x0008				14
OR @28,#0x0008				15
	OR @28,#0x0008			16
		OR @28,#0x0008		17
			OR @28,#0x0008	18
OR @28,#0x0010				
etc				

⁽¹⁾ For detailed CPU pipeline information, see the TMS320C28x CPU and Instruction Set Reference Guide (SPRU430).



When code size and cycle counts must be kept to a minimum, it is beneficial to reduce the number of instructions required to initialize a register to as few as possible. Here are some options for reducing code size:

Enable the compiler's optimizer:

As mentioned in Section 3.1, register-file variables are declared as volatile. For this reason, enabling the optimizer alone will **not** reduce the number of instructions. The keyword volatile alerts the compiler that the variable's value can change outside of the currently executing code. While removing the volatile keyword would reduce code size, it is not recommended. Removing volatile must be done with great care and only where the developer is certain doing so will not yield incorrect results.

· Write to the complete register (.all union member):

The union definitions discussed in Section 3.4 allow access to either specific bit fields or to the entire register. When a write is performed to the entire register using the .all member of the union, code size is reduced. This method creates very efficient code as shown in Example 14. Using .all, however, makes the code both harder to write and harder to read. It is not immediately evident how different bit fields in the register are configured.

Example 14. Optimization Using the .all Union Member

C-Source Code	Generat	ed Assembly
	Memory	Instruction
EALLOW;	3F82A7	EALLOW
SysCtrlRegs.PCLKCR0.all = 0x47D8;	3F82A8	MOVW DP,#0x01C0
EDIS;	3F82AA	MOV @28,#0x47D8
	3F82AC	EDIS

Use a shadow register and enable the compiler's optimizer:

This method is the best compromise. The register's contents are loaded into a shadow register of the same type as shown in Example 15. The content of the shadow register is then modified using bit fields. Since *shadowPCLKCR0* is not volatile, the compiler will combine the bit field writes when the optimizer is enabled. Note that all of the reserved locations are also initialized. At the end of the code the value in the shadow register is written to PCLKCR0. This method retains the advantages of bit field definitions and results in code that is easy to read. The assembly shown was generated with the compiler's optimization level -o1 enabled.

Example 15. Optimization Using a Shadow Register

C-Source Code	Generated Assembly Memory Instruction
// Enable only 2801 Peripheral Clocks	
union PCLKCR0_REG shadowPCLKCR0;	
EALLOW;	3F82A7 EALLOW
shadowPCLKCR0.bit.rsvd1 = 0;	3F82A8 MOV @AL,#0x47D8
<pre>shadowPCLKCR0.bit.TBCLKSYNC = 0;</pre>	3F82AA MOVW DP,#0x01C0
shadowPCLKCR0.bit.ADCENCLK = 1; // ADC	3F82AC MOV @28,AL
shadowPCLKCR0.bit.I2CAENCLK = 1; // I2C	3F82AD EDIS
shadowPCLKCR0.bit.rsvd2 = 0;	
shadowPCLKCR0.bit.SPICENCLK = 1; // SPI-	C
shadowPCLKCRO.bit.SPIDENCLK = 1; // SPI-	D
shadowPCLKCRO.bit.SPIAENCLK = 1; // SPI-	A
shadowPCLKCRO.bit.SPIBENCLK = 1; // SPI-	В
shadowPCLKCR0.bit.SCIAENCLK = 1; // SCI-	A



Example 15. Optimization Using a Shadow Register (continued)

6 Read-Modify-Write Considerations When Using Bit Fields

When writing to a bit field, the compiler generates what is called a read-modify-write assembly instruction. Read-modify-write refers to the technique used to implement bit-wise or byte-wise operations such as AND, OR and XOR. That is, the location is *read*, the single bit field is *modified*, and the result is *written* back. Example 16 shows some of the C28x read-modify-write assembly instructions.

Example 16. A Few Read-Modify-Write Operations

```
; Read 16-bit value "Var"
 AND @Var, #0xFFFC
                         ; AND the value with 0xFFFC
                         ; Write the 16-bit result to "Var"
    @Var, #0x0010
                         ; Read 16-bit value "Var"
OR
                         ; OR the value with 0x0010
                         ; Write the 16-bit result to "Var"
XOR @VarB, AL
                         ; Read 16-bit value "Var"
                         ; XOR with AL
                         ; Write the 16-bit result to "Var"
                       ; Read 16-bit value pointed to by XAR2
MOVB *+XAR2[0], AH.LSB
                         ; Modify the least significant byte
                         ; Write the 16-bit value back
```

With a full CPU pipeline, a C28x based device can complete one read-modify-write operation to zero wait-state SARAM every cycle. When accessing the peripheral registers or external memory, however, required wait states must be taken into account. In addition, the pipeline protection mechanism can further stall instructions in the CPU pipeline. This is described in more detail in Section 5 and in the TMS320C28x CPU and Instruction Set Reference Guide (SPRU430).

Read-modify-write instructions usually have no ill side effects. It is important, however, to realize that read-modify-write instructions do not limit access to only specific bits in the register; these instructions write to all of the register's bits. In some cases, the read-modify-write sequence can cause unexpected results when bits are written to with the value originally read. Registers that are sensitive to read-modify-write instructions fall into three categories:

- Registers with bits that hardware can change after the read, but before the write
- Registers with write 1-to-clear bits
- Registers that have bits that must be written with a value different from what the bits read back

Registers that fall into these three categories are typically found within older peripherals. To keep register compatibility, the register files have not been redesigned to avoid this issue. Newer peripherals, such as the ePWM, eCAP, and eQEP, however, have a register layout specifically designed to avoid these problems.



This section describes in detail the three categories in which read-modify-write operations should be used with care. In addition, an example of each type of register is given along with a suggested method for safely modifying that register. At the end of the section a list of read-modify-write sensitive registers is provided for reference.

6.1 Registers That Hardware Can Modify During Read-Modify-Write Operations

The device itself can change the state of some bits between the read and the write stages of the CPU pipeline. For example, the PIE interrupt flag registers (PIEIFRx where x = 1, 2, ... 12) can change due to an external hardware or peripheral event. The value written back may overwrite a flag, corrupting the value, and result in missed interrupts.

6.1.1 **PIEIFRx Registers**

If there is a need to clear a PIEIFRx bit, then the rule is to always let the CPU take the interrupt to clear the flag. This is done by re-mapping the interrupt vector to a pseudo interrupt service routine (ISR). The corresponding PIEIERx bit is then set to allow the CPU to service the interrupt using the pseudo ISR. Within the pseudo ISR the interrupt vector is re-mapped to the interrupt vector for the true ISR routine as shown in Example 17.

NOTE: This rule does not apply to the CPU's IFR register. Special instructions are provided to clear CPU IFR bits and will not result in missing interrupts. Use the OR IFR instruction to set IFR bits, and use the AND IFR instruction to clear pending interrupts.

Example 17. Clearing PIEIFRx (x = 1, 2...12) Registers

```
* User's source file
******************
// Pseudo ISR prototype. PTIN = pointer to an interrupt
interrupt void PseudoISR(void);
PINT TempISR;
 if( PieCtrlRegs.PIEIFR1.bit.INTx4 == 1)
   // Temp save current vector and remap to pseudo ISR
   // Take the interrupt to clear the PIEIFR flag
   EALLOW;
   TempISR = PieVectTable.XINT1;
   PieVectTable.XINT1 = PseudoISR;
   PieCtrlRegs.PIEIER1.bit.INTx4 = 1;
   EDIS;
 }
 // Pseudo ISR
 // Services the interrupt & the hardware clears the PIEIFR flag
 // Re-maps the interrupt to the proper ISR
 interrupt void PseudoISR(void)
 {
   EALLOW;
   PieVectTable.XINT1 = TempISR;
   EDIS;
 }
```



6.1.2 GPxDAT Registers

Another case of bits that can change between a read and a write are the GPIO data registers. Consider the code shown in Example 18. Except on 281x devices, the GPxDAT registers reflect the state of the pin, not the output latch. This means the register reflects the actual pin value. However, there is a lag between when the register is written to when the new pin value is reflected back in the register. This may pose a problem when this register is used in subsequent program statements to alter the state of GPIO pins. In Example 18, two program statements attempt to drive two different GPIO pins. The second instruction will wait for the first to finish its write due to the write-followed-by-read protection on this peripheral frame. There will be some lag, however, between the write of GPIO16 and the GPxDAT bit reflecting the new value (1) on the pin. During this lag, the second instruction will read the old value of GPIO16 (0) and write it back along with the new value of GPIO17 (0). Therefore, the GPIO16 pin stays low.

One solution is to put some NOP's between the read-modify-write instructions. A better solution is to use the GPxSET/GPxCLEAR/GPxTOGGLE registers instead of the GPxDAT registers. These registers always read back a 0 and writes of 0 have no effect. Only bits that need to be changed can be specified without disturbing any other bit(s) that are currently in the process of changing. The same code using GPxSET and GPxCLEAR registers is shown in Example 19.

Example 18. Read-Modify-Write Effects on GPxDAT Registers

```
* User's source file
for(;;)
     // Make LED Green
    GpioDataRegs.GPADAT.bit.GPIO16 = 1; // (1) RED_LED_OFF;
     // Read-modify-write occurs
     GpioDataRegs.GPADAT.bit.GPIO17 = 0; // (2) GREEN_LED_ON;
     // Read: Because of the delay between output to input
               the old value of GPIO16 (zero) is read
     // Modify: Changes GPI017 to a 0
     // Write: Writes back GPADAT with GPI016 = 0 and GPI017 = 0 \,
     delay_loop();
     // Make LED Red
     GpioDataRegs.GPADAT.bit.GPIO16 = 0; // (3) RED_LED_ON;
     GpioDataRegs.GPADAT.bit.GPIO17 = 1; // (4) GREEN_LED_OFF;
     delay_loop();
}
```



Example 19. Using GPxSET and GPxCLEAR Registers

6.2 Registers With Write 1-to-Clear Bits.

Some registers have what is called write 1-to-clear bits. This means that when the bit is set it can only be cleared by writing a value of one to the bit. During a read-modify-write operation, if a bit is one when it is read, then it will also be written as a one unless it is changed during the modify portion of the access. For this reason, it is likely a read-modify-write instruction will inadvertently clear a write 1-to-clear bit.

The CPU-Timer interrupt flag (TIF) within the TCR register is an example of a write 1-to-clear bit. TIF can be read to determine if the CPU-Timer has overflowed and flagged an interrupt. Example 20 shows code that stops the CPU-Timer and then checks to see if the interrupt flag is set.

Example 20. Read-Modify-Write Operation Inadvertently Modifies Write 1-to-Clear Bits (TCR[TIF])

```
Generated Assembly
   C-Source Code
                                                 Memory
                                                          Instruction
// Stop the CPU-Timer
CpuTimerORegs.TCR.bit.TSS = 1;
                                                 3F80C7
                                                          MOVW DP.#0x0030
                                                 3F80C9
                                                          OR
                                                                 @4,#0x0010
// Check to see if TIF is set
                                                 3F80CB TBIT @4,#15
if (CpuTimer0Regs.TCR.bit.TIF == 1)
                                                 3F80CC SBF
                                                                 L1,NTC
                                                 3F80CD NOP
  // TIF set, insert action here
                                                 3F80CE L1:
  // NOP is only a place holder
                                                 . . . .
         NOP");
  asm("
}
```

The test for TIF in Example 20 will never be true even if an interrupt has been flagged. The OR assembly instruction to set the TSS bit performs a read-modify-write operation on the TCR register. If the TIF bit is set when the read-modify-write operation occurs, then TIF will be read as a 1 and also written back as a 1. The TIF bit will always be cleared as a result of this write. To avoid this, the write to TIF bit always be 0. The TIF bit ignores writes of 0, thus, its value will be preserved. One possible implementation that preserves TIF is shown in Example 21.



Example 21. Using a Shadow Register to Preserve Write 1-to-Clear Bits

```
C-Source Code
                                                 Generated Assembly
                                                Memory
                                                        Instruction
union TCR_REG shadowTCR;
// Use a shadow register to stop the timer
// and preserve TIF (write 1-to-clear bit)
shadowTCR.all = CpuTimerORegs.TCR.all;
                                               3F80C7
                                                         WVOM
                                                                DP.#0x0030
                                                              AL,@4
shadowTCR.bit.TSS = 1;
                                               3F80C9
                                                         MOV
shadowTCR.bit.TIF = 0;
                                               3F80CA
                                                         ORB
                                                                AL,#0x10
                                                         MOVL
CpuTimer0Regs.TCR.all = shadowTCR.all;
                                               3F80CB
                                                                XAR5, #0x000C00
                                               3F80CD
                                                         AND
                                                                AL,@AL,#0x7FFF
// Check the TIF flag
                                               3F80CF
                                                         MOV
                                                                 *+XAR5[4].AL
                                              3F80D0 TBIT *+XAR5[4],#15
if(CpuTimer0Regs.TCR.bit.TIF == 1)
                                              3F80D1 SBF
                                                               L1,NTC
  // TIF set, insert action here
                                              3F80D2 NOP
  // NOP is only a place holder
                                              3F80D3 L1:
  asm(" NOP");
}
```

The content of the TCR register is copied into a shadow register. Within the shadow register the TSS bit is set, and the TIF bit is cleared. The shadow register is then written back to TCR; the timer is stopped and the state of TIF is preserved. The assembly instructions were generated with optimization level -o2 enabled.

6.3 Register Bits Requiring a Specific Value

Some registers have bits that must be written as a specific value. If this value is different from the value the bits read, then a read-modify-write operation will likely write the incorrect value.

An example is the watchdog check bit field (WDCHK) in the watchdog control register. The watchdog check bits must be written as 1,0,1; any other value is considered illegal and will reset the device. Since these bits always read back as 0,0,0, a read-modify-write operation will write 0,0,0 unless WDCHK is changed during the modify portion of the operation.

Another solution is to avoid the read-modify-write operation and instead only write a 16-bit value to the WDCR register. To remind you of this requirement, a bit field definition is not provided for the WDCR register in the C/C++ Header Files and Peripheral Examples. Registers that do not have bit-field nor union definitions are accessed without the .bit or .all designations as shown in Example 22.

Example 22. Watchdog Check Bits (WDCR[WDCHK])

See the TMS320x280x, 2801x, 2804x DSP System Control and Interrupts Reference Guide (SPRU712) and TMS320x281x System Control and Interrupts Reference Guide (SPRU078) for more information on the watchdog module.



6.4 Read-Modify-Write Sensitive Registers

Table 4 lists registers that are sensitive to read-modify-write instructions. Depending on the register and how the peripheral is used in the application, effects of a read-modify-write operation may or may not be a concern. This list may not be complete.

Table 4. Read-Modify-Write Sensitive Registers

Module	Register(s)		Comments
Watchdog	SCSR		WDOVERRIDE is a write 1-to-clear bit and always reads back as a 1.
	WDCR		WDCHK must be written as 1,0,1 and always read back as 0,0,0.
	WDCR		WDFLG is a write 1-to-clear bit.
CPU-Timer	TCR		Timer interrupt flag (TIF) is a write 1-to-clear bit.
GPIO	GPxDAT		Use this register to read data and instead use the SET/CLEAR and TOGGLE registers to change the state of GPIO pins.
PIE	PIEIFRX		To clear PIEIFR bits, do not write to the PIEIFR register. Instead map the interrupt to a "pseudo" interrupt and service it. That is, let the hardware clear the interrupt flag otherwise interrupts from other peripherals may be missed.
	PIEACKx		The PIEACK bits are write 1-to-clear bits.
Event Manager (EV) ⁽¹⁾	CAPCONA	CAPCONB	CAPRES is a write-0-to-reset bit and always reads back as 0.
	CAPFIFOA	CAPFIFOB	If a write occurs at the same time that a CAPxFIFO status bit is being updated, the write data takes precedence. Thus if the bit changes between the read and the write phase of a read-modify-write instruction, the new bit value may be lost.
	EVAIFRA/B/C	EVBIFRA/B/C	The EV interrupt flags are all write 1-to-clear bits.
eCAN	CANTRS	CANTRR	The eCAN module can change the state of a bit between the time the register is read and the time it is written back.
	CANTA CANRMP CANRFP CANGIF0 CANTOS	CANAA CANRML CANES CANGIF1	These registers contain one or more write 1-to-clear bits.
SPI	SPIST		Contains write 1-to-clear bits.
I ² C	I2CSTR		Contains write 1-to-clear bits.

⁽¹⁾ The EV module is available on TMS320x281x devices only.

7 A Special Case: eCAN Control Registers

Access to peripherals occur on one of three peripheral frames (or busses). Peripheral registers are located in the frame capable of accesses that best fit the register set.

Peripheral frame 0:

Peripherals within this frame are on the device's memory bus. This bus is capable of both 16-bit or 32-bit accesses. For example, CPU-Timers are on the memory bus.

Peripheral frame 1:

Peripheral frame 1 uses a bus that is capable of both 16-bit and 32-bit accesses. Examples include the ePWM and eCAN peripherals.

Peripheral frame 2:

Peripheral frame 2 uses a bus that is capable of only 16-bit accesses. All of the peripheral registers on frame 2 are only 16-bits in length. Examples include the SCI, SPI, ADC and I²C.



The eCAN control and status registers are limited to 32-bit-wide accesses. Accesses of only 16 bits can yield unpredictable results. The eCAN control and status registers must be handled as a special case; they are the only peripheral frame 1 registers limited to 32-bit wide accesses.

Often the compiler will reduce an access to 16-bits if it will save code size or improve performance. Care must be taken to make sure what appears to be a 32-bit access to the eCAN control and status registers is not simplified to a 16-bit access by the compiler. For example, the compiler has reduced the access shown in Example 23 to a 16-bit access to half of the CANMC register.

Example 23. Invalid eCAN Control Register 16-Bit Write

```
C-Source Code
                                                    Generated Assembly
                                                             Instruction
                                                   Memory
// The compiler will simplify this to
                                                             EALLOW
                                                   3F81FA
// a 16-bit read-modify-write
                                                   3F81FB
                                                             MOVW DP, #0x0180
EAT.T.OW:
                                                             OR
                                                   3F81FD
                                                                    @20,#0x2000
ECanaRegs.CANMC.bit.SCB = 1;
                                                   3F81FF
                                                             EDIS
EDIS;
```

To force 32-bit accesses, the bit-field definitions and read-modify-write operations must not be used. The register must be read and written using the .all member of the union definition and all 32-bits must be read or written.

Unfortunately, not using bit fields or read-modify-write operations reduces the code readability. One solution is to read the entire register into a shadow register, manipulate the value, and then write the new 32-bit value to the register using .all. The code in Example 24 uses a shadow register to force a 32-bit access. If more then one register is going to be accessed, then the whole eCAN register file can be shadowed (i.e., struct ECAN_REGS shadowECanaRegs;).

Example 24. Using a Shadow Register to Force a 32-Bit Access

C-Source Code	Generat	ed Asser	nbly
	Memory	Instru	ction
// Use a shadow register to force a			
// 32-bit access			
union CANMC_REG shadowCANMC;			
EALLOW;	3F81FA	EALLOW	Ī
	3F81FB	MVVOM	DP,#0x0180
// 32-bit read of CANMC	3F81FD	MOVL	ACC,@20
<pre>shadowCANMC.all = ECanaRegs.CANMC.all;</pre>	3F81FE	OR	@AL,#0x2000
<pre>shadowCANMC.bit.SCB = 1;</pre>	3F8200	MOVL	@20,ACC
	3F8201	EDIS	
// 32-bit write of CANMC			
<pre>ECanaRegs.CANMC.all = shadowCANMC.all;</pre>			
EDIS;			



www.ti.com References

8 References

The following references include additional information on topics found in this application report:

- C281x C/C++ Header Files and Peripheral Examples (SPRC097)
- C280x, C2801x C/C++ Header Files and Peripheral Examples (SPRC191)
- C2804x C/C++ Header Files and Peripheral Examples (SPRC324)
- TMS320C28x CPU and Instruction Set Reference Guide (SPRU430)
- TMS320C28x Optimizing C/C++ Compiler User's Guide (SPRU514)
- TMS320C28x Assembly Language Tools User's Guide (SPRU513)
- TMS320x281x System Control and Interrupts Reference Guide (SPRU078)
- TMS320x280x, 2801x, 2804x DSP System Control and Interrupts Reference Guide (SPRU712)
- TMS320x281x Serial Communications Interface (SCI) Reference Guide (SPRU051).

For peripheral guides specific to your device, see *TMS320x28xx*, *28xxx DSP Peripherals Reference Guide* (SPRU566)

Support for all new microcontrollers is available in the device support section of controlSUITE.

An *Introduction to Texas Instruments C2000 Microcontrollers* has been contributed to the TI Embedded Processors Wiki located at: http://processors.wiki.ti.com/index.php/Category:C2000.

IMPORTANT NOTICE

Texas Instruments Incorporated and its subsidiaries (TI) reserve the right to make corrections, modifications, enhancements, improvements, and other changes to its products and services at any time and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders and should verify that such information is current and complete. All products are sold subject to TI's terms and conditions of sale supplied at the time of order acknowledgment.

TI warrants performance of its hardware products to the specifications applicable at the time of sale in accordance with TI's standard warranty. Testing and other quality control techniques are used to the extent TI deems necessary to support this warranty. Except where mandated by government requirements, testing of all parameters of each product is not necessarily performed.

TI assumes no liability for applications assistance or customer product design. Customers are responsible for their products and applications using TI components. To minimize the risks associated with customer products and applications, customers should provide adequate design and operating safeguards.

TI does not warrant or represent that any license, either express or implied, is granted under any TI patent right, copyright, mask work right, or other TI intellectual property right relating to any combination, machine, or process in which TI products or services are used. Information published by TI regarding third-party products or services does not constitute a license from TI to use such products or services or a warranty or endorsement thereof. Use of such information may require a license from a third party under the patents or other intellectual property of the third party, or a license from TI under the patents or other intellectual property of TI.

Reproduction of TI information in TI data books or data sheets is permissible only if reproduction is without alteration and is accompanied by all associated warranties, conditions, limitations, and notices. Reproduction of this information with alteration is an unfair and deceptive business practice. TI is not responsible or liable for such altered documentation. Information of third parties may be subject to additional restrictions

Resale of TI products or services with statements different from or beyond the parameters stated by TI for that product or service voids all express and any implied warranties for the associated TI product or service and is an unfair and deceptive business practice. TI is not responsible or liable for any such statements.

TI products are not authorized for use in safety-critical applications (such as life support) where a failure of the TI product would reasonably be expected to cause severe personal injury or death, unless officers of the parties have executed an agreement specifically governing such use. Buyers represent that they have all necessary expertise in the safety and regulatory ramifications of their applications, and acknowledge and agree that they are solely responsible for all legal, regulatory and safety-related requirements concerning their products and any use of TI products in such safety-critical applications, notwithstanding any applications-related information or support that may be provided by TI. Further, Buyers must fully indemnify TI and its representatives against any damages arising out of the use of TI products in such safety-critical applications.

TI products are neither designed nor intended for use in military/aerospace applications or environments unless the TI products are specifically designated by TI as military-grade or "enhanced plastic." Only products designated by TI as military-grade meet military specifications. Buyers acknowledge and agree that any such use of TI products which TI has not designated as military-grade is solely at the Buyer's risk, and that they are solely responsible for compliance with all legal and regulatory requirements in connection with such use.

Applications

TI products are neither designed nor intended for use in automotive applications or environments unless the specific TI products are designated by TI as compliant with ISO/TS 16949 requirements. Buyers acknowledge and agree that, if they use any non-designated products in automotive applications, TI will not be responsible for any failure to meet such requirements.

Following are URLs where you can obtain information on other Texas Instruments products and application solutions:

Products

Wireless Connectivity

Audio www.ti.com/audio Automotive and Transportation www.ti.com/automotive **Amplifiers** amplifier.ti.com Communications and Telecom www.ti.com/communications dataconverter.ti.com Computers and Peripherals www.ti.com/computers **Data Converters DLP® Products** www.dlp.com Consumer Electronics www.ti.com/consumer-apps DSP dsp.ti.com **Energy and Lighting** www.ti.com/energy Clocks and Timers www.ti.com/clocks Industrial www.ti.com/industrial Interface interface.ti.com Medical www.ti.com/medical Logic logic.ti.com Security www.ti.com/security Power Mgmt www.ti.com/space-avionics-defense power.ti.com Space, Avionics and Defense Microcontrollers Video and Imaging microcontroller.ti.com www.ti.com/video www.ti-rfid.com **OMAP Mobile Processors**

TI E2E Community Home Page

www.ti.com/omap

www.ti.com/wirelessconnectivity

e2e.ti.com