




11. Scorpion King

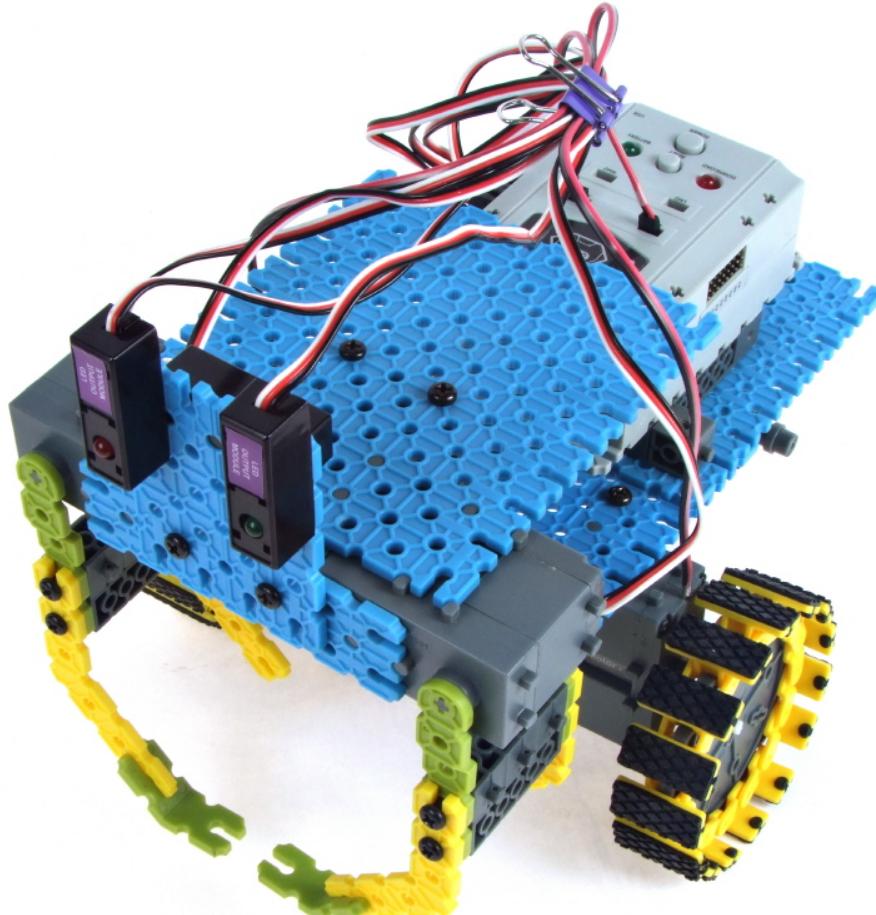

Scorpion King

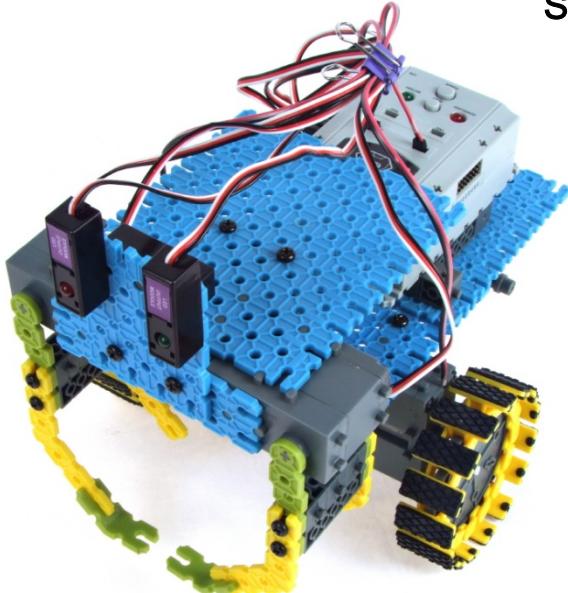


1

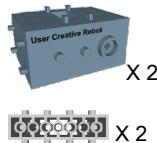


Note the position of motor cables.



2

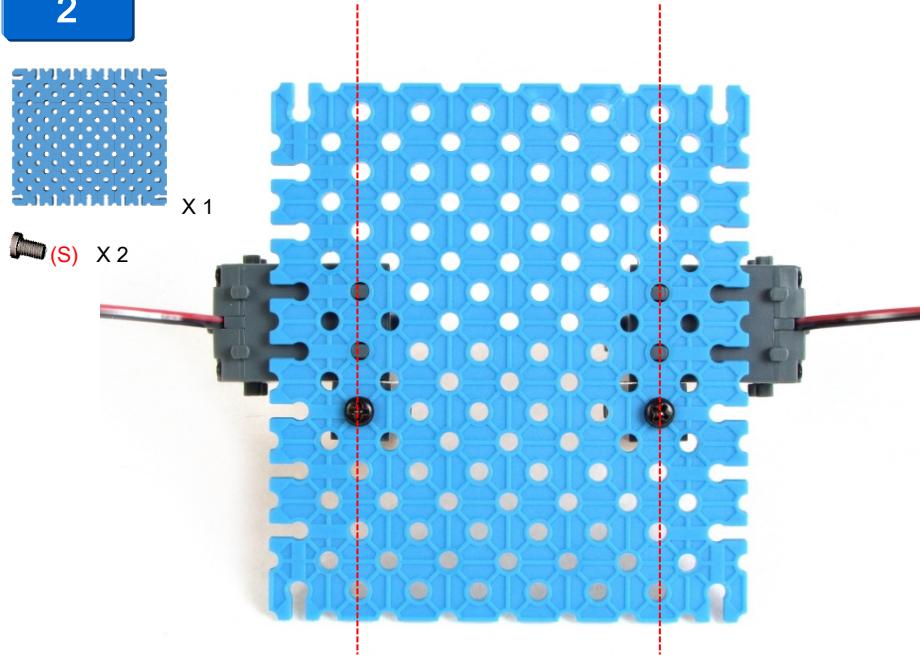

3

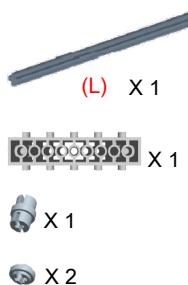


4



X 1

● X 2

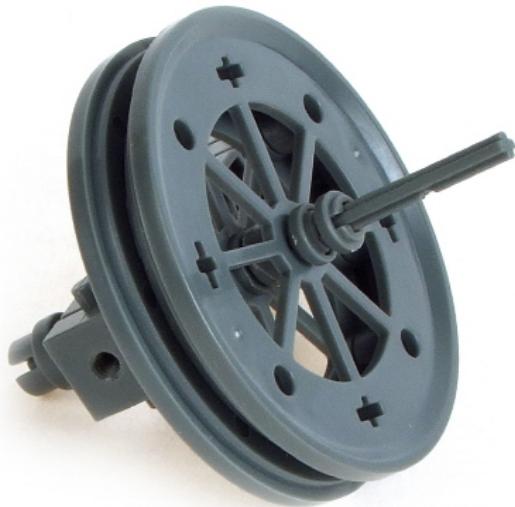

5



X 1




X 1




6



X 1

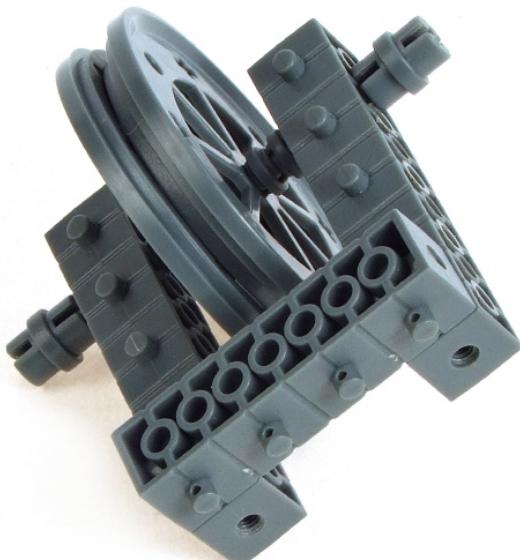


7

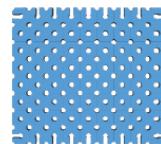

X 1




(S) X 2

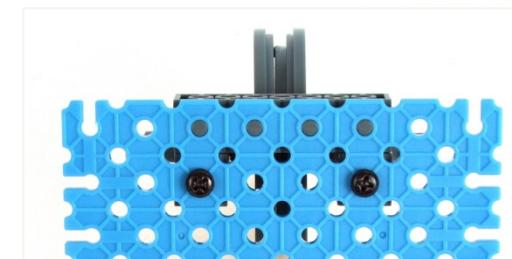


ucrobot@ucrobot.com

8

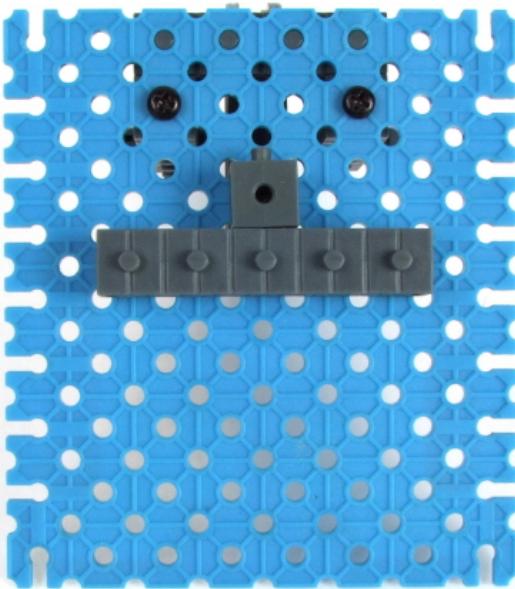


9

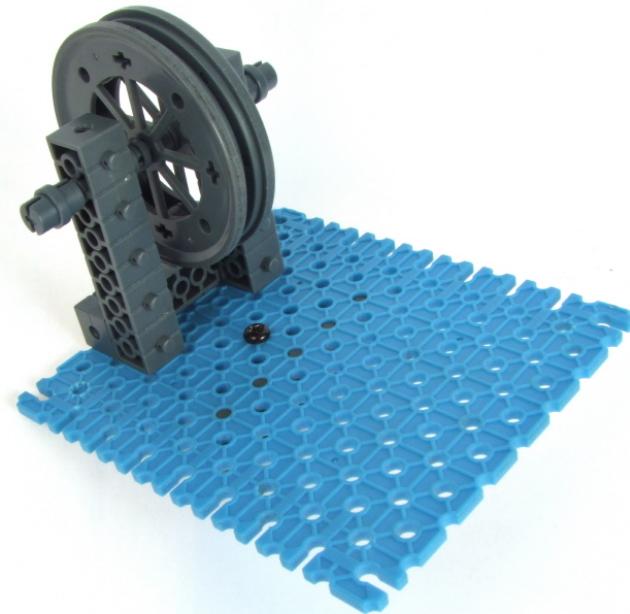


10




11

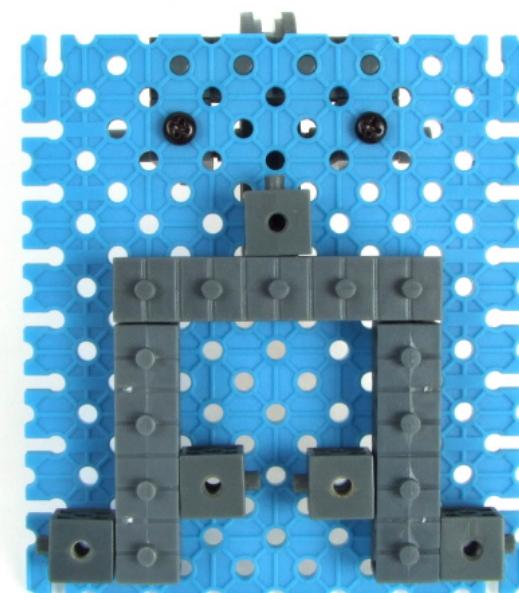


12

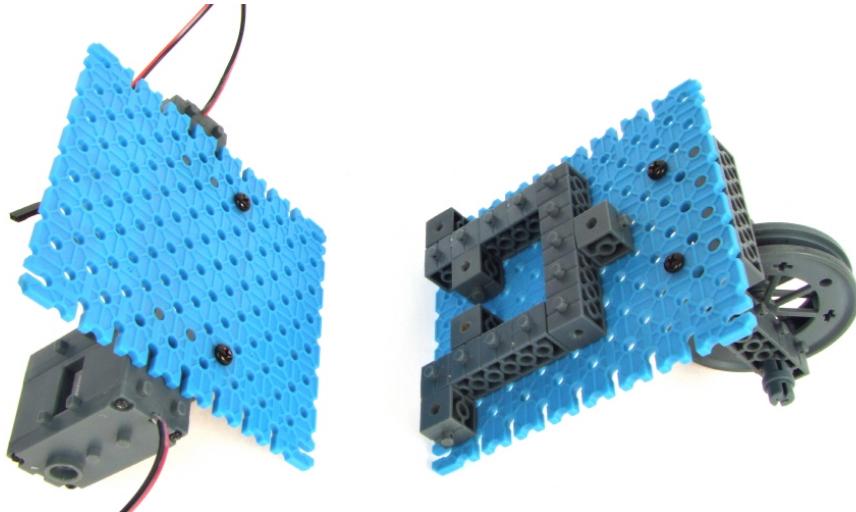


13

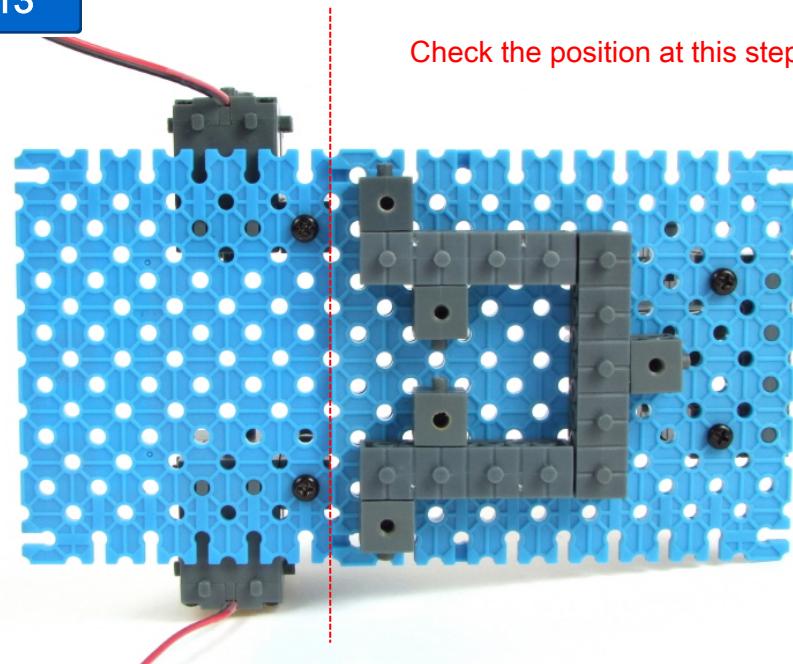

14

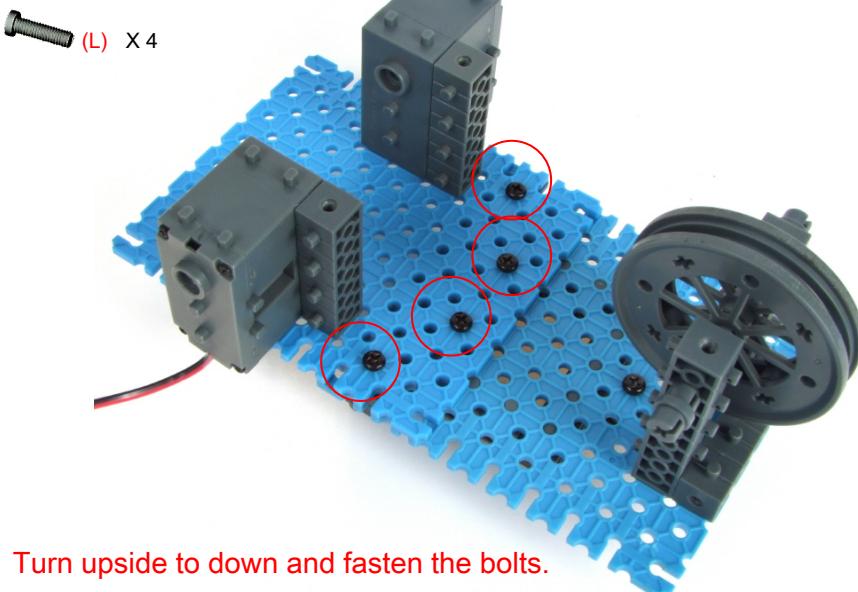


15

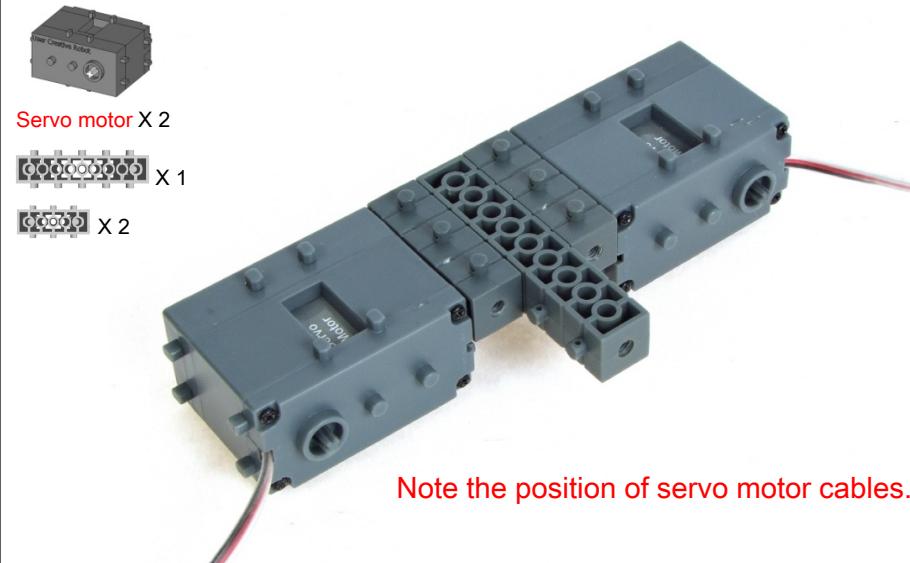


Turn upside to down and fasten the bolts.

ucrobot@ucrobot.com


16

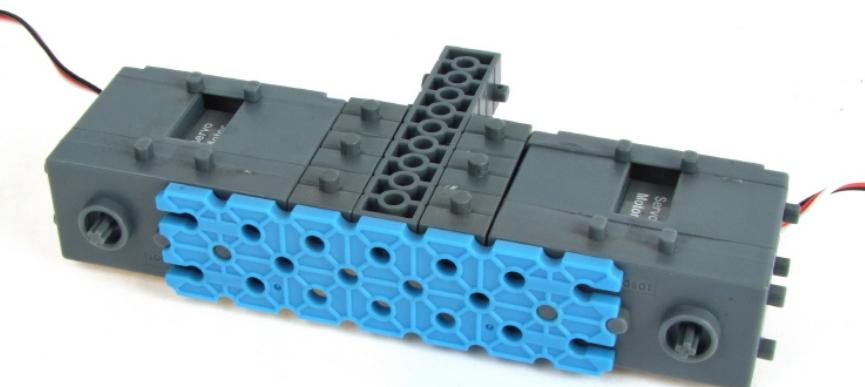


17

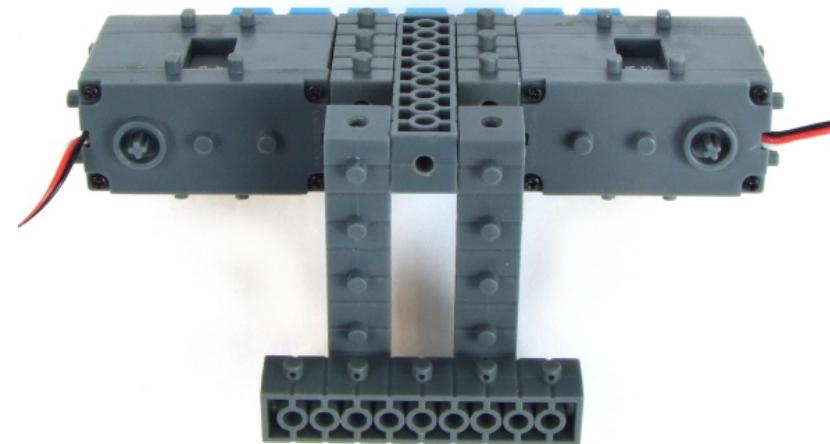

18

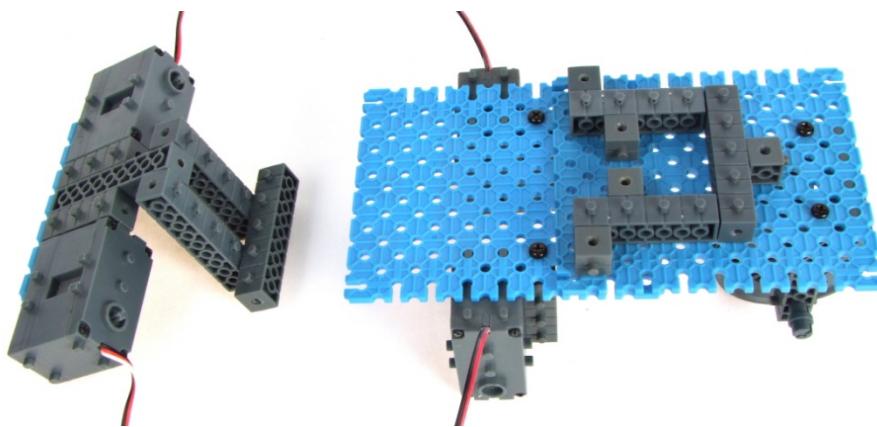


19

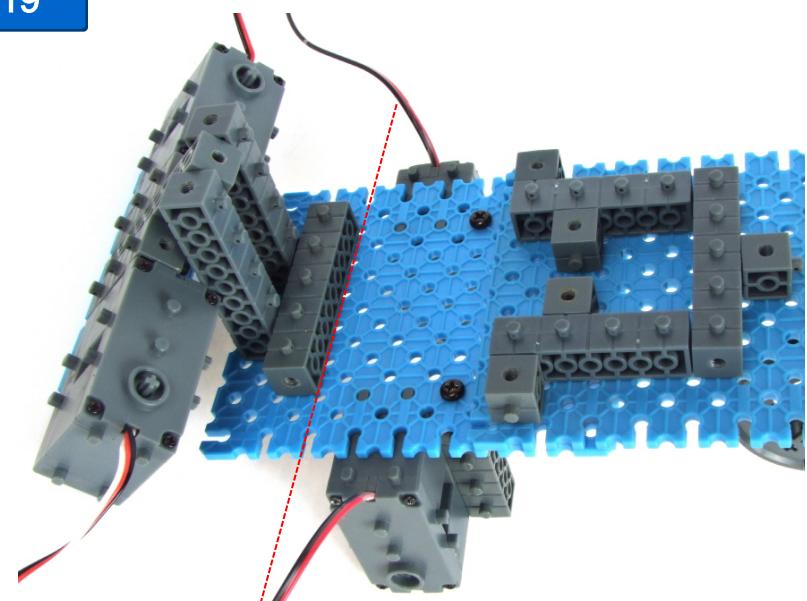


20


(S) X 2

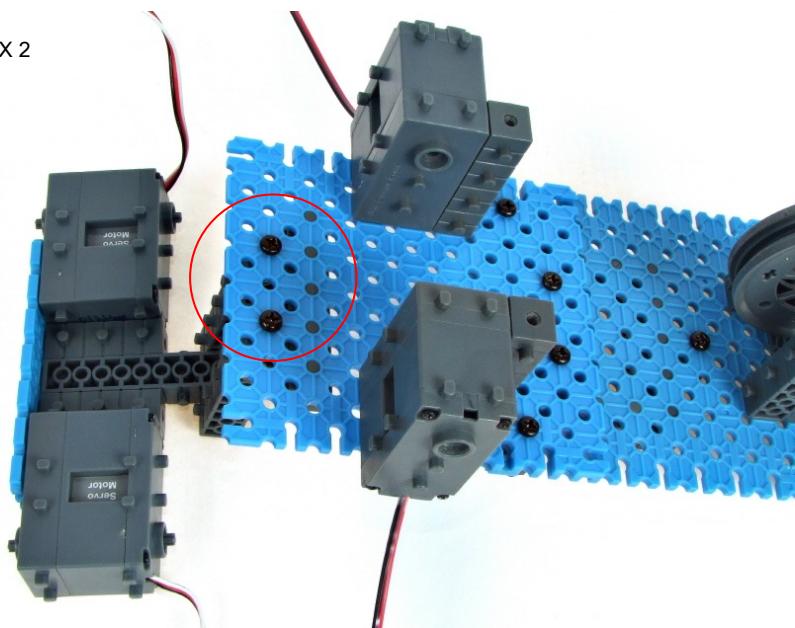

21

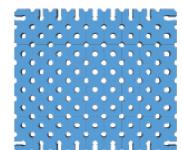

(S) X 2

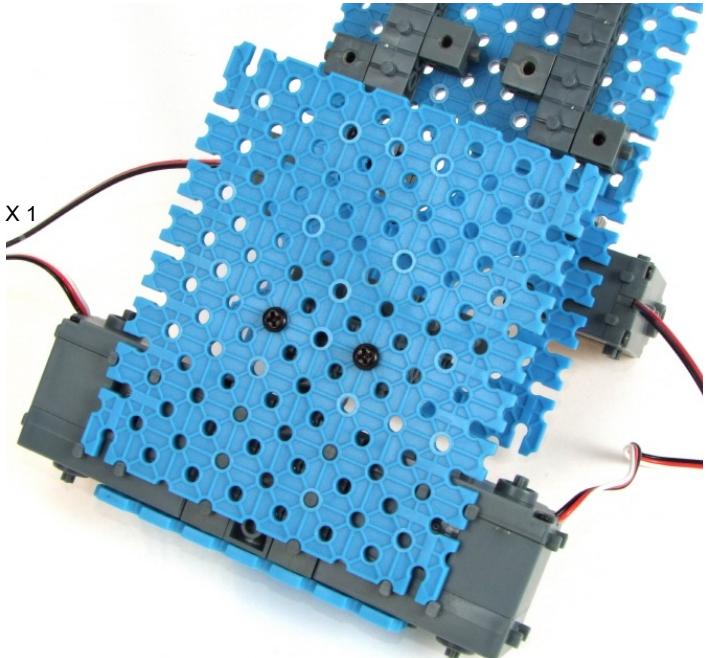


22


DC Shaft X 2

(L) X 2

X 2

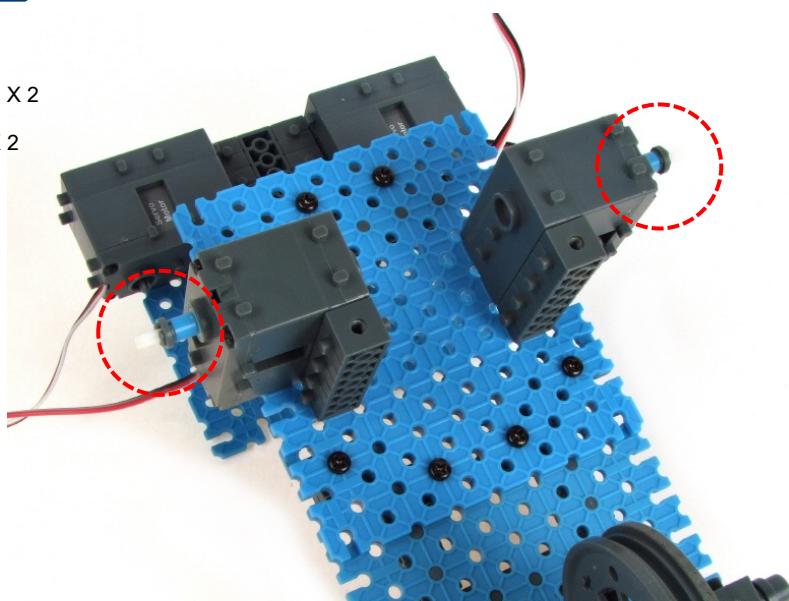

23

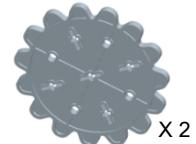

X 2




X 30





X 30




24

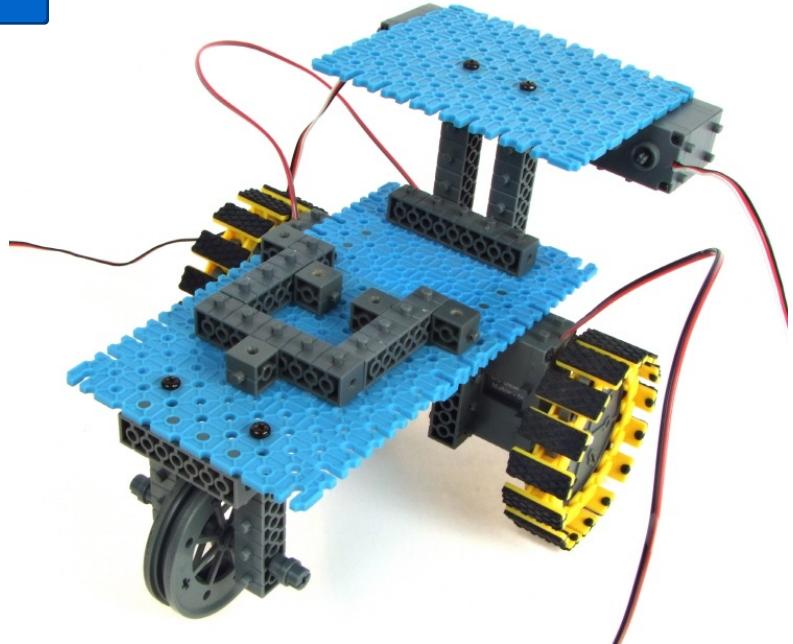


25

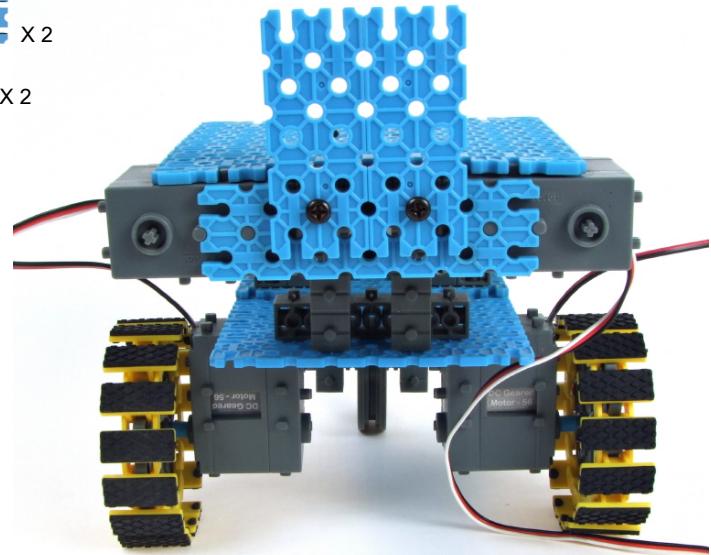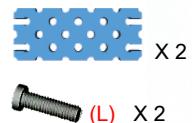

26

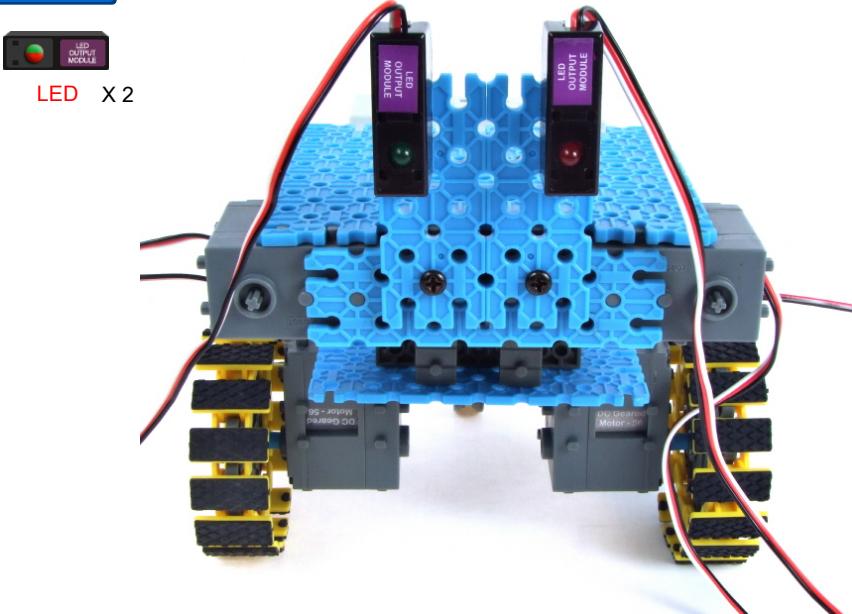

27

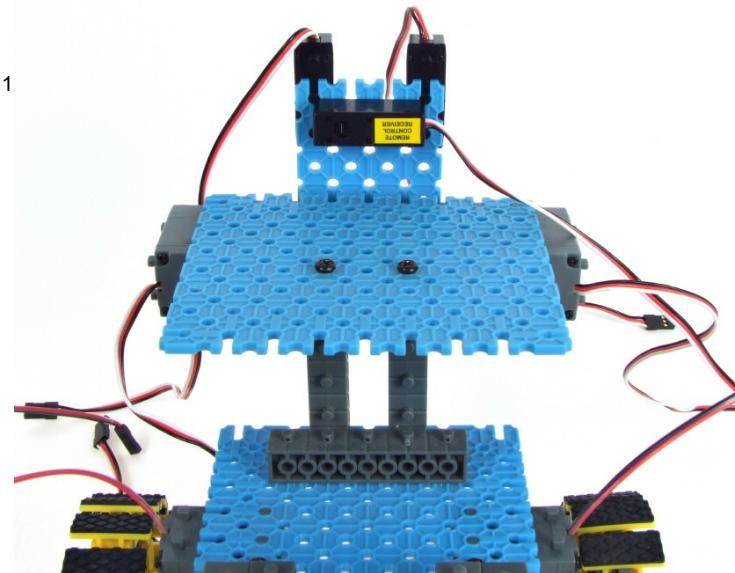


ucrobot@ucrobot.com


28



29

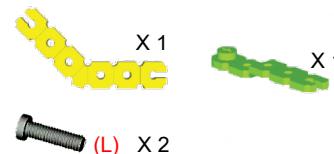


30

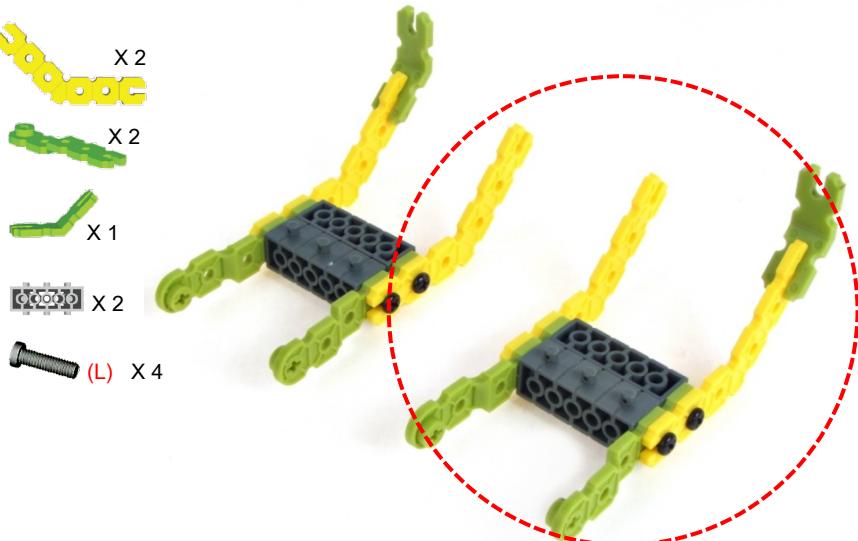


Make one more but symmetry.




31

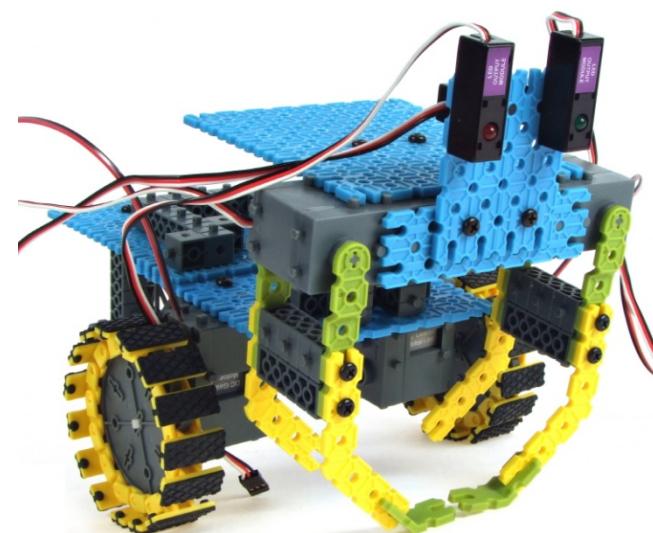

Finish

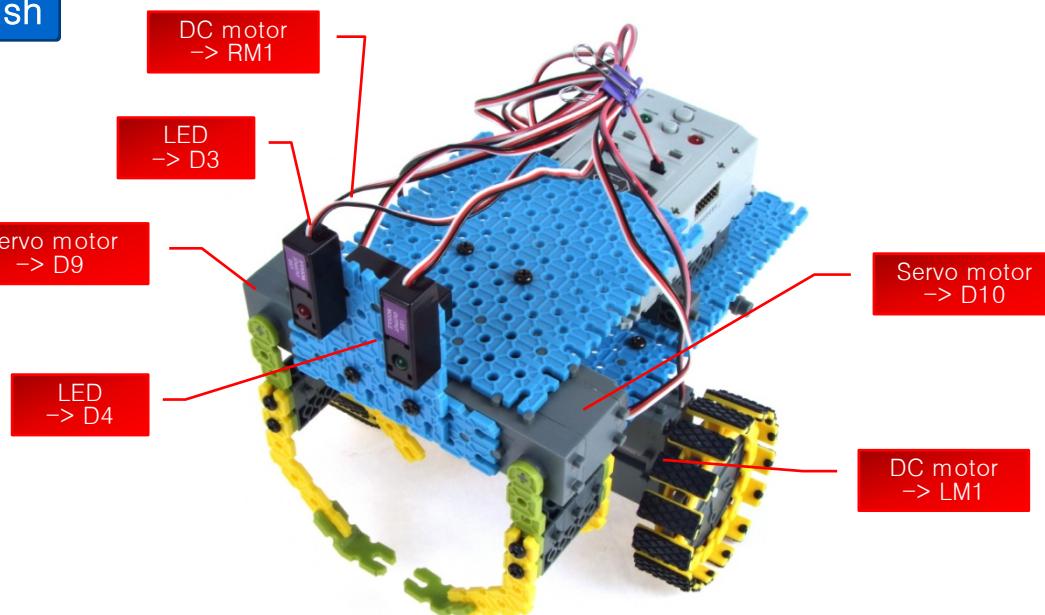

Part List

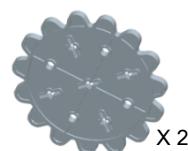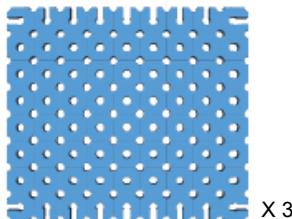

Servo motor X 2



X 2

