




Diagonal Circuits

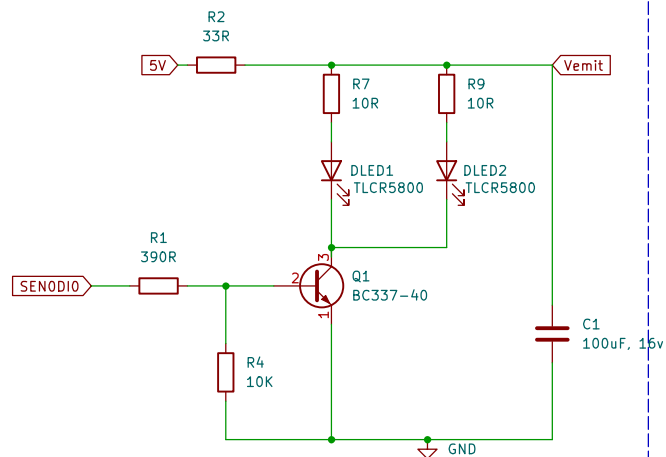


Detectors

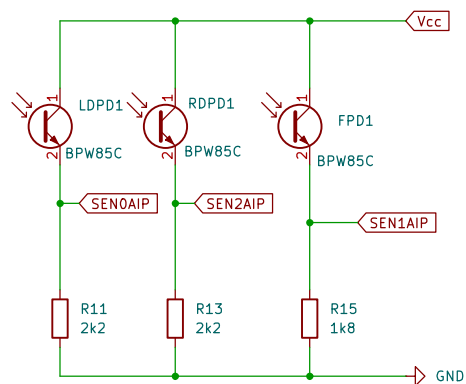


Board Connector to Mezzanine

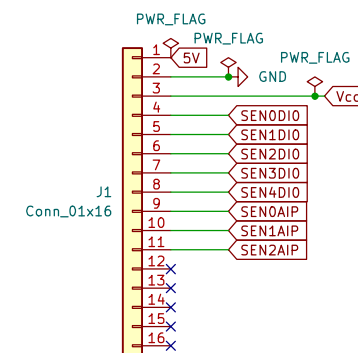


Mounting Holes




Power Smoothing

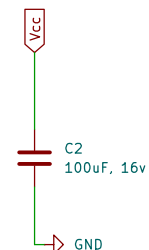

Front Circuit

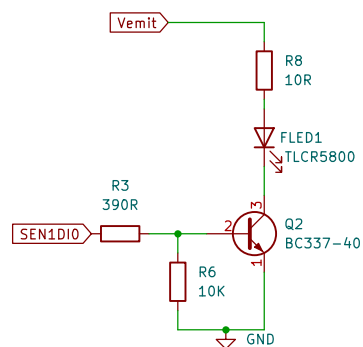

Indicator LED's

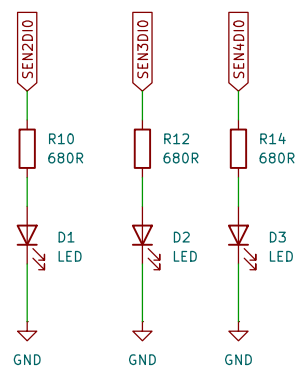

NOTES:

SENODIO – "Diag LED" on PCB. Set High to turn on the diagonal sensor LED's

SEN1DIO – "Frnt LED" on PCB. Set High to turn on the front sensor LED

SEN2DIO – "Left LED" on PCB. Set High to turn on the left Indicator LED. D1

SEN3DIO – "Mid LED" on PCB. Set High to turn on the middle Indicator LED. D2

SEN4DI0 – "Right LED" on PCB. Set High to turn on the right Indicator LED. D3

SEN0AIP – "Left ADC" on PCB. Read via ADC pin to get value from the left photodiode. LDPD1

SEN1AIP – "Front ADC" on PCB. Read via ADC pin to get value from the front photodiode. FPD1

SEN2AIP - "Right ADC" on PCB. Read via ADC pin to get value from the left photodiode. RDPD1

Sheet: /

File: UKMARSBOT_RP2040Wall-Sensor-Basic.kicad_sch

Title: UKMARS Basic Sensor Board for Gemini

Size: A4

Date: 2024-12-19

Rev: 2

Size: A4	
KiCad E.D.A. 8.0.8	

Id: 1/1