


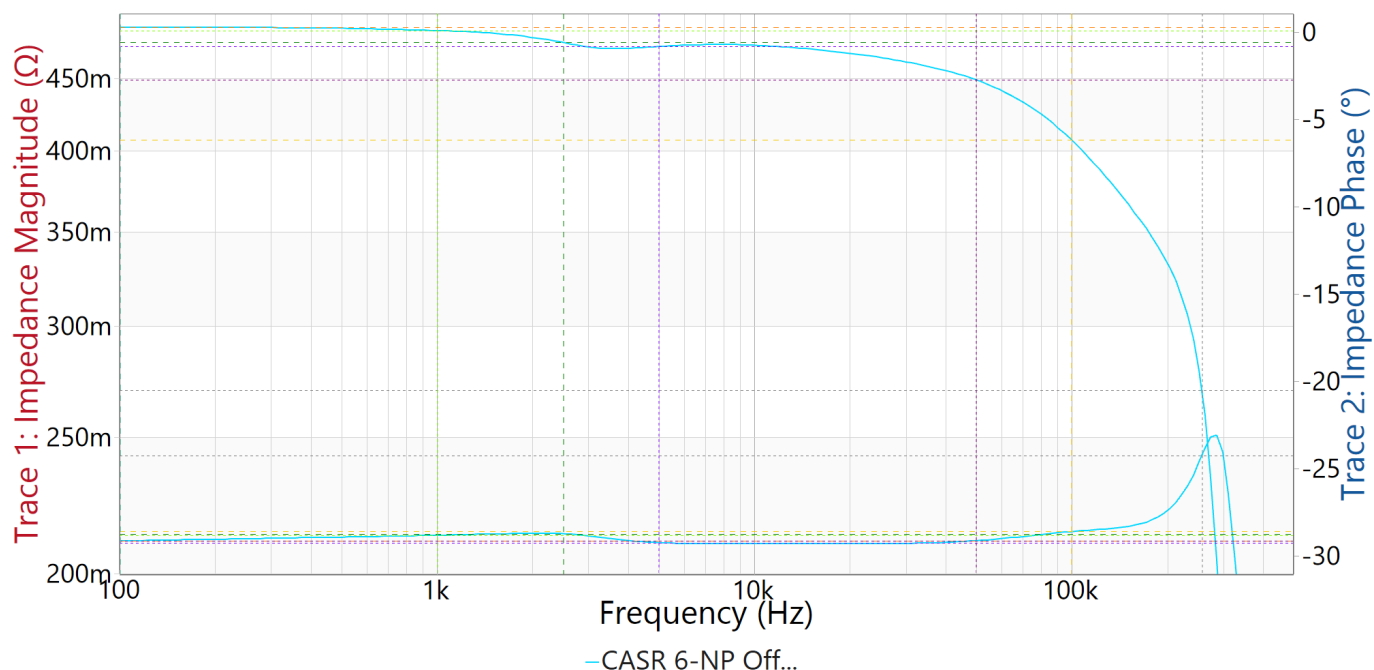

	Cursor 5	Cursor 7	Cursor 1
Frequency	100 Hz	1 kHz	2,5 kHz
CASR 6-NP Offset: 0 A, 0 dBm Magnitude	211,055 m Ω	212,922 m Ω	213,491 m Ω
CASR 6-NP Offset: 0 A, 0 dBm Phase ($^\circ$)	267,215 m $^\circ$	66,161 m $^\circ$	-614,098 m $^\circ$

	Cursor 6	Cursor 2	Cursor 3
Frequency	5 kHz	100 Hz	50 kHz
CASR 6-NP Offset: 0 A, 0 dBm Magnitude	210,402 m Ω	211,055 m Ω	211,041 m Ω
CASR 6-NP Offset: 0 A, 0 dBm Phase ($^\circ$)	-847,487 m $^\circ$	267,215 m $^\circ$	-2,751 $^\circ$

	Cursor 4	Cursor 8	Cursor 9
Frequency	100 kHz	257,843 kHz	500 kHz
CASR 6-NP Offset: 0 A, 0 dBm Magnitude	214,244 m Ω	242,549 m Ω	148,063 m Ω
CASR 6-NP Offset: 0 A, 0 dBm Phase ($^\circ$)	-6,174 $^\circ$	-20,521 $^\circ$	-38,327 $^\circ$

Measurement: Voltage / Current

Hardware configuration	
Receiver bandwidth	300 Hz
Source level	0 dBm
DUT settling time	0 s
Sweep time	2,65 s

Termination	Channel 1	Channel 2
Impedance	1 M Ω	1 M Ω

Receiver switch	Receiver 1	Receiver 2
Impedance/Reflection	External	External

Attenuator setting	Receiver 1	Receiver 2
Impedance/Reflection	20 dB	0 dB

Shaped level	
Level	Constant

Device configuration	
Device type	Bode500
Serial number	102509528
Last internal calibration	-

Sweep configuration	
Start frequency	100 Hz
Stop frequency	500 kHz
Center frequency	250,05 kHz
Span frequency	499,9 kHz
Sweep mode	Logarithmic
Number of points	201

Calibration/Correction	Full-Range	User-Range
Impedance	-	-