


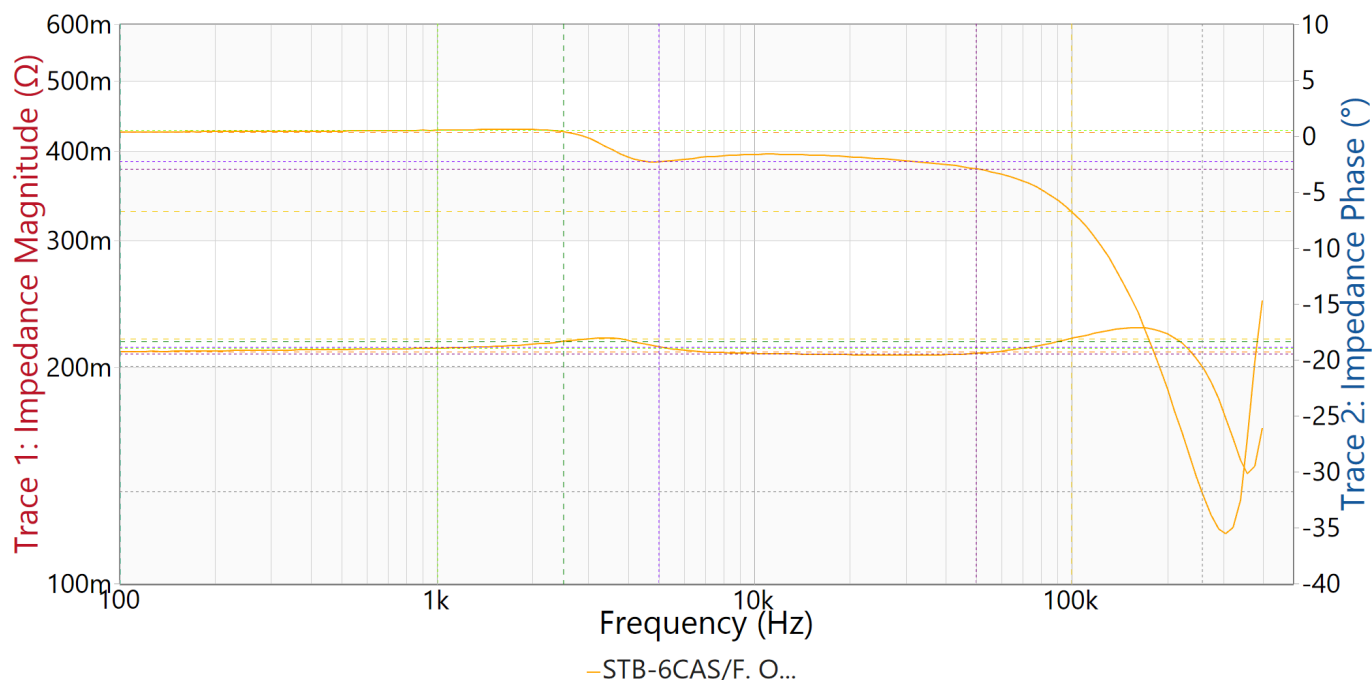

	Cursor 5	Cursor 7	Cursor 1
Frequency	100 Hz	1 kHz	2,5 kHz
STB-6CAS/F. Offset: 2 A, 0 dBm Magnitude	210,267 mΩ	212,676 mΩ	217,118 mΩ
STB-6CAS/F. Offset: 2 A, 0 dBm Phase (°)	376,667 m°	532,513 m°	390,047 m°

	Cursor 6	Cursor 2	Cursor 3
Frequency	5 kHz	100 Hz	50 kHz
STB-6CAS/F. Offset: 2 A, 0 dBm Magnitude	213,424 mΩ	210,267 mΩ	209,007 mΩ
STB-6CAS/F. Offset: 2 A, 0 dBm Phase (°)	-2,285 °	376,667 m°	-2,909 °

	Cursor 4	Cursor 8	Cursor 9
Frequency	100 kHz	257,843 kHz	500 kHz
STB-6CAS/F. Offset: 2 A, 0 dBm Magnitude	219,182 mΩ	200,821 mΩ	
STB-6CAS/F. Offset: 2 A, 0 dBm Phase (°)	-6,714 °	-31,751 °	

Measurement: Voltage / Current

Hardware configuration	
Receiver bandwidth	300 Hz
Source level	0 dBm
DUT settling time	0 s
Sweep time	2,65 s

Termination	Channel 1	Channel 2
Impedance	1 M Ω	1 M Ω

Receiver switch	Receiver 1	Receiver 2
Impedance/Reflection	External	External

Attenuator setting	Receiver 1	Receiver 2
Impedance/Reflection	20 dB	0 dB

Shaped level	
Level	Constant

Device configuration	
Device type	Bode500
Serial number	102509528
Last internal calibration	-

Sweep configuration	
Start frequency	100 Hz
Stop frequency	500 kHz
Center frequency	250,05 kHz
Span frequency	499,9 kHz
Sweep mode	Logarithmic
Number of points	201

Calibration/Correction	Full-Range	User-Range
Impedance	-	-