# CHAPTER 1 SPM TECHNIQUES

Scanning probe microscopes (SPMs) are a family of instruments used for studying surface properties of materials from the atomic to the micron level. All SPMs contain the components illustrated in Figure 1-1.

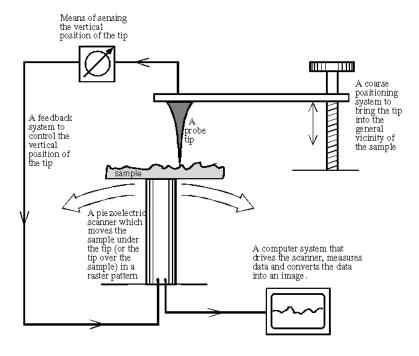


Figure 1-1. Schematic of a generalized SPM.

In this section, the operation of scanning tunneling microscopes (STMs), atomic force microscopes (AFMs), and other common scanning probe microscopes are discussed.

# 1.1 Scanning Tunneling Microscopy

The scanning tunneling microscope (STM) is the ancestor of all scanning probe microscopes. It was invented in 1981 by Gerd Binnig and Heinrich Rohrer at IBM Zurich. Five years later they were awarded the Nobel prize in physics for its invention. The STM was the first instrument to generate real-space images of surfaces with atomic resolution.

STMs use a sharpened, conducting tip with a bias voltage applied between the tip and the sample. When the tip is brought within about 10Å of the sample, electrons from the sample begin to "tunnel" through the 10Å gap into the tip or vice versa, depending upon the sign of the bias voltage. (See Figure 1-2.) The resulting tunneling current varies with tip-to-sample spacing, and it is the signal used to create an STM image. For tunneling to take place, both the sample and the tip must be conductors or semiconductors. Unlike AFMs, which are discussed in the next section, STMs cannot image insulating materials.

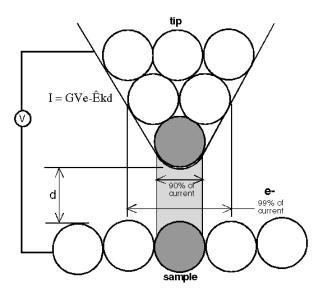


Figure 1-2. Schematic of tip and sample interaction for STM.

The tunneling current is an exponential function of distance; if the separation between the tip and the sample changes by 10% (on the order of 1Å), the

tunneling current changes by an order of magnitude. This exponential dependence gives STMs their remarkable sensitivity. STMs can image the surface of the sample with sub-angstrom precision vertically, and atomic resolution laterally.


STMs can be designed to scan a sample in either of two modes: *constant-height* or *constant-current* mode, as shown in Figure 1-3.

In constant-height mode, the tip travels in a horizontal plane above the sample and the tunneling current varies depending on topography and the local surface electronic properties of the sample. The tunneling current measured at each location on the sample surface constitute the data set, the topographic image.

In constant-current mode, STMs use feedback to keep the tunneling current constant by adjusting the height of the scanner at each measurement point. For example, when the system detects an increase in tunneling current, it adjusts the voltage applied to the piezoelectric scanner to increase the distance between the tip and the sample.

In constant-current mode, the motion of the scanner constitutes the data set. If the system keeps the tunneling current constant to within a few percent, the tip-to-sample distance will be constant to within a few hundredths of an angstrom.

Each mode has advantages and disadvantages. Constant-height mode is faster because the system doesn't have to move the scanner up and down, but it provides useful information only for relatively smooth surfaces. Constant-current mode can measure irregular surfaces with high precision, but the measurement takes more time.

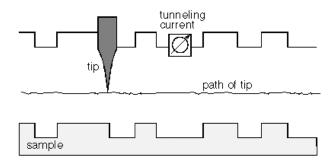

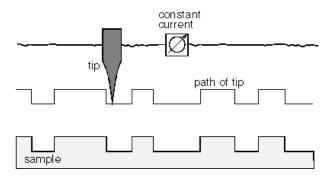


Figure 1-3. Comparison of constant-height and constant-current mode for STM.

As a first approximation, an image of the tunneling current maps the topography of the sample. More accurately, the tunneling current corresponds to the electronic density of states at the surface. STMs actually sense the number of filled or unfilled electron states near the Fermi surface, within an energy range determined by the bias voltage. Rather than measuring physical topography, it measures a surface of constant tunneling probability.

From a pessimist's viewpoint, the sensitivity of STMs to local electronic structure can cause trouble if you are interested in mapping topography. For example, if an area of the sample has oxidized, the tunneling current will drop precipitously when the tip encounters that area. In constant-current mode, the STM will instruct the tip to move closer to maintain the set tunneling current. The result may be that the tip digs a hole in the surface.

From an optimist's viewpoint, however, the sensitivity of STMs to electronic structure can be a tremendous advantage. Other techniques for obtaining information about the electronic properties of a sample detect and average the data originating from a relatively large area, a few microns to a few millimeters across. STMs can be used as surface analysis tools that probe the electronic properties of the sample surface with atomic resolution. Using STMs as spectroscopy tools is discussed in § 1.6.1, later in this chapter.

## 1.2 Atomic Force Microscopy

The atomic force microscope (AFM) probes the surface of a sample with a sharp tip, a couple of microns long and often less than  $100\text{\AA}$  in diameter. The tip is located at the free end of a cantilever that is 100 to  $200\mu\text{m}$  long. Forces between the tip and the sample surface cause the cantilever to bend, or deflect. A detector measures the cantilever deflection as the tip is scanned over the sample, or the sample is scanned under the tip. The measured cantilever deflections allow a computer to generate a map of surface topography. AFMs can be used to study insulators and semiconductors as well as electrical conductors.

Several forces typically contribute to the deflection of an AFM cantilever. The force most commonly associated with atomic force microscopy is an interatomic force called the van der Waals force. The dependence of the van der Waals force upon the distance between the tip and the sample is shown in Figure 1-4.

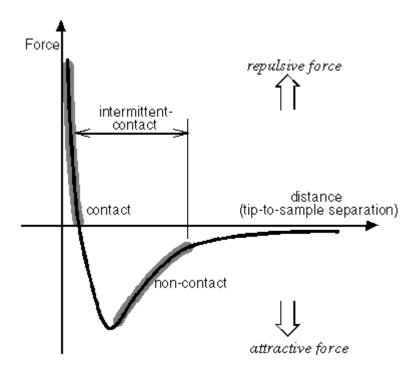


Figure 1-4. Interatomic force vs. distance curve.

Two distance regimes are labeled on Figure 1-4: 1) the contact regime; and 2) the non-contact regime. In the contact regime, the cantilever is held less than a few angstroms from the sample surface, and the interatomic force between the cantilever and the sample is repulsive. In the non-contact regime, the cantilever is held on the order of tens to hundreds of angstroms from the sample surface, and the interatomic force between the cantilever and sample is attractive (largely a result of the long-range van der Waals interactions). Both contact and non-contact imaging techniques are described in detail in the following sections.

#### 1.2.1 Contact AFM

In contact-AFM mode, also known as repulsive mode, an AFM tip makes soft "physical contact" with the sample. The tip is attached to the end of a cantilever with a low spring constant, lower than the effective spring constant holding the atoms of the sample together. As the scanner gently traces the tip across the sample (or the sample under the tip), the contact force causes the cantilever to bend to accommodate changes in topography. To examine this scenario in more detail, refer to the van der Waals curve in Figure 1-4.

At the right side of the curve the atoms are separated by a large distance. As the atoms are gradually brought together, they first weakly attract each other. This attraction increases until the atoms are so close together that their electron clouds begin to repel each other electrostatically. This electrostatic repulsion progressively weakens the attractive force as the interatomic separation continues to decrease. The force goes to zero when the distance between the atoms reaches a couple of angstroms, about the length of a chemical bond. When the total van der Waals force becomes positive (repulsive), the atoms are in contact.

The slope of the van der Waals curve is very steep in the repulsive or contact regime. As a result, the repulsive van der Waals force balances almost any force that attempts to push the atoms closer together. In AFM this means that when the cantilever pushes the tip against the sample, the cantilever bends rather than forcing the tip atoms closer to the sample atoms. Even if you design a very stiff cantilever to exert large forces on the sample, the interatomic separation between the tip and sample atoms is unlikely to decrease much. Instead, the sample surface is likely to deform (see §1.5.7 on nanolithography).

In addition to the repulsive van der Waals force described above, two other forces are generally present during contact-AFM operation: a capillary force exerted by the thin water layer often present in an ambient environment, and the force exerted by the cantilever itself. The capillary force arises when water wicks its way around the tip, applying a strong attractive force (about 10-8N) that holds the tip in contact with the surface. The magnitude of the capillary

force depends upon the tip-to-sample separation. The force exerted by the cantilever is like the force of a compressed spring. The magnitude and sign (repulsive or attractive) of the cantilever force depends upon the deflection of the cantilever and upon its spring constant. Section 1.6.2 examines these forces in more detail.

As long as the tip is in contact with the sample, the capillary force should be constant because the distance between the tip and the sample is virtually incompressible. It is also assumed that the water layer is reasonably homogeneous. The variable force in contact AFM is the force exerted by the cantilever. The total force that the tip exerts on the sample is the sum of the capillary plus cantilever forces, and must be balanced by the repulsive van der Waals force for contact AFM. The magnitude of the total force exerted on the sample varies from  $10^{-8}$ N (with the cantilever pulling away from the sample almost as hard as the water is pulling down the tip—see §1.6.2), to the more typical operating range of  $10^{-7}$  to  $10^{-6}$ N.

Most AFMs currently on the market detect the position of the cantilever with optical techniques. In the most common scheme, shown in Figure 1-5, a laser beam bounces off the back of the cantilever onto a position-sensitive photodetector (PSPD). As the cantilever bends, the position of the laser beam on the detector shifts. The PSPD itself can measure displacements of light as small as 10Å. The ratio of the path length between the cantilever and the detector to the length of the cantilever itself produces a mechanical amplification. As a result, the system can detect sub-angstrom vertical movement of the cantilever tip.

Other methods of detecting cantilever deflection rely on optical interference, or even a scanning tunneling microscope tip to read the cantilever deflection. One particularly elegant technique is to fabricate the cantilever from a piezoresistive material so that its deflection can be detected electrically. (In piezoresistive materials, strain from mechanical deformation causes a change in the material's resistivity.) For piezoresistive detection, a laser beam and a PSPD are not necessary.

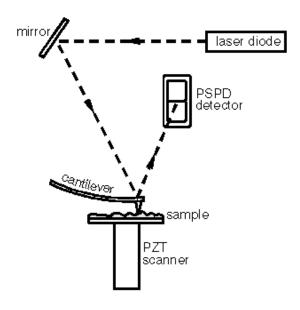


Figure 1-5. The beam-bounce detection scheme.

Once the AFM has detected the cantilever deflection, it can generate the topographic data set by operating in one of two modes- *constant-height* or *constant-force* mode.

In constant-height mode, the spatial variation of the cantilever deflection can be used directly to generate the topographic data set because the height of the scanner is fixed as it scans.

In constant-force mode, the deflection of the cantilever can be used as input to a feedback circuit that moves the scanner up and down in z, responding to the topography by keeping the cantilever deflection constant. In this case, the image is generated from the scanner's motion. With the cantilever deflection held constant, the total force applied to the sample is constant.

In constant-force mode, the speed of scanning is limited by the response time of the feedback circuit, but the total force exerted on the sample by the tip is well controlled. Constant-force mode is generally preferred for most applications.

Constant-height mode is often used for taking atomic-scale images of atomically flat surfaces, where the cantilever deflections and thus variations in applied force are small. Constant-height mode is also essential for recording real-time images of changing surfaces, where high scan speed is essential.

#### 1.2.2 Non-contact AFM

Non-contact AFM (NC-AFM) is one of several vibrating cantilever techniques in which an AFM cantilever is vibrated near the surface of a sample. The spacing between the tip and the sample for NC-AFM is on the order of tens to hundreds of angstroms. This spacing is indicated on the van der Waals curve of Figure 1-4 as the non-contact regime.

NC-AFM is desirable because it provides a means for measuring sample topography with little or no contact between the tip and the sample. Like contact AFM, non-contact AFM can be used to measure the topography of insulators and semiconductors as well as electrical conductors. The total force between the tip and the sample in the non-contact regime is very low, generally about  $10^{-12}$ N. This low force is advantageous for studying soft or elastic samples. A further advantage is that samples like silicon wafers are not contaminated through contact with the tip.

Because the force between the tip and the sample in the non-contact regime is low, it is more difficult to measure than the force in the contact regime, which can be several orders of magnitude greater. In addition, cantilevers used for NC-AFM must be stiffer than those used for contact AFM because soft cantilevers can be pulled into contact with the sample surface. The small force values in the non-contact regime and the greater stiffness of the cantilevers used for NC-AFM are both factors that make the NC-AFM signal small, and therefore difficult to measure. Thus, a sensitive, AC detection scheme is used for NC-AFM operation.


In non-contact mode, the system vibrates a stiff cantilever near its resonant frequency (typically from 100 to 400 kHz) with an amplitude of a few tens to hundreds of angstroms. Then, it detects changes in the resonant frequency or vibration amplitude as the tip comes near the sample surface. The sensitivity of this detection scheme provides sub-angstrom vertical resolution in the image, as with contact AFM.

The relationship between the resonant frequency of the cantilever and variations in sample topography can be explained as follows. The resonant frequency of a cantilever varies as the square root of its spring constant. In addition, the spring constant of the cantilever varies with the force gradient experienced by the cantilever. Finally, the force gradient, which is the derivative of the force versus distance curve shown in Figure 1-4, changes with tip-to-sample separation. Thus, changes in the resonant frequency of the cantilever can be used as a measure of changes in the force gradient, which reflect changes in the tip-to-sample spacing, or sample topography.

In NC-AFM mode, the system monitors the resonant frequency or vibrational amplitude of the cantilever and keeps it constant with the aid of a feedback system that moves the scanner up and down. By keeping the resonant frequency or amplitude constant, the system also keeps the average tip-to-sample distance constant. As with contact AFM (in constant-force mode), the motion of the scanner is used to generate the data set.

NC-AFM does not suffer from the tip or sample degradation effects that are sometimes observed after taking numerous scans with contact AFM. As mentioned above, NC-AFM is also preferable to contact AFM for measuring soft samples. In the case of rigid samples, contact and non-contact images may look the same. However, if a few monolayers of condensed water are lying on the surface of a rigid sample, for instance, the images may look quite different. An AFM operating in contact mode will penetrate the liquid layer to image the underlying surface, whereas in non-contact mode an AFM will image the surface of the liquid layer (see Figure 1-6).

For cases where a sample of low moduli may be damaged by the dragging of an AFM tip across its surface, another mode of AFM operation is available: intermittent-contact mode. Intermittent-contact mode is useful for a variety of applications, and it is described in the following section.

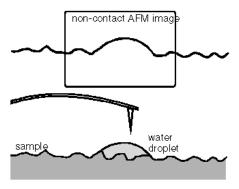

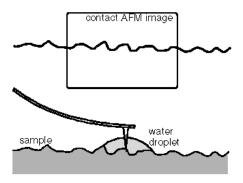


Figure 1-6. Contact and non-contact AFM images of a surface with a droplet of water.

senses the cantilever's twist, or lateral deflection. Figure 1-10 illustrates the difference between an AFM measurement of the *vertical* deflection of the cantilever, and an LFM measurement of *lateral* deflection. AFM uses a "bi-cell" PSPD, divided into two halves, A and B. LFM requires a "quad-cell" PSPD, divided into four quadrants, A through D. By adding the signals from the A and B quadrants, and comparing the result to the sum from the C and D quadrants, the quad-cell can also sense the lateral component of the cantilever's deflection. A properly engineered system can generate both AFM and LFM data simultaneously.

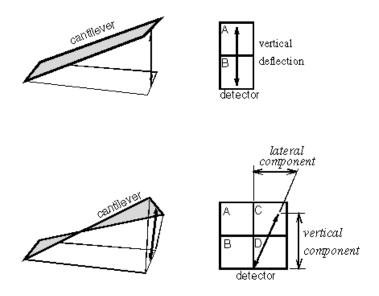


Figure 1-10. The PSPD for AFM (top) and LFM (bottom).

directly. All of these are ways of probing the local electronic structure of a surface using an STM.

#### 1.6.2 Force vs. Distance Curves

Force vs. distance (F vs. d) curves are used to measure the vertical force that the tip applies to the surface while a contact-AFM image is being taken. technique can also be used to analyze surface contaminants' viscosity, lubrication thickness, and local variations in the elastic properties of the surface.

Strictly speaking, a force vs. distance curve is a plot of the deflection of the cantilever versus the extension of the piezoelectric scanner, measured using a position-sensitive photodetector. The van der Waals force curve of Figure 1-4 represents just one contribution to the cantilever deflection. Local variations in the form of the F vs. d curve indicate variations in the local elastic properties. Contaminants and lubricants affect the measurement, as does the thin layer of water that is often present when operating an AFM in air.

In the laboratory, force vs. distance curves are quite complex and specific to the given system under study. The discussion here refers to Figure 1-17 and represents a gross simplification, where shapes, sizes, and distances should not be taken literally.

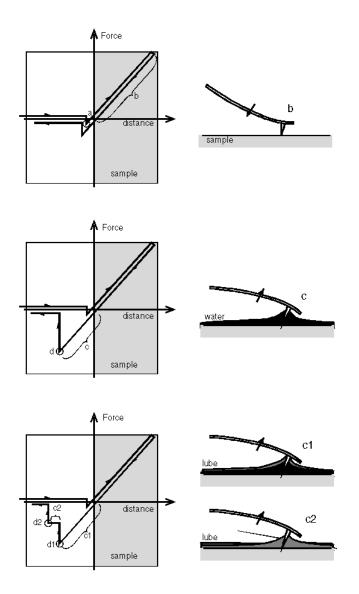


Figure 1-17. Forces vs. distance curves in vacuum (top), air (middle), and air with a contamination layer (bottom).

With this in mind, consider the simplest case of AFM in vacuum (Figure 1-17, top). At the left side of the curve, the scanner is fully retracted and the cantilever is undeflected since the tip is not touching the sample. As the scanner extends, the cantilever remains undeflected until it comes close enough to the sample surface for the tip to experience the attractive van der Waals force. The tip snaps into the surface (point a in Figure 1-17, top). Equivalently, the cantilever suddenly bends slightly towards the surface.

As the scanner continues to extend, the cantilever deflects away from the surface, approximately linearly (region **b** in Figure 1-17, top). extension, at the extreme right of the plot, the scanner begins to retract. The cantilever deflection retraces the same curve (in the absence of scanner hysteresis; see §2.2.2) as the scanner pulls the tip away from the surface.

In air, the retracting curve is often different because a monolayer or a few monolayers of water are present on many surfaces (Figure 1-17, middle). This water layer exerts a capillary force that is very strong and attractive. As the scanner pulls away from the surface, the water holds the tip in contact with the surface, bending the cantilever strongly towards the surface (region c in Figure 1-17, middle). At some point, depending upon the thickness of the water layer, the scanner retracts enough that the tip springs free (point d in Figure 1-17, middle). This is known as the snap-back point. As the scanner continues to retract beyond the snap-back point, the cantilever remains undeflected as the scanner moves it away from the surface in free space.

If a lubrication layer is present along with the water layer, multiple snap-back points can occur, as shown in Figure 1-17, bottom. The positions and amplitudes of the snap-back points depend upon the viscosity and thickness of the layers present on the surface.

Contact AFM can be operated anywhere along the linear portion of the force vs. distance curves, in regions (b) or (c). Operation in region (c) might be used for soft samples, to minimize the total force between the tip and the sample. Operating with the cantilever bent towards the surface is inherently a less stable situation, and maximum scan speeds may have to be reduced. Note that operation in region (C) is still called contact mode, since the tip is touching the sample. Non-contact AFM is operated just to the left of point (a) on the F vs. d curve—just before the tip snaps into the surface.

In the linear region of the F vs. d curves (b), the slope is related to the elastic modulus of the system. When the cantilever is much softer than the sample surface, as is the case for non-destructive imaging, the slope of the curve mostly reflects the spring constant of the cantilever. However, when the cantilever is much stiffer than the sample surface, the slope of the F vs. d curve allows investigation of the elastic properties of the sample.

#### 1.7 SPM Environments

Scanning probe microscopes can be operated in a variety of environments. In this section four environments are described: ultra-high vacuum (UHV), ambient (air), liquid, and electrochemical (EC).

#### 1.7.1 Ultra-high Vacuum

The first STMs were operated primarily in UHV to study atomically clean surfaces. Silicon has been the most extensively studied material, and obtaining images of the 7 x 7 surface reconstruction of Si (111) is often used as a benchmark for evaluating the performance of UHV STM. A major application of UHV STM is scanning tunneling spectroscopy (see §1.6.1). STS applied to atomically clean surfaces allows characterization of both topographic and electronic structure, without the added complication of contamination that is always present in air. Another application is the study of materials processes in situ—that is, in the same vacuum environment in which the materials are grown. In this way, processing may proceed without contaminating the sample.

Although the first scanning probe microscope was a UHV STM, the development of UHV AFM came much later. Changing cantilevers and aligning the beam-bounce detection scheme—procedures that are not too difficult with an ambient AFM—were major obstacles to the development of a UHV AFM. However, the operation of both STM and AFM on the same vacuum flange is possible using piezoresistive cantilevers. A combined UHV STM/AFM enables scientists to work with conducting or non-conducting samples.

# CHAPTER 2 THE SCANNER

In virtually all scanning probe microscopes, a piezoelectric scanner is used as an extremely fine positioning stage to move the probe over the sample (or the sample under the probe). The SPM electronics drive the scanner in a type of raster pattern, as shown in Figure 2-1.

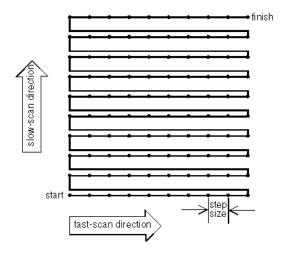


Figure 2-1. Scanner motion during data acquisition.

The scanner moves across the first line of the scan, and back. It then steps in the perpendicular direction to the second scan line, moves across it and back, then to the third line, and so forth. The path differs from a traditional raster pattern in that the alternating lines of data are not taken in opposite directions. SPM data are collected in only one direction—commonly called the fast-scan direction—to minimize line-to-line registration errors that result from scanner hysteresis (see §2.2.2). The perpendicular direction, in which the scanner steps from line to line, is called the slow-scan direction.

While the scanner is moving across a scan line, the image data are sampled digitally at equally spaced intervals. The data are the height of the scanner in z for constant-force mode (AFM) or constant-current mode (STM). For constant-height mode, the data are the cantilever deflection (AFM) or tunneling current (STM) (see §1.2.1 and §1.1).

The spacing between the data points is called the step size. The step size is determined by the full scan size and the number of data points per line. In a typical SPM, scan sizes run from tens of angstroms to over 100 microns, and from 64 to 512 data points per line. (Some systems offer 1024 data points per line.) The number of lines in a data set usually equals the number of points per line. Thus, the ideal data set is comprised of a dense, square grid of measurements.

The difficulties of achieving a perfectly square measurement grid in the plane of the sample surface are explored in this chapter. And similar difficulties arise in the perpendicular (z) direction. To gain an understanding of the mechanisms underlying scanner operation, the fundamentals of piezoelectric scanners are discussed.

# 2.1 Scanner Design and Operation

Piezoelectric materials are ceramics that change dimensions in response to an applied voltage. Conversely, they develop an electrical potential in response to mechanical pressure. Piezoelectric scanners can be designed to move in x, y, and z by expanding in some directions and contracting in others.

Piezoelectric scanners for SPMs are usually fabricated from lead zirconium titanate, or PZT, with various dopants added to create specific materials properties. Scanners are made by pressing together a powder, then sintering the material. The result is a polycrystalline solid. Each of the crystals in a piezoelectric material has its own electric dipole moment. These dipole moments are the basis of the scanner's ability to move in response to an applied voltage.

After sintering, the dipole moments within the scanner are randomly aligned. If the dipole moments are not aligned, the scanner has almost no ability to move. A process called poling is used to align the dipole moments. During poling the scanners are heated to about 200°C to free the dipoles, and a DC voltage is applied to the scanner. Within a matter of hours most of the dipoles become aligned. At that point, the scanner is cooled to freeze the dipoles into their The newly poled scanner can then respond to voltages by aligned state. extending and contracting.

Occasional use of the scanner will help maintain the scanner's polarization. The voltage applied to enact the scanning motion realigns the stray dipoles that relax If the scanner is not repoled by regular use, a into random orientation. significant fraction of the dipoles will begin to randomize (depolarize or depole) again over a period of weeks. Depoling is accelerated markedly if the scanner is subjected to temperatures above 150°C. This means that if you want to add a heated stage to your SPM, you must isolate it thermally from the scanner. (The Curie temperature for PZT materials is about 150°C.)

Many SPMs use variations of the simple tube design depicted in Figure 2-2. In this design, the scanner is a hollow tube.

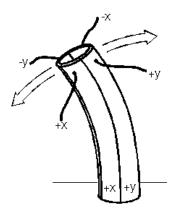


Figure 2-2. The scanner tube.

Electrodes are attached to the outside of the tube, segmenting it electrically into vertical quarters, for +x, +y, -x, and -y travel. An electrode is also attached to the center of the tube to provide motion in the z direction. When alternating voltages are applied to the +x and -x electrodes, for example, the induced strain of the tube causes it to bend back and forth in the x direction. Voltages applied to the z electrode cause the scanner to extend or contract vertically.

In most cases, the voltage applied to the z electrode of the scanner at each measurement point constitutes the AFM (constant-force) or the STM (constant-current) data set. In some cases, an external sensor is used to measure the height of the scanner directly (see §2.4). For the purposes of the discussion in the following sections, it is assumed that the data set consists of voltages applied to the z electrode.

The maximum scan size that can be achieved with a particular piezoelectric scanner depends upon the length of the scanner tube, the diameter of the tube, its wall thickness, and the strain coefficients of the particular piezoelectric ceramic from which it is fabricated. Typically, SPMs use scanners that can scan laterally from tens of angstroms to over 100 microns. In the vertical direction, SPM scanners can distinguish height variations from the sub-angstrom range to about 10 microns.

Piezoelectric scanners are critical elements in SPMs, valued for their sub-angstrom resolution, their compactness, and their high-speed response. However, along with these essential properties come some challenges.

#### 2.2 Scanner Nonlinearities

As a first approximation, the strain in a piezoelectric scanner varies linearly with applied voltage. (Strain is the change in length divided by the original length,  $\Delta l / l$ .) The following equation describes the ideal relationship between the strain and an applied electric field:

$$s = d E$$

where s is the strain in Å/m, E is the electric field in V/m, and d is the strain coefficient in Å/V. The strain coefficient is characteristic of a given piezoelectric material.

In practice, the behavior of piezoelectric scanners is not so simple—the relationship between strain and electric field diverges from ideal linear behavior. These divergences are described in the following sections.

#### **Intrinsic Nonlinearity** 2.2.1

Suppose the applied voltages start from zero and gradually increase to some finite value. If the extension of the piezoelectric material is plotted as a function of the applied voltage, the plot is not a straight line, but an s-shaped curve, as seen in Figure 2-3. The dashed line in the graph is a linear fit to the data.

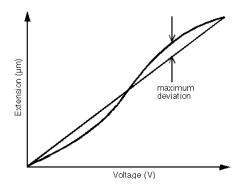


Figure 2-3. Intrinsic nonlinearity of a scanner.

The intrinsic nonlinearity of a piezoelectric material is the ratio of the maximum deviation  $\Delta y$  from the linear behavior to the ideal linear extension y at that voltage. In other words, the nonlinearity is  $\Delta y/y$ , expressed as a percentage. Intrinsic nonlinearity typically ranges from 2% to 25% in the piezoelectric materials used in SPM systems.

In the plane of the sample surface, the effect of intrinsic nonlinearity is distortion of the measurement grid of Figure 2-1. Because the scanner does not move linearly with applied voltage, the measurement points are not equally spaced. As a result, an SPM image of a surface with periodic structures will show non-uniform spacings and curvature of linear structures. Less regular surfaces may not show recognizable distortion, even though the distortion is present.

Perpendicular to the plane of the sample surface (in the z direction), intrinsic nonlinearity causes errors in height measurements. Height is usually calibrated for SPMs by scanning a sample with a known step height. By reading the voltage applied to the z electrode as it traverses the step, the z component of the strain coefficient can be calculated. However, if that strain coefficient is directly applied to measure a feature different in height from the calibrated height, the intrinsic nonlinearity of the scanner will generate errors.

### 2.2.2 Hysteresis

To complicate matters, piezoelectric ceramics display hysteretic behavior. Suppose we start at zero applied voltage, gradually increase the voltage to some finite value, and then decrease the voltage back to zero. If we plot the extension of the ceramic as a function of the applied voltage, the descending curve does not retrace the ascending curve—it follows a different path, as shown in Figure 2-4. Note that in this section it is assumed that the voltages change very slowly. Nonlinearities that result from time-dependent behavior of the piezoelectric ceramic are treated in the next section.

The hysteresis of a piezoelectric scanner is the ratio of the maximum divergence between the two curves to the maximum extension that a voltage can create in the scanner:  $\Delta Y/Y_{max}$ . Hysteresis can be as high as 20% in piezoelectric materials.

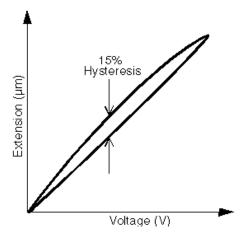


Figure 2-4. Hysteresis of a scanner.

As mentioned in the introduction to this chapter, SPM data are usually collected in one direction to minimize registration errors caused by scanner hysteresis. Figure 2-4 shows that data collected in the return direction would be shifted slightly, distorting the measurement grid of Figure 2-1. Since most SPMs today have provisions for taking scans in any fast-scan direction, you can observe hysteresis in the plane of the sample by comparing data sets taken in opposite fast-scan directions. For example, you could compare a data set taken left to right with a data set taken right to left. Scanner hysteresis would cause a shift between the data sets.

Hysteresis in the direction perpendicular to the plane of the sample causes erroneous step-height profiles, as shown in Figure 2-5. Referring to the curve of Figure 2-4, we see that if the scanner is going up a step in the z direction, a certain voltage is required to allow the scanner to contract. But going down the same step the scanner extends, and extension takes more voltage than contraction for the same displacement. When the SPM image is represented by the voltage applied to the scanner, a profile of the image would look like Figure 2-5. It is arbitrarily assumed in Figure 2-5 that the strain coefficient in z was calibrated for a contracting scanner.

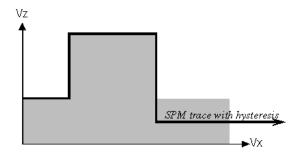


Figure 2-5. Effects of hysteresis on a step.

#### 2.2.3 Creep

When an abrupt change in voltage is applied, the piezoelectric material does not change dimensions all at once. Instead, the dimensional change occurs in two steps: the first step takes place in less than a millisecond, the second on a much longer time scale. The second step,  $\Delta x_c$  in Figure 2-6, is known as creep.

Quantitatively, creep is the ratio of the second dimensional change to the first:  $\Delta x_c/\Delta x$ . Creep is expressed as a percentage and is usually quoted with the characteristic time interval  $T_{cr}$  over which the creep occurs. Typical values of creep range from 1% to 20%, over times ranging from 10 to 100 seconds.

The times involved during typical scans place the lateral motion of the scanner in the curved part of the response curve in Figure 2-6. As a result, two scans taken at different scan speeds show slightly different length scales (magnifications) when creep is present. You can trust only the measurement made at the scan speed that you used to calibrate your SPM when creep is present.

Another effect of creep in the plane of the sample is that it can slow down your work when you try to zoom in on a feature of interest. Suppose you want to characterize a defect on the surface of your sample. Most likely, you'll first take a large scan to find the defect. Suppose you see the defect, very tiny, in a corner of the large scan. What you would prefer to do is take a much smaller scan—a high-resolution scan—centered about the defect. An SPM applies an offset voltage to move the scanner to its new center position to take the second scan.

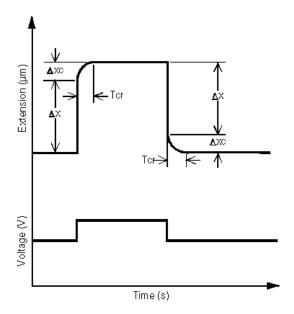


Figure 2-6. Plots showing creep of a scanner.

Because you have applied a sudden voltage step, in this case an offset voltage in the plane of the sample, creep will cause you to miss your target. If you continue to collect scans without changing the offset voltage, the scanner will continue to relax until the defect eventually drifts (creeps) into the center of your scan. The process will likely take a matter of minutes.

To examine the effects of creep in the z direction, consider a step as shown in Figure 2-7. As the tip traverses the step from bottom to top, the scanner contracts immediately with a voltage corresponding to the full step height. However, over the next few seconds the scanner continues to contract slowly as creep occurs. To keep the tip in contact with the sample, an SPM has to apply a voltage in the other direction, counteracting the creep. When the tip traverses the step from top to bottom, the same process occurs. The scanner extends to accommodate the step, then continues to creep. An SPM must apply a voltage in the opposite direction to maintain contact between the tip and the sample.

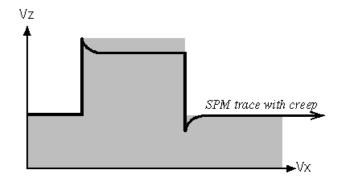


Figure 2-7. Effects of creep on a step.

The effect of creep on the profile of a step is a simple example. Consider a more typical sample with steep slopes that represent defects or grains or other surface features. Creep may cause an SPM image to look like it has ridges on one side of a feature and shadows on the other side of a feature. If there are shadows where the tip has just traveled down a steep slope, or ridges where the tip has just traveled up a steep slope, creep may be responsible. Reversing the fast-scan direction and taking the same image helps separate creep artifacts from true ridges and trenches (see §2.5.3).

### 2.2.4 Aging

The strain coefficient, d, of piezoelectric materials changes exponentially with time and use. Figure 2-8 graphs the aging of a piezoelectric scanner, for cases of both high and low voltage usage.

The aging rate is the change in strain coefficient per decade of time. When a scanner is not used, the deflection achieved for a given voltage gradually decreases. The aging rate of scanners for an SPM can produce a decrease in lateral strain coefficients (and therefore, an error in length measurements taken from SPM images) over time. When a scanner is used regularly, the deflection achieved for a given voltage increases slowly with use and time.

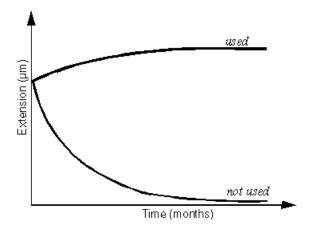


Figure 2-8. Aging of a scanner, with use or left idle.

These two phenomena are part of the same process. Recall from the introduction to this chapter that piezoelectric materials are polycrystalline ceramics. Each of the tiny crystals that compose the scanner has its own dipole moment. Repeated application of voltage in the same direction—such as the voltage applied during scanning—causes more and more of the dipoles to align themselves along the axis of the scanner. The amount of deflection achieved for a given voltage depends upon how many dipoles are aligned. Thus, the more the scanner is used, the farther the scanner will travel.

On the other hand, if the scanner is not used, the dipole moments of the crystals will gradually become randomly oriented again. As a result, fewer dipoles contribute to the deflection of the scanner. When you buy an SPM, the scanners have already been "poled," which means that they have already been exercised to the point where the deflection of the scanner is close to its maximum. The dependence of the scanner deflection on time and usage means that the scanner may not be extending the same distance for a given applied voltage as it did when it was first calibrated. As a result, when you measure a feature on an SPM image, the values of lateral and vertical dimensions may be in error.

#### 2.2.5 Cross Coupling

The term cross coupling refers to the tendency of x-axis or y-axis scanner movement to have a spurious z-axis component (Figure 2-9). It arises from several sources and is fairly complex. For example, the electric field is not uniform across the scanner. The strain fields are not simple constants, but actually complex tensors. Some "cross talk" occurs between x, y, and z electrodes. But the largest effect is geometric. Geometric cross coupling has its basis in the way piezoelectric scanners are constructed, usually as segmented tubes or as tripods.

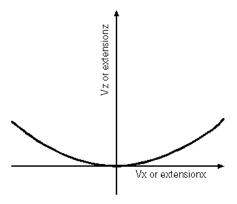


Figure 2-9. Cross coupling motion of the scanner.

The *x-y* motion of the scanner tube is produced when one side of the tube shrinks and the other side expands. As a result, a piezoelectric tube scans in an arc, not in a plane (see Figure 2-2). A voltage applied to move the piezoelectric tube along the x or y axis (parallel to the surface of the sample) necessitates that the scanner extend and contract along the z axis (perpendicular to the surface of the sample) to keep the tip in contact with the sample.

A tripod scanner is designed with three mutually perpendicular bars or tubes glued together at one end. This design is also susceptible to cross coupling because the three bars of piezoelectric material are attached to one another. When the x bar extends or contracts, it causes rotation of the y and z bars.

Cross coupling can cause an SPM to generate a bowl-shaped image of a flat sample. A profile of such an image is shown in Figure 2-10 with an example of a step.

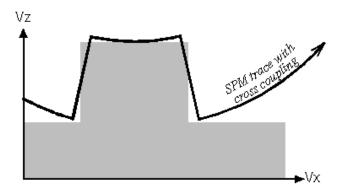


Figure 2-10. Effects of cross-coupling on a step.

In interpreting Figure 2-10, remember that the SPM image is based on the voltage required to compensate for the curvature generated by the arc of the scanner. The bowl shape may not always be evident in the final image because the curved background can be subtracted out using image-processing software. The best way to determine if the scanner is subject to cross coupling is to image a sample with a known radius of curvature, such as a lens. Software corrections can only flatten it or leave it alone. In the first case, you end up with a spuriously flat image, and in the second case the curvature of the scanner will be added to the curvature of the lens. The true curvature of a lens can be measured only when cross coupling is eliminated.

Throughout §2.2 the example of a single step to demonstrate hysteresis, creep, and cross coupling in the vertical direction is used. To show a single image in the laboratory that illustrates each of these effects in isolation is virtually impossible. Figure 2-11 shows the sum of the effects of hysteresis, creep, and cross coupling in the image of a single step. (The aspect ratio of the tip may also contribute to the shape of the sidewalls: see §3.3.)

Traditionally, the nonlinear behavior of piezoelectric scanners described above has been addressed imperfectly using software corrections. Some systems on the market use hardware solutions that eliminate most of the nonlinearities instead of correcting them. Hardware solutions are divided into optical, capacitive, and strain-gauge techniques. The best systems combine hardware and software corrections, using the strengths of each.

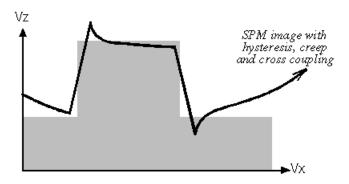


Figure 2-11. Effects of hysteresis, creep, and cross coupling on a step.

### 2.3 Software Correction

The first step in developing a software correction for scanner nonlinearities is to image a calibration grating. The system compares the measured data with the known characteristics of the grating. Then the system determines how to adjust the measured data to conform to the known characteristics. It stores that information in a file, or lookup table. Afterwards, the system can compensate for nonlinearity while collecting data by adjusting the voltage applied to the scanner in accordance with the file or the look-up table, as shown in Figure 2-12.

More sophisticated software correction algorithms include equations that model the scanner tube's non-linear response to applied voltages. The equations are used to calculate the voltages that are applied to the scanner to position it during a scan. Again, scanner calibration procedures are necessary to determine parameters for the algorithm.

# CHAPTER 3 SPM PROBES

#### 3.1 Introduction

The probe is a critical component of a scanning probe microscope because different probes can measure different properties of the sample. Also the probe determines the force applied to the sample and the ultimate resolution of the system.

The most common probes in scanning probe microscopy are the cantilevers. These cantilevered probes are highly suited to measure the topography of a sample. Using different coating on the cantilevers different properties of the sample can be measured, like magnetic (MFM), electrostatic (EFM), capacitance (SCM) etc. Other types of probes are available to measure other properties, like optical (NSOM), thermal (SThM), electronic (STM).

### 3.2 Cantilevers

Figure 3-1 depicts a scanning electron microscopy (SEM) image of a cantilever.

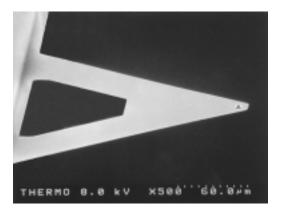


Figure 3-1. SEM image of a cantilever (Microlever™, cantilever A).

Integrated tip and cantilever assemblies can be fabricated from silicon or silicon nitride using photolithographic techniques. More than 1,000 tip and cantilever assemblies can be produced on a single silicon wafer. V-shaped cantilevers are the most popular, providing low mechanical resistance to vertical deflection, and high resistance to lateral torsion. Cantilevers typically range from 100 to 200 µm in length, 10 to 40 µm in width, and 0.3 to 2 µm in thickness (see Figure 3-2).

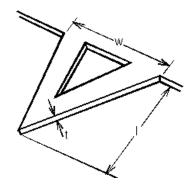


Figure 3-2. V-shaped cantilever, showing length (I), width (w), and thickness (t).

#### 3.2.1 **Properties of Cantilevers**

Atomic force microscopes require not only sharp tips, but also cantilevers with optimized spring constants—lower than the spring constants between atoms in a solid, which are on the order of 10N/m. The spring constant of the cantilever depends on its shape, its dimensions, and the material from which it is fabricated. Thicker and shorter cantilevers tend to be stiffer and have higher The spring constants of commercially available resonant frequencies. cantilevers range over four orders of magnitude, from thousandths of a Newton per meter to tens of Newton's per meter. Resonant frequencies range from a few kilohertz to hundreds of kilohertz providing high-speed response and allowing for non-contact AFM operation.

# 3.3 Tip Shape and Resolution

The lateral resolution of an AFM image is determined by two factors: the step size of the image (see Figure 2-1), and the minimum radius of the tip. Consider an image taken with 512 by 512 data points. Such a scan 1 $\mu$ m by 1 $\mu$ m would have a step size—and lateral resolution—of (1 $\mu$ m ÷ 512 =) about 20Å.

The sharpest tips available commercially can have a radius as small as 50Å. Because the interaction area between the tip and the sample is a fraction of the tip radius, these tips typically provide a lateral resolution of 10 to 20Å. Thus, the resolution of AFM images larger than 1µm by 1µm is usually determined not by the tip but by the image's step size. The quoted *best resolution* of an AFM, however, depends upon how resolution is defined.

In the microscopy community, two asperities (peaks) are considered resolved if the image satisfies Rayleigh's criterion. In this application, Rayleigh's criterion requires that the height of the image dip at least 19% between the asperities, as illustrated in Figure 3-3.

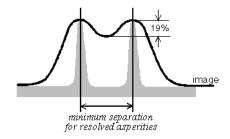


Figure 3-3. Definition of lateral resolution using Rayleigh's criterion.

To determine the lateral resolution of an SPM experimentally, the asperities are brought closer and closer together until the image no longer dips by 19% between peaks. The minimum separation between resolved asperities determines the best lateral resolution of the system. Using this definition, the lateral resolution of an AFM with the sharpest tips commercially available is 10 to 20Å.

At first glance the figure of 10 to 20Å resolution seems to conflict with the ubiquitous images of atomic lattices in AFM brochures. The distinction between

imaging atomic-scale features with accurate lattice spacing and symmetry, and true atomic resolution bears some comment.

An STM gives true atomic resolution. Because the dependence of the tunneling current on the tip-to-sample separation is exponential, only the closest atom on a good STM tip interacts with the closest atom on the sample, as shown in Figure 3-4, top. For AFMs, the dependence of cantilever deflection on tip-to-sample separation is weaker. The result is that several atoms on the tip interact simultaneously with several atoms on the sample, shown in Figure 3-4, bottom.

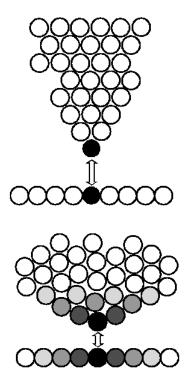


Figure 3-4. Interatomic interaction for STM (top) and AFM (bottom). Shading shows interaction strength.

For AFMs, each atom of the tip that participates in imaging (each shaded atom in Figure 3-4, bottom) "sees" the sample as a periodic lattice. But because the atoms of the tip are in different lateral positions, the lattice that each atom sees is shifted from the lattice seen by its neighbors, as shown in Figure 3-5.

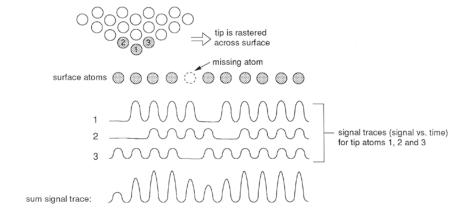


Figure 3-5. AFM scan of atomic-scale periodic lattice, showing the sum of the contributions from each atom at each instant in time.

Each atom in the tip is also at a different height with respect to the sample. The strength of the signal seen by each tip atom weakens with its distance from the sample. When the contributions from all of the participating atoms in the tip are combined at each snapshot in time, and the result is summed over time as the tip is scanned across the periodic surface, the final image is periodic with the correct symmetry and spacings. However, if one atom were missing, the hole left behind would not be detected because the image represents a superposition of many images. (See Figure 3-5.) For true atomic resolution, a single missing atom must be detectable. Thus, generating an atomic-scale image of a periodic lattice—which is possible using contact AFM—does not imply that true atomic resolution has been achieved.

For both contact and non-contact imaging, you should choose a tip that is sharper than the smallest features on your sample. If the tip is larger than the surface features, an artifact know as tip imaging occurs. Tip imaging is discussed in detail in §4.1. You may not always want to choose the sharpest tip available, since the sharpest tips are more expensive and can be less durable. You need the sharpest tips only when you require the best resolution.

For LFM, blunter tips can be preferable precisely because they present a larger interaction area between tip and sample. A larger area of interaction can produce a stronger lateral deflection of the cantilever. The larger cantilever deflection must be balanced against the lower lateral resolution delivered by the blunter tip.

AFM manufacturers offer microfabricated tips in three geometries: pyramidal, tetrahedral, and conical. Conical tips can be made sharp, with high aspect ratios (the ratio of tip length to tip width). Tip radii as small as 50Å have been observed. Pyramidal tips have lower aspect ratios and nominal tip radii of a few hundred angstroms, but they are more durable.

AFM tips are fabricated from silicon or silicon nitride. The fabrication process is different for the two materials. The features of tips made from each material are governed by the fabrication process as well as the material properties.

Silicon conical tips are made by etching into the silicon around a silicon dioxide cap. The high aspect ratio of conical tips makes them suitable for imaging deep, narrow features such as trenches, but they may break more easily than the pyramidal or tetrahedral geometries, as described above. Silicon also has the advantage that it can be doped, so that tips can be made electrically conducting. Conducting tips are useful for controlling the bias between the tip and the sample, or for preventing unwanted charge buildup on the tip.

Silicon nitride tips are fabricated by depositing a layer of silicon nitride over an etched pit in a crystalline silicon surface, as illustrated in Figure 3-6. This method produces the pyramidal or tetrahedral tip geometry. The aspect ratio of a silicon nitride tip is thus limited by the crystallographic structure of the etch pit material, silicon. The tips are broader than conical silicon tips, making them sturdier but less suitable for imaging deep, narrow features. Silicon nitride is a harder material than silicon, which also makes silicon nitride tips more durable than silicon tips.




Figure 3-6. Fabricating a silicon nitride tip.

Silicon nitride films, however, contain residual stresses which make them deform as the film thickness increases. For this reason, applications that call for thick cantilevers—or cantilevers with high resonant frequencies—use silicon cantilevers. The thickness of silicon nitride cantilevers is usually less than one micron, whereas silicon cantilevers can be several microns thick.

A more specialized type of cantilever that has a tip grown in a scanning electron microscope is also available commercially. (A specialized tip can also be produced by "milling" an existing tip using a focused ion beam.) The SEM is used in an unusual way: to deposit contamination in a column. The tips are not microfabricated in bulk; they are grown one at a time on top of a bare cantilever or square-pyramidal tip. These tips have the advantage of almost unlimited aspect ratio. However, they are not normally sharp, and can bend or break easily.

# CHAPTER 4 IMAGE ARTIFACTS

SPM images are among the easiest to interpret of images generated by any microscopy technique. With an electron or optical microscope, contrast is based on complex electromagnetic diffraction effects. Determining whether a feature is protruding from the surface or recessed into it can be difficult with an image optical or electron microscope. SPMs. however, three-dimensional data. In an SPM image, a peak is unambiguously a peak, and a valley is clearly a valley. With an optical or electron microscope, artificial contrast can occur when a sample consists of reflecting material embedded in an absorbing matrix, for example. SPMs, on the other hand, are largely indifferent variations in optical or electronic properties, and measure surface topography.

Despite the apparent simplicity of images from SPMs, SPM images are subject to some artifacts of their own. Fortunately, artifacts are relatively easy to identify. This section addresses the most common artifacts encountered in SPM imaging.

## 4.1 Tip Convolution

Most imaging artifacts in an SPM image arise from a phenomenon known as tip convolution or tip imaging. Every data point in an image represents a spatial convolution (in the general sense, not in the sense of Fourier analysis) of the shape of the tip and the shape of the feature imaged. As long as the tip is much sharper than the feature, the true edge profile of the feature is represented. However, when the feature is sharper than the tip, the image will be dominated by the shape of the tip. Figure 4-1 demonstrates the origin of tip convolution.

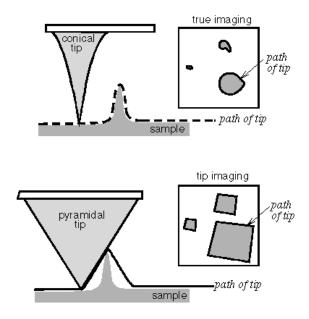


Figure 4-1. Comparison between true imaging and tip imaging.

The first commercial AFM tips were square pyramidal, formed by CVD deposition of  $\mathrm{Si_3N_4}$  on an etch pit in Si (100). The etch pit is bounded by (111) faces, which means that the resulting tip has a sidewall angle of about 62.5° along the flat side of the pyramid (45° along the corner edge of the pyramid). If such a tip is used, the edge profiles of SPM images of all features with sides steeper than 62.5° are dominated by the profile of the tip. Tips with higher aspect ratios have been marketed successfully since then, but microfabricated tips remain limited to a sidewall angle of about 80°. Further enhancement of the sidewall angle of the tip can result in degraded durability, or even bending of the tip during scanning.

Because many samples have features with steep sides, tip imaging is a common occurrence in images. Sidewall angles on images should be measured routinely, to determine whether the slope is limited by that of the tip, or truly represents the topography of the sample. One consolation is that the height of the feature is

reproduced accurately as long as the tip touches bottom between features. Thus, height measurements remain fairly accurate. The lateral dimensions from a tip-imaged scan, on the other hand, can provide the user with only a maximum value. In other words, if you measure a tip-imaged feature as having a width of 200Å, you'll know that the feature is at most 200Å wide.

To recognize tip imaging, look for a particular shape that is repeated throughout an image. The shape can be different sizes as the tip is convolved with features of different sizes, but it will always maintain the same orientation. If you suspect tip imaging is occurring, you can rotate your sample and image it again. If the tip is dominating the image, the orientation of the tip shape will be the same before and after rotation. If the image is a true representation of the surface, the shapes in the image will rotate along with the sample. This test is represented schematically in Figure 4-2. If your image is dominated by tip-convolution effects, change to another tip.

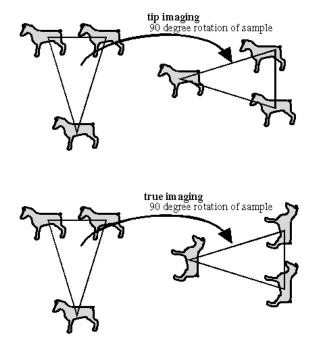


Figure 4-2. Top-down image showing characteristically shaped features.

For STM, the imaging portion of the tip is formed by an atom or cluster of atoms at the end of a long wire. Because the dependence of the tunneling current upon the tip-to-sample distance is exponential, the closest atom on the tip will image the closest atom on the sample.

If two atoms on the tip are equidistant from the surface, all of the features in the image will appear doubled. This is an example of multiple-tip imaging. The best way to alleviate this problem is to apply a voltage pulse to change the tip configuration by field emission. Alternatively, you can press the tip gently against the sample to form a new tip shape, and take another image.

## **Convolution with Other Physics**

Another common category of SPM artifacts derives from the sensitivity of an SPM to physical properties other than those responsible for mapping the surface topography. For example, regions of variable conductivity are convolved with topographic features for STM, and soft or elastic surfaces can deform under the pressure of the AFM tip.

#### 4.3 Feedback Artifacts

If the feedback loop of an SPM is not optimized, the SPM image can be affected. When feedback gains are too high the system can oscillate, generating high frequency periodic noise in the image. This may occur throughout the image or be localized to features with steep slopes.

On the other hand, when feedback gains are too low, the tip cannot track the surface well. In the extreme case, the image loses detail, appearing smooth or "fuzzy." A less obvious effect is "ghosting." On sharp slopes, an overshoot can appear in the image as the tip travels up the slope, and an undershoot can appear as the tip travels down the slope. This feedback artifact commonly appears on steep features, represented as bright ridges on the uphill side and/or dark shadows on the downhill side of the feature.

# 4.4 Image Processing Capabilities

Sophisticated image-processing software is available on all commercial SPMs. Beautiful images can be created by introducing artificial light sources, 3-dimensional rendering (see Figure 4-3), color tables, and curvature enhancement algorithms, by retouching areas of bad data, by filtering environmental noise, and by magnifying or reducing the vertical scale of the image to enhance or minimize surface features of interest. You can flatten an image of a surface of a tiny sphere to look closely at the fine-scale roughness. These are some of the benefits of image-processing software.

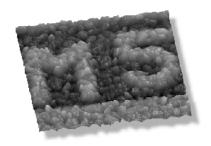


Figure 4-3. 3-D rendered image of a semiconductor surface.

However, when image processing and image enhancement are used carelessly or irresponsibly, data can be misrepresented. The best way to compare the quality of data sets from different SPMs is to compare unprocessed "raw" data in a gray-scale image. As an example of misuse of image processing, Figure 4-4 shows a wholly specious image of a monolayer of an organic film, created entirely from random noise by a carefully crafted filter.

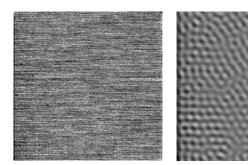


Figure 4-4. AFM image of random noise. Left image is raw data. Right image is a false image, produced by applying a narrow bandpass filter to the raw data.

#### 4.5 Test for Artifacts

Whenever you are suspicious that an image may contain artifacts, follow these steps:

- *Repeat* the scan to ensure that it looks the same.
- Change the scan direction and take a new image.
- Change the scan *size* and take an image to ensure that the features scale properly.
- 4. *Rotate* the sample and take an image to identify tip imaging (see Figure 4-2).
- 5. Change the scan *speed* and take another image (especially if you see suspicious periodic or quasi-periodic features).

# 4.6 Further Reading

S.-I. Park, J. Nogami and C. F. Quate, Phys. Rev. B 36, 2863 (1987).