



A SERIES STEP INSTRUCTIONS



ITEM	DESCRIPTION	QUANTITY
A	LOWER SIDE RISER	2
B-1	LOWER FRONT RISER	1
B-2	LOWER BACK RISER	1
C	MIDDLE RISER	3
D	BASE	1
E	UPPER SIDE RISER	2
F	LOWER FRONT TREAD	1
G	LOWER BACK TREAD	1
H-1	UPPER FRONT RISER	1
H-2	UPPER BACK RISER	1
I	UPPER TREAD	1
J	MACHINE SCREW	18
K	WASHER	24
L	COARSE SCREW	8
M	SELF-TAPPING SCREW	6
N	HINGE	2
O	SMALL SCREW	16
P	RUBBER BUMPER	3

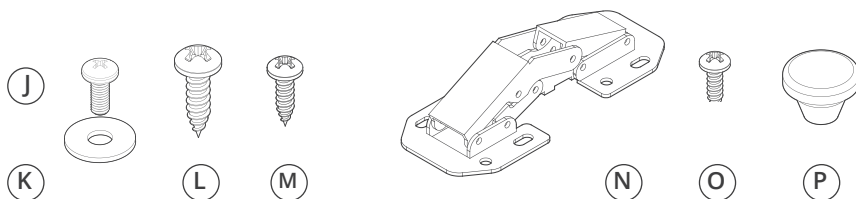

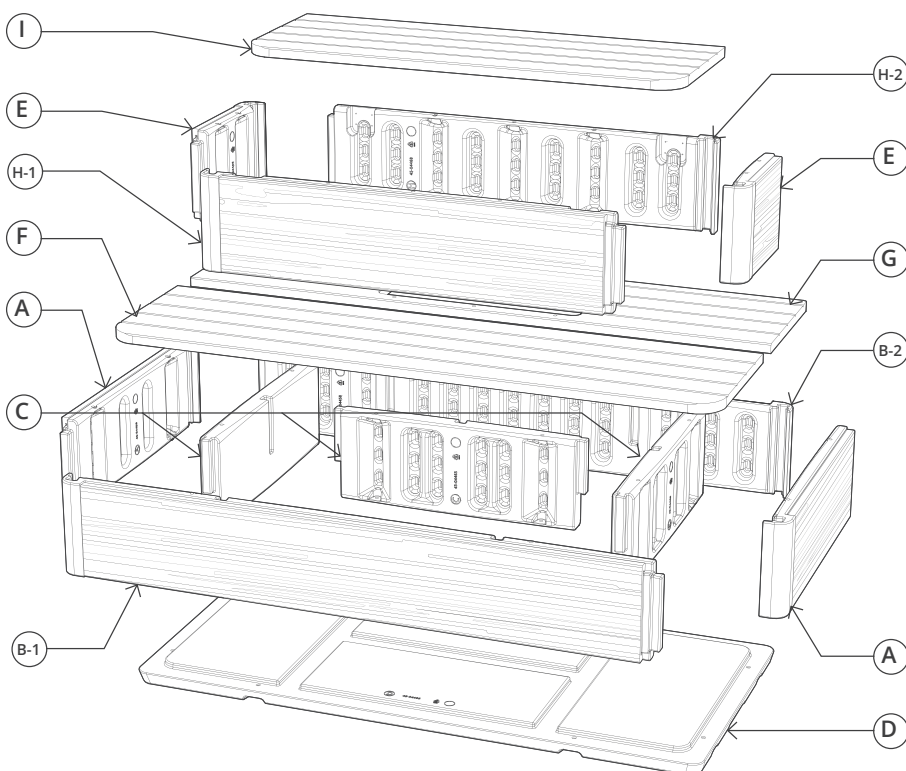

LOWER ASSEMBLY

STEP 1

Place lower side risers (A) upright on a hard, flat surface, the left side with rounded edge in the back, right side with rounded edge in the front. Insert front (B-1) and back (B-2) risers into slots in the side risers (note: the back riser (B-2) does not have decorative trim panel). Press firmly until fully seated (Figure 1).

STEP 2

Insert two of the middle risers (C) into the slots on the front and back risers so that the smooth sides face inward. Press firmly until fully seated (Figure 2).

STEP 3

Insert the remaining middle riser (C) into the slots in the other two middle risers with the smooth side facing towards the back. Press firmly until fully seated (Figure 3).

STEP 4

Place lower front tread (F) upside-down on a flat, smooth surface. Turn riser assembly over and align the front riser with the rounded edge of the tread. The holes on the riser assembly should line up with the holes in the tread as shown in (Figure 4). Install screws (J) and washers (K) into each hole, but do not fully tighten the screws.

Figure 1

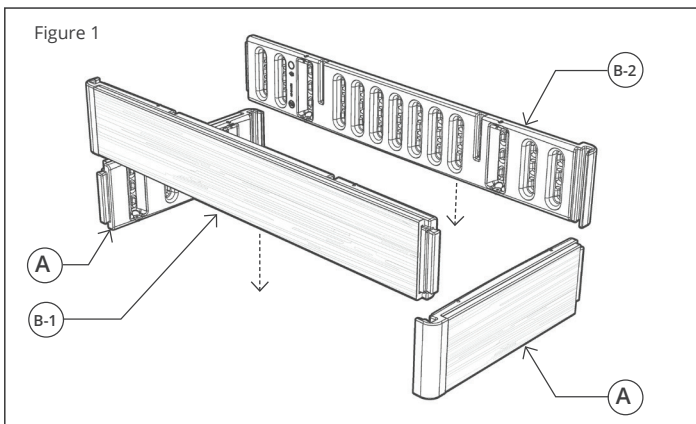


Figure 2

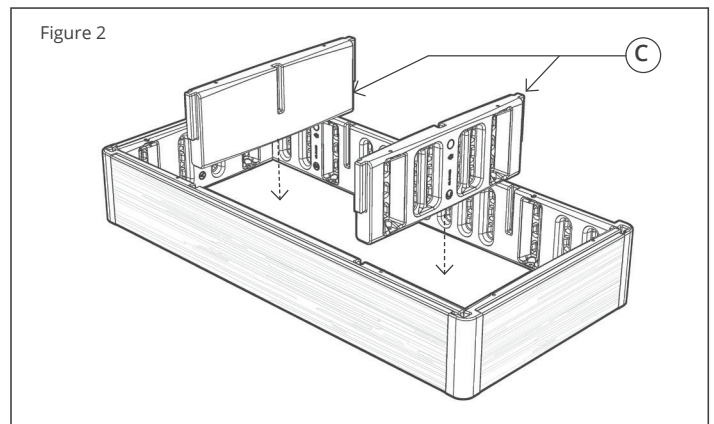


Figure 3


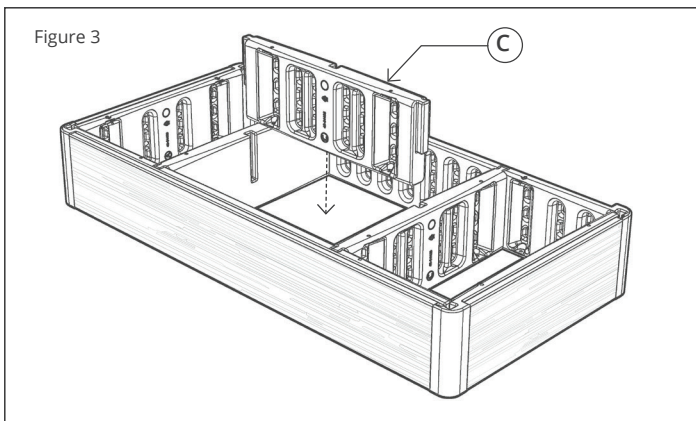


Figure 4



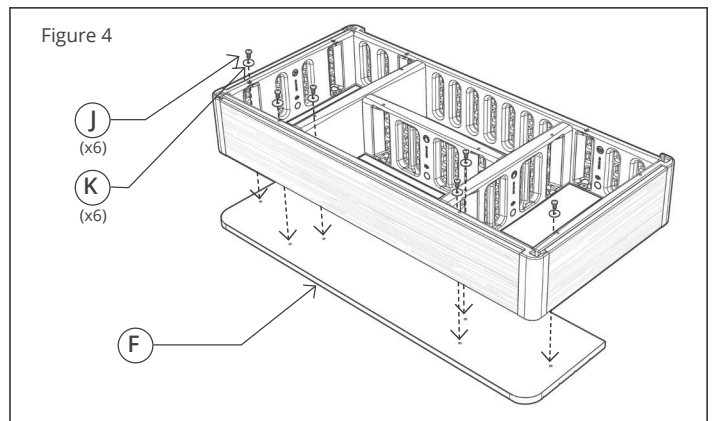

STEP 5

Place lower back tread (G) upside-down on a flat, smooth surface. Put riser assembly onto tread and align holes so that the back tread is touching the front tread and the sides are flush with each other. The holes in the riser assembly should line up with the tread holes as shown in Figure 5. Install screws (J) through washers (K) into holes. Fully tighten screws on both treads.

STEP 6

Place the base (D) onto the riser assembly. Note the orientation of the base with the back of the assembly as shown in Figure 6. Install coarse screws (L) into the holes provided in the base. Turn assembly over when complete.

UPPER ASSEMBLY





STEP 7

Assemble upper side risers (E) and upper back riser (H-2) together as shown in Figure 7.

Note: The upper back riser (H-2) has TWO short decorative trim panels. Ensure these are positioned to the far right and left when assembled. Do not install the upper front riser (H-1) yet.

STEP 8

Place upper riser assembly on its back. Place the upper tread (I) face down as shown in Figure 8, with the flat long edge against the assembly. Install hinges (N) with screws (O) into corresponding holes in the upper back riser (H-2) and upper tread (I). Please note the orientation of the hinge as shown in Figure 8. Ensure screws are fully seated, but do not over-tighten.

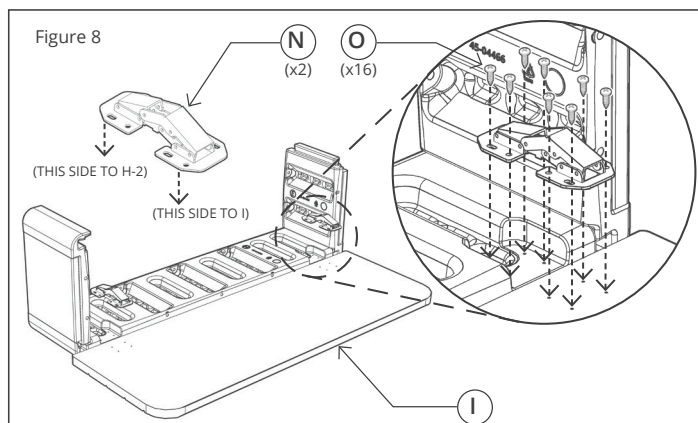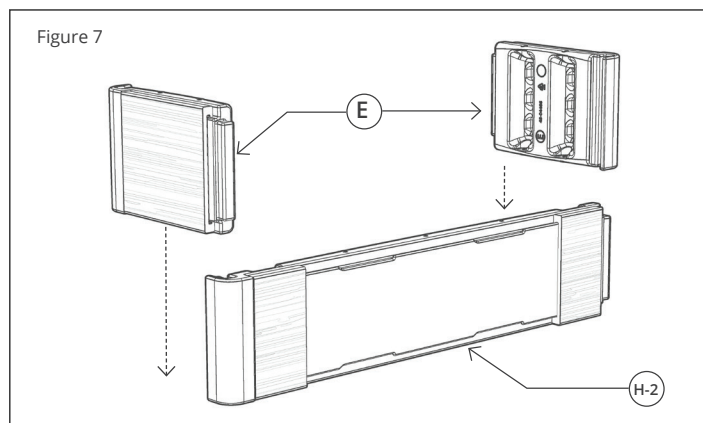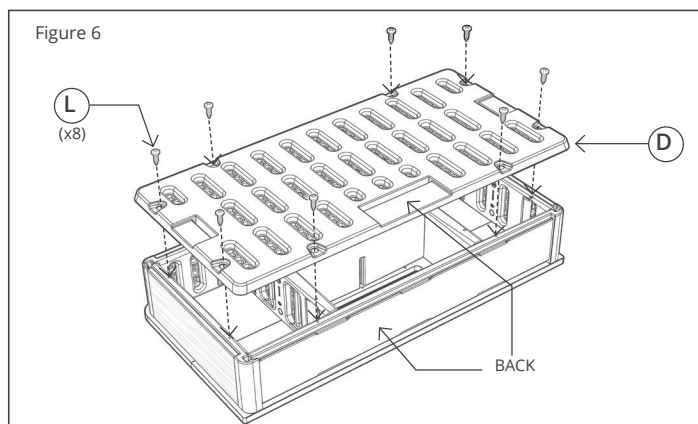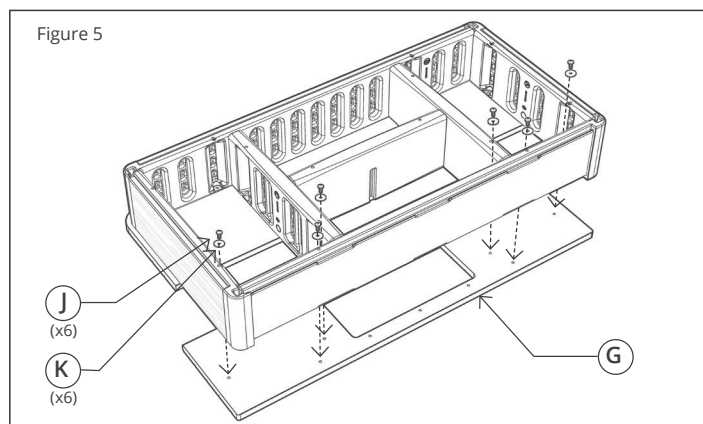



FINAL ASSEMBLY

STEP 9

Place Upper Front Riser (H-1) into slots of side risers (Figure 9)

STEP 10

The upper assembly can be placed on the lower assembly in a centered, left side, or right side configuration.

CENTER: Place upper assembly centered on lower assembly so that the 6 riser holes align with the 6 lower tread holes (Figure 10a) and install with six screws (J) and washers (K). Install 4 self-tapping screws (M) and washers (K) through the side riser holes directly into lower back tread.

LEFT OR RIGHT: Place upper assembly on the desired side so that upper assembly aligns with the lower tread in four holes (Figure 10b). Install with four screws (J) and washers (K). Install 6 self-tapping screws (M) and washers (K) through the side riser and remaining front and back tread.

STEP 11

Insert the rubber bumpers (P) into the front 3 holes in the upper step assembly (Figure 11).

Figure 9

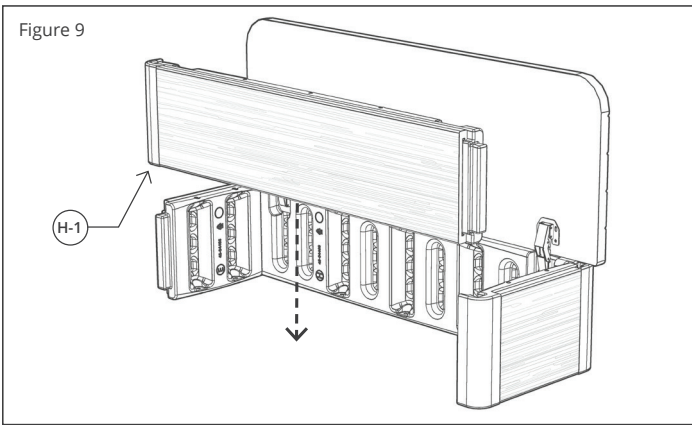


Figure 10a

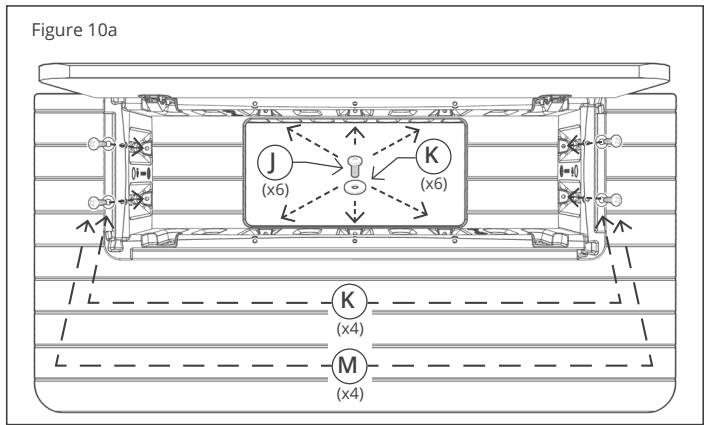


Figure 10b

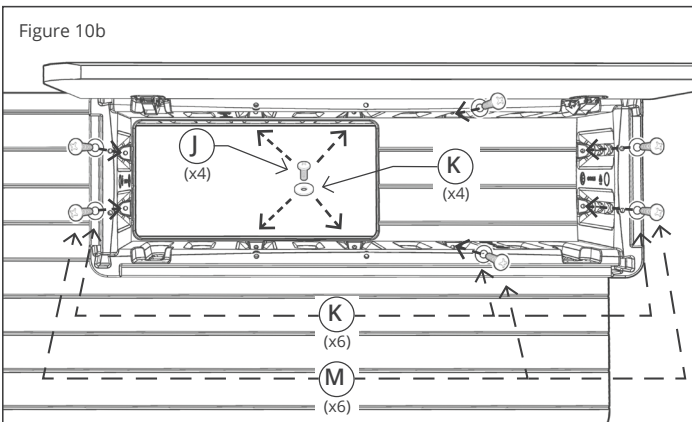


Figure 11

