

Clear Comfort Aftermarket Installation Instructions

1 Removal of old Ozone System:

- Turn off the spa.
- Drain the spa.
- Remove the door to the spa according to the User Manual.
- Review the ozone line inside the equipment compartment and determine whether the spa has an Ozone system.
- If it does, start removing it by disconnecting any cables that run to the control box.
- Remove all ozone equipment, cut $\frac{3}{4}$ " water lines as close to the equipment as possible.


2 Installation of Clear Comfort Main unit:

- In the same place as the old ozone unit, install the mounting block to the right side of the stud. This can be done by clamping the mounting block to the stud so that it sits $\frac{1}{4}$ " recessed back from the front surface of the stud.
- Secure the mounting block using 4 screws through the left side of the stud and into the mounting block.
- Once secure, remove the clamps.
- Install flowmeter as instructed by Clear Comfort, including installation of the upper barb. A second barb will be installed on the bottom of the flowmeter if you are installing a booster pump.
- Place the Clear Comfort Main Unit over the mounting block and use the remaining 5 screws to secure it to the block.
- Install the power cable into the same location as the previous Ozone unit. In some cases, this is tied directly to the Circ Pump and will require a wye splitter cable to power both units.


3 Plumbing Installation:

- Install the Venturi into the ozone water line. Be sure to shorten the line to take up as much slack as possible before installing the Venturi. The Venturi must be installed so that it sits horizontally inside the equipment compartment, height is not critical. It is preferable for the air line to be pointing upward.

Some M Series Spas have bleeder lines attached to the ozone line. If this is the case, you must install the Venturi after those bleeder lines (if you don't you may airlock your pumps). To do this you must splice the cut $\frac{3}{4}$ " line together and make a new cut at least 3" past the last bleeder tee.

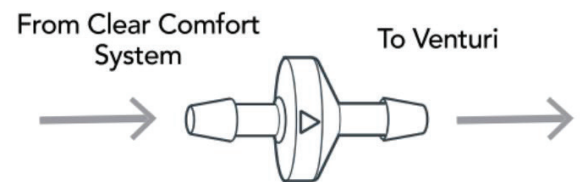

- Prior to installing the blue air line to the Venturi, you must make sure that airflow through the check valves is flowing toward the Venturi.
- Install the blue air line onto the Venturi and clamp in place.
- Route air line to the top of the spa and create 2 loops about 8" in diameter and zip tie the line where available. This creates what is known as a 'Hartford Loop' that prevents backflow.
- Bring line down and install onto the cartridge barb as instructed by Clear Comfort.
- Connect the cartridge to the flowmeter by installing an additional blue air line into the 2nd barb in the cartridge and the upper barb on the flowmeter as instructed by Clear Comfort.

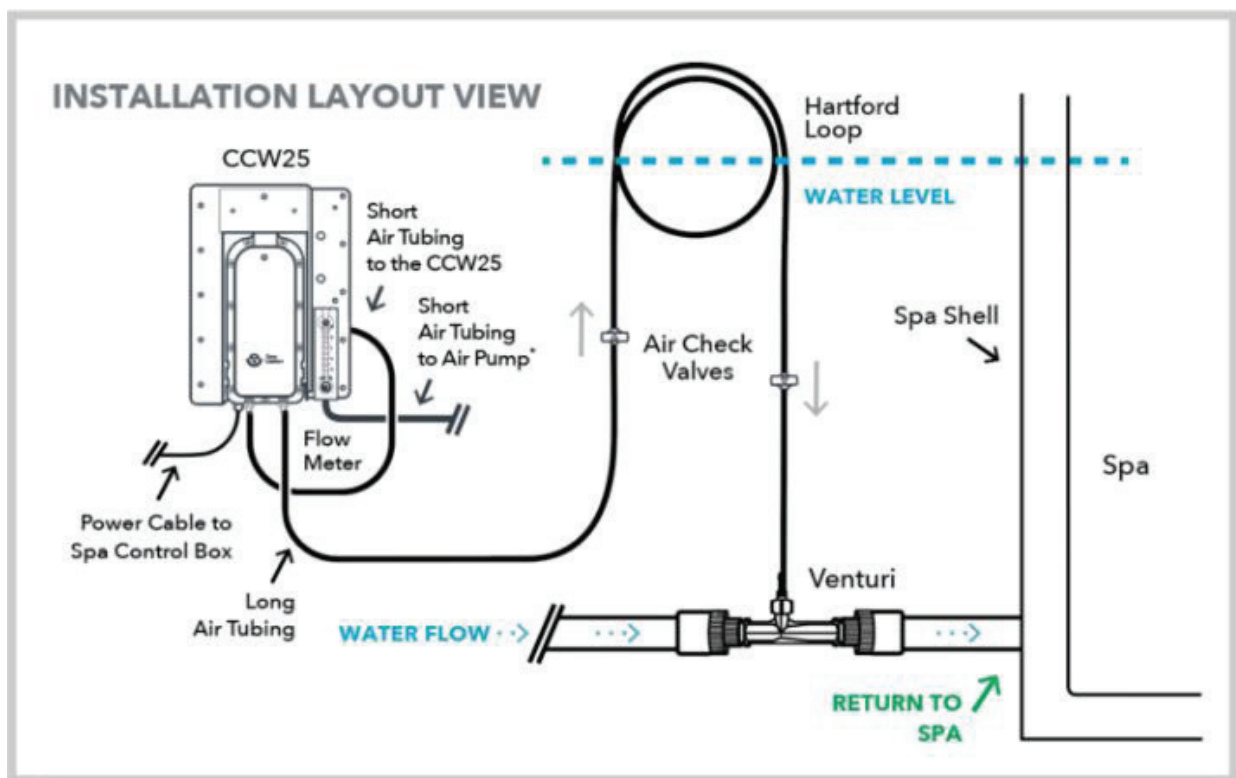

4 Installing Air Booster Pump:

- Place the Clear Comfort Main Unit over the mounting block and use the remaining 5 screws to secure it to the block.
- Install the power cable into the same location as the previous Ozone unit. In some cases, this is tied directly to the Circ Pump and will require a wye splitter cable to power both units.
- Install flowmeter as instructed by Clear Comfort, including installation of the upper barb. A second barb will be installed on the bottom of the flowmeter if you are installing a booster pump.

- Once the circ pump is running, two lights should appear on the Clear Comfort Main Unit, the upper light should be green and the lower one will be blue. If this is not the case, please refer to Clear Comfort's troubleshooting guide.
- If both lights are on, use the dial on the flowmeter to open the line up all the way. If the meter is bouncing, you can dial down the flowmeter to help regulate the flow. The flow should be no lower than the "#1" mark. If it is, you can install the booster pump for additional airflow. If no flow is being shown, you will have to troubleshoot the line and see if there is a problem (like the check valves are installed backwards).
- If all is working, clean up the area and close the spa. Replace the cabinet in accordance to the spa's user manual.

5 Clean up / Testing:

- Replace the panel on the control box and zip tie any loose cables by bundling them up and securing them to the spa.
- Fill the spa.
- Turn on the spa.
- Allow the spa to go into it's filtration cycle. Check to see if the Circ Pump is running.



Scan the QR code for video installation instructions

Parts List for CCW25 Spa System



Included Contents:

1. Tube, Flexelene, 1/4" ID (91" / 7.58)
2. Ozone, Venturi Injector, Spigot
3. Hardware, Screw #10 x 5/8" Phillips Truss HD (9)
4. Support Stud, 64mm x 38 mm x 280mm Black
5. AOS, Clear Comfort, Main Unit
6. Ozone, Checkvalve, 1/4" (2)
7. Hardware, Hose Clamp, Zinc, 3/8" (5)
8. Control, Cable Assembly Y-Adapter Sequencer