

## Swim Series Cover Shelf Installation Instructions



Fig. 1

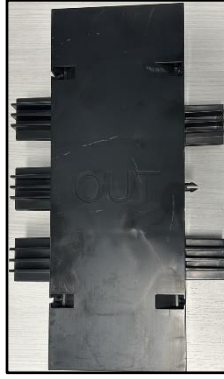


Fig. 2

### Part Numbers:

Cover Shelf Kit 45-04787

Included in kit:

Cover Shelf, Fixed 45-04603 (Fig. 1)

Cover Shelf Brackets 30-04105 (requires two) (Fig. 2)

#8 2.5" Stainless Steel wood screws 45-04786 (Fig. 7)

### Warning:

DO NOT OVERTIGHTEN SCREWS

DO NOT USE IMPACT DRIVERS/DRILLS



Fig. 3



Fig. 4

### Step #1

Select the end of the spa that you wish to mount the cover shelf and remove the trim two strips on that side. This is done by carefully and firmly pulling the bottom of the trim strip out and upward. (Fig. 3)

### Step #2

Remove the cabinet panel on the desired side for installation by Carefully pulling the bottom of the door toward you. Carefully grab the bottom corner of the door and pull it out enough that you can slip your other hand in behind the side of the door about 4-5 inches (10-13 cm) up from the bottom. From there, you will pull the door -firmly away from the spa until the snap on the door pulls out of the snap feature in the rib. (Fig. 4)



Left Side Fig. 5



Right Side Fig. 6

### Step #3

Install the keyed cover shelf brackets by locating them just below the spa shell as shown in Fig. 5 and Fig. 6.

**Note:** You may need to remove or push back a small amount of foam insulation to locate the cover shelf brackets.

# Swim Series Cover Shelf Installation Instructions



Fig. 7



Fig. 8

## Step #4

Secure both cover shelf brackets to the support studs with two #8 2.5" wood screws in each bracket. (Fig. 7 and Fig.8)

**Note:** You may need to angle the screw differently on each side to ensure that the screw grabs the support stud correctly.

## Step #5

Reinstall the cabinet panel and trim strips in reverse order as listed in steps #1 and #2.

## Step #6

With the trim strip removed, measure 3" from the corner scone on mounting cabinet panel. (Fig. 9) Align the outside edge of the cover shelf and procedure to step #7. (Fig. 10)



Fig. 9



Fig. 10

## Step #7

Once the cover shelf is located correctly, use a 1/16" drill bit to pre-drill all six holes through the cover shelf screw locations, through the cabinet panel, and into the cover shelf bracket. This step is necessary to reduce the risk of splitting or cracking the cabinet panel. (Fig. 11)



Fig. 11

## Step #8

Using the supplied #5 wood screws, secure the cover shelf to the cabinet panel and finish with the black screw head caps. (Fig. 12)

DO NOT OVERTIGHTEN SCREWS

DO NOT USE IMPACT DRIVERS/DRILLS



Fig. 12