




M SERIES STEP INSTRUCTIONS

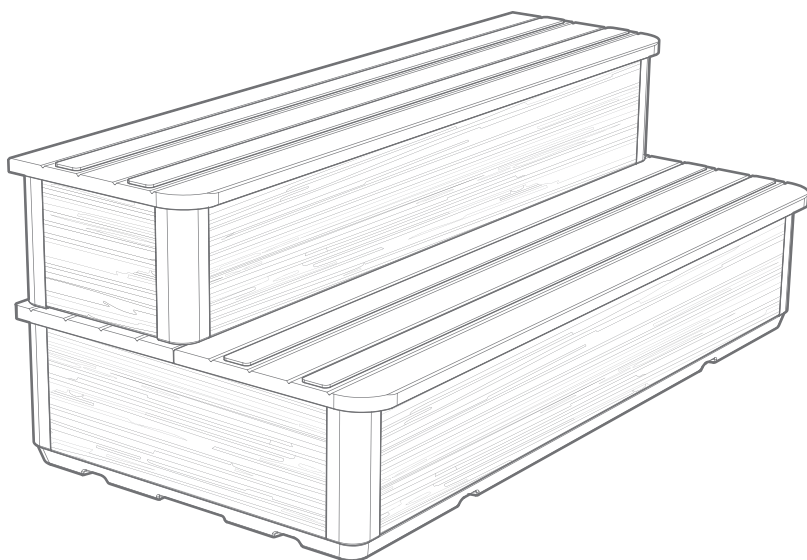

ITEM	DESCRIPTION	QUANTITY
A	LOWER SIDE RISER	2
B-1	FRONT LOWER RISER	1
B-2	BACK LOWER RISER	1
B-3	FRONT UPPER RISER	1
B-4	BACK UPPER RISER	1
C	MIDDLE RISER	3
D	BASE	1
E	UPPER SIDE RISER	2
F	LOWER FRONT TREAD	1
G	LOWER BACK TREAD	1
H	UPPER TREAD	1
I	MACHINE SCREW	24
J	WASHER	24
K	COARSE SCREW	8



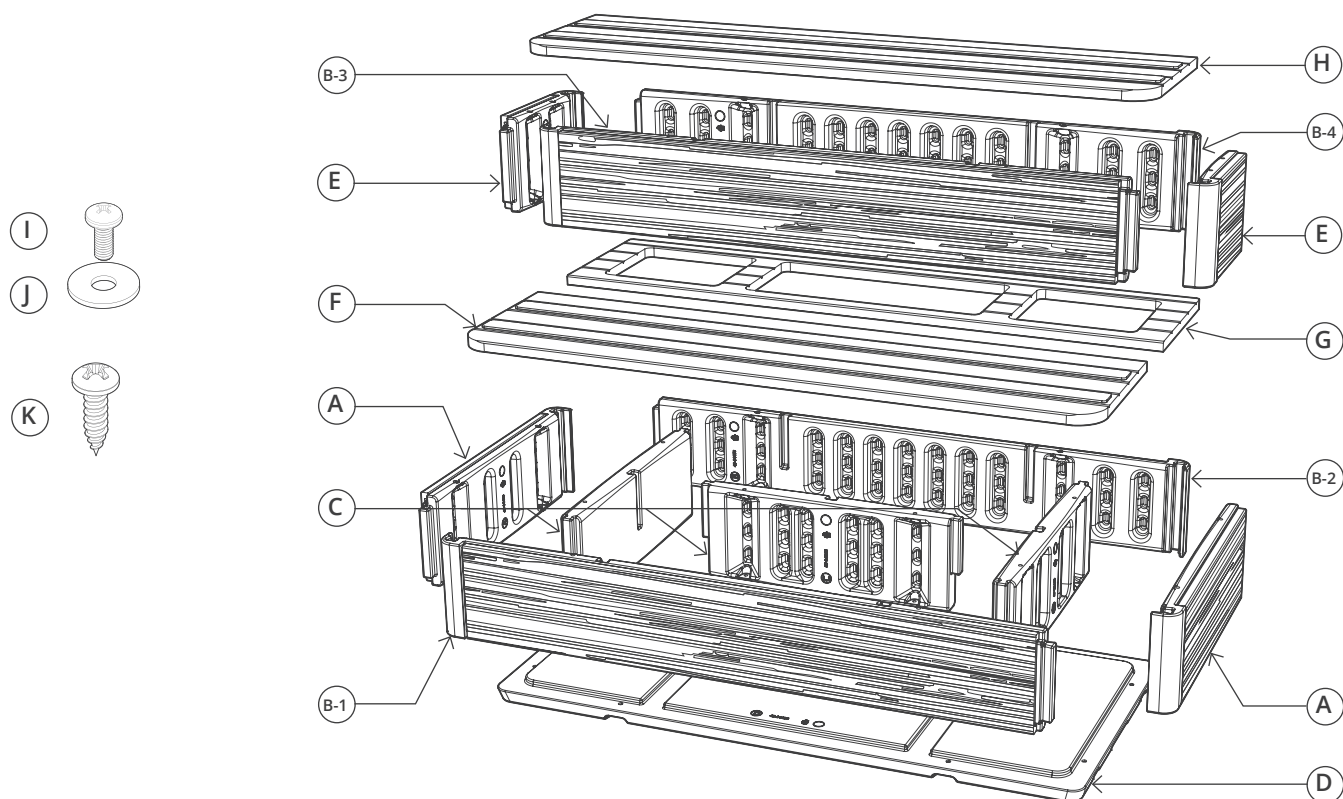

STEP 1

BEFORE YOU BEGIN: Please note the differences among items B-1, B-2, B-3, and B-4 as shown in Figure 1-A. items B-1 and B-3 have the decorative trim panel, while B-1 and B-2 do not have holes on the bottom edges.





Place lower side risers (A) upright on a hard, flat surface, the left side with rounded edge in the back, right side with rounded edge in the front. Insert front lower riser (B-1) and back lower riser (B-2) into slots in the side risers. Press firmly until fully seated (Figure 1-B).

STEP 2

Insert two of the middle risers (C) into the slots on the front and back risers so that the smooth sides face inward. Press firmly until fully seated (Figure 2).

STEP 3

Insert the remaining middle riser (C) into the slots in the other two middle risers. Press firmly until fully seated (Figure 3).

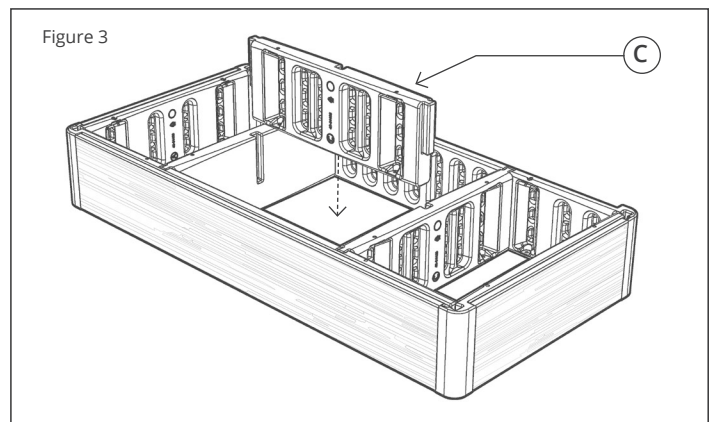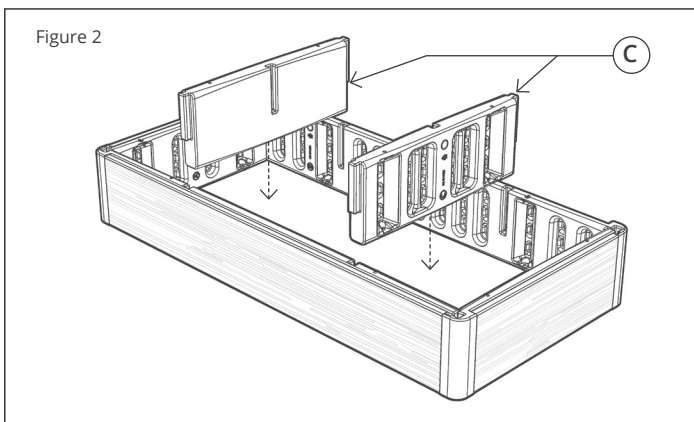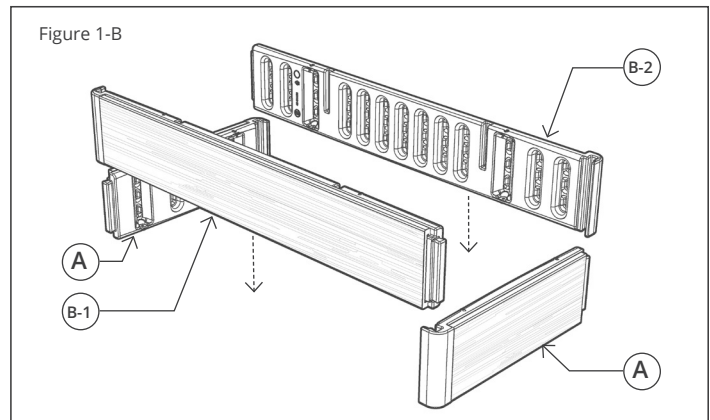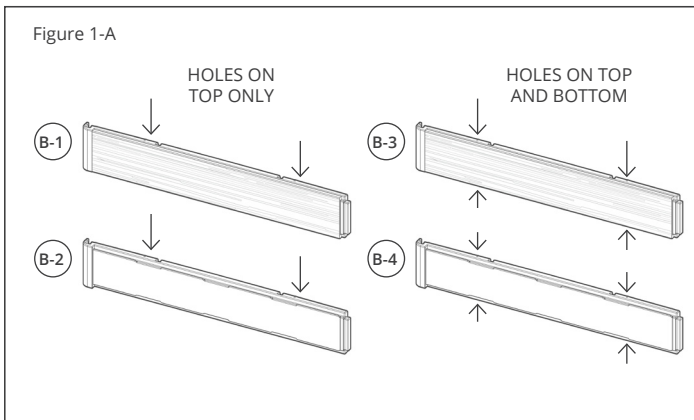



STEP 4

Place lower front tread (F) upside-down on a flat, smooth surface with round corners facing forward. Turn riser assembly over and place the front half on the tread. The holes on the riser assembly should line up with the holes in the tread as shown in (Figure 4). Install screws (I) and washers (J) into each hole, but do not fully tighten the screws.

STEP 5





Place lower back tread (G) upside-down on a flat, smooth surface, rounded corners facing the back. Place riser assembly onto tread and align the two treads together. The holes in the riser assembly should line up with the tread holes as shown in (Figure 5). With the two treads touching each other, install screws (I) through washers (J) into holes. Fully tighten screws on both treads.

STEP 6

Assemble the upper side risers (E) with the front upper riser (B-3) and back upper riser (B-4) as in (Figure 6).

STEP 7

Place the upper riser assembly on the lower back tread so that the upper riser holes align with the lower tread holes. Install screws (I) and washers (J) in 6 places (Figure 7).

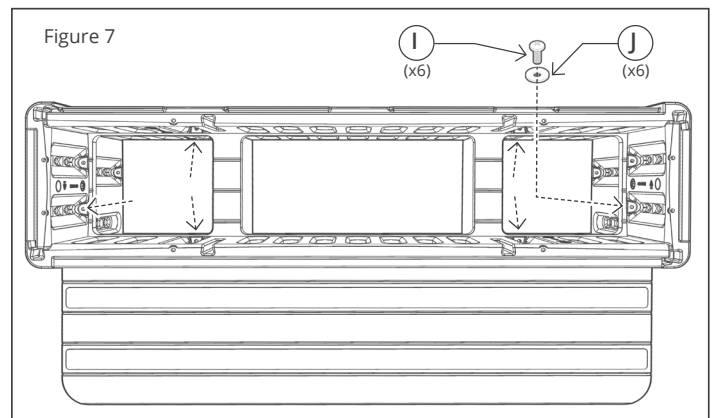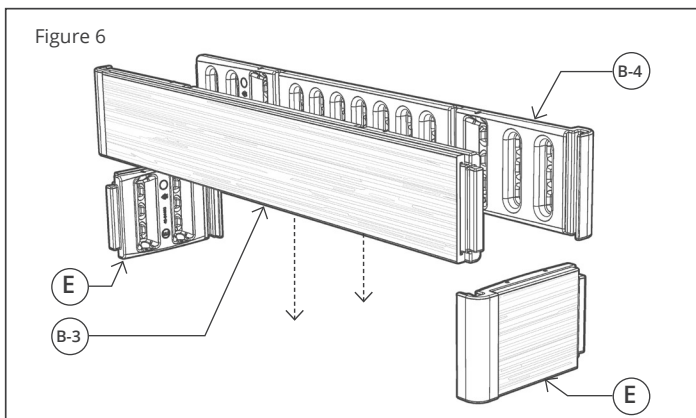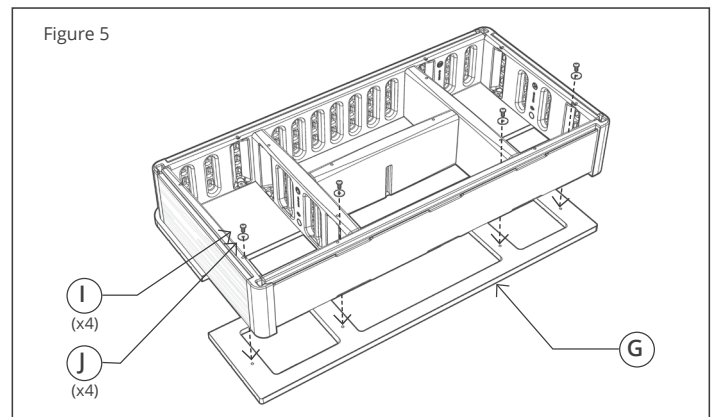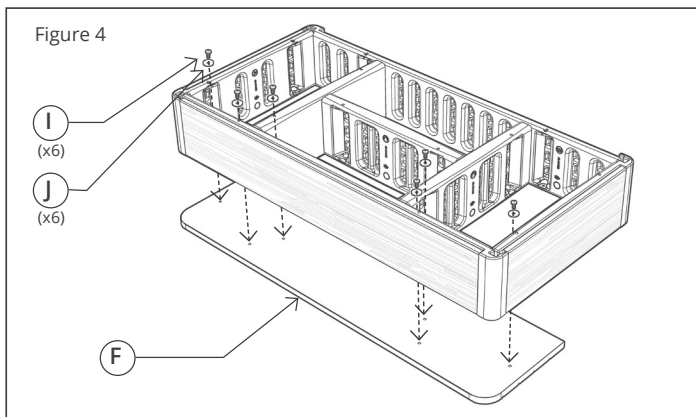



STEP 8

Place the step assembly on its back on a smooth, hard surface. Place the top tread (H) on the upper risers with the edge with rounded corners facing upwards. The holes in the upper riser assembly should line up with holes in the upper tread (Figure 8). Install screws (I) and (J) from the bottom of the step assembly and tighten.

STEP 9

Place base (D) on the bottom of the step. Note the orientation in (Figure 9). Install with 8 screws (K). Do not over-tighten.

