


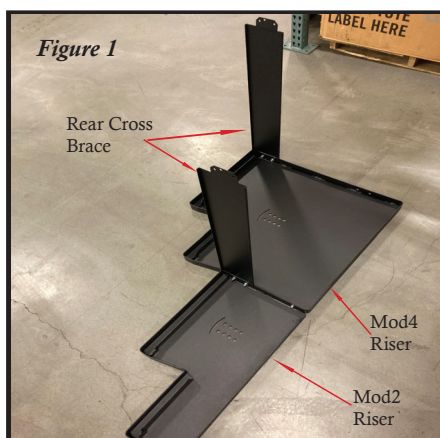

Step #1

Attach the Mod2 riser, rear cross braces (2) and the Mod4 riser using the supplied 1/4 x 1" machine screws, flat washers and the nylon locknuts (see Fig 1).

Step #2

Attach the lower tread to the support channel using (2) #8 x 1-1/4 screws making sure to pre-drill the holes 1/2 inch in from the sides and 1/4 inch in from the front of the tread (see Fig 2). **Note:** The front of the tread will be the edge that is flat. Also make sure the foam dot on the support channel is facing up so the tread rests on it. This only applies to the 1st and 3rd treads of the swim spa step.

Step #3

Slide the lower tread and one tread trim piece into the slot in the left riser, slide two additional support channels into the slot in the left riser. Align the rear support channel with the rear hole in the slot and attach to the riser using a self-drilling screw in the hole provided (see Fig 3). **Note:** Make sure the foam dots on the support channels are facing the underside of the tread. Next, measure from the front support channel screw head 4-3/4" and attach the center support channel to the left riser (see Fig 4). Repeat this process for the 3rd step of the assembly.

Step #4

Slide the upper tread, one tread trim piece and 5 support channels into the upper slot in the left riser making sure to align the front and rear support channels with the holes in the slot. Attach the riser to the front and rear support channels using the self-drilling screws in the holes provided. **Note:** Make sure the foam dots on the support channels are facing the underside of the tread. Next, measure from the front support channel screw head 4-1/4" and attach the next support channel (see Fig 5). Complete that same process for the remaining 2 support channels. Repeat this process for the 4th step of the assembly.

Step #5






Attach the Mod2 riser to the first two treads by sliding the tread, trim and aluminum tread support into the slot on the inside of the riser and fasten using the supplied self-tapping screws (see Fig 6).

Step #6

Attach the Mod4 riser to the treads by sliding the tread into the slot on the inside of the riser and fasten using the supplied self-tapping screws (see Fig 6). Next, attach the Mod4 riser to the Mod2 riser and rear cross brace using the supplied 1/4 x 1" machine screws, flat washers and locknuts. **Note:** leave the bolts that attach the rear cross bar to the Mod4 risers loose as you will need to remove them when attaching the rail brackets.

Step #7

Attach the kickplates to the risers using the 1/4 machine screws, washers & locknuts (see Fig 7). **Note:** For ease of assembly, do not fully tighten the screws, this will be done once all the screws are inserted into the holes and the nuts attached.

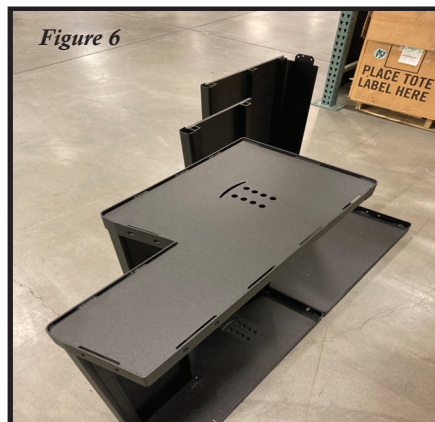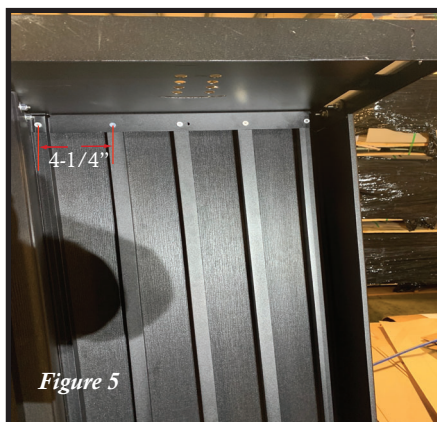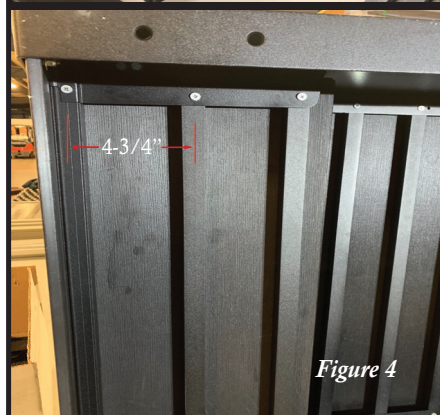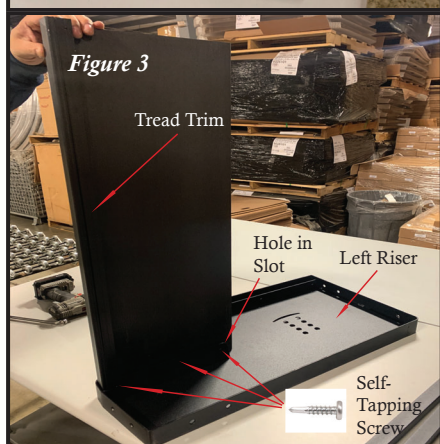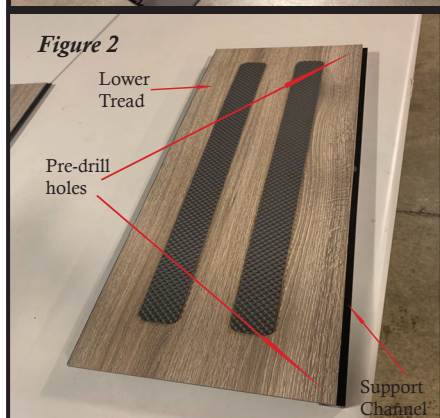

Step #8

Attach the (3) rear rail brackets to the back of the Mod4 risers as shown in Figure 8. **Note: for ease of assembly, do not fully tighten the screws, this will be done at the end of assembly.** Next, insert the rear rail into the brackets as shown in Figure 8 making sure to insert the hex cap bolts when the holes in the brackets line up with the holes in the rail. Fully tighten the nuts on the hex cap bolts and locknuts and attach the dome caps.

Step #9

Attach the front rail bracket and the (2) side rail brackets to the side/back of the risers as shown in Figure 9. **Note: for ease of assembly, do not fully tighten the screws, this will be done at the end of assembly.** Next, insert the side rail into the brackets as shown in Figure 9 making sure to insert the hex cap bolts when the holes in the brackets line up with the holes in the rail. Fully tighten the nuts on the hex cap bolts and locknuts and attach the dome caps.

Step #10

Fully tighten all of the 1/4" machine screws and locknuts. Next, using the supplied #10 x 5/8" self-tapping screws, finish attaching the front, side and rear rail brackets to the risers.

Step #11

Attach the rail connector to the side and rear rails using the supplied #10 x 5/8" self-tapping screws (see Fig. 10).



Figure 7

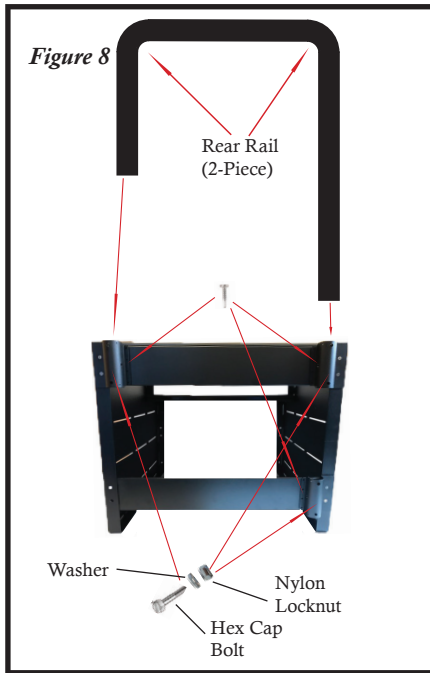


Figure 8

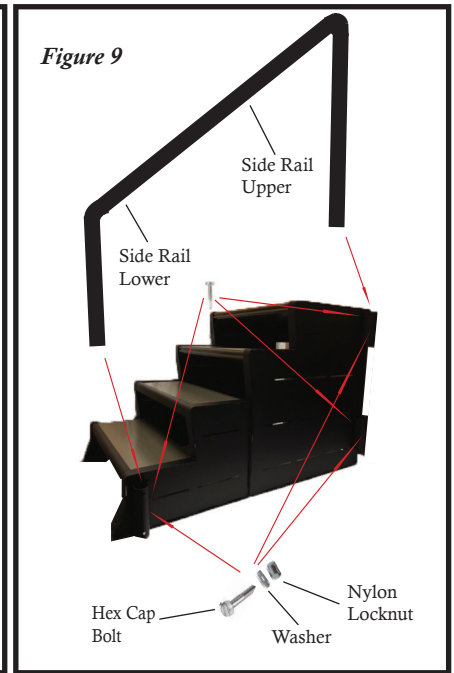


Figure 9

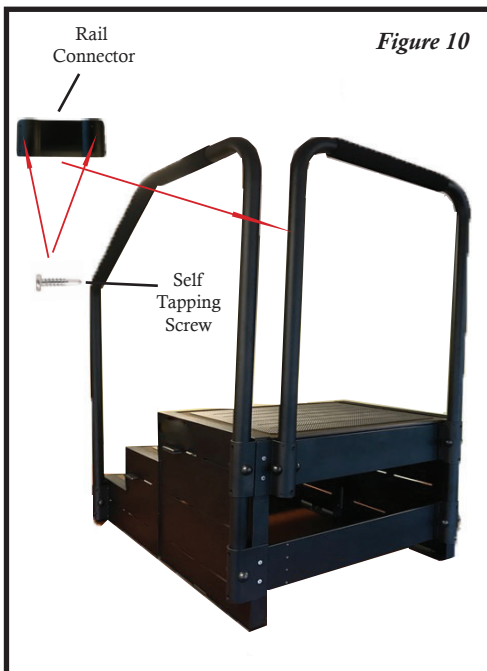


Figure 10

ITEM	PART#	DESCRIPTION	QTY
A	102072/102073	BF MODSTEP 2 PLATINUM RISER - L&R (SET)	1
B	102074/102075	BF MODSTEP 4 PLATINUM RISER - L&R (SET)	1
C	102063	BF MODSTEP PLATINUM REAR CROSS BRACE	3
D	102009	MODSTEP TREAD TRIM	4
Y	102135	ALUMINUM TREAD SUPPORT	10
E	102120	BF MODSTEP PLATINUM SINGLE TREAD	2
F	102121	BF MODSTEP PLATINUM DOUBLE TREAD	2
G	102122	BF MODSTEP PLATINUM FRONT FASCIA	4
H	101495	1/4 x 1" FLAT HEAD MS - STAINLESS STEEL	30
I	100608	1/4 FLAT WASHER - ZINC	30
J	100607	1/4 NYLON INSERT L/N - ZINC	30
K	101414	#10 X 3/4" PHILIPS PANCAKE HEAD SELF TAPPING SCREW - STAINLESS	32
L	101483	MODSTEP 4 SIDE RAIL - UPPER	1
M	101484	MODSTEP 4 SIDE RAIL - LOWER	1
N	101489	MODSTEP FRONT RAIL BRACKET	1
O	101491	MODSTEP SIDE RAIL BRACKET	2
P	101480	MODSTEP 4 REAR RAIL (2-PIECE)	1
Q	101485	MODSTEP REAR/SIDE RAIL CONNECTOR	2
R	101490	MODSTEP REAR RAIL BRACKET	3
S	100026	3/8 X 2-3/4" HEX CAP BOLT	6
T	100012	3/8 FLAT WASHER	6
U	100011	3/8 THIN NYLON LOCKNUT	6
V	100015	LARGE DOME CAP	12
W	100013	#10 X 5/8" SELF TAPPING SCREW	64
X	100016	SMALL DOME CAPS	64
Y	101650	#8 X 1-1/4" FLAT HEAD SELF DRILLING SCREW	4