Keyboard Guide

Micro Journal Rev.2.1 Mini · 48 keys, 2 knobs, 4 layers

Full guide
Scan with your phone

How layers work

The keyboard has four layers. A layer is a different set of characters on the same keys. You switch layers by **holding** a layer key and pressing another key at the same time. Let go and you are back on the normal letters.

Good to know

• On the Lower, Raise and Nav pictures, **grey keys** do the same thing as on Base.
• **Shift Enter** works as Enter when tapped and as Shift when held.
• Each knob does something different on each layer. Pressing a knob down types Space (left) or Shift Enter (right).
• To change any key or knob, use the free **Vial** app (get.vial.today). When Vial asks to unlock, hold **Esc + Q**.

The four layers

■ **Base** — Nothing held. Letters, punctuation and the arrow keys.

■ **Lower** — Hold **Lower**. Symbols such as ! @ # $ ( ) _ + { } | and Delete.

■ **Raise** — Hold **Raise**. Numbers, F1–F12 and - = [ ].

■ **Nav** — Hold **Lower and Raise together**. Arrow keys become Home, PgDn, PgUp and End.

Base layer

nothing held

left knob
↺ left ↻ right

←	→

Space

push

Esc	Q	W	E	R	T	Y	U	I	O	P	Bksp
\	A	S	D	F	G	H	J	K	L	;	'
Shift	Z	X	C	V	B	N	M	,	.	/	Shift Enter
Ctrl	Tab	Alt	GUI	Lower	Space	Space	Raise	←	↓	↑	→


right knob
↺ left ↻ right

↑	↓


Shift Enter

push


Lower layer hold Lower

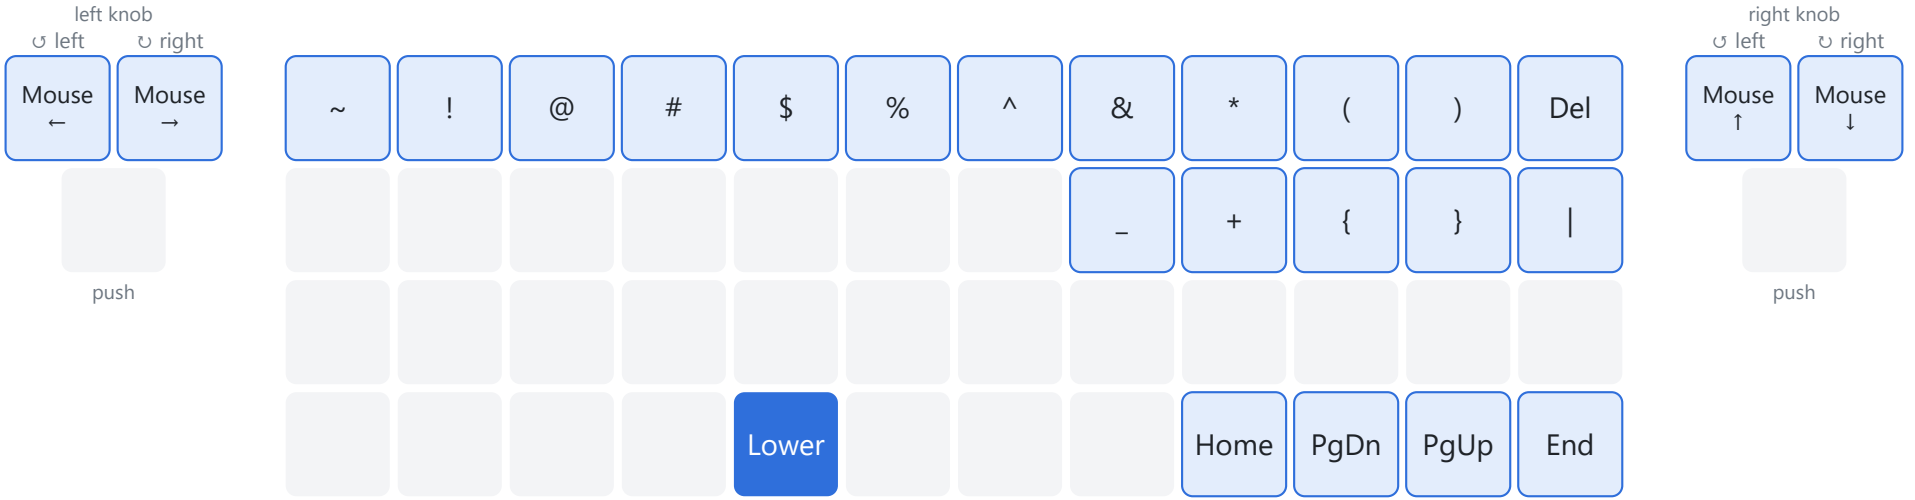

Raise layer hold Raise

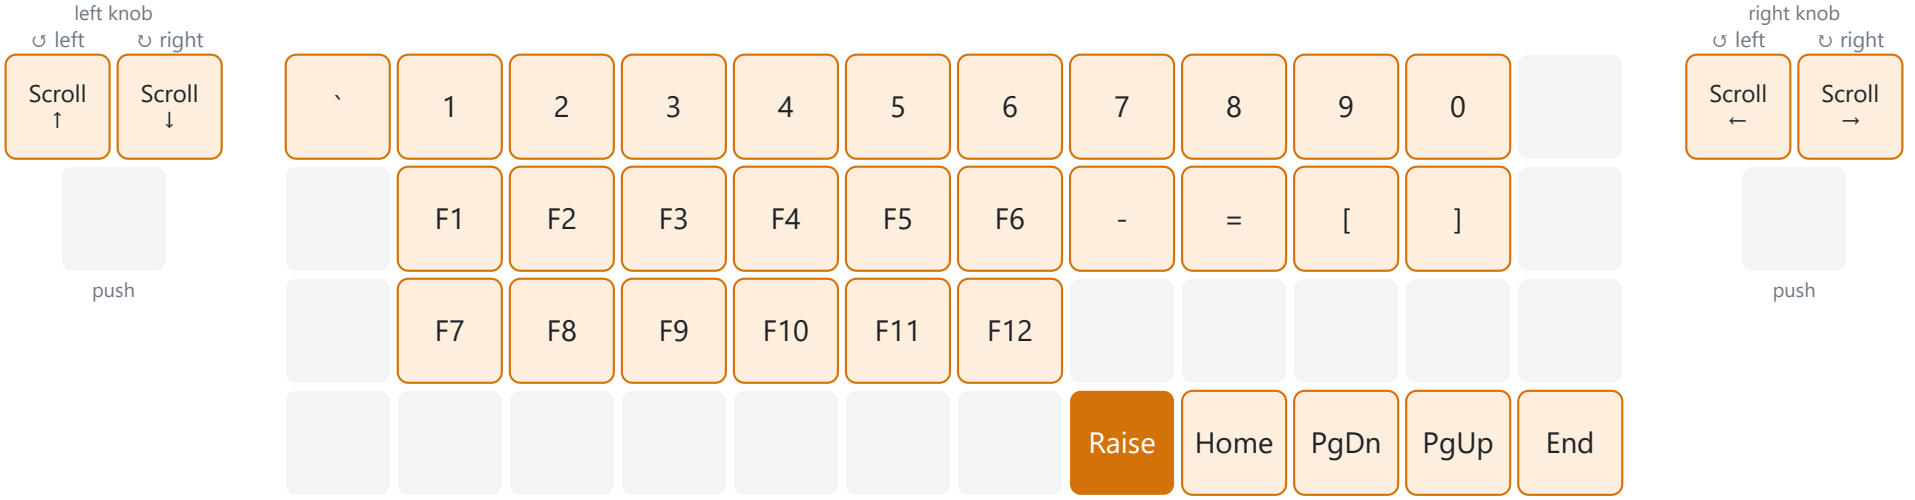

Nav layer hold Lower and Raise together

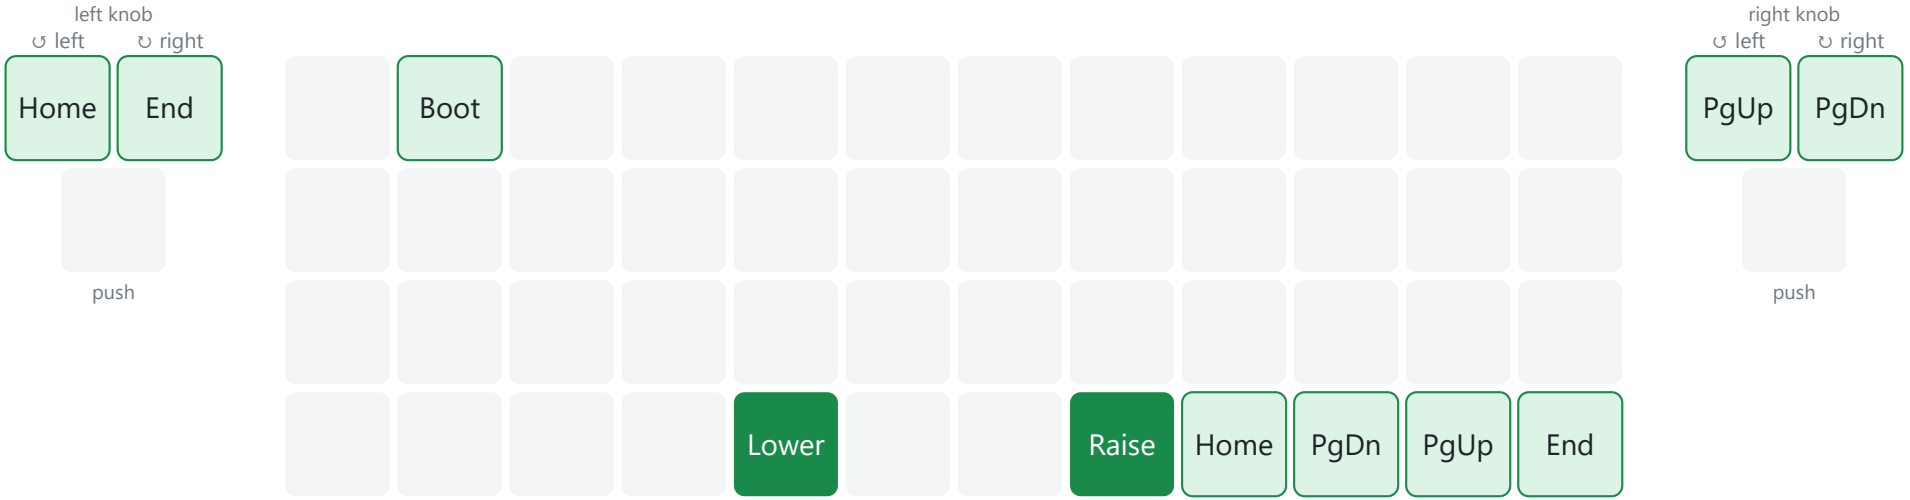

Knobs on each layer

Layer	Left knob (turn left / right)	Right knob (turn left / right)
Base	Left / Right arrow	Up / Down arrow
Lower	Move mouse pointer left / right	Move mouse pointer up / down
Raise	Scroll up / down	Scroll left / right
Nav	Home / End	PgUp / PgDn

Firmware update mode

Hold **Lower + Raise** and press **Q** (the Boot key). The keyboard shows up as a USB drive; copy the new .uf2 firmware file onto it.
Holding **Esc** while plugging the keyboard in also works, but it resets any changes you made in Vial.