


Micromouse Starter Robot Assembly

Instructions

Author	Binara Wasala
Last Revision	12/07/2026
Revision	A

Parts:

Part	Qty.
3.7V LiPo Battery	1
43mm Rubber Wheel	2
Caster Ball	1
IR Sensor	3
M3x8mm Hex Socket Bolt	15
Micro Motor 60RPM	2
MM Base Plate	1
MM Caster Ball Extension	1
MM Motor Clamp	2
MM PCB	1
MM Top Plate	1

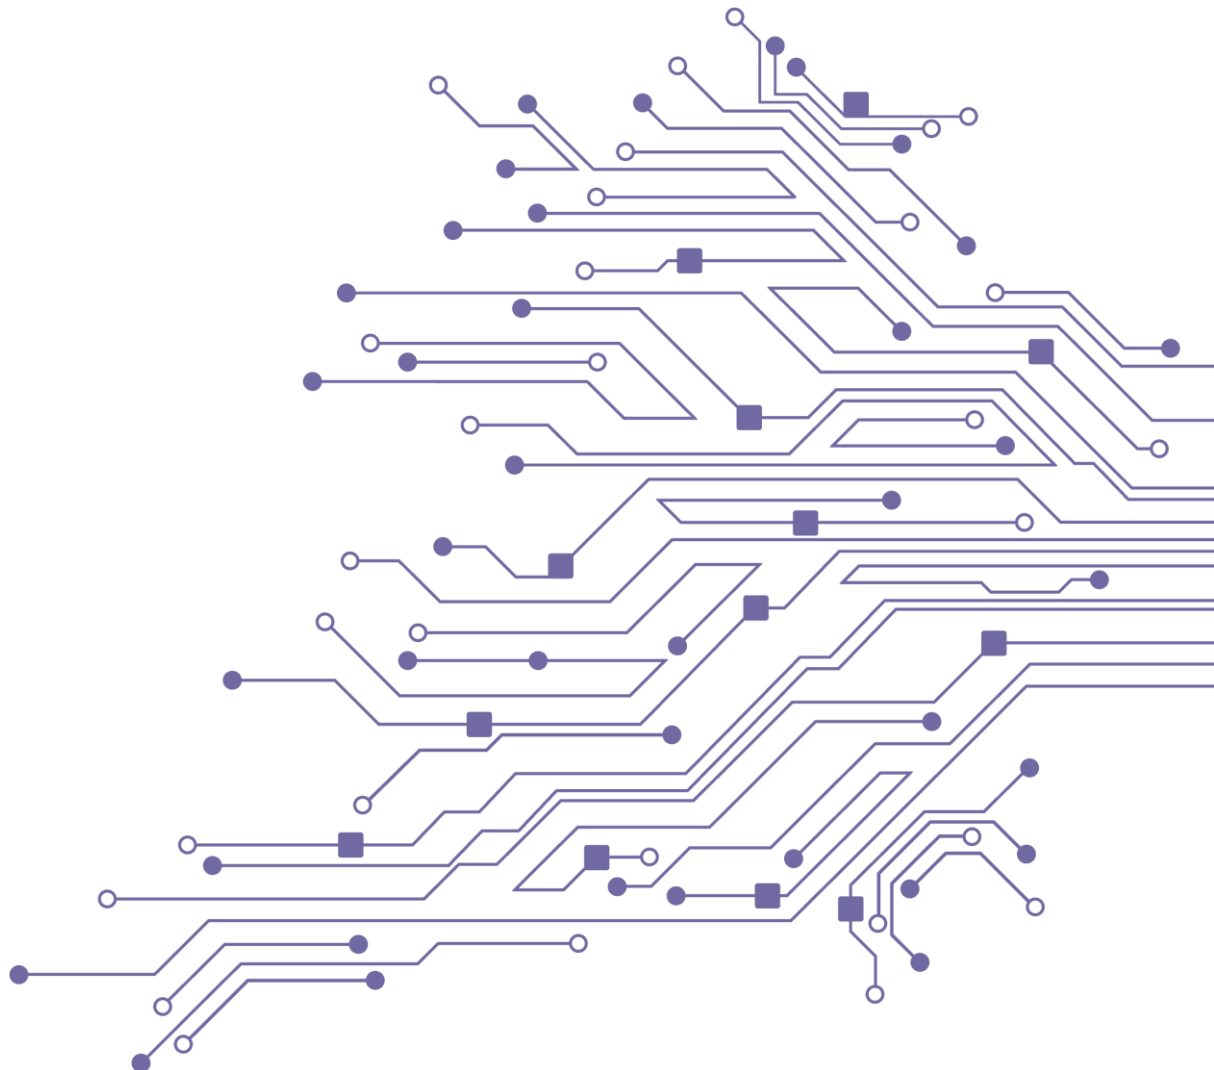


Parts Required:

- A. 1 x MM Base Plate
- B. 1 x MM Caster Ball Extension
- C. 2 x M3x8mm Hex Socket Bolt

Instructions:

1. Fasten the MM Caster Ball Extension (B) to the MM Base Plate (A) using M3x8mm bolts (C).

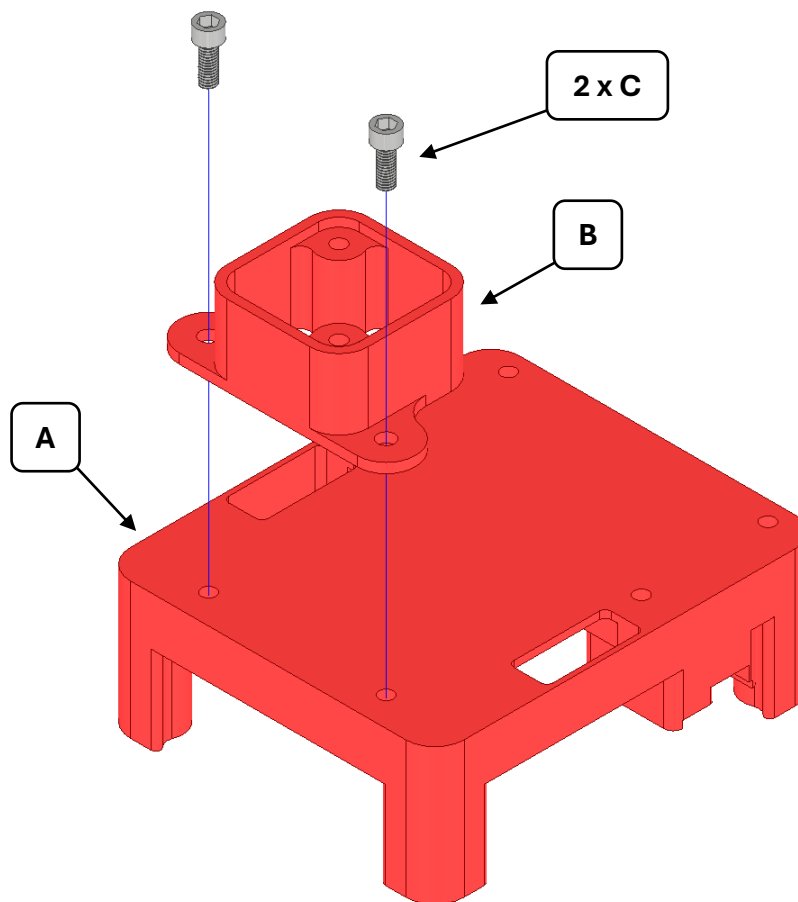


Parts Required:

- A. 1 x MM Base Plate with components fitted (where step 1 of this procedure has been completed)
- B. 1 x Caster Ball
- C. 2 x M3x8mm Hex Socket Bolt

Instructions:

1. Fasten the Caster Ball (B) to the MM Base Plate (A) using M3x8mm bolts (C).

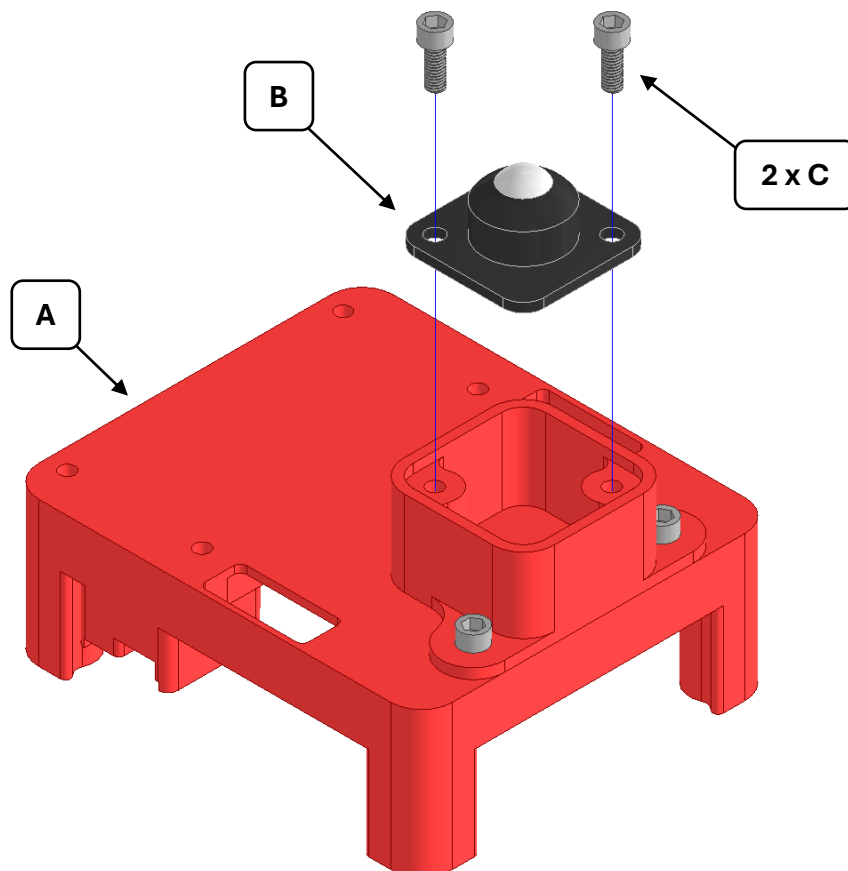


Parts Required:

- A. 1 x MM Base Plate with components fitted (where steps 1 to 2 of this procedure have been completed)
- B. 2 x MM Motor Clamp
- C. 2 x Micro Motor 60RPM
- D. 4 x M3x8mm Hex Socket Bolt

Instructions:

1. Place the Micro Motors (C) on the MM Base Plate (A) and secure using MM Motor Clamps (B).
2. Fasten the MM Motor Clamps (B) to the MM Base Plate (A) using M3x8mm bolts (D).
3. Route the cables from the Micro Motors (C) through the designated holes in the MM Base Plate (A).

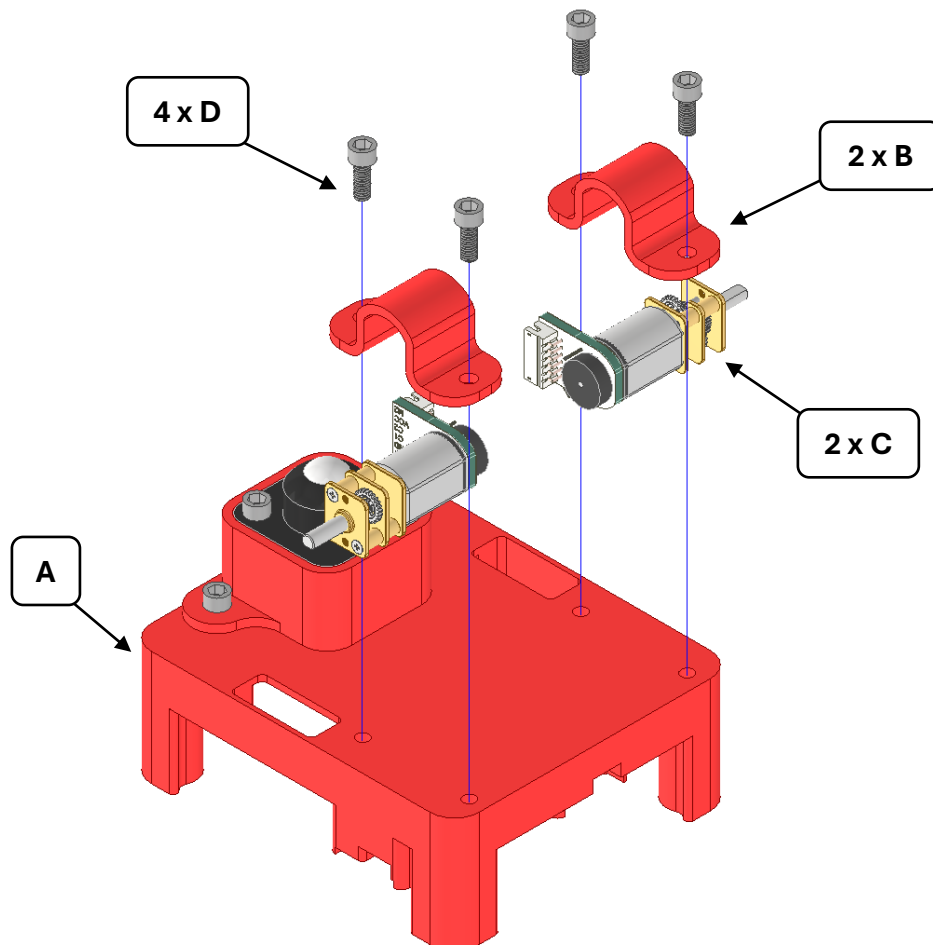


Parts Required:

- A. 1 x MM Base Plate with components fitted (where steps 1 to 3 of this procedure have been completed)
- B. 3 x IR Sensor
- C. 3 x M3x8mm Hex Socket Bolt

Instructions:

1. Fasten the IR Sensors (B) to the MM Base Plate (A) using M3x8mm bolts (C).

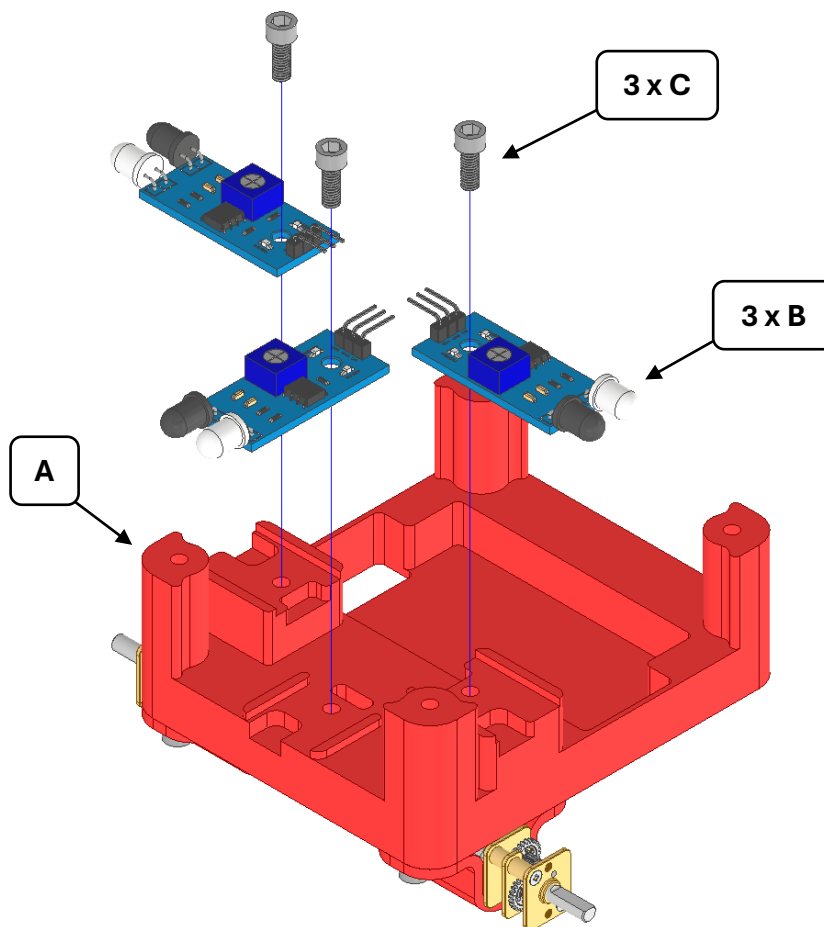


Parts Required:

- A. 1 x MM Base Plate with components fitted (where steps 1 to 4 of this procedure have been completed)
- B. 1 x 3.7B LiPo Battery

Instructions:

1. Place the LiPo Battery (B) in the designated cutout in the MM Base Plate (A).

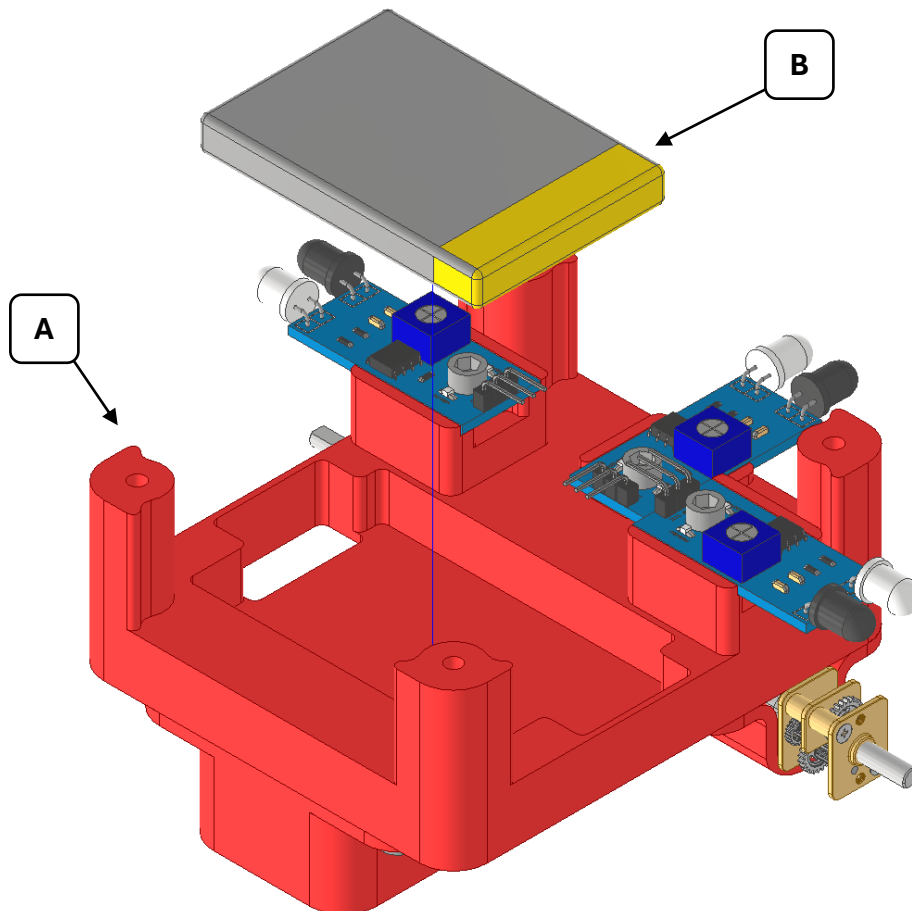


Parts Required:

- A. 1 x MM Base Plate with components fitted (where steps 1 to 5 of this procedure have been completed)
- B. 1 x MM Top Plate
- C. 1 x MM PCB
- D. 4 x M3x8mm Hex Socket Bolt

Instructions:

- 1. Place the MM Top Plate (B) on the MM Base Plate (A).
- 2. Rotate the MM PCB (C) to the desired orientation, place on the MM Top Plate (B) and fasten using M3x8mm bolts (D).
- 3. Route the motor cables, battery cable, and IR sensor cables through the designated holes in the MM Top Plate (B) and connect accordingly to the MM PCB (C).

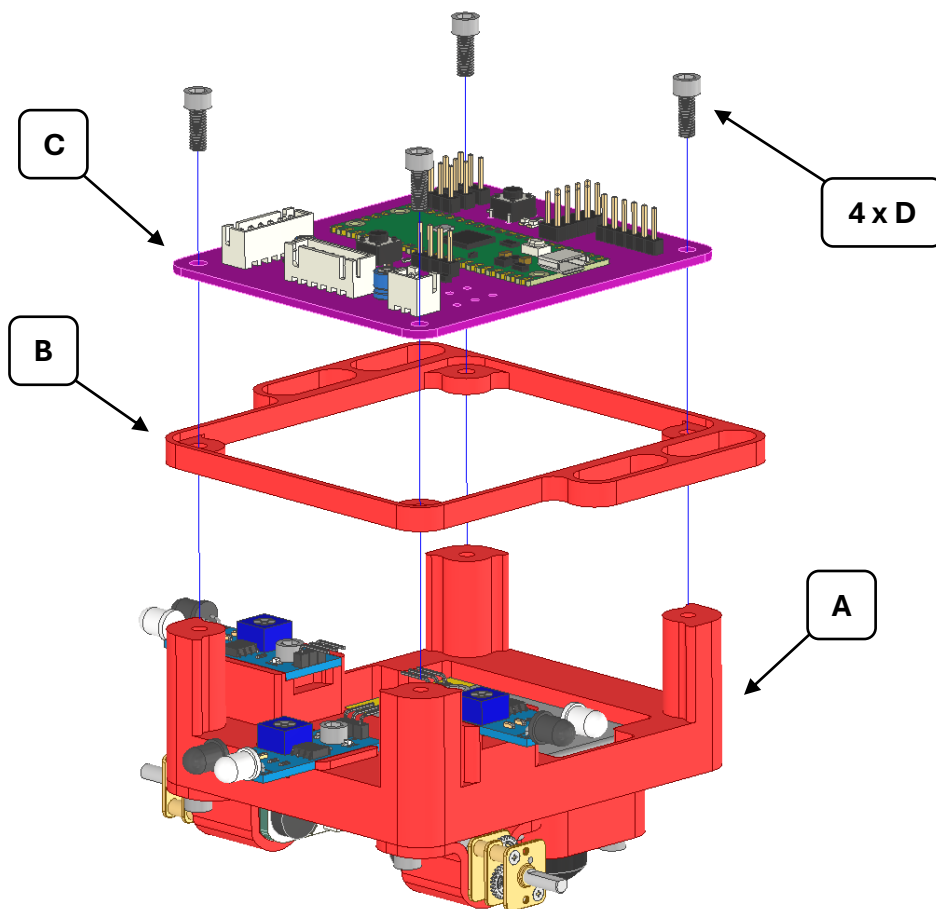


Parts Required:

- A. 1 x MM Base Plate with components fitted (where steps 1 to 6 of this procedure have been completed)
- B. 2 x 43mm Rubber Wheel

Instructions:

1. Connect the 43mm Rubber Wheels (B) onto the motor shafts on the MM Base Plate (A) until flush.

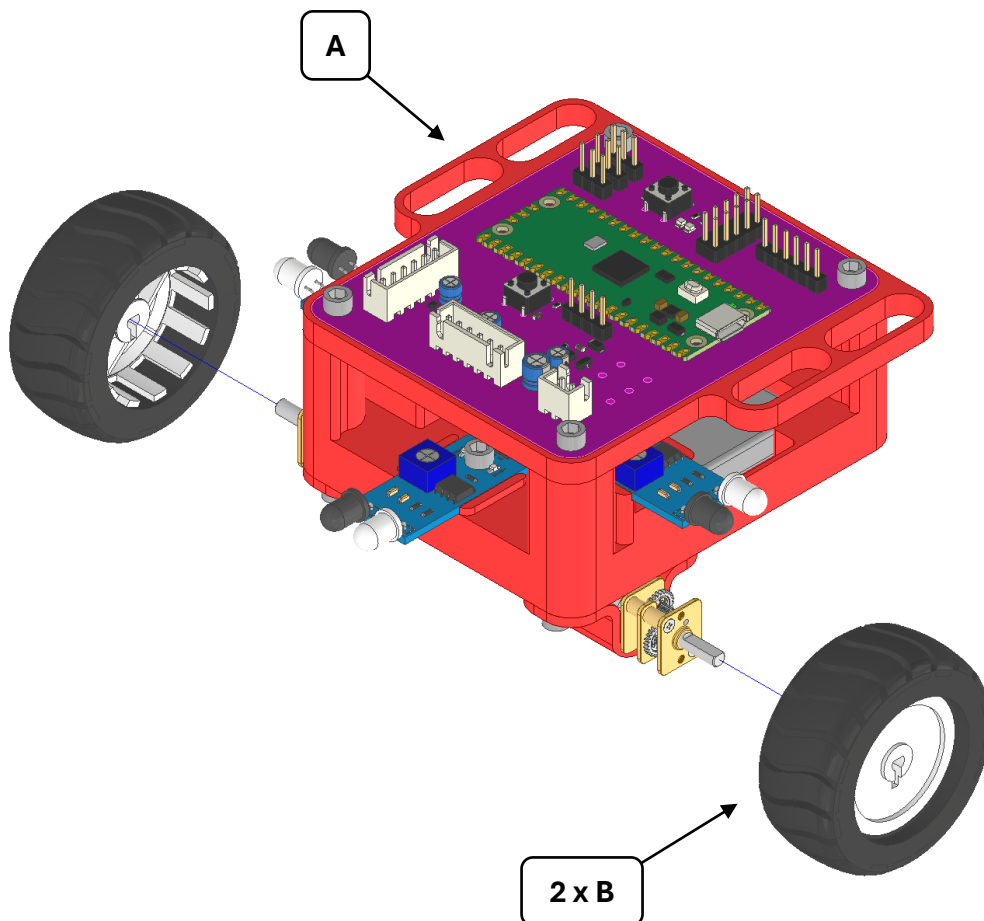

Parts Required:

Instructions:

1. Assembly Complete.

