Module 6

Magnetic circuits and Core losses

Lesson 21 Magnetic Circuits

Version 2 EE IIT, Kharagpur

Contents

21	Magnetic Circuit (Lesson: 21)	4
	21.1 Goals of the lesson	4
	21.2 Introduction	. 5
	21.3 Different laws for calculating magnetic field	. 5
	21.3.1 Biot-Savart law	. 5
	21.3.2 Ampere's circuital law	6
	21.3.3 Application of Ampere's circuital law in magnetic circuit	7
	21.3.4 Reluctance & permeance	9
	21.4 B-H Characteristics	9
	21.4.1 Different zones of B-H characteristic	10
	21.5 Analysis of Series magnetic circuit	12
	21.6 Analysis of Series-parallel magnetic circuit	. 13
	21.6.1 Important equations	15
	21.7 General discussion on solving problems	15
	21.7.1 Worked out example	16
	21.8 Answer the following:	19
	21.0 Tick the correct choice	20

21.1 Goals of the lesson

In this lesson, we shall acquaint the reader, primarily with the basic concepts of magnetic circuit and methods of solving it. Biot-Savart law for calculating magnetic field due to a known current distribution although fundamental and general in nature, requires an integration to be evaluated which sometimes become an uphill task. Fortunately, due to the specific nature of the problem, *Ampere's circuital law* (much easier to apply) is adopted for calculating field in the core of a magnetic circuit. You will also understand the importance of B-H curve of a magnetic material and its use. The concept and analysis of *linear* and *non linear* magnetic circuit will be explained. The lesson will conclude with some worked out examples.


Key Words: mmf, flux, flux density, mean length, permeability, reluctance.

After going through this section students will be able to answer the following questions.

- 1. What is a *magnetic circuit*?
- 2. What are *linear* and *non linear* magnetic circuits?
- 3. What information about the core is necessary for solving linear magnetic circuit?
- 4. What information about the core is necessary for solving non linear magnetic circuit?
- 5. How to identify *better* magnetic material from the B-H characteristics of several materials?
- 6. What should be done in order to reverse the direction of the field within the core?
- 7. What assumption is made to assume that the flux density remains constant throughout the section of the core?
- 8. What is the expression for energy stored in the air gap of a magnetic circuit?
- 9. Enumerate applications of magnetic circuit.
- 10. Is the core of a magnetic material to be laminated when the exciting current is d.c? They will also be able to do the following:
- 1. How to translate a given magnetic circuit into its electrical equivalent circuit.
- 2. How to draw B-H curve of a given material from the data supplied and how to use it for solving problem.
- 3. How to solve various kinds of problems involving magnetic circuits.

21.2 Introduction

Before really starting, let us look at some magnetic circuits shown in the following figures.

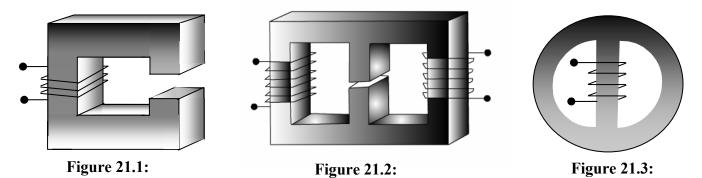

All of them have a magnetic material of regular geometric shape called *core*. A coil having a number of turns (= N) of conducting material (say copper) are wound over the core. This coil is called the *exciting coil*. When no current flows through the coil, we don't expect any magnetic field or lines of forces to be present inside the core. However in presence of current in the coil, magnetic flux ϕ will be produced within the core. The strength of the flux, it will be shown, depends on the product of number of turns (N) of the coil and the current (i) it carries. The quantity Ni called mmf (magnetomotive force) can be thought as the cause in order to produce an effect in the form of flux ϕ within the core. Is it not somewhat similar to an electrical circuit problem where a voltage (emf) is applied (cause) and a current is produced (effect) in the circuit? Hence the term *magnetic circuit* is used in relation to producing flux in the core by applying mmf (= Ni). We shall see more similarities between an *electrical circuit* and a *magnetic circuit* in due course as we go along further. At this point you may just note that a magnetic circuit may be as simple as shown in figure 21.1 with a single core and a single coil or as complex as having different core materials, *air gap* and multiple exciting coils as in figure 21.2. After going through this lesson you will be able to do the following.

- 1. to distinguish between a *linear* and *non linear* magnetic circuit.
- 2. to draw the equivalent electrical circuit for a given magnetic circuit problem.
- 3. to calculate *mean lengths* of various flux paths.
- 4. to calculate the *reluctances* of the various flux paths for *linear* magnetic circuit problem.
- 5. to understand the importance of B-H characteristics of different materials.
- 6. how to deal with a *non linear* magnetic circuit problem using B-H characteristic of the materials.

21.3 Different laws for calculating magnetic field

21.3.1 Biot-Savart law

We know that any current carrying conductor produces a magnetic field. A magnetic field \Re is characterized either by \vec{H} , the magnetic *field intensity* or by \vec{B} , the magnetic *flux density* vector.

These two vectors are connected by a rather simple relation: $\vec{B} = \mu_0 \mu_r \vec{H}$; where $\mu_0 = 4\pi \times 10^{-7} \, \text{H/m}$ is called the *absolute permeability* of free space and μ_r , a dimensionless quantity called the *relative permeability* of a medium (or a material). For example the value of μ_r is 1 for free space or could be several thousands in case of ferromagnetic materials.

Biot-Savart law is of fundamental in nature and tells us how to calculate dB or \overrightarrow{dH} at a given point with position vector r, due to an elemental current \overrightarrow{idl} and is given by:

$$\vec{dB} = \frac{\mu_0 \mu_r}{4\pi} \frac{i \vec{dl} \times \vec{r}}{r^3}$$

If the shape and dimensions of the conductor carrying current is known then field at given point can be calculated by integrating the RHS of the above equation.

$$\vec{B} = \frac{\mu_0 \mu_r}{4\pi} \int_{\text{length}} \frac{i \, \vec{dl} \times \vec{r}}{r^3}$$

where, length indicates that the integration is to be carried out over the length of the conductor. However, it is often not easy to evaluate the integral for calculating field at any point due to any arbitrary shaped conductor. One gets a nice closed form solution for few cases such as:

- 1. Straight conductor carries current and to calculate field at a distance *d* from the conductor.
- 2. Circular coil carries current and to calculate field at a point situated on the axis of the coil.

21.3.2 Ampere's circuital law

This law states that line integral of the vector \overrightarrow{H} along any arbitrary closed path is equal to the current enclosed by the path. Mathematically:

For certain problems particularly in *magnetic circuit problems* Ampere's circuital law is used to calculate field instead of the more fundamental *Biot Savart law* for reasons going to be explained below. Consider an infinite straight conductor carrying current i and we want to calculate field at a point situated at a distance d from the conductor. Now take the closed path to be a circle of radius d. At any point on the circle the magnitude of field strength will be constant and direction of the field will be tangential. Thus LHS of the above equation simply becomes $H \times 2\pi d$. So field strength is


$$H = \frac{I}{2\pi d} A/m$$

It should be noted that in arriving at the final result no integration is required and it is obtained rather quickly. However, one has to choose a suitable path looking at the distribution of the current and arguing that the magnitude of the field remains constant through out the path before applying this law with advantage.

21.3.3 Application of Ampere's circuital law in magnetic circuit

Ampere's circuital law is quite handy in determining field strength within a core of a magnetic material. Due to application of mmf, the *tiny dipole* magnets of the core are aligned one after the other in a somewhat disciplined manner. The contour of the lines of force resembles the shape the material. The situation is somewhat similar to flow of water through an arbitrary shaped pipe. Flow path is constrained to be the shape of the bent pipe. For an example, look at the sectional view (figure 21.4 & 21.5) of a toroidal magnetic circuit with *N* number of turns wound uniformly as shown below. When the coil carries a current *i*, magnetic lines of forces will be created and they will be confined within the core as the permeability of the core is many (order of thousands) times more than air.

Take the chosen path to be a circle of radius r. Note that the value of H will remain same at any point on this path and directions will be always tangential to the path. Hence by applying Ampere's circuital law to the path we get the value of H to be $\frac{NI}{2\pi r}$. If r is increased from a to be b the value of H decreases with r. a and b are respectively the inner and outer radius of the toroidal core.

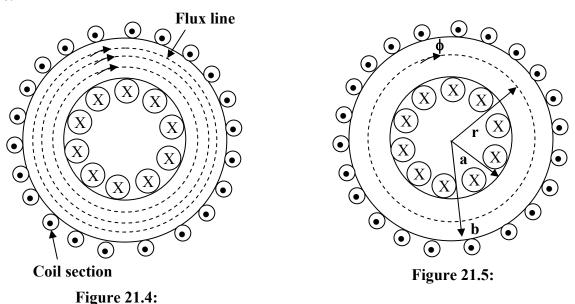

Assumptions

1. Leakage flux & Fringing effect

Strictly speaking all the flux produced by the mmf will not be confined to the core. There will be some flux lines which will complete their paths largely through the air as depicted in figure 21.6. Since the reluctance (discussed in the following section) or air is much higher compared to the reluctance offered by the core, the leakage flux produced is rather small. In our discussion here, we shall neglect leakage flux and assume all the flux produced will be confined to the core only.

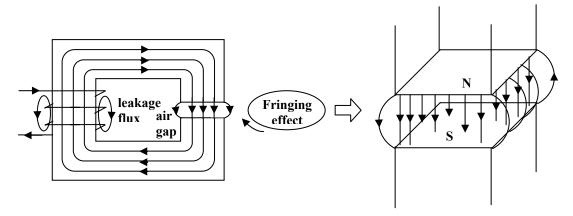


Figure 21.6:

In the magnetic circuit of figure 21.6 an air gap is present. For an exciting current, the flux lines produced are shown. These flux lines cross the air gap from the top surface of the core to the bottom surface of the core. So the upper surface behaves like a north pole and the bottom surface like a south pole. Thus all the flux lines will not be vertical and confined to the core face area alone. Some lines of force in fact will reach the bottom surface via bulged out curved paths outside the face area of the core. These flux which follow these curved paths are called fringing flux and the phenomenon is called fringing effect. Obviously the effect of fringing will be smaller if the air gap is quite small. Effect of fringing will be appreciable if the air gap length is more. In short the effect of fringing is to make flux density in the air gap a bit less than in the core as in the air same amount of flux is spread over an area which is greater than the core sectional area. Unless otherwise specified, we shall neglect the fringing effect in our following discussion. Effect of fringing sometimes taken into account by considering the effective area in air to be about 10 to 12% higher than the core area.

- 2. In the practical magnetic circuit (as in figure 21.5), the thickness (over which the lines of forces are spread = b-a) are much smaller compared to the overall dimensions (a or b) of the core. Under this condition we shall not make great mistake if we calculate H at $r_m = \frac{(b-a)}{2}$ and take this to be H every where within the core. The length of the flux path corresponding to the mean radius i.e., $l_m = 2\pi r_m$ is called the mean length. This assumption allows us to calculate the total flux ϕ produced within the core rather easily as enumerated below:
- Calculate the mean length l_m of the flux path from the given geometry of the magnetic circuit
- Apply Ampere's circuital law to calculate $H = \frac{NI}{l_{m}}$
- Note, this *H* may be assumed to be same every where in the core.
- Calculate the magnitude of the flux density B from the relation $B = \mu_o \mu_r H$.
- Total flux within the core is $\phi = BA$, where A is the cross sectional area of the core.

21.3.4 Reluctance & permeance

Let us now try to derive a relationship between flux produced ϕ and mmf Ni applied for linear case.

$$\phi = BA$$

$$= \mu_o \mu_r HA \qquad \because \text{ linear relationship between } B \text{ and } H.$$

$$= \mu_o \mu_r \left(\frac{Ni}{l}\right) A \text{ putting the expression for } H.$$

$$= \frac{Ni}{\frac{l}{\mu_o \mu_r} \frac{l}{A}} \text{ arranging the terms.}$$

Now defining Ni = mmf and $\Re = \frac{1}{\mu_0 \mu_r} \frac{l}{A}$, the above equation can be written in the following handy form

$$\phi = \frac{Ni}{\Re} = \frac{Ni}{\frac{1}{\mu_0 \mu_n} \frac{l}{A}} = \frac{mmf}{Reluctance}$$

This equation resembles the familiar current voltage relationship of an electric circuit which is produced below for immediate comparison between the two:

$$i = \frac{v}{R} = \frac{V}{\frac{\rho l}{a}} = \frac{Voltage}{Resistance}$$

The expression in the denominator is called resistance which impedes the flow of the current. $\Re = \frac{1}{\mu_0 \mu_r} \frac{l}{A}$ is known as reluctance of the magnetic circuit and *permeance* (similar to admittance in electric circuit) is defined as the reciprocal of reluctance i.e., $\rho = \frac{1}{\Re}$.

21.4 B-H Characteristics

A magnetic material is identified and characterized by its B-H characteristic. In free space or in air the relationship between the two is *linear* and the constant of proportionality is the permeability μ_0 . If B is plotted against H, it will be straight a line. However, for most of the materials the relationship is not linear and is as shown in figure 21.7. A brief outline for experimental determination of B-H characteristic of a given material is given now. First of all a sample magnetic circuit (with the given material) is fabricated with known dimensions and number of turns. Make a circuit arrangement such as shown in Figure 21.8, to increase the current from 0 to some safe maximum value. Apart from ammeter reading one should record the amount of flux produced in the core by using a *flux meter*-let us not bother how this meter works!

Number of turns = N

Mean length of the flux path = l in m.

Cross sectional area = $a \text{ in m}^2$

Reading of the ammeter = I in A

Reading of the flux meter = ϕ in Wb

Now corresponding to this current, calculate $H = \frac{NI}{l}$ and $B = \frac{\phi}{a}$ and tabulate them. Thus we have several pair of H & B values for different values of currents. Now by choosing H to be the x axis B to be the y axis and plotting the above values one gets a *typical* B-H curve as shown in Figure 21.7 below.

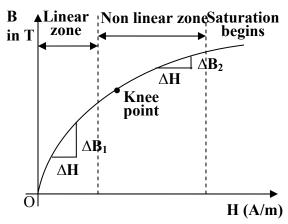


Figure 21.7: A typical B-H curve

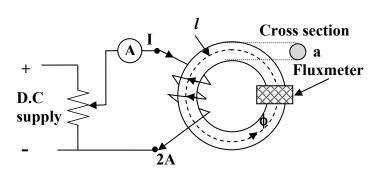


Figure 21.8: Experimental determination of B-H curve

21.4.1 Different zones of B-H characteristic

The initial portion of the B-H curve is nearly a straight line and called *linear zone*. After this zone the curve gradually starts deviating from a straight line and enters into the nonlinear zone.

The slope of the curve $\frac{dB}{dH}$ starts gradually decreasing after the linear zone. A time comes when there is practically no increase in B in spite of the fact that H is further increased. The material is then said to be *saturated*. The rise in the value of B in the linear zone is much more than in the nonlinear or saturation zone for *same* ΔH . this can be ascertained from the B-H curve by noting $\Delta B_1 > \Delta B_2$ for same ΔH .


For this lesson, a brief qualitative explanation for the typical nature of the B-H curve is given. In a ferromagnetic material, very large number of tiny magnets (magnetic dipoles) are present at the atomic/molecular level. The material however does not show any net magnetic property at macroscopic level due to random distribution of the dipoles and eventual cancellation of their effects. In presence of an external field \vec{H} , these dipoles start aligning themselves along the direction of the applied field. Thus the more and more dipoles get aligned (resulting into more B) as the H i.e., current in the exciting coil is increased. At the initial phase, increase in B

is practically proportional to H. However rate of this alignment gets reduced after a definite value of H as number of randomly distributed dipoles decreases. This is reflected in the nonlinear zone of the figure 21.7. Obviously if we further increase H, a time will come when almost all the dipoles will get aligned. Under such circumstances we should not expect any rise in B even if H is increased and the core is said to be *saturated*. At the saturation zone, the characteristic becomes almost parallel to the H axis.

Different materials will have different B-H curves and if the characteristics are plotted on same graph paper, one can readily decides which of them is better than the other. Referring to Figure 21.9, one can easily conclude that material-3 is better over the other two as flux produced in material-3 is the highest for same applied field H.

From the above discussion it can be said that there is no point in operating a magnetic circuit deep into saturation zone as because large exciting current will put extra overhead on the source supplying power to the coil. Also any desire to increase B by even a small amount in this zone will call for large increase in the value of the current. In case of transformers and rotating machines operating point is chosen close to the *knee point* of the B-H characteristic in order to use the magnetic material to its true potential. To design a constant value of *inductance*, the operating point should be chosen in the linear zone.

Approach to solve a magnetic circuit problem will be different for *linear* and *nonlinear* cases. In the following section let us discuss those approaches followed by equivalent electrical circuit representation of the magnetic circuits. It is instructive to draw *always* the equivalent representation of a magnetic circuit for the following reasons:

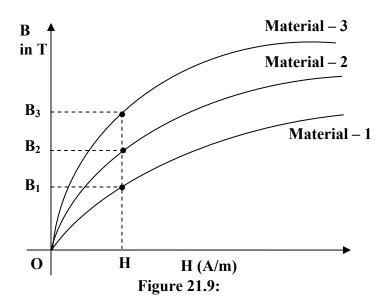

- 1. It will help us to visualize the problem in terms of more familiar *series* and *series*-parallel d.c circuits.
- 2. We can apply with ease KFL (Kirchoff's flux law) at the junctions in the same manner as we apply KCL in circuit analysis.
- 3. Similar to KVL equations, we can apply *mmf* balance equations in different closed paths of the magnetic circuit.
- 4. Above all, with this circuit before hand, one can decide upon the strategy of solving the problem.

21.5 Analysis of Series magnetic circuit

Consider first a simple magnetic circuit, shown in Figure 21.10 with a single core material having uniform cross sectional area A and mean length of flux path l. Reluctance offered to the flow of flux is \Re . The corresponding electrical representation is rather simple. Due to the fact that $NI = \phi \Re = Hl$, the equivalent electrical circuit is also drawn beside the magnetic circuit. Polarity of mmf is decided on the basis of the direction of the flux which is clockwise inside the core in this case. Although in the actual magnetic circuit there is no physical connection of the winding and the core, in the electrical circuit representation mmf and reluctance are shown to be connected. One should not feel disturbed by this as because the relationship between mmf and flux prompted us to draw an electrical equivalent to facilitate easier calculation and neat visualization of the actual problem.

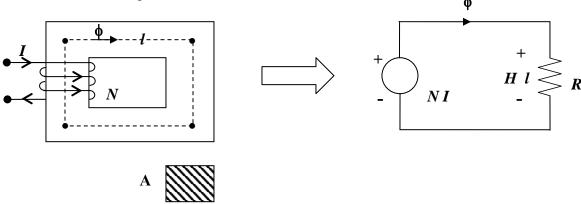


Figure 21.10:

Let us now consider another magnetic circuit which is similar to the earlier one but has a small *air gap* of length l_g as shown in Figure 21.11 and note that it is a series circuit involving two mediums, namely (i) iron and (ii) air. It is a series circuit because same flux (ϕ) has to flow through the mediums. Hence total reluctance will be the sum of reluctances of iron and $\operatorname{air}(\mathfrak{R}=\mathfrak{R}_i+\mathfrak{R}_{\operatorname{air}})$.

For this circuit basic equations can be developed as follows: Let,


Number of turns = NExciting current i = I in A

Mean length of the flux path through iron $= l_i$ in m

Length of the flux path through air $= l_g$ in m

Cross sectional area = A in m²

(21.2)

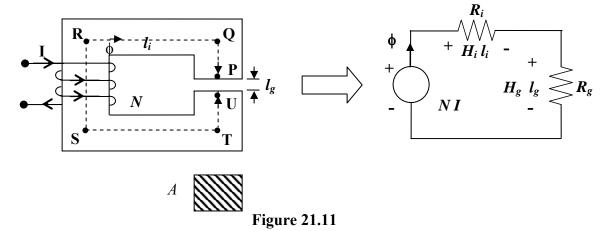

If the cross sectional area A is constant throughout, flux density $B = \frac{\phi}{A}$ will be also constant both in iron and air path. Since value of permeabilities are different for iron and air, the corresponding values of H too will be different.

H required for iron,
$$H_i = \frac{B}{\mu_0 \mu_i}$$

H required for air, $H_g = \frac{B}{\mu_0}$

$$\text{: Ampere circuital law gives} \quad NI = H_i l_i + H_g l_g \\ = \frac{B}{\mu_0 \mu_i} l_i + \frac{B}{\mu_0} l_g \\ = \frac{\frac{\phi}{A}}{\mu_0 \mu_i} l_i + \frac{\frac{\phi}{A}}{\mu_0} l_g \\ = \phi \frac{1}{\mu_0 \mu_i} \frac{l_i}{A} + \phi \frac{1}{\mu_0} \frac{l_g}{A} \\ NI = \phi \mathfrak{R}_i + \phi \mathfrak{R}_g \\ NI = \phi \left(\mathfrak{R}_i + \mathfrak{R}_g \right) \\ \text{or, } \phi = \frac{NI}{\left(\mathfrak{R}_i + \mathfrak{R}_g \right)}$$

So as expected these two reluctances are connected in series. In fact, for series magnetic circuit having different reluctance segments, total reluctance will be the sum of individual reluctances.

21.6 Analysis of series-parallel magnetic circuit.

We now take up the following magnetic circuit (Figure 21.12) which appears to be not so straight forward as the previous cases. As a first step to solve this circuit, we would like to draw its equivalent electrical representation. Vertical links of the core are called *limbs* and the horizontal links are called *yoke* of the magnetic circuit. In the figure PU, QT and RS are the

limbs whereas PQ, QR, UT and TS are the yokes. It is customary to fix up the corner points P,Q,R etc from the given physical dimensions, joining of which will give you the *mean length* of the flux paths.

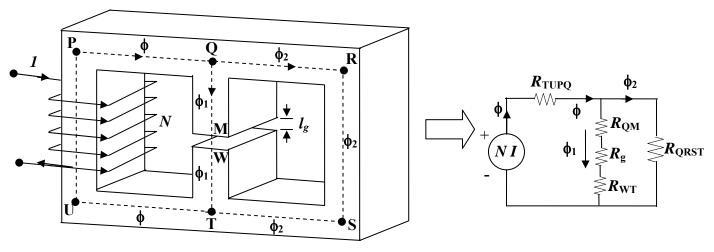


Figure 21.12:

If the coil carries a current I in the direction shown, flux ϕ , produced in the first limb will be in the upward direction. Same ϕ is constrained to move along the yoke PQ. At point Q, two parallel paths are available to ϕ for its onwards journey namely (i) the central limb QT and (ii) the yoke QR. In other words, ϕ will be divided into two components ϕ_1 and ϕ_2 as shown with the obvious condition $\phi = \phi_1 + \phi_2$. The relative values of these components will be decided by respective reluctances of the paths. ϕ_1 and ϕ_2 once again recombine at point T and completes the path. Now in the path TUPQ flux ϕ is same, it is made of same material and has same cross sectional area A, then its reluctance $\mathfrak{R}_{\text{TU PQ}} \propto \frac{l_{\text{TU PQ}}}{A}$. In the central limb, flux is same (ϕ_1), however it encounters two materials, one is iron (QM and WT) and the other is a small air gap (MW). The reluctance of the air gap $\mathfrak{R}_g = \frac{l_g}{\mu_0 A}$. The two reluctances \mathfrak{R}_{QM} and \mathfrak{R}_{WT} of the magnetic material may however be combined into a single reluctance as $\mathfrak{R}_1 = \mathfrak{R}_{\text{QM}} + \mathfrak{R}_{\text{WT}}$. The portion of the magnetic circuit which carries flux ϕ_2 can be represented by a single reluctance $\mathfrak{R}_{\text{QRST}} \propto \frac{l_{QRST}}{A}$. Instead of carrying on with long suffixes let us call $\mathfrak{R}_{\text{QRST}}$ to be \mathfrak{R}_2 . To write down the basic equations let us redraw the electrical equivalence of the above magnetic circuit below (Figure 21.13):

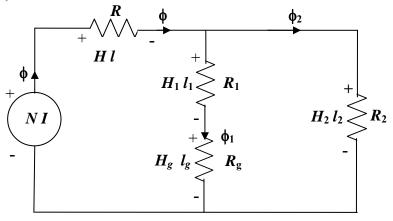


Figure 21.13:

Version 2 EE IIT, Kharagpur

21.6.1 Important equations

The various equations which will hold good are written below:

```
\phi = \phi_1 + \phi_2
NI = Hl + H_1l_1 + H_gl_g = \Re \phi + (\Re_1 + \Re_g)\phi_1 \text{ balance in loop1}
(\Re_1 + \Re_g)\phi_1 = \Re_2\phi_2 \text{ mmf balance in loop2}
H_1l_1 + H_gl_g = H_2l_2 \text{ mmf balance in loop2}
NI = Hl + H_2l_2 \text{ mmf balance in the outer loop.}
```

21.7 General discussion on solving problems

As pointed out earlier, the approach to solve a magnetic circuit problem is primarily guided by the fact that whether the magnetic circuit is *linear* or *non linear*. If it is linear then the material is fully characterized by its relative permeability μ_r and the reluctance which remains constant (independent of the operating point) can be easily calculated and shown in the equivalent circuit. In other words, for linear cases, the magnetic circuit problems are solved exactly in the same manner for solving linear electrical circuits. Depending on situation, one can invoke any convenient method of solving electrical circuit problem here as well.

Let us go through the following solved linear magnetic circuit numerical problem to understand the steps involved.

However, in case of non linearity (which is more common in practice), one has no other alternative but to refer to *graphical solution* involving B-H characteristic of the material or materials. The reason being, the material can not be characterized by a unique μ_r for different operating points as $\frac{dB}{dH}$ is a function of the operating point. The values of B's (B, B_1, B_2) in the three limbs are expected to be different in the magnetic circuit of Figure 21.12. Instead of looking for relative permeabilities, it will be much easier to read the corresponding H values (H, H_1, H_2) from the B-H curve of the material and calculate the respective mmf drops as Hl, Hl_1 and Hl_2 . Generally the pair of B-H values are given in tabular form for some fixed number of points. One has to plot these points on a simple graph paper and join them by a smooth curve to get the characteristic and use it for problem solving.

In practical situations we would like to know how much mmf (NI) is needed in order to establish a definite amount of flux at a particular portion of the magnetic circuit. In this lesson, we have primarily discussed the methods to be adopted to solve such problems. However, the reverse problem i.e., if the mmf (NI) is known how to calculate the flux produced at a particular portion of the magnetic circuit is somewhat involved. Similar situation exists in non linear electric circuit analysis as well with supply voltage known and the circuit elements are non linear in nature. In such cases, one has to either adopt *numerical* techniques or solve the problem graphically by drawing appropriate load lines. In this introductory lesson of magnetic circuit, we shall confine ourselves in solving problem of the first kind.

Let us go through the following solved non *linear magnetic circuit* numerical problem to understand the steps involved.

21.7.1 Worked out example

• **Example-1** In the magnetic circuit detailed in Figure 21.14 with all dimensions in mm, calculate the required current to be passed in the coil having 200 turns in order to establish a flux of 1.28 mWb in the *air gap*. Neglect fringing effect and leakage flux. The B-H curve of the material is given in Figure 21.15. Permeability of air may be taken as, $\mu_0 = 4\pi \times 10^{-7}$ H/m

Solution:

- Step 1 First draw the simplified diagram of the given magnetic circuit along with the equivalent circuit as shown in figure 21.16.
- Step 2 To calculate *mean lengths* of various parts, mark the center points of various limbs and yokes with small bullets.
- Step 3 Name the different portions which will carry same flux as 1, 2 and 3. For example, the path CFED is in fact path 1 where flux ϕ_1 will remain same. Similarly the path DC (path 2) will carry same flux ϕ_2 and path CBAD (path 3) will carry same flux ϕ_3 .
- Step 4 Calculation of mmf required for the path 2:

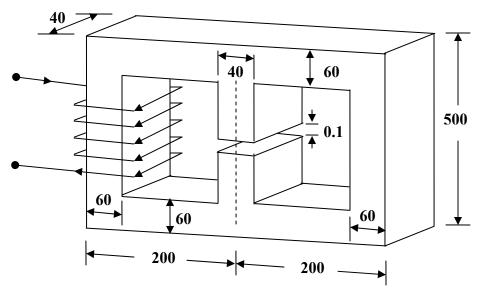


Figure 21.14: For Q B1.

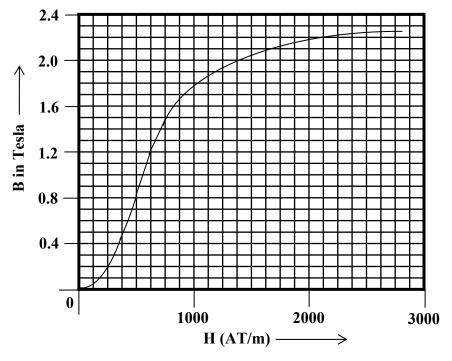


Figure 21.15: For Q B1.

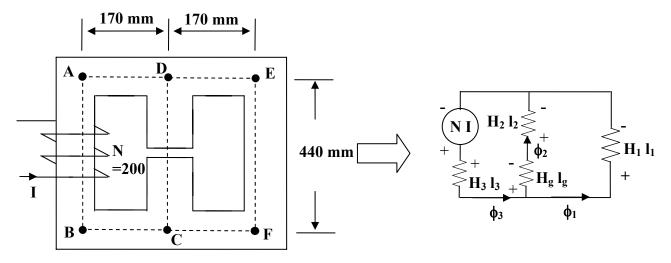


Figure 21.16: Circuit showing mean lengths.

$$\phi_g = \phi_2 = 1.28 \times 10^{-3}$$
Cross sectional area of central limb $A_2 = 16 \times 10\text{-}4 \text{ m}^2$
Flux density $B_g = B_2 = \frac{1.28 \times 10^{-3}}{16 \times 10^{-4}} \text{T}$

$$= 0.8 \text{ T}$$

$$\therefore H_g = \frac{B_g}{\mu_0} = \frac{0.8}{4\pi \times 10^{-7}} \text{AT/m}$$

$$= 63.66 \times 10^{4} \text{ AT/m}$$
mmf required for gap $H_g l_g = 63.66 \times 10^{4} \times 1 \times 10^{-4} \text{ AT}$

$$= 63.66 \text{ AT}$$

Now we must calculate the mmf required in the iron portion of the central limb as follows:

flux density,
$$B_2 = 0.8 \text{ T}$$
 : fringing & leakage neglected

corresponding H from graph,
$$H_2 \approx 500 \text{ AT/m}$$

Mean iron length,
$$l_2 = (440 - 0.1) \text{ mm}$$

$$\approx$$
 0.44 m

mmf required for iron portion,
$$H_2l_2 = 220 \text{ AT}$$

Total mmf required for iron & air gap,
$$= (220 + 63.66)$$
 AT

$$mmf_{CD} = 283.66 \text{ AT}.$$

Step 5 Due to parallel connection, mmf acting across path 1 is same as mmf acting across path 2. Our intention here, will be to calculate ϕ_1 in path 1.

mean length of the path,
$$l_1 = l_{DE} + l_{EF} + l_{FC}$$

= $2 \times 170 + 440 \text{ mm}$
= 0.78 m
 $\therefore H_1 = \frac{283.66}{0.78}$
= 363.67 AT/m

corresponding flux density from graph, $B_1 \approx 0.39 \text{ T}$

∴ flux,
$$\phi_1 = B_1 A_1$$

= 0.39 × 24 × 10⁻⁴ Wb
∴ $\phi_1 = 0.94 \times 10^{-3}$ Wb

Step 6 In this step we calculate the mmf necessary to drive ϕ_3 in path 3 as follows.

flux in path 3,
$$\phi_3 = \phi_1 + \phi_2$$

= 2.22×10^{-3} Wb
flux density, $B_3 = \frac{\phi_3}{A_3}$
= $\frac{2.22 \times 10^{-3}}{24 \times 10^{-4}}$

$$\therefore B_3 = 0.925 \text{ T}$$

corresponding H from graph, $H_3 \approx 562.5 \text{ AT/m}$

mean length of path 3, $l_3 = 2 \times 170 + 440 \text{ mm}$

= 0.78 m

total mmf required for path 3 = H_3l_3

= 562.5 × 0.78 AT

= 438.7 AT

 \therefore mmf to be supplied by the coil, NI = 283.66 + 438.7 AT

or 200I = 722.36 AT

 $\therefore \text{ exciting current needed, } I = \frac{722.36}{200} I$

= 3.61 A

21.8 Answer the following:

- 1. Clearly state Ampere's circuital law?
- 2. Write down the expression for reluctance. What is its unit?
- 3. What is mean length and its importance?
- 4. Give two magnetic materials with permeabilities μ_1 and μ_2 with $\mu_1 > \mu_2$.
- 5. Which of these two, you will choose to make a magnetic circuit and why?
- 6. Why not the operating point is selected in the saturation zone of the B-H characteristic?
- 7. 2 mWb is to be produced in the air gap of the magnetic circuit shown in figure 21.17. How much ampere turns the coil must provide to achieve this?

Relative permeability μ_r of the core material may be assumed to be constant and equal to 5000. All the dimensions shown are in cm and the sectional area is 25cm^2 through out.

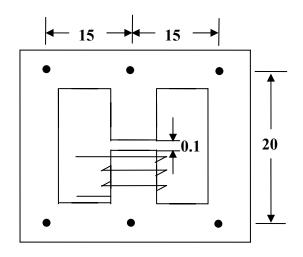


Figure 21.17:

21.9 Tick the correct choice

1. In the magnetic circuit shown in Figure 21.18, the second coil carries a current of 2 A. If flux in the core is to be made zero, the current I in the first coil should be

(A) + 4 A

(B) - 2 A

(C) - 4 A

(D) + 2 A

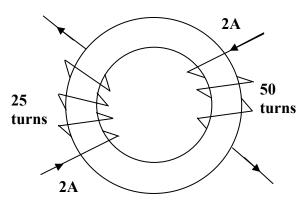


Figure 21.18:

2. A magnetic circuit has a continuous core of a ferromagnetic material. Coil is supplied from a battery and draws a certain amount of exciting current producing a certain amount of flux in the core. If now an air gap is introduced in the core, the exciting current will:

(A) increase.

- (B) remain same.
- (C) decrease
- (D) become 0.
- 3. For the magnetic circuit shown in figure 21.19 the reluctance of the central limb (PS) is 10×10^5 AT/Wb and the reluctance of the outer limbs (PTS and PQS) are same and equal to 15×10^5 AT/Wb. To produce 0.5 mWb in PQS, the mmf to be produced by the coil is:

(A) 750 AT

- (B) 1750 AT
- (C) 250 AT
- (D) 1500 AT.

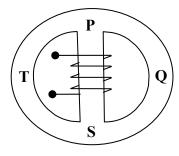


Figure 21.19:

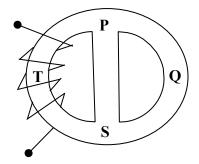


Figure 21.20:

- 4. For the magnetic circuit shown in figure 21.20 the reluctance of the central limb (PS) is 10×105 AT/Wb and the reluctance of the outer limbs (PTS and PQS) are same and equal to 15×105 AT/Wb. To produce 0.5 mWb in PQS, the mmf to be produced by the coil is:
 - (A) 2625 AT
- (B) 1125 AT
- (C) 750 AT
- (D) 1875 AT.

5. A magnetic circuit draws a certain amount of alternating sinusoidal exciting current producing a certain amount of alternating flux in the core. If an air gap is introduced in the core path, the exciting current will:

(A) increase

(B) remain same.

(C) decrease.

(D) vanish.