



JOHN DEERE DRAIN KIT

NOTE: The Pea Auger for John Deere features a motor at each end, but only the left-hand-side (LHS) receives the drain kit. The RHS does not require a drain.

STEP 1: Start by removing the case drain plug from the back side of the CWI Pear Auger motor with an allen key (*MacDon model shown for illustration*).



STEP 2: With the case drain plug removed you can now install the elbow fitting hand tight. (*MacDon model shown for illustration*.)



STEP 3: Once the fitting is in hand tight you can tighten with a wrench. **BE CAREFUL NOT TO OVERTIGHTEN.** (*MacDon model shown for illustration*.)



STEP 4: Now attach the hydraulic hose to the elbow fitting and tighten. Again, be sure not to overtighten.



STEP 5: Remove the hose fitting from the factory header drive motor. Have something to catch the hydraulic fluid that will come out. Keep the hose handy for later.



STEP 6: Remove the factory elbow fitting (with two ORFS ends) from the header drive motor, and thread-in the other supplied elbow fitting (with the JIC end.)


JIC:
Conical end,
tapers



ORFS:
Flat end,
visible O-ring



STEP 7: Attach the T-fitting from the kit onto the elbow fitting you just installed in the header drive motor.

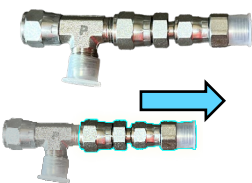


You can remove the adapters from the one end (as shown, ships assembled) to make it easier.



STEP 8: Attach the hose from the pea auger motor to one end of the tee fitting. Both ends are JIC (conical), so no adapters are required.



STEP 9: Lastly, attach the factory hose that was removed in **STEP 5** to the top of the tee fitting as seen to the right, using the adapters to connect them. After all hoses are connected, tighten all the fittings. After running the auger for a few mins check fittings for leaks. Tighten if necessary.

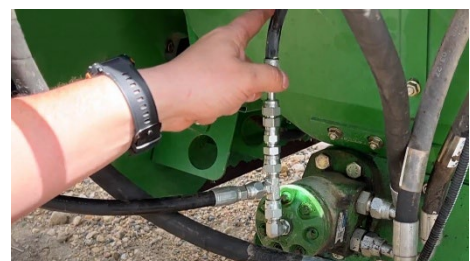

Thank you for purchasing your Pea Auger kit from Combine World. Any questions or comments please call us at

1-800-667-4515