



ASSEMBLY INSTRUCTIONS

CASE IH 7240/7250/8240/

8250/9240/9250

(240/250 SERIES), CF, 410 BU

AUTO-SEALING

BIG TOP 52330



WARNING



1. Use of this product is at the owner's discretion. Increasing grain capacity may adversely affect center of gravity, stability, and controllability. Exceeding maximum combine weight limits can risk structural integrity and drive line components. Crary Industries does not assume any liabilities, or make any warranties regarding the performance or structure of the combine. See combine owner's/operator's manual for specific limitations, operating recommendations, and safety information.
2. Shut off combine and remove key before installing the hopper extension. Make sure the combine is on a level surface. Engage parking brake.
3. Be careful when working in the combine hopper. The sloped sides and sharp edges are dangerous and could cause serious injury.

Crary Industries recommends assembling and installing the Big Top Hopper Extension directly on the combine hopper. It is possible to assemble the hopper extension on the ground and raise it to the combine hopper with an overhead hoist. However, fitting problems caused by flexing or bending of the hopper extension parts might occur.

If your combine has an existing flip-up grain tank extension, remove it (or fold it in) before installing the Big Top.

TOOLS FOR ASSEMBLY:

Wrench Set

Drill

9/32" & 11/32" drill bits

Impact Driver

Impact sockets

Phillips-head screwdriver

INSTALL SIDE CANVAS MOUNT BRACKETS

1. Align the canvas mount bracket with the OEM vertical rib on the side panel and with the lower rail.
2. Use the canvas mount bracket as a template to locate the upper two mounting points. Mark and drill two 9/32" holes in the OEM vertical rib.
3. Attach the upper end of the canvas mount bracket using two 5/16"-18 x 1" thread rolling screws in the holes drilled in the previous step.

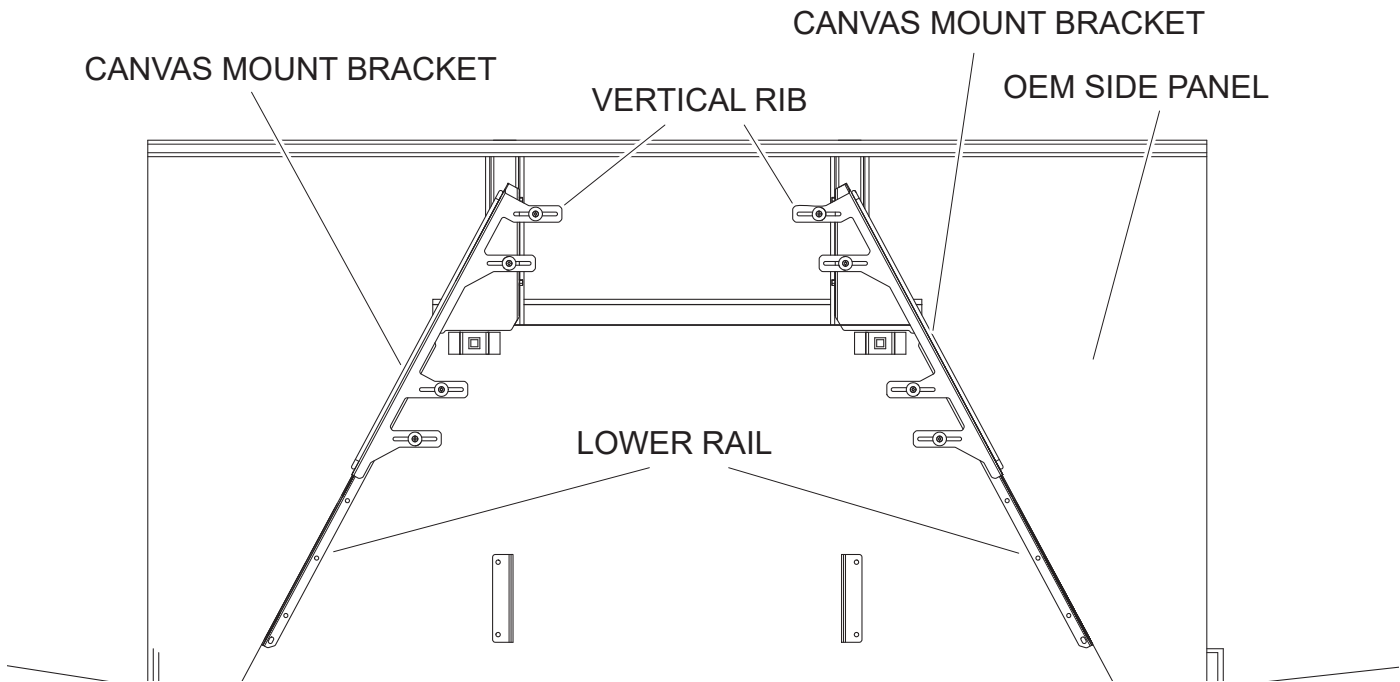


Figure 1: CANVAS MOUNT BRACKETS / OEM SIDE PANEL

4. Further secure the lower end of the bracket with two 5/16" x 3/4" short neck carriage bolts and 5/16" nylock flange nuts through the existing holes in the OEM side panel.

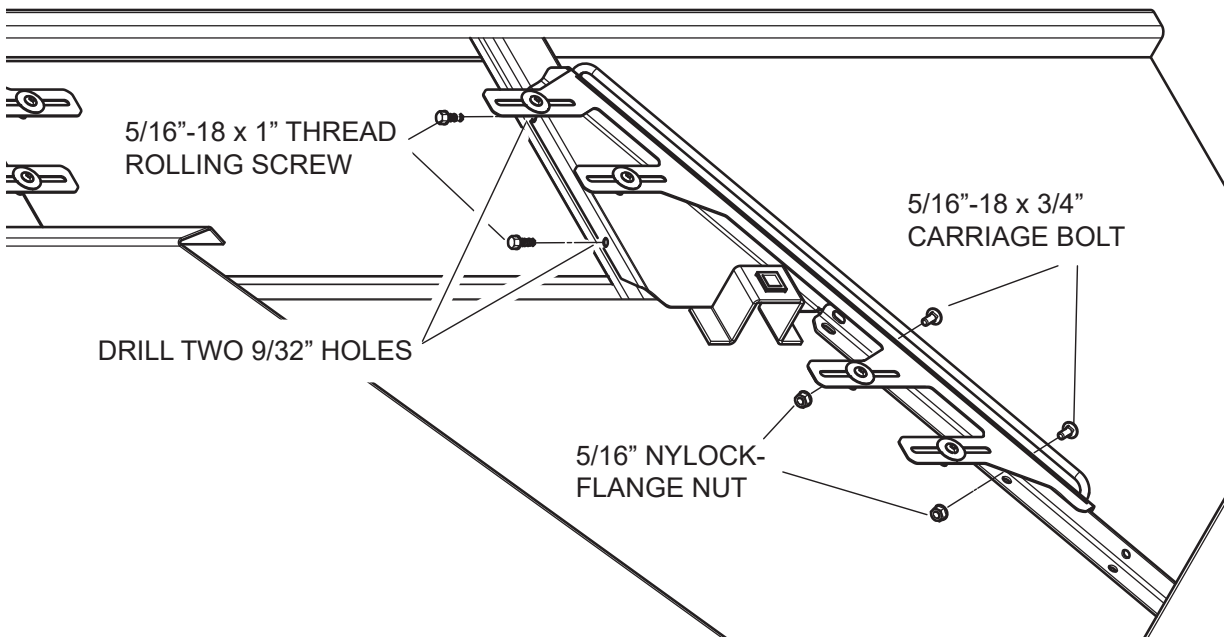


Figure 2: DRILL TWO 9/32" HOLES

5. Repeat for all remaining canvas mount brackets. Tighten all hardware.

REMOVING GPS AND OEM BOLTS

1. Remove GPS mount and OEM GPS mount bracket.

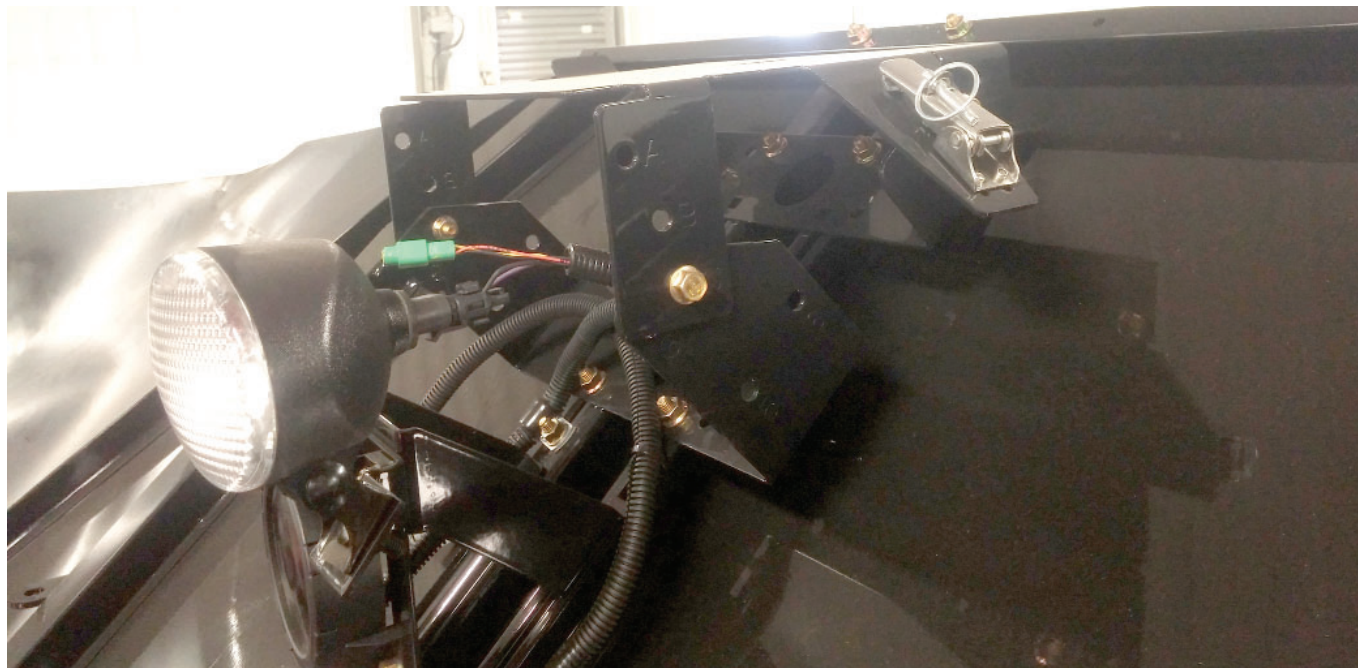


Figure 3: OEM GPS MOUNT

2. Remove top two OEM carriage bolts from front panel sensor rail. You will use these to mount front panel extension.

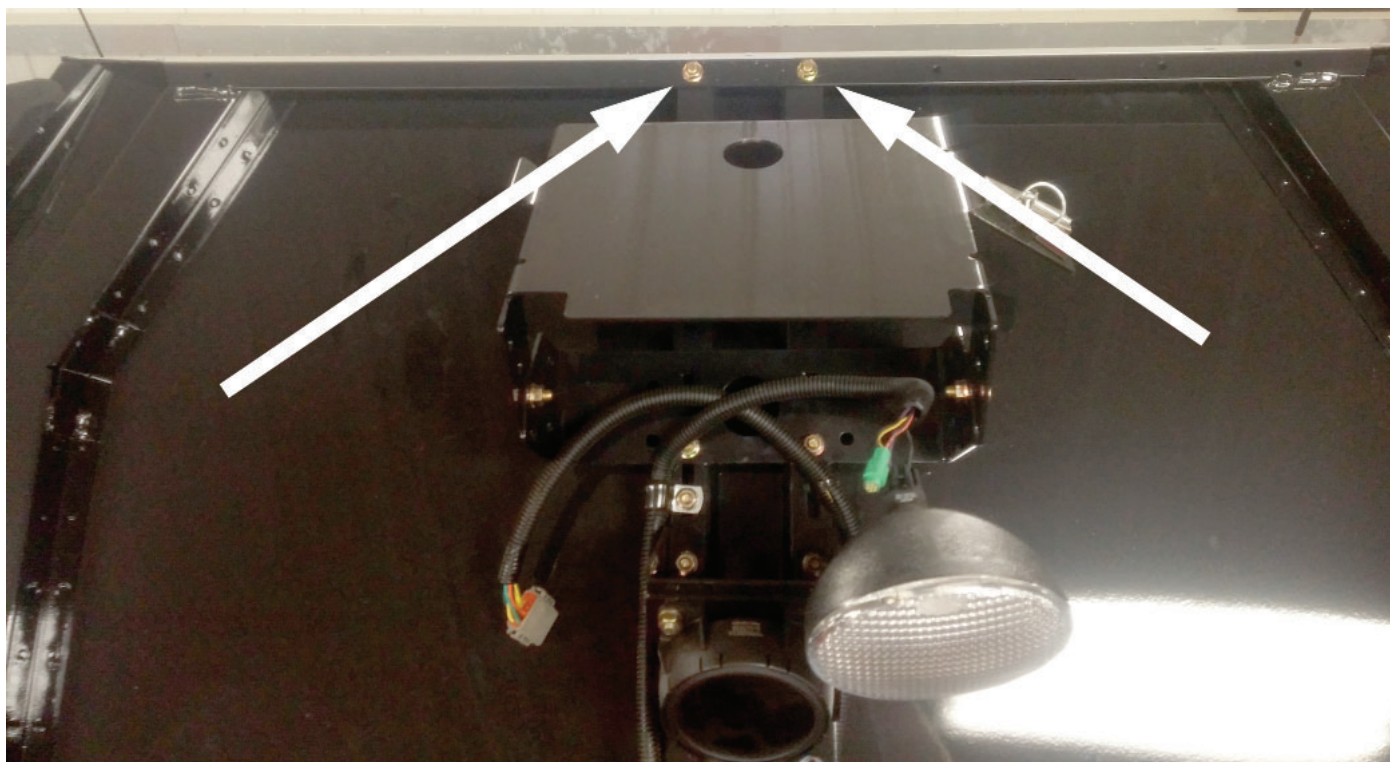


Figure 4: TOP TWO OEM CARRIAGE BOLTS

INSTALL FRONT PANEL

1. Identify front panel extension.

NOTE

Assistance may be needed to hold front panel extension in place for installation

2. Align legs of front panel extension with the OEM front panel rails. The panel should sit on the front panel top lip.

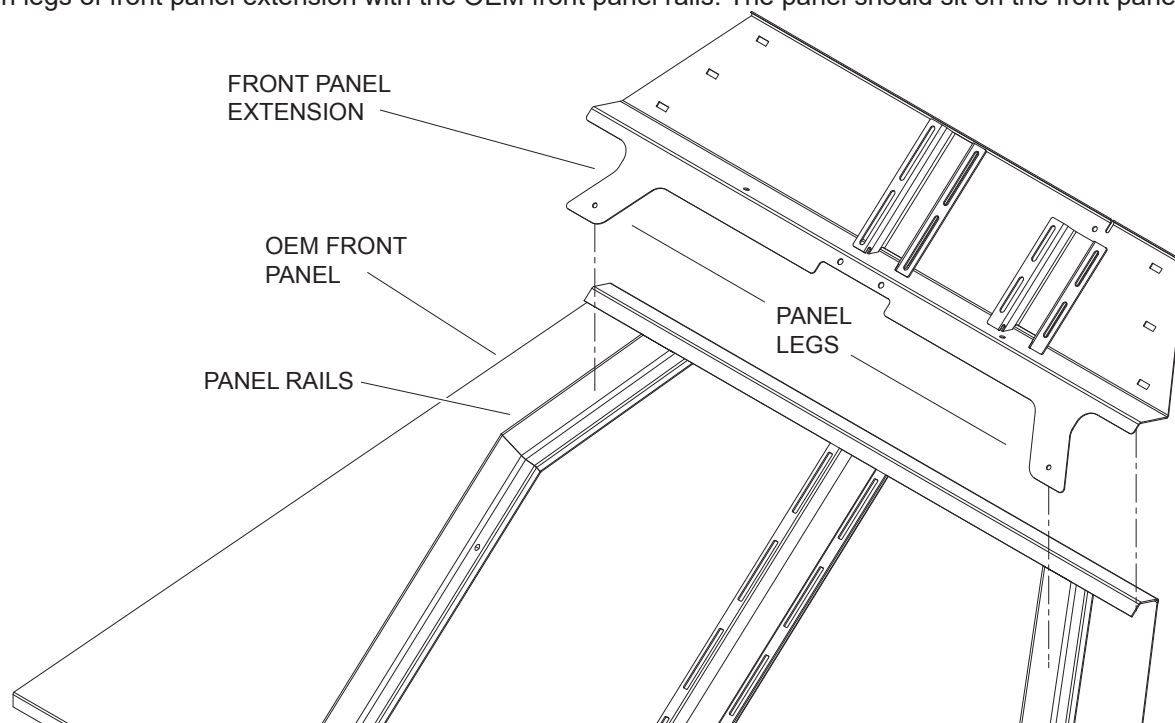


Figure 5: FRONT PANEL EXTENSION

3. Re-use the two OEM carriage bolts that were removed from the front panel sensor rail to fasten the middle two holes in front panel extension.

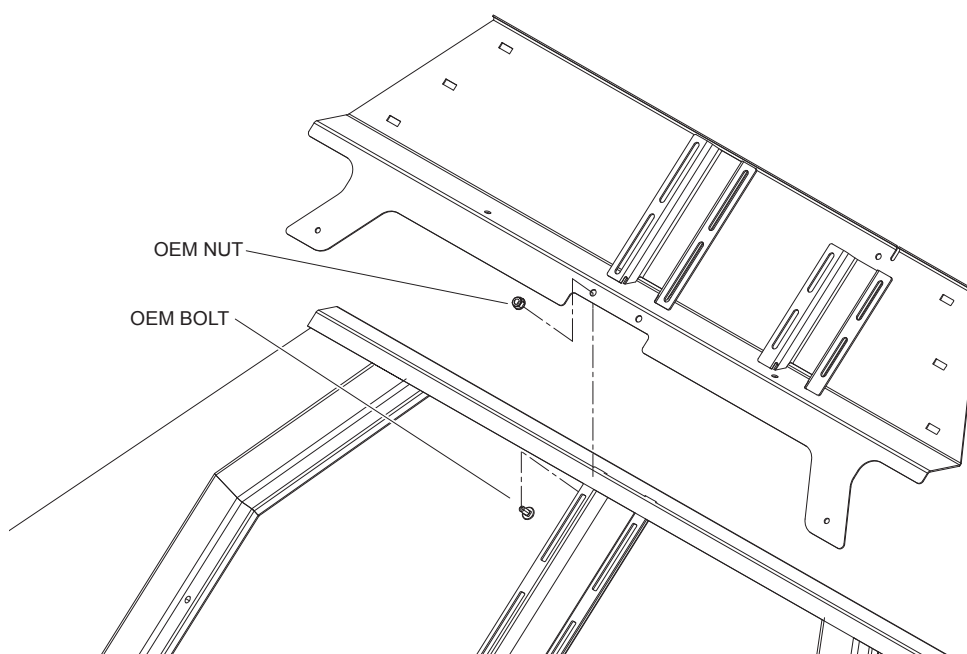


Figure 6: OEM BOLT AND NUTS

INSTALL FRONT PANEL

4. Use front panel extension as a template to drill out four 11/32" thru holes in OEM front panel as shown.

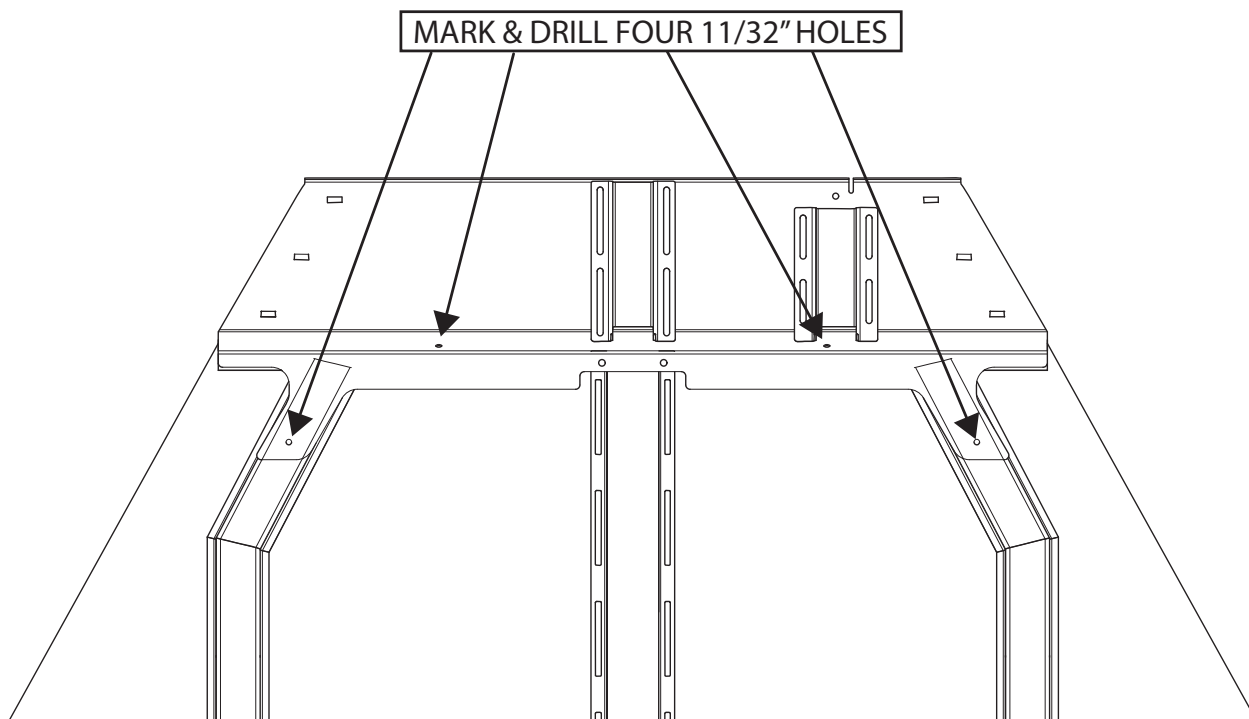


Figure 7: FRONT PANEL DRILLING LOCATIONS

5. Use two 5/16" x 2-1/2" bolts and 5/16" nylock flange nuts to fasten legs of front panel extension to OEM front panel. Do not tighten nuts at this time, they will be used to install canvas later in installation.
6. Use two 5/16" x 3/4" bolts and 5/16" nylock flange nuts to fasten the base of front panel extension to top of OEM front panel.

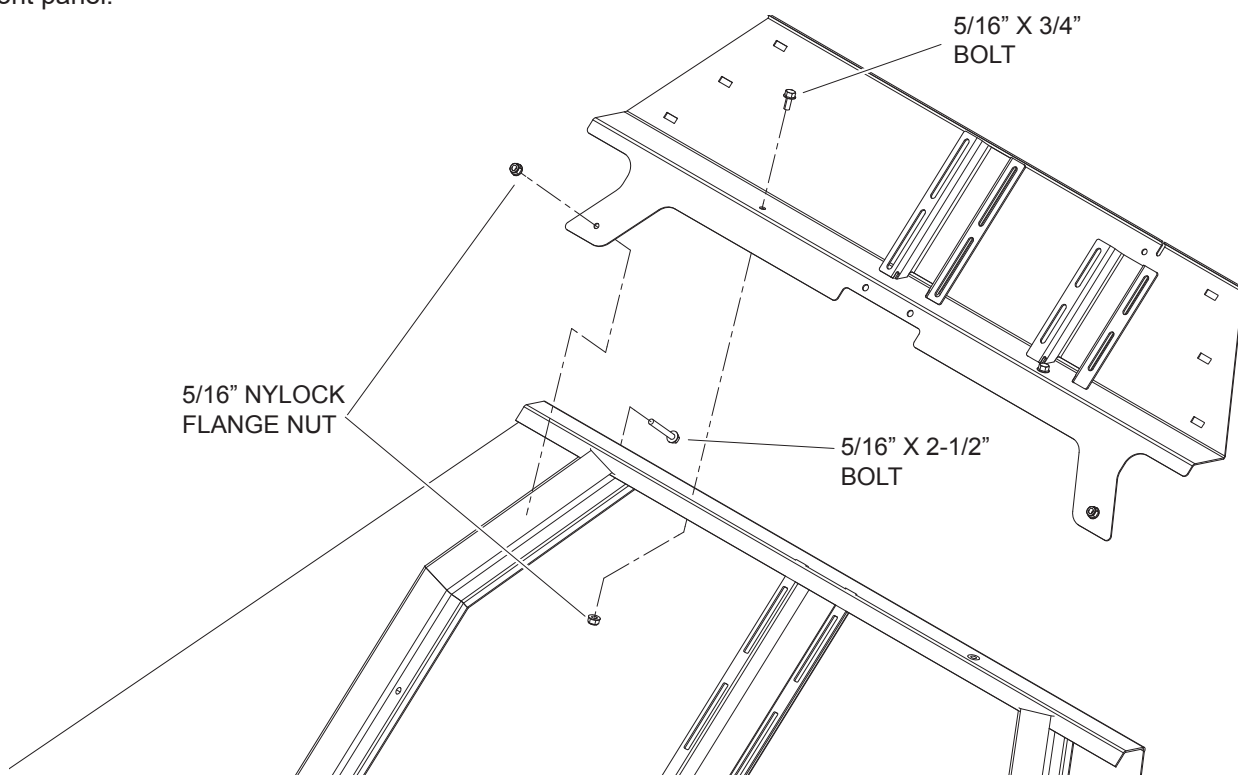


Figure 8: FRONT PANEL EXTENSION

INSTALL GPS MOUNT BRACKET

1. Identify GPS mount bracket.
2. Install GPS mount bracket to offset rail on front extension panel using four 5/16" x 3/4" carriage bolts and four 5/16" nylock flange nuts. Ensure that the base of the GPS mount bracket rests on top of the panel.

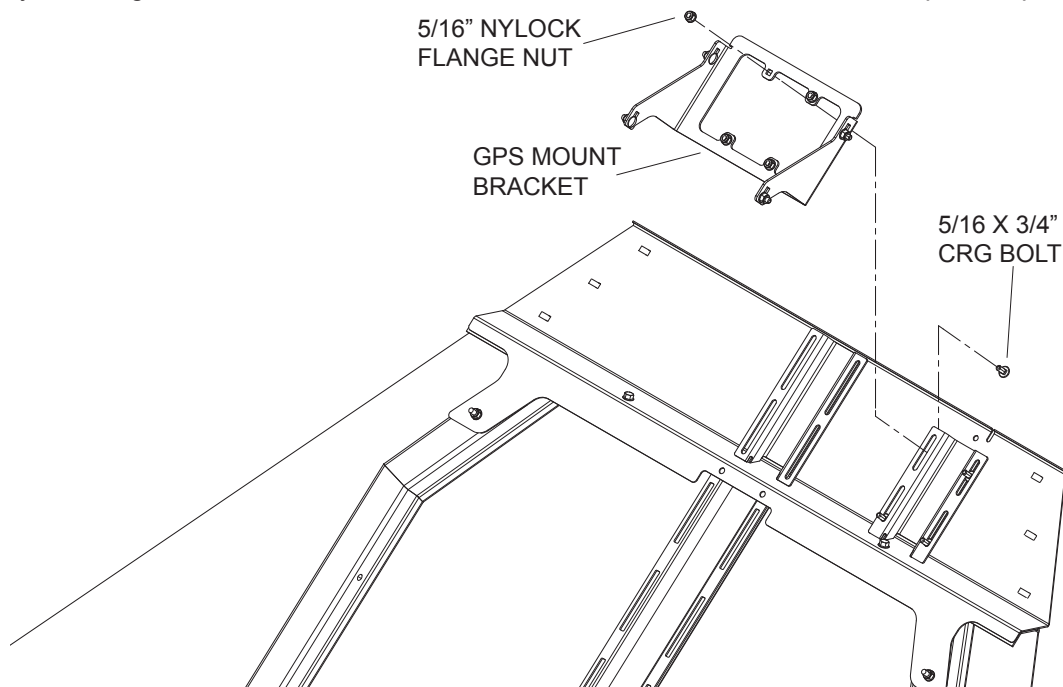


Figure 9: GPS MOUNT BRACKET

3. If RTK is equipped mount antenna relocation bracket to front extension panel using 5/16" x 3/4" bolt and 5/16" nylock flange nut. Rotate bracket to align with right edge of extension panel.

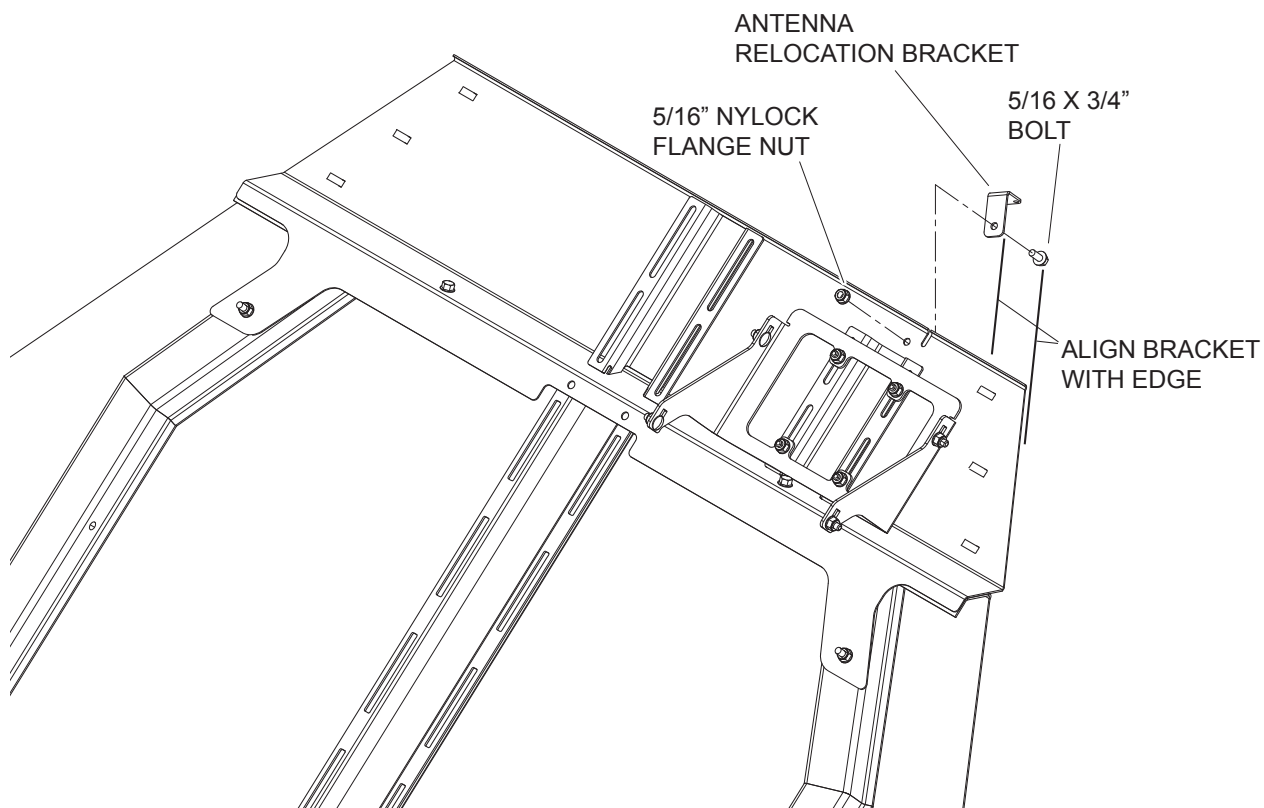


Figure 10: ANTENNA RELOCATION BRACKET

INSTALL REAR PANEL

1. Identify rear base hinge weldment.

NOTE

Assistance may be needed to hold rear base hinge weldment in place for installation

2. Use rear OEM panel as a guide to align the weldment in place by placing it as high up on the panel until the back of the panel is up against the welded seam.

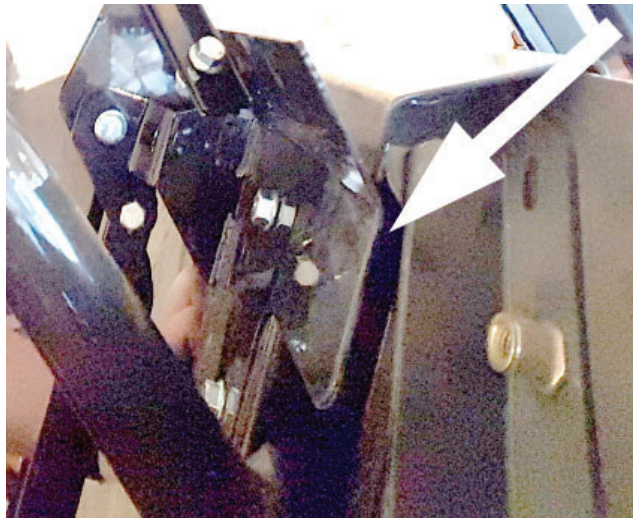
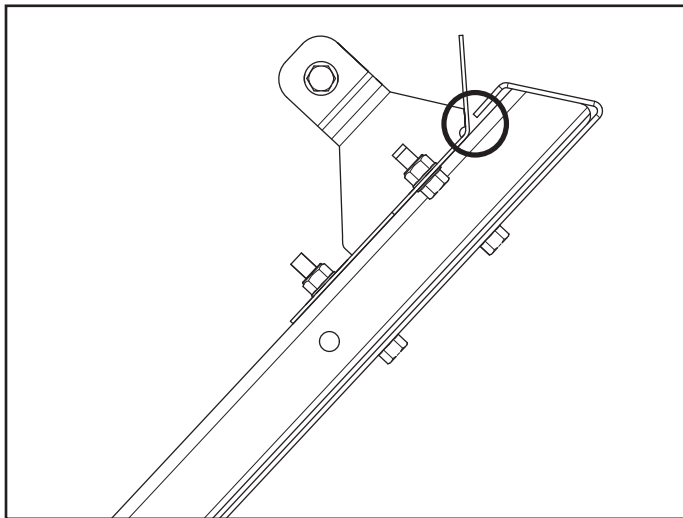


Figure 11: REAR BASE HINGE WELDMENT

NOTE

The weldment should be offset to the left 1/8" in order for the linkage arm to clear the OEM rear panel closing linkage mount.

3. Use weldment as a template to mark and drill four 11/32" thru holes as shown below.

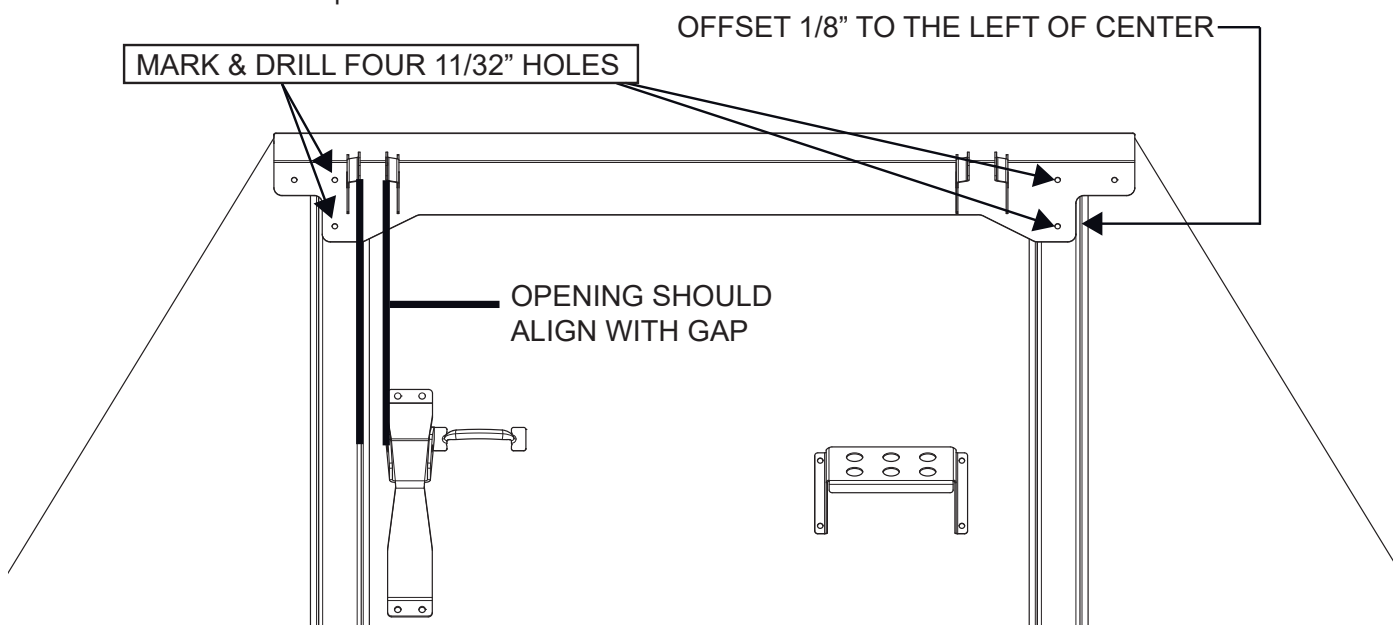


Figure 12: REAR BASE HINGE WELDMENT

INSTALL REAR PANEL

4. Install weldment using four 5/16" x 2-1/2" bolts and 5/16" nylock flange nuts.

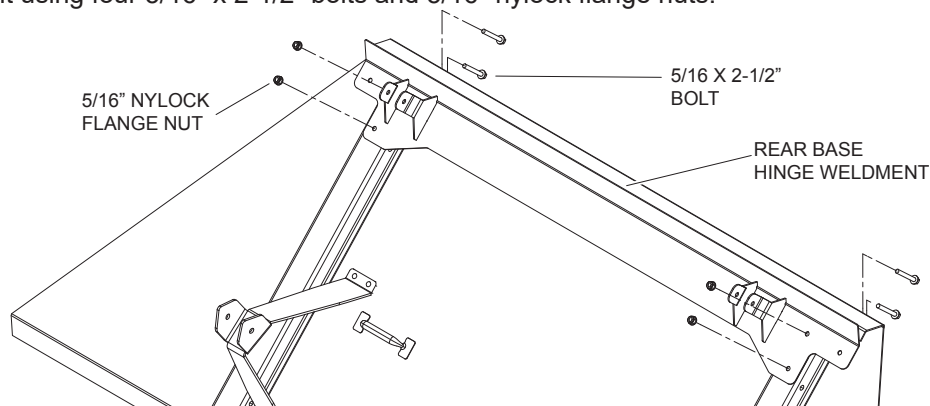


Figure 13: REAR BASE HINGE WELDMENT

5. Identify rear extension panel.

NOTE

Assistance may be needed to hold rear panel extension in place for installation

6. Insert upper inner bushing into rear extension panel sleeve as shown. Repeat on other sleeve.

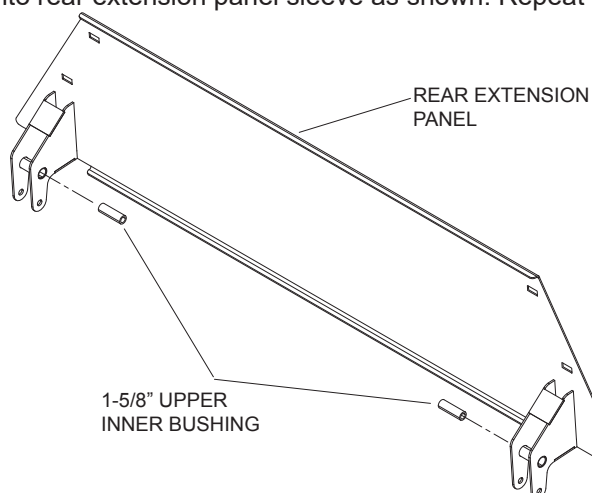


Figure 14: 1-5/8" UPPER INNER BUSHINGS / REAR EXTENSION PANEL

7. Join rear extension panel with rear base hinge weldment using two 5/16" x 2-1/2" bolts and 5/16" nylock flange nuts.

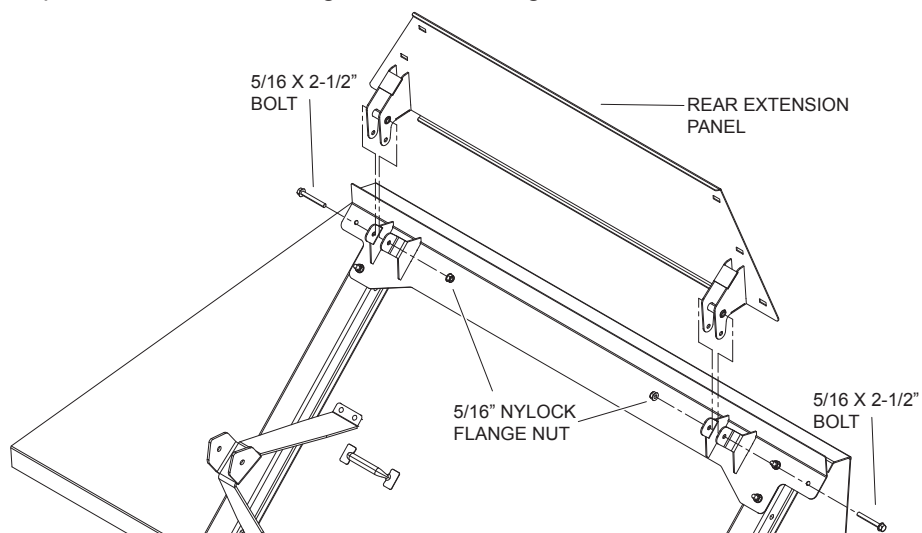


Figure 15: REAR EXTENSION PANEL ASSEMBLY

INSTALL REAR PANEL

8. Identify upper linkages.
9. Insert lower inner bushings into upper linkages as shown.

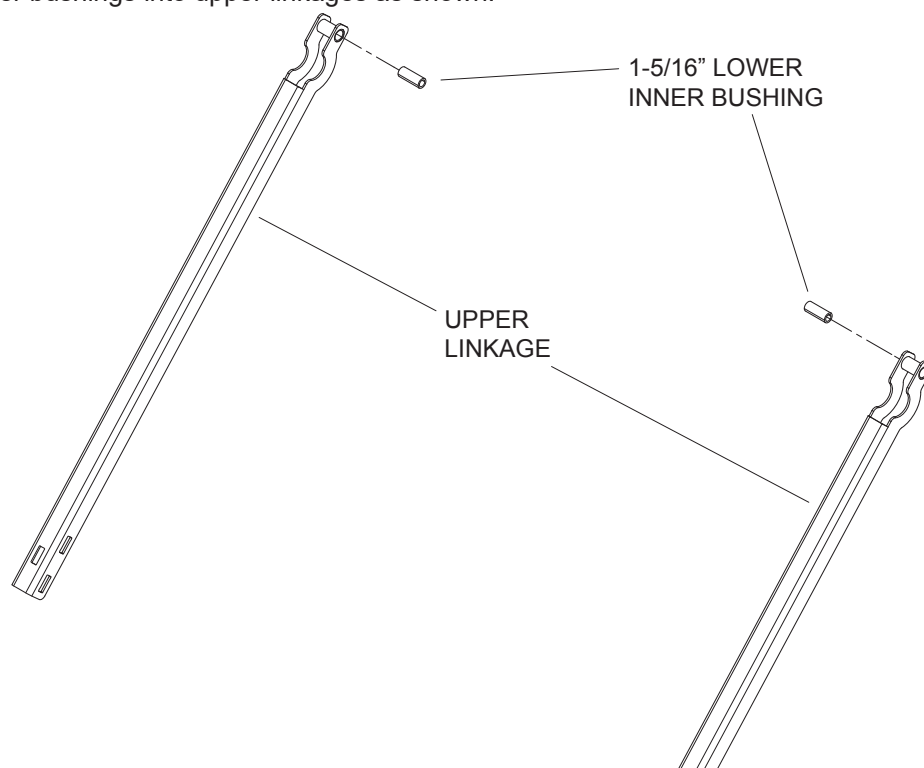


Figure 17: 1-5/16" LOWER INNER BUSHINGS / UPPER LINKAGES

10. Join both upper linkages and the rear extension panel using two 5/16" x 2" bolts and 5/16" nylock flange nuts.

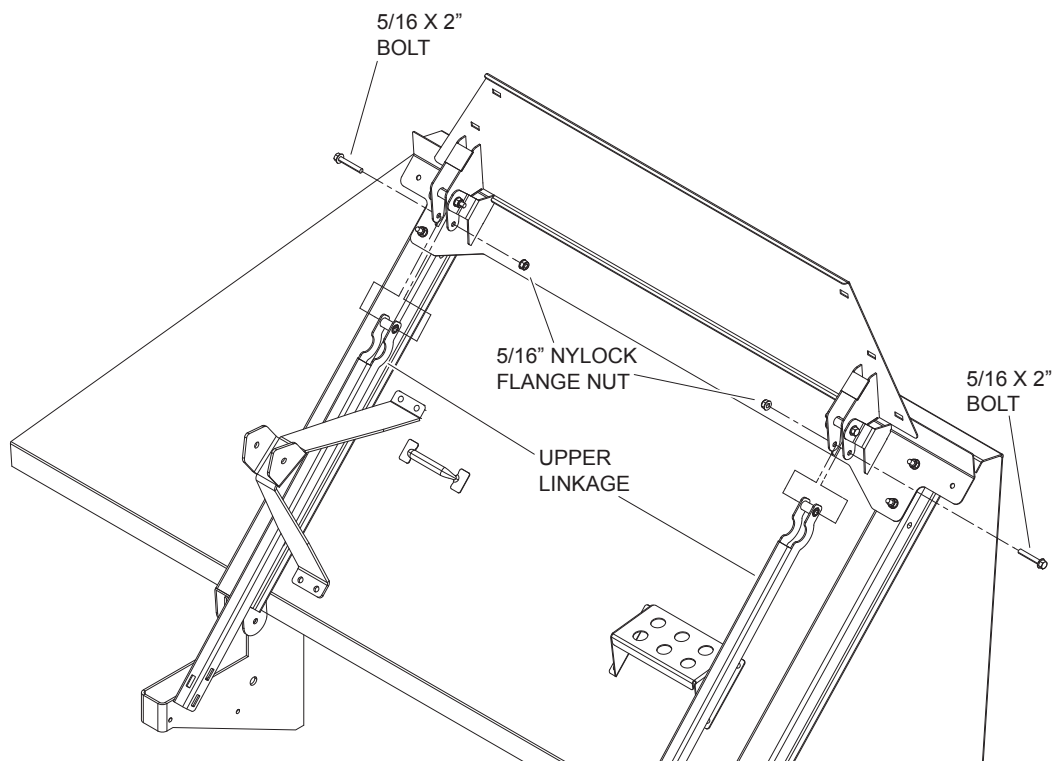


Figure 16: UPPER LINKAGES / REAR EXTENSION PANEL ASSEMBLY

INSTALL REAR PANEL

11. Identify left and right base mounts.

12. Align LH base mount to edge of OEM panel hinge as shown. Use existing hole in OEM part to locate front slot in base mounts.



Figure 19: OEM HINGE / LH BASE MOUNT

13. Use LH base mount as template to mark and drill two 5/16" holes in the OEM panel hinge as shown.

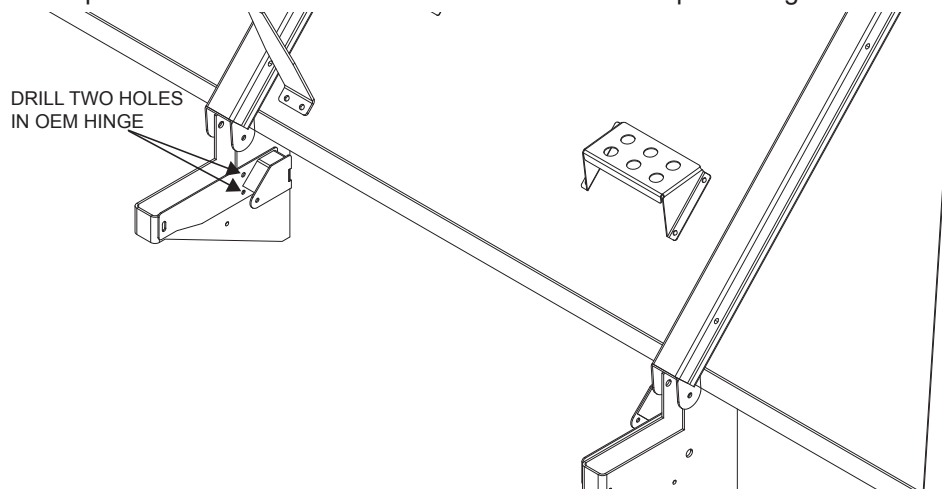


Figure 18: DRILLING LOCATIONS FOR BASE MOUNT

14. Install LH base mount using three 5/16" x 3/4" bolts and 5/16" nylock flange nuts.

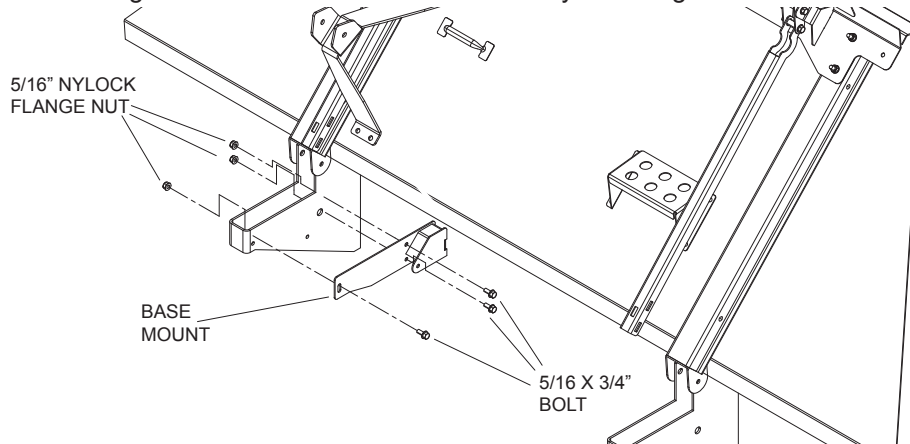


Figure 20: LH BASE MOUNT

15. Repeat steps 12-14 for RH base mount.

INSTALL REAR PANEL

16. Identify lower linkages.
17. Fasten lower linkage finger-tight to the LH upper linkage using three 5/16" x 3/4" carriage bolts and three 5/16" nylock flange nuts. Note the orientation of the lower linkage below.

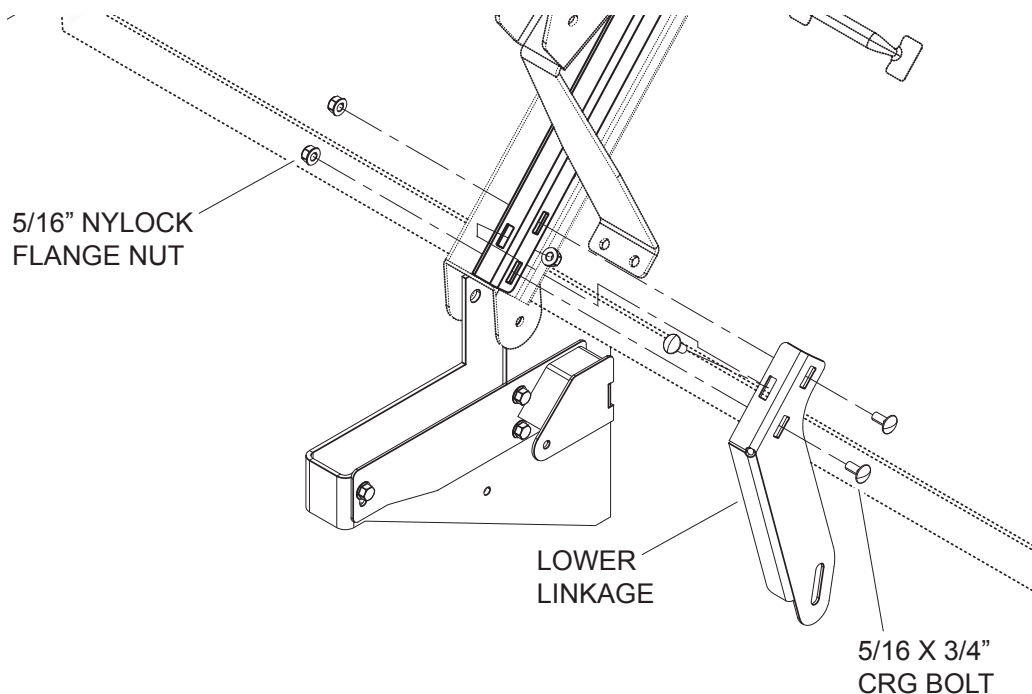


Figure 21: LH LOWER LINKAGE

18. Fasten the other lower linkage finger-tight to the RH upper linkage using three 5/16" x 3/4" carriage bolts and three 5/16" nylock flange nuts. Note the orientation of the lower linkage below.

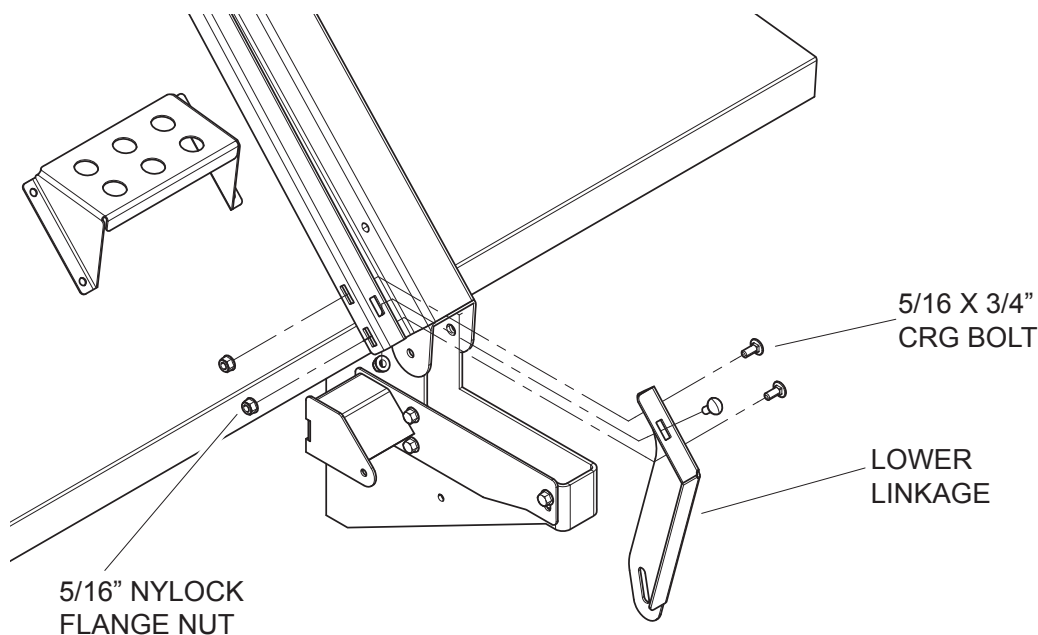


Figure 22: RH LOWER LINKAGE

INSTALL REAR PANEL

19. Ensure that the rear extension panel is in the open and vertical position by pulling down on the linkage arms.

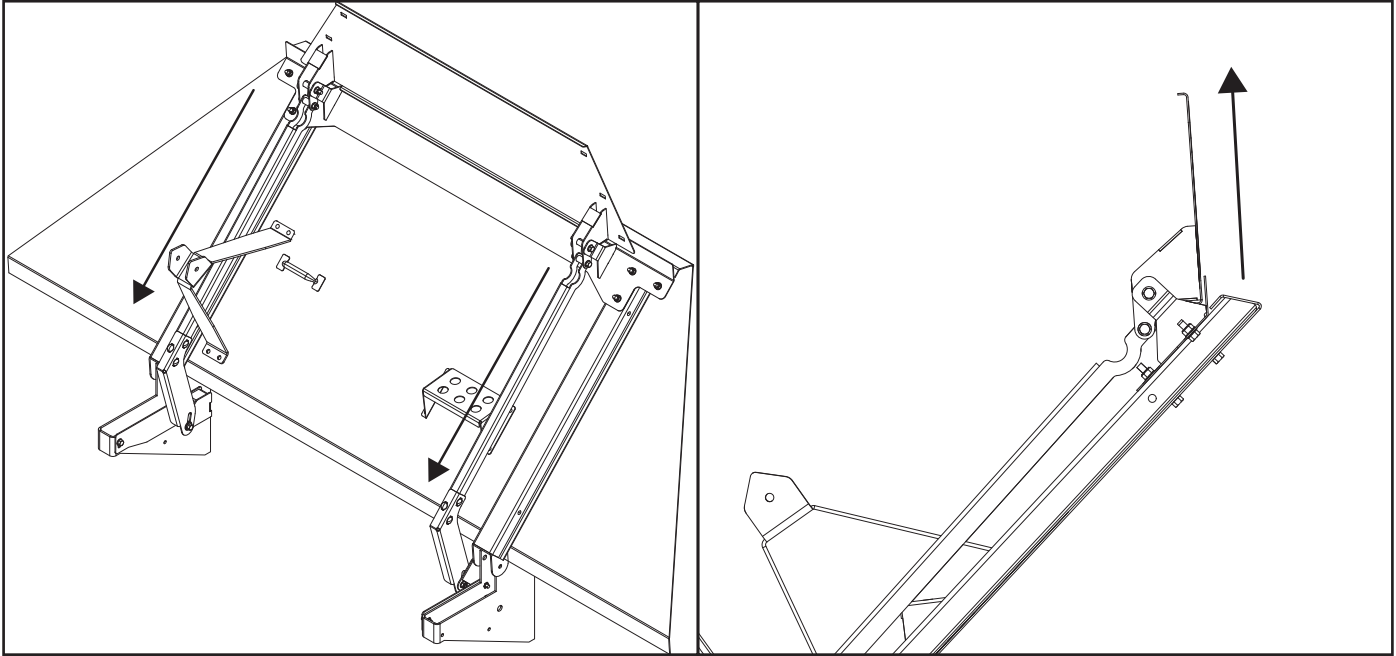


Figure 23: REAR EXTENSION PANEL ASSEMBLY

20. Use a 5/16" x 3/4" shoulder bolt, a 3/8" nylon washer (placed between the two brackets) and a 5/16" nylock flange nut to locate lower linkage to base mount.

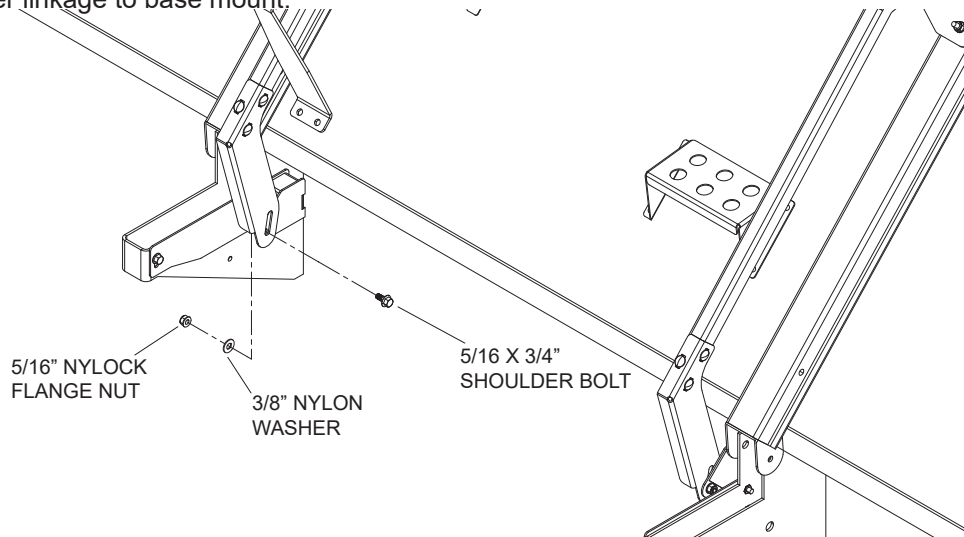


Figure 24: LOWER LINKAGE SHOULDER BOLT

NOTE

In this position the bolt should be in the lowest position in the slotted hole.

21. Tighten nut so there is slight movement in the slotted hole. Do not overtighten nut, linkage must be allowed to move in slot.
22. Tighten the three 5/16" x 3/4" carriage bolts in the lower linkage and upper linkage joint.
23. Repeat for both linkages.
24. The rear extension panel should be fully extended and there should be no up and down slack in the linkages when installed.

INSTALL CORNER CANVAS MOUNTS

1. Identify left and right rear corner canvas mount plates.
2. Fasten rear corner canvas mount plates to the rear extension panel by finger-tightening six 5/16" x 3/4" carriage bolts and six 5/16" nylock flange nuts in the center of the slot.

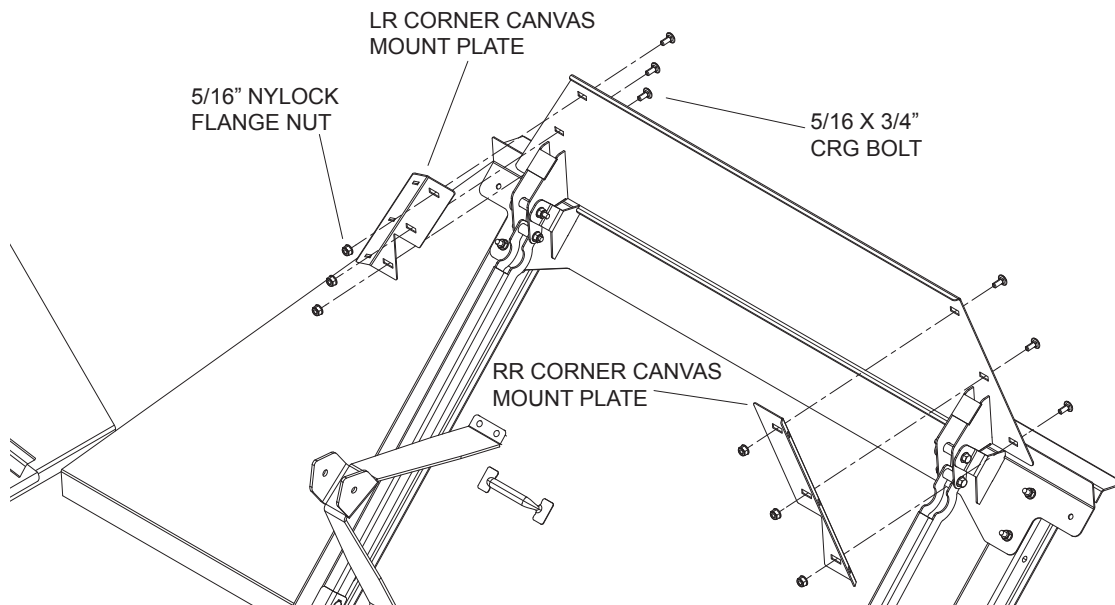


Figure 25: REAR CORNER CANVAS MOUNT PLATES

3. Identify left and right front corner canvas mount plates.
4. Fasten front corner canvas mount plates to the front extension panel by finger-tightening six 5/16" x 3/4" carriage bolts and six 5/16" nylock flange nuts in the center of the slot.

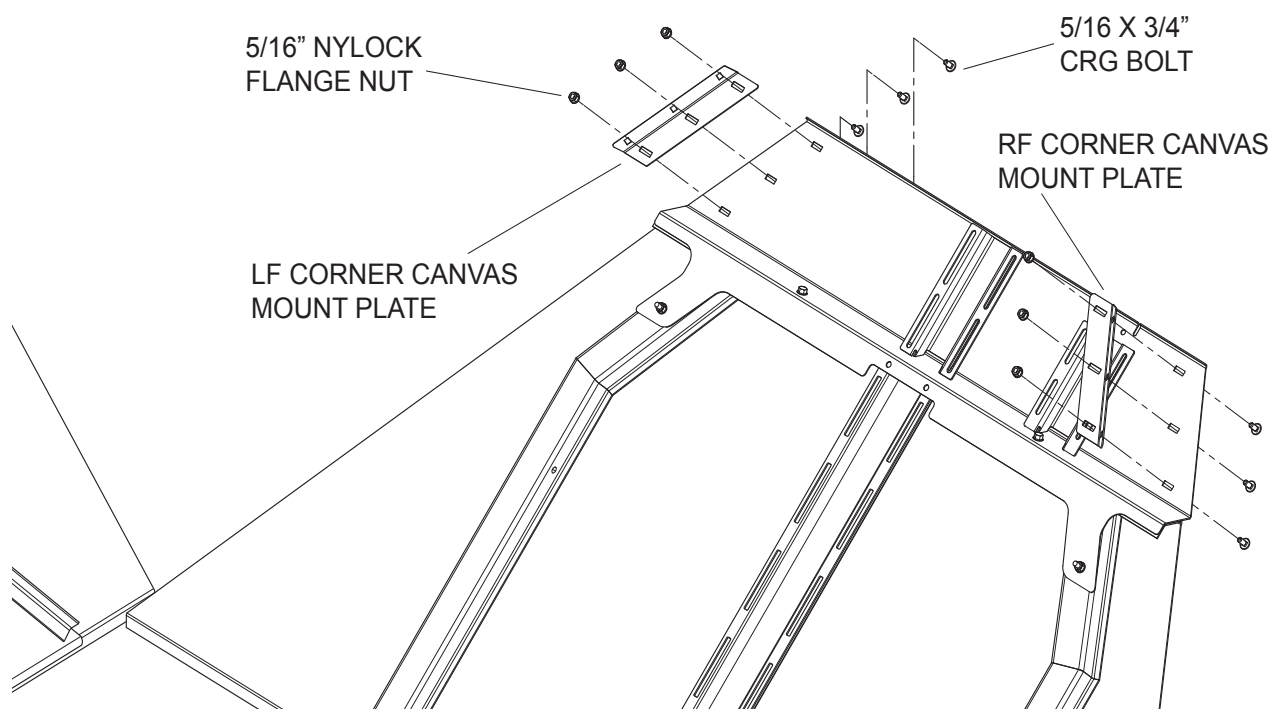


Figure 26: FRONT CORNER CANVAS MOUNT PLATES

INSTALL CANVAS

NOTE

To get proper tension of canvas panels, some adjustment of OEM panels may be required.

Installation of the left front canvas:

1. Identify the left front canvas using the tag on the canvas (part number 34706-00).
2. The webbing should be facing in towards the grain tank and the canvas should be placed over the OEM rubber corner.
3. Start by installing the canvas to the front panel. Install the canvas on the front panel mount plates using three 5/16" x 3/4" carriage bolts, flange nuts and the front sandwich strip. The lower hole on the front will attach using the 5/16" x 2-1/2" bolt securing the front panel assembled in Figure 8.
4. Install the canvas to the side mount by sliding it under the rod in the mount and then attach using four 5/16 x 7/8" button head bolts, washers and flange nuts.

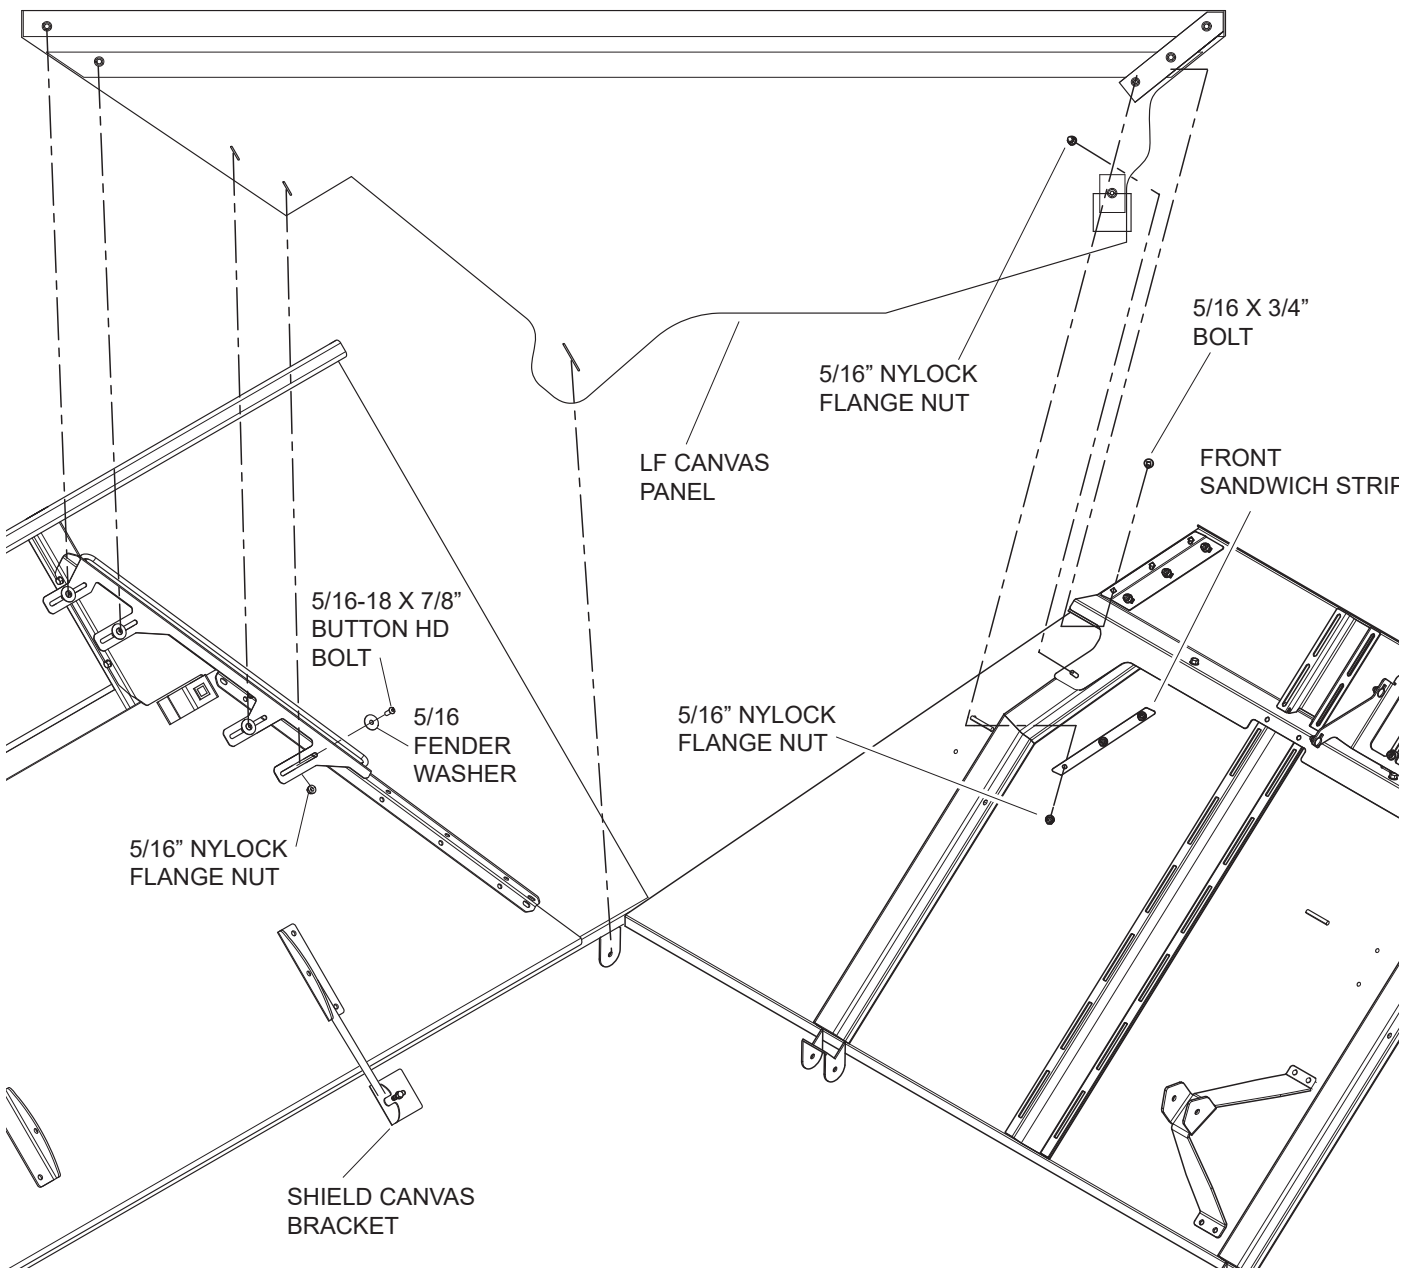


Figure 27: LF CANVAS PANEL ASSEMBLY

INSTALL CANVAS

5. Adjust the tension in the canvas panel using the front and side adjustment slots and pull canvas taut, then release tension so that canvas has enough slack to accommodate a full hopper before tightening the bolts.
6. Attach the slot in the lower end of the canvas to the hole in the bottom of the OEM rubber corner. Secure with one 5/16" X 3/4" bolt, washer and flange nut.
7. Identify the right front canvas (34705-00), left rear canvas (34708-00), and right rear canvas (34707-00) using the tag on the canvas and repeat steps 2-6.
8. Install canvas shield brackets on the right rear and left front OEM side panel lower cable mounts. It is not required in all four corners. Align the slot in the shield bracket with pin securing the lower end of the cable, being sure to push it in as far as possible. Using the bracket as a template mark and drill a 9/32" hole. Secure the shield with a 5/16" x 1" thread rolling screw. Failure to install these shields may cause damage to the canvas when opening and closing.

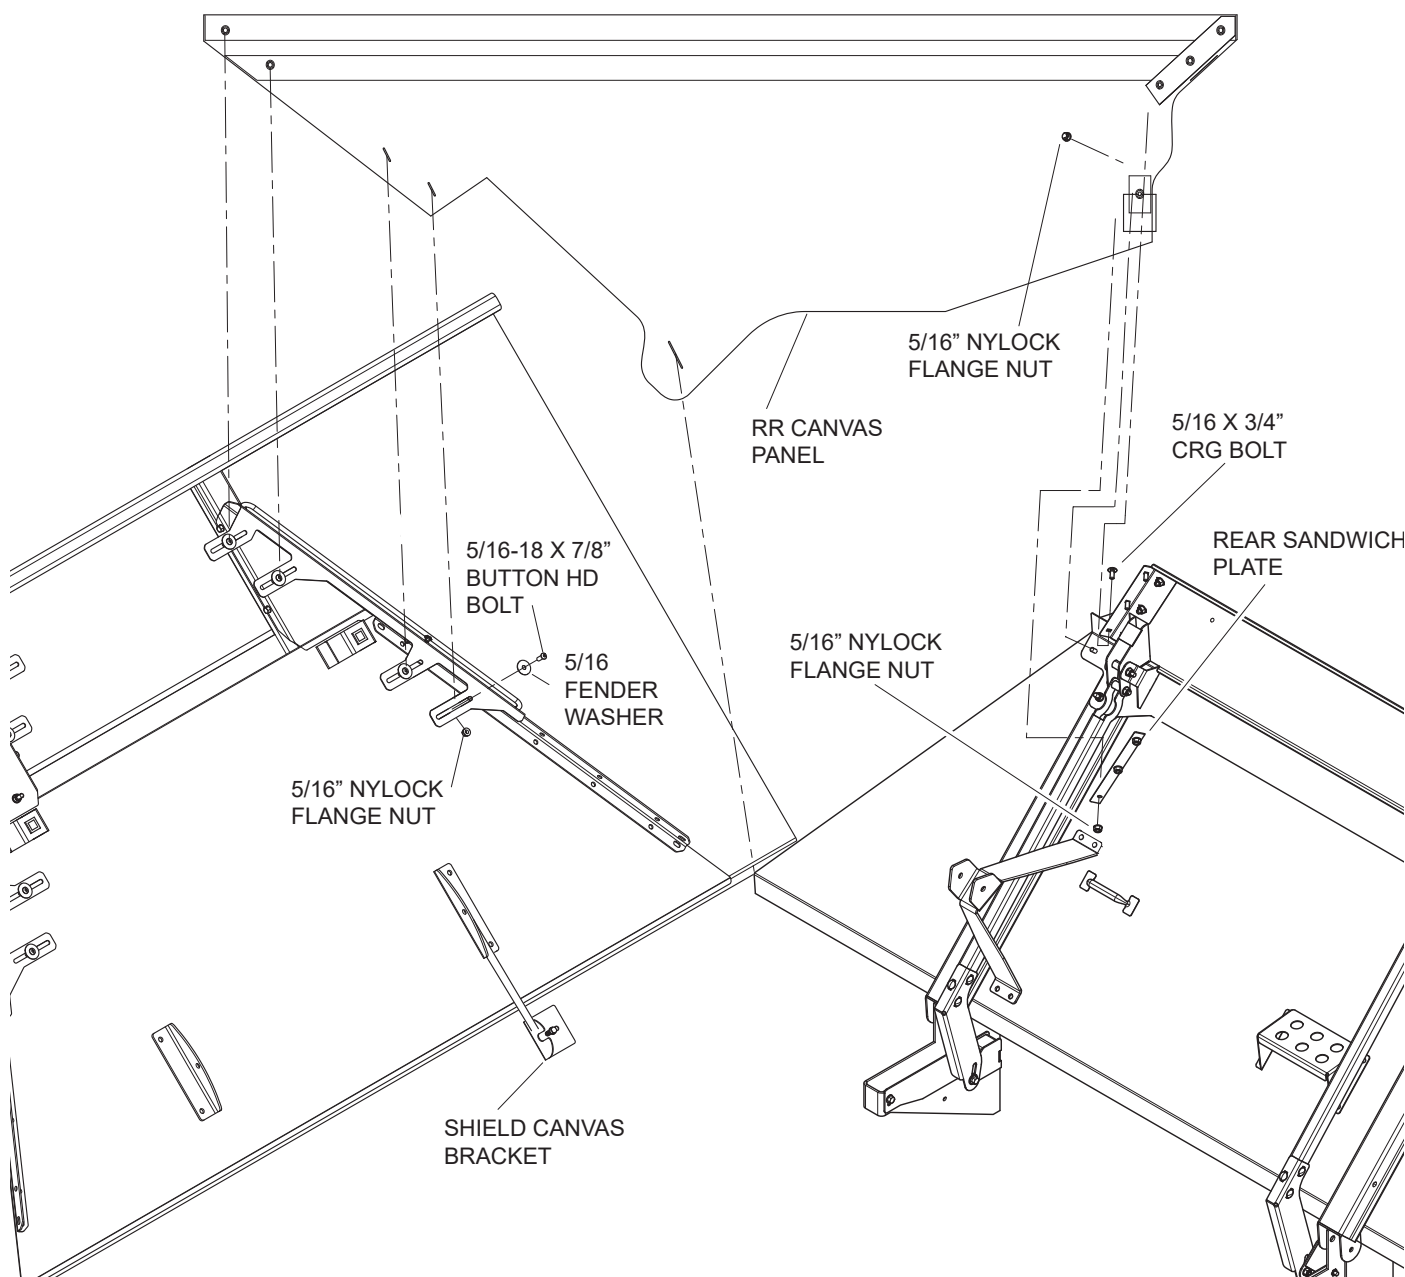
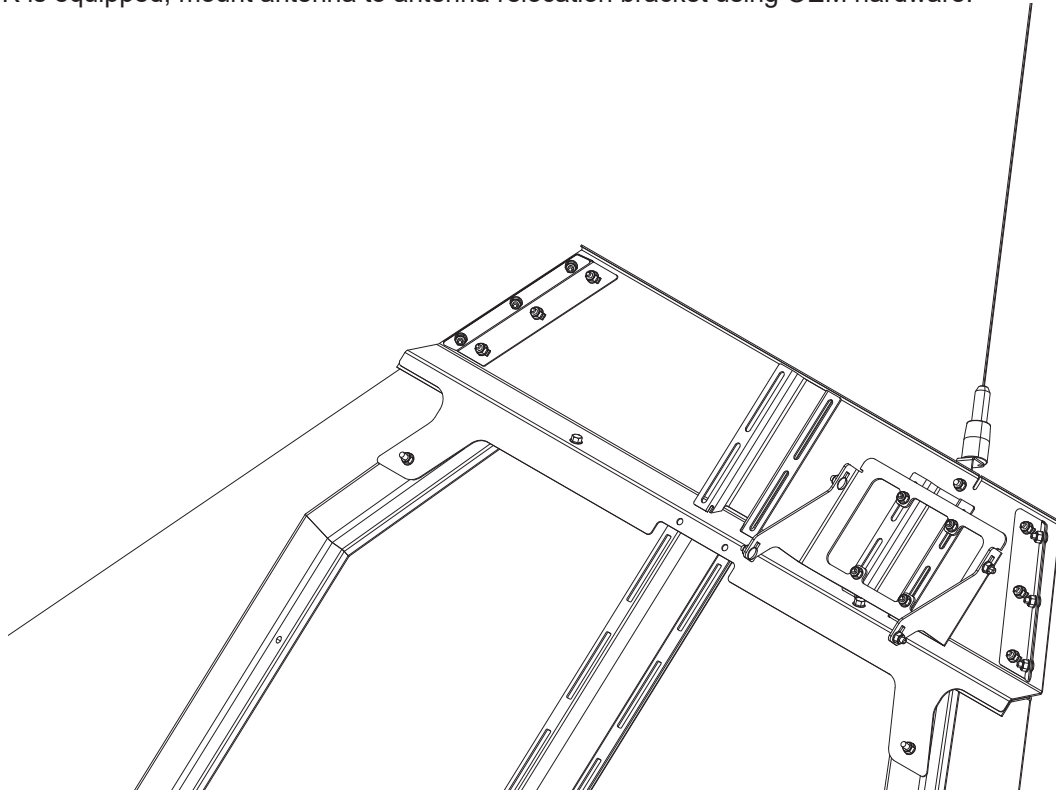



Figure 28: RR CANVAS PANEL ASSEMBLY

RELOCATE ANTENNA / GPS

1. If RTK is equipped, mount antenna to antenna relocation bracket using OEM hardware.

*Figure 29: ANTENNA RELOCATION*

2. Mount GPS to GPS mount bracket. GPS should be level to the ground and as low as possible within the bracket.

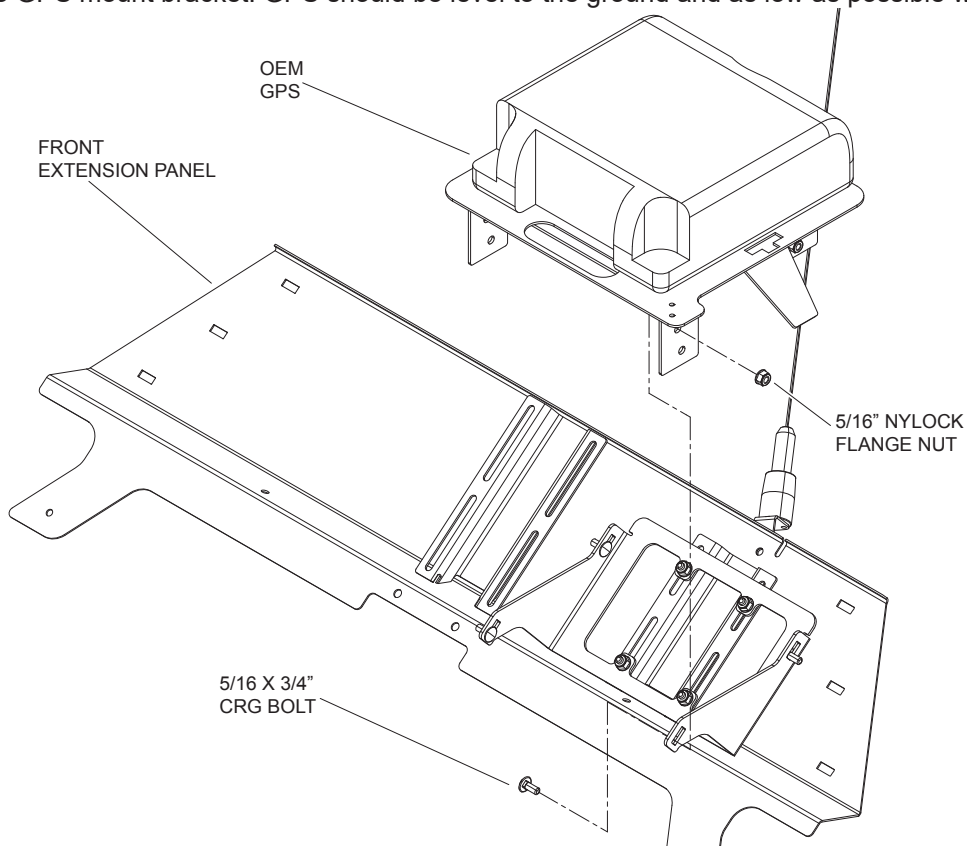*Figure 30: GPS RELOCATION*

RELOCATE ANTENNA / GPS

- GPS settings should be updated to reflect GPS offset of 11.5" to the right of center.


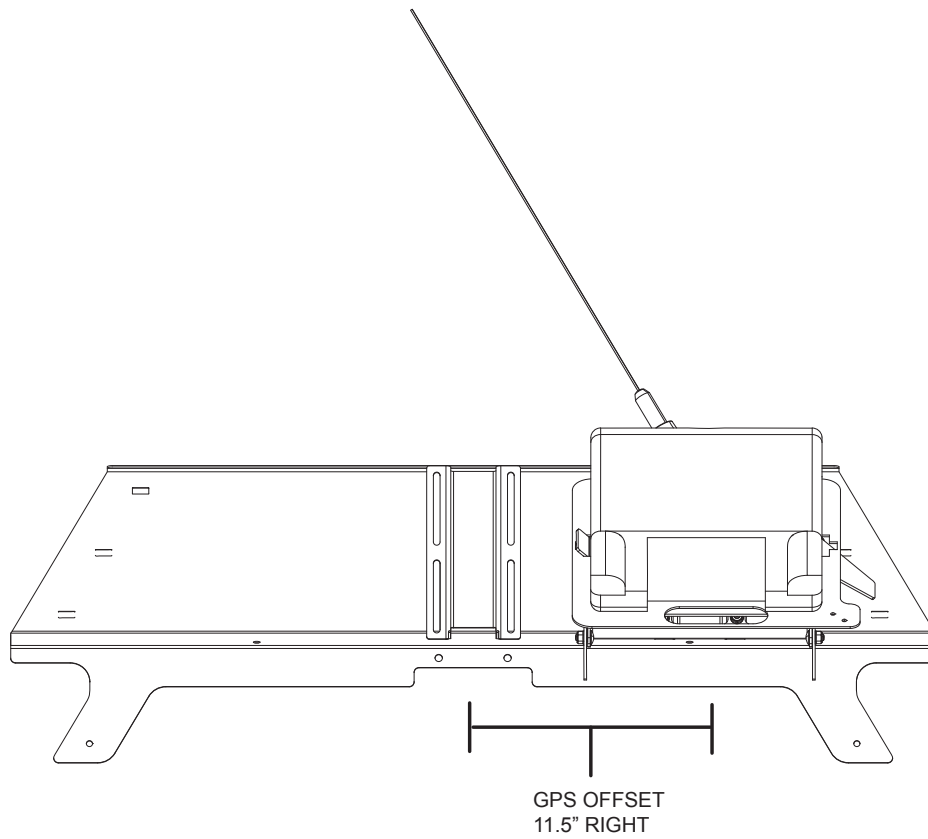


Figure 31: GPS OFFSET

PARTS DIAGRAM

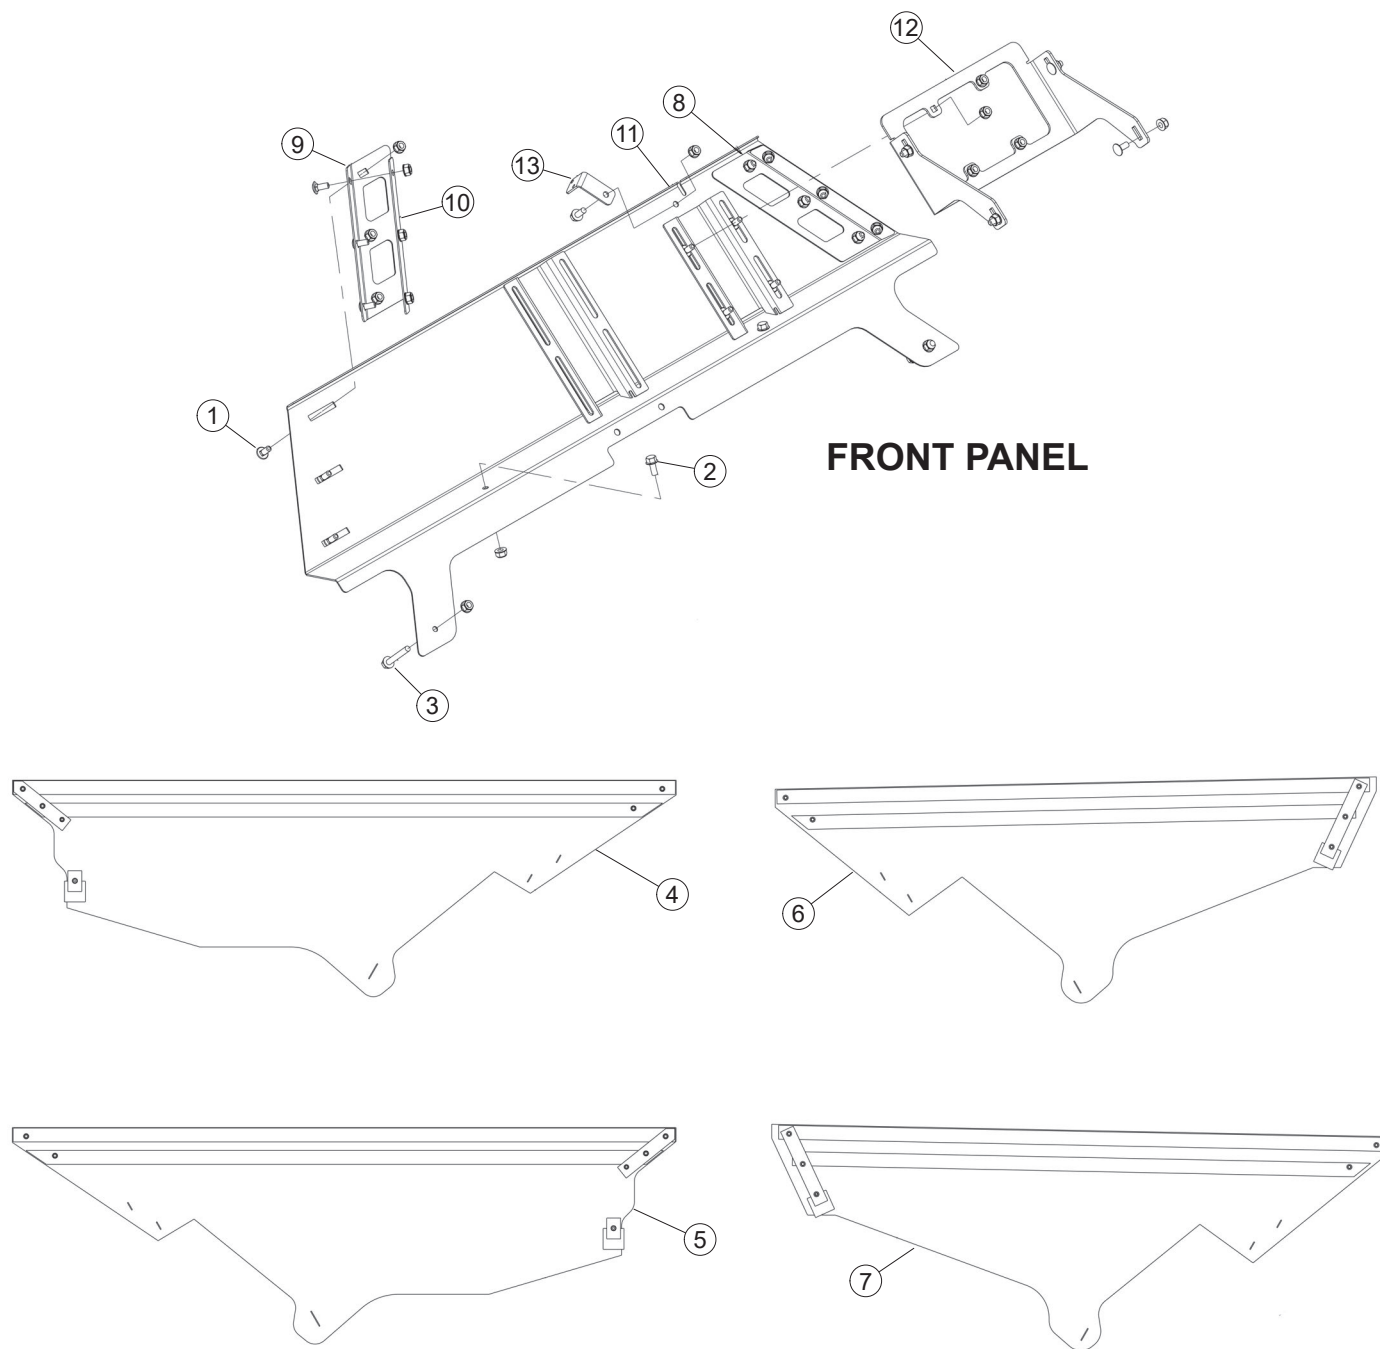


CIH 7240/7250/8240/8250/9240/9250 Cabfold Front Panel Extension (52330)

PARTS LIST

BIG TOP CABFOLD FRONT PANEL EXTENSION - CIH 7240/8240/9240 (52330)			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	0103-0909-00	BOLT, 5/16-18 X 3/4 CRG SN GR5	46
2	15117-00	BOLT, 5/16 X 3/4 FLANGE NC	11
3	15135-00	BOLT, 5/16 X 2-1/4 FLANGE NC	8
4	34705-00	PANEL, CANVAS, CIH, CF, 410BU, RF	1
5	34706-00	PANEL, CANVAS, CIH, CF, 410BU, LF	1
6	34707-00	PANEL, CANVAS, CIH, CF, 410BU, RR	1
7	34708-00	PANEL, CANVAS, CIH, CF, 410BU, LR	1
8	50838-12	PLATE, RF CORNER CANVAS MOUNT	1
9	50839-12	PLATE, LF CORNER CANVAS MOUNT	1
10	50840-12	STRIP, CANVAS MOUNT MOUNT SANDWICH	2
11	50976-00	ASSEMBLY, FRONT EXTENSION PANEL	1
12	51151-12	BRACKET, BASE GPS MOUNT	1
13	51153-12	BRACKET, ANTENNA RELOCATION	1

PARTS DIAGRAM

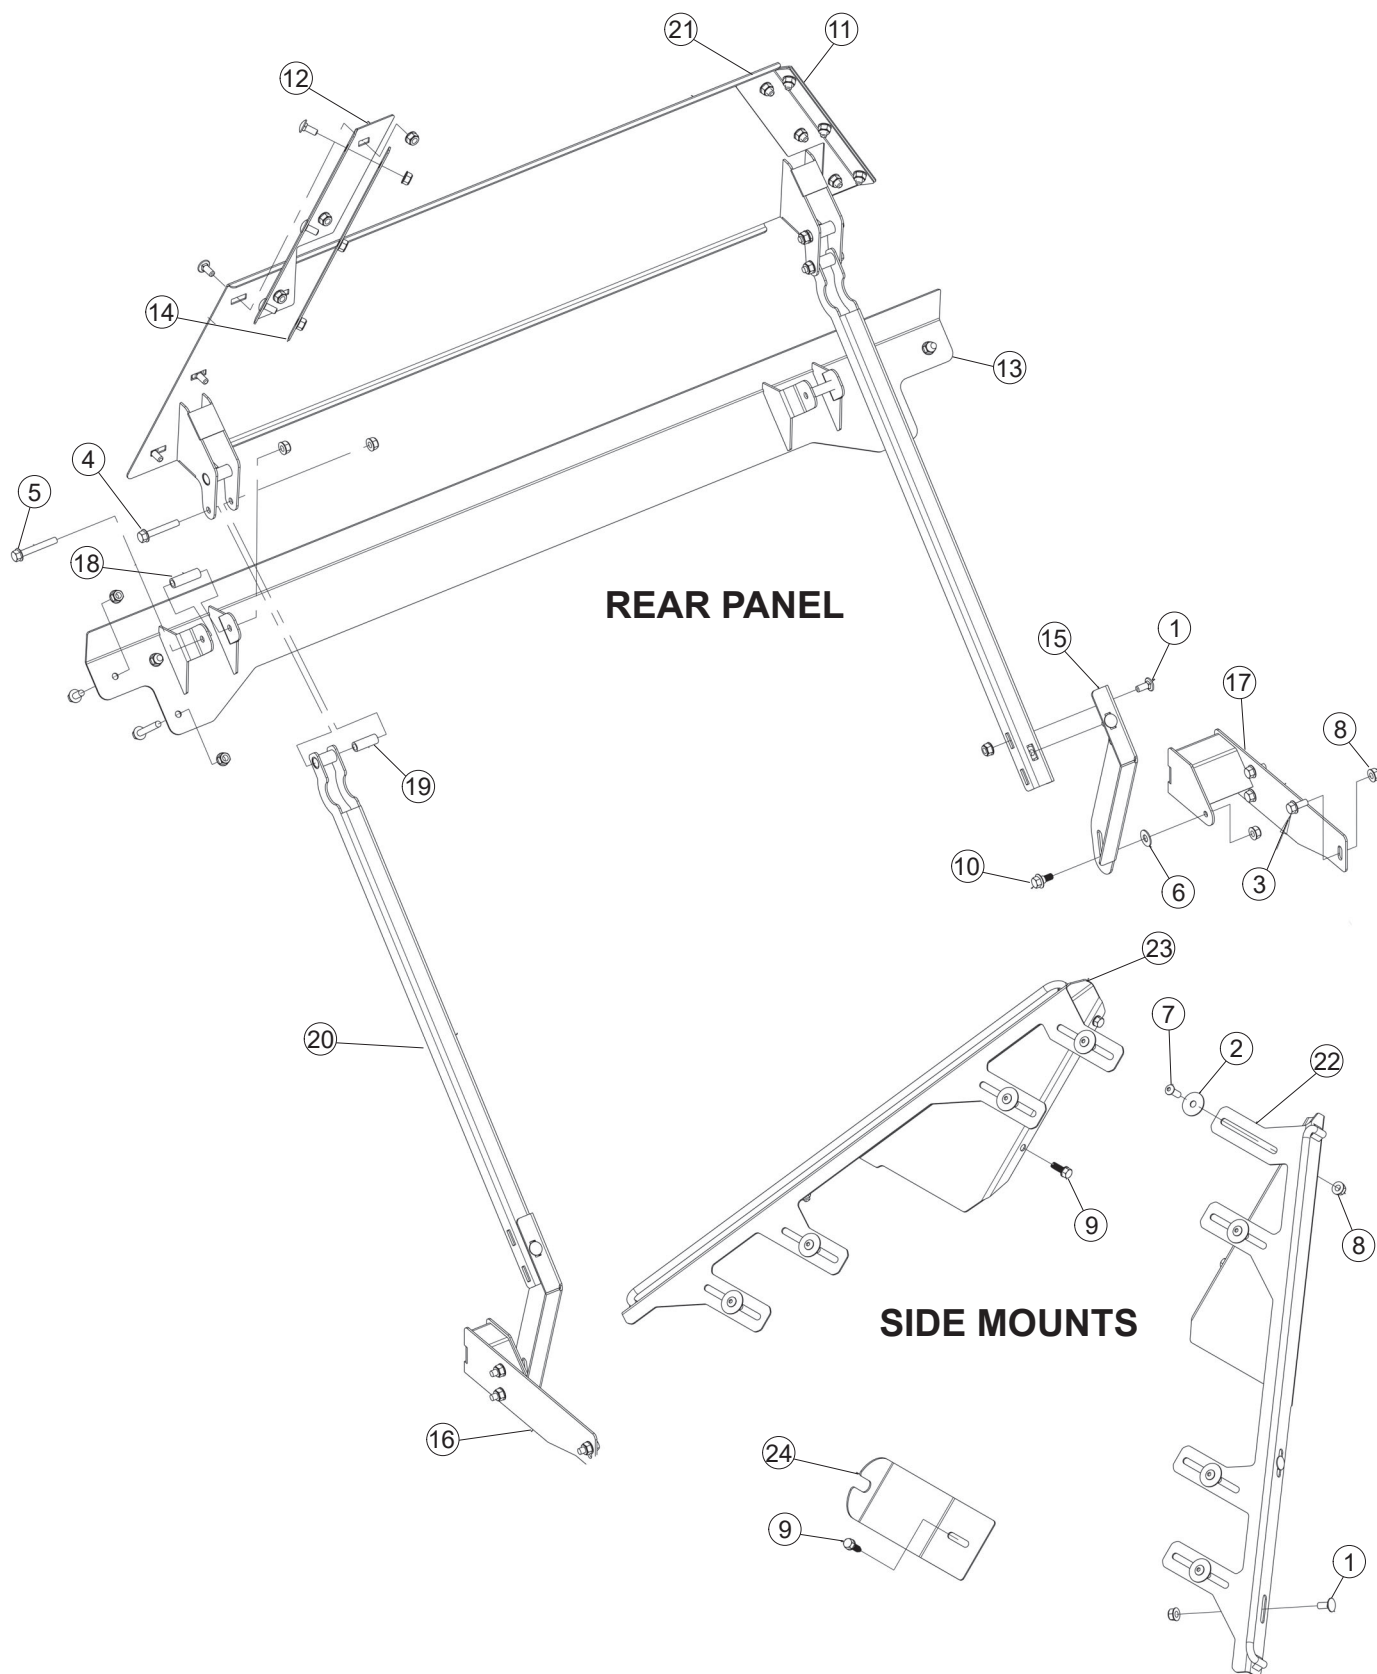

CIH 7240/7250/8240/8250/9240/9250 Cabfold Rear Panel Extension (52330)

PARTS LIST

BIG TOP CABFOLD REAR PANEL EXTENSION - CIH 7240/7250/8240/8250/9240/9250 (52330)			
ITEM	PART NUMBER	DESCRIPTION	QTY
1	0103-0909-00	BOLT, 5/16-18 X 3/4 CRG SN GR5	46
2	15040	WASHER, 5/16" FENDER ZP-32PCS/LB	24
3	15117-00	BOLT, 5/16 X 3/4 FLANGE NC	11
4	15133-00	BOLT, 5/16 X 2 FLANGE NC	2
5	15135-00	BOLT, 5/16 X 2-1/4 FLANGE NC	8
6	15509	WASHER, FLT 3/8" NYLON .062 TH	2
7	15703-00	BOLT, 5/16-18 X 7/8" BUTTON HD SKT.	20
8	15904-00	NUT, 5/16-18 NYLOCK-FLANGE	89
9	15907-00	SCREW, 5/16-18 X 1 IN ZP THREAD ROLLING	10
10	15908-00	BOLT, 5/16-18 X 3/4 ZP FLANGE 0.250 SHOULDER	2
11	50842-12	PLATE, RR CORNER CANVAS MOUNT	1
12	50843-12	PLATE, LR CORNER CANVAS MOUNT	1
13	50846-12	WELDMENT, REAR BASE HINGE	1
14	50851-12	PLATE, REAR CANVAS SANDWICH	2
15	50852-12	WELD, BRACKET LOWER ADJUSTMENT	2
16	50949-12	WELDMENT, L BASE MOUNT	1
17	50951-12	WELDMENT, R BASE MOUNT	1
18	50956-00	BUSHING, 1/2" UPPER INNER	2
19	50958-00	BUSHING, 1/2" LOWER INNER	2
20	50974-12	WELDMENT, UPPER BAR ADJUSTMENT CHANNEL	2
21	50975-00	ASSEMBLY, REAR EXTENSION PANEL	1
22	52257-12	WELDMENT,MOUNT,CANVAS,EXTENDED,RH	2
23	52258-12	WELDMENT,MOUNT,CANVAS,EXTENDED,LH	2
24	52262-12	BRACKET,CANVAS,SHIELD	2



Crary Industries
237 12th St. NW ~ P.O. Box 849
West Fargo, ND 58078-0749
(701)282-5520 ~ FAX: (701)282-9522
www.cray.com



Manufactured in the United
States of America by Crary
Industries