TAXI PROCEDURES FOR ARRIVING AIRCRAFT -
INDEX CHART

BUDAPEST/LISZT FERENC

VAR 5.0° E
(2020)
ANNUAL RATE
OF CHANGE 0.1° E

CHANGE: aircaft stands on APRON AG

CARGO APRON

TERMINAL 2

ARP

CONTROL TOWER

APRON AL

MAINTENANCE APRON AA

APRON AG

TERMINAL 1

RWY 13L/31R

RWY 13R/31L

SCALE 1 : 25 000

50	0	200	400	600	800	1000 m

0	1000	2000	3000 feet

LEGEND	
Apron Entry and Exit point	P1
Taxi routing after landing 13R	←
Taxi routing after landing 31L/R	←
Runway holding point	D ⊞
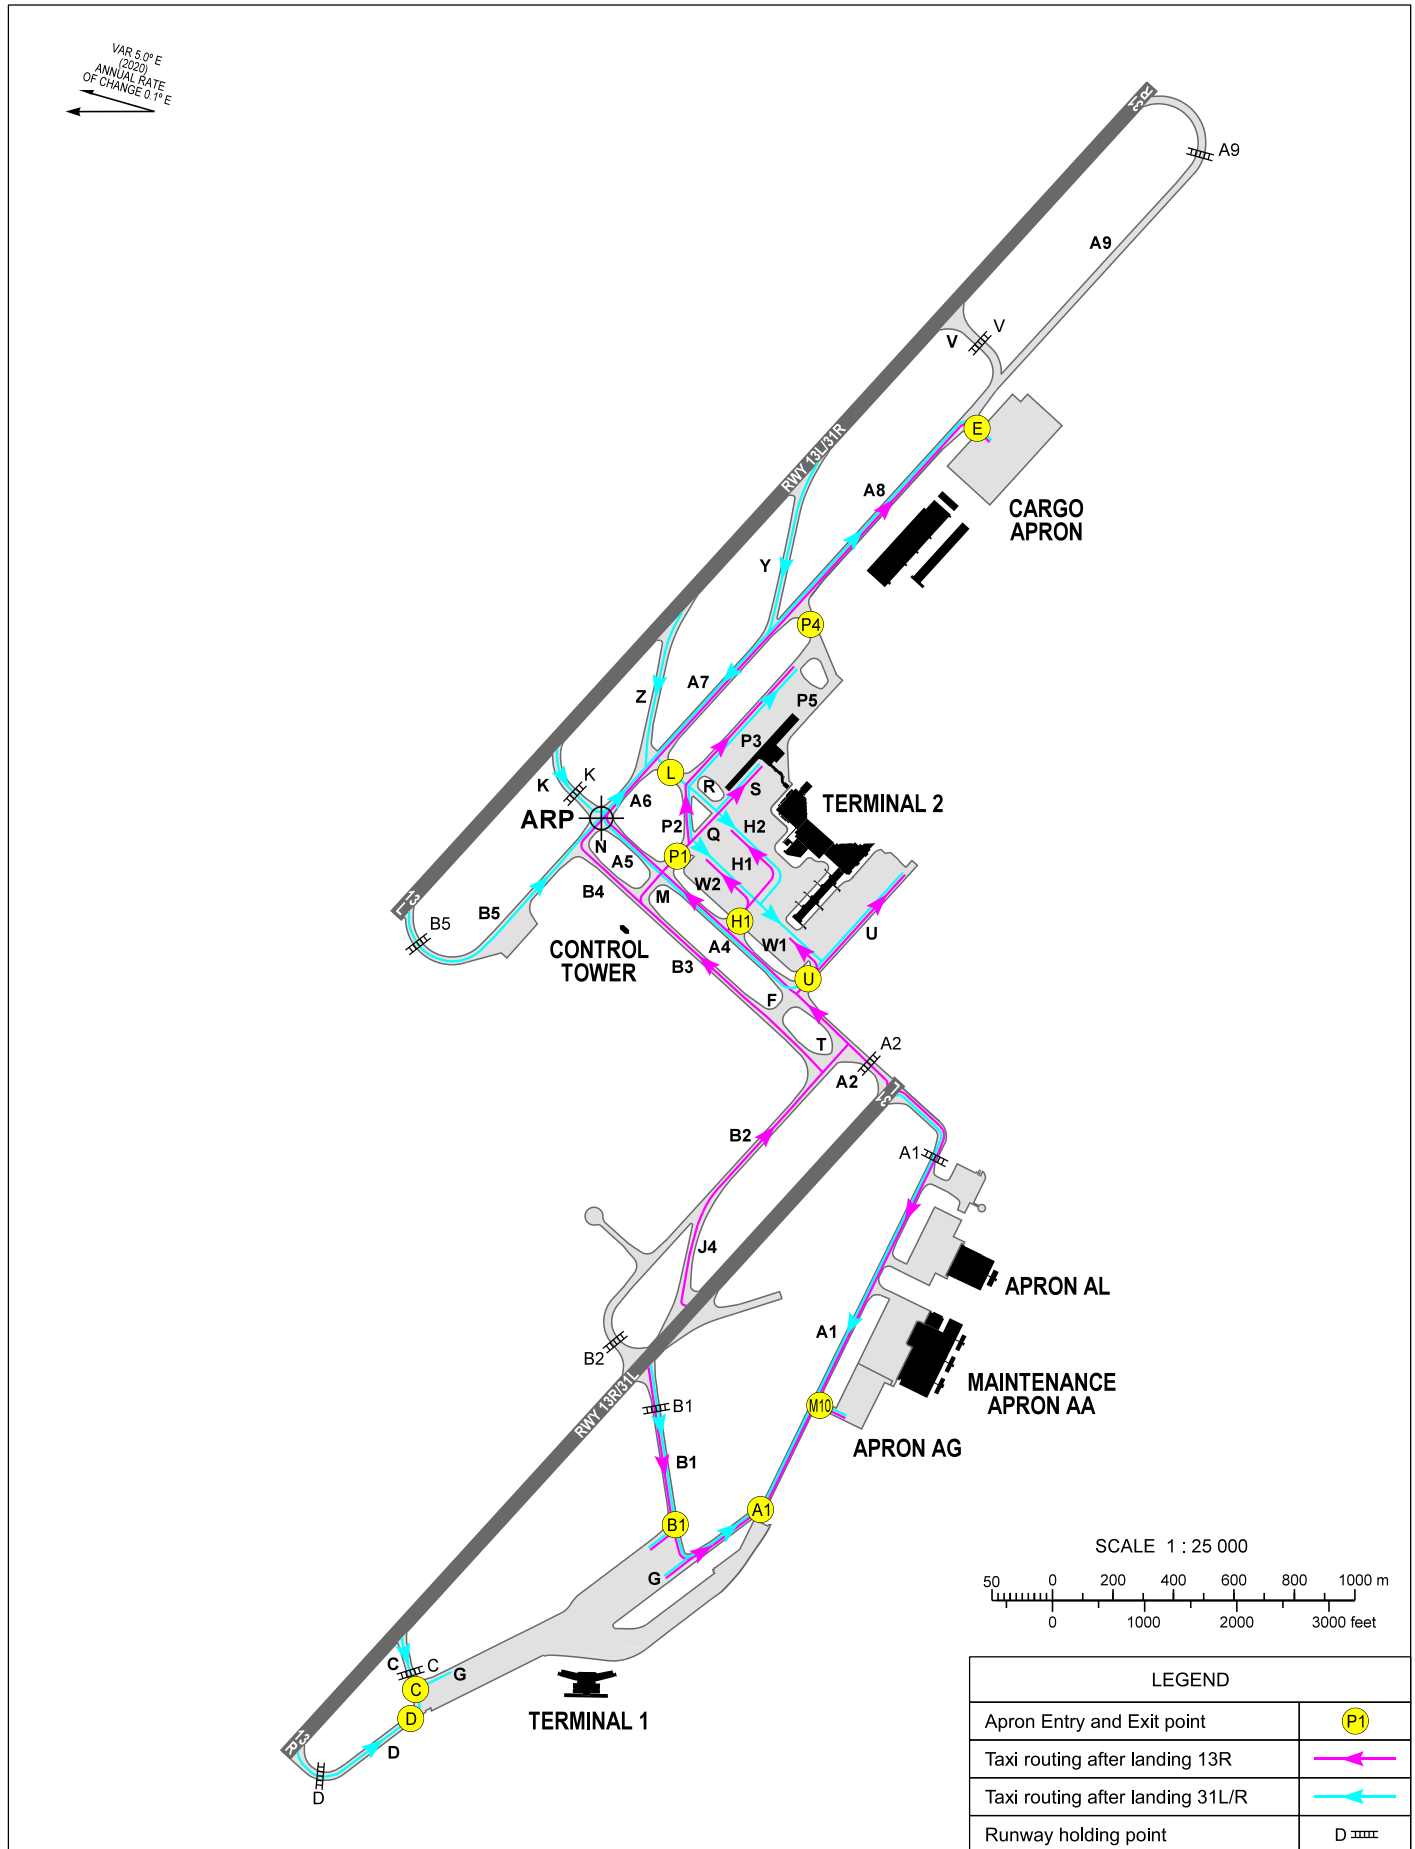
AD 2 LIST OF AVAILABLE TAXI CLEARANCES FOR ARRIVING AIRCRAFT ISSUED BY ATC

ARRIVALS ON RWY	EXIT POINTS	TAXI ROUTE ON MANOEUVRING AREA (TWY SEGMENTS) TO BE FOLLOWED	STAND/GATE NUMBERS	TAXI ROUTE ON APRON (TAXILANE OR TWY SEGMENTS) TO BE FOLLOWED	TERMINAL	REMARKS
13R	A1	A1	R101-R108 G150-G172 R110-R117A	G	1	Code D, E, F exit B1 only
	B1	B1				
	M10	A1/B1	G180-G192	APRON taxilane	APRON AG	Max. Code B
	U	A2-A3-U or B2/J4-T-A3-U	31-36L	U	2	
			R220-R223	U-W1		Max. Code C
	H1	A2-A3-A4-H1 or B2/J4-T-A3-A4-H1	37-39L	H1		*Code D exit P1 or L only
			42 R210-R212A*	H1-H2		
			R224-R227	H1-W2		
	P1	A2-A3-A4-P1 or B2/J4-B3-M-P1 B2/J4-T-A3-A4-P1**	R270-R279*	P1-P2-P3		*Code D, E exit P4 only; **Due to traffic reason
			43-45	P1-Q-S		
	E	A2-A3-A4-A5-A6-A7-A8* or B2/J4-B3-B4-N-A6-A7-A8 B2/J4-T-A3-A4-A5-A6-A7-A8**	C1, C1L/R, C2, C2L/R, C3, C3L/R, C4, C4L/R	E	CARGO APRON	*Max. Code E; **Max. Code E due to traffic reason
31R	U	Y-A7-(Z)-A6-A5-A4-U	31-36L	U	2	L-W after coordination; Code D, E exit U only
	L	Y-A7-L or Z-L	37-39L 42-43 R210-R212A*	L-R-H2/H1		Code E exit H1 only; *Code D exit P1 or L only
			R220-R223	L-P2-W2-W1		
			R224-R227	L-P2-W2		
			44-45	L-R-S		
			R270-R279	L-P3		P4 after coordination; Code D, E exit P4 only
	E	Z-A7-A8 K-A6-A7-A8 B5-N-A6-A7-A8	C1, C1L/R, C2, C2L/R, C3, C3L/R, C4, C4L/R	E	CARGO APRON	Code D, E shall use K, B5 only; Code F shall use B5 only
31L	B1	B1	R101-R108 G150-G172 R110-R117A	G	1	Code E, F exit B1 only
	C	C				
	D	D				
	M10	B1-A1 or D/C-(G)-A1	G180-G192	APRON taxilane	APRON AG	Max. Code B