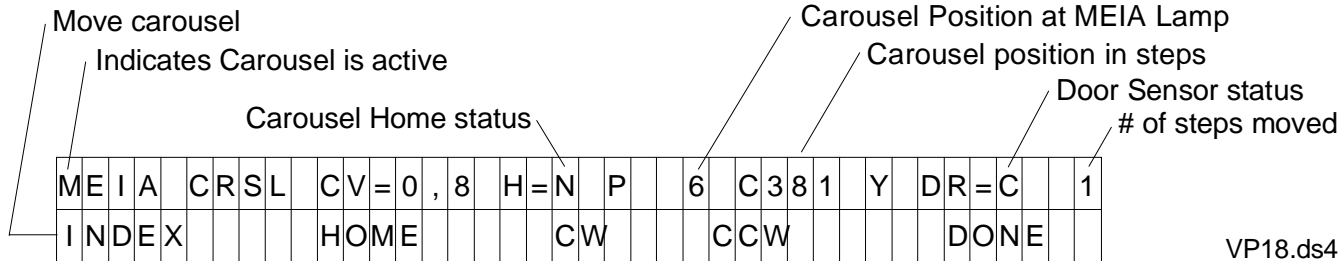## VP-18: CAROUSEL HOME SENSOR CHECK (pg 1 of 1)

Time: 10 minutes

Purpose: To verify that Carousel Home Sensor operates properly

1. Install locked MEIA carousel.
2. Enter Carousel Hand Controls:
   - MONITOR
   - HND_CNTL
   - OTHER
   - CRSL_DOOR
3. Press:
   - HOME
   H = Y

4. Press:
   20
   - STORE
5. Press:
   - CW
   H = N

Move carousel
Indicates Carousel is active
Carousel Home status
Carousel Position at MEIA Lamp
Carousel position in steps
Door Sensor status
# of steps moved

| ME I A | CRSL | CV=0,8 | H=N P | 6 | C381 | Y | DR=C | 1 |
| I NDEX | | HOME | | CW | CCW | | DONE | |

VP18.ds4

| Chapter Contents | Manual Contents | CD Main Screen | Index |