

Almanac 47

Celestial navigation on the SwissMicros C47 — user manual — version 2.2.0

Almanac 47 puts an almanac page on the C47: GHA, declination, Hc and Zn of the Sun, the Moon, the planets and the navigation stars for your DR and time, sunrise, sunset, twilight and the Moon's phase, with horizon charts of the sky. Everything is computed on the calculator (VSOP87, Meeus, IAU precession and nutation); optional Chebyshev tables fitted to JPL make it faster for a chosen period.

It supports, and does not replace, the Nautical Almanac. Every screen says so.

Author: Victor Valdes (valdes.vj@gmail.com). The programs, the PC version and this manual were written with the help of AI (Claude, by Anthropic). The results were checked against JPL Horizons and USNO data, and the screens were tested on the calculator and pixel for pixel against the PC version.

Copyright © 2026 Victor Valdes. Free software under the GNU General Public License v3.0 or later: you may use, share and change it under its terms. It comes with NO WARRANTY. See the files LICENSE and NOTICE.

Part 1 — using NAV

1. What to load

File	What it is
NAVFULL	the program NAV with all the views and the almanac tables support (TBL): one program, NAV its only global label; it clears R00-R99 when it ends
NAVINIT_FULL	INIT: builds the series matrices, valid 2000–2050 (about 6 000 numbers)
NAVINIT_FAST	INIT: fitted series, valid 2026–2030: smaller and faster
TBL_1, TBL_5	optional almanac tables (JPL) for 1 or 5 years from 1 Oct 2026; XEQ TBL once, then delete it. Big: meant for Free42 / Plus42 on a PC or phone; on the C47 only a short table fits
NAVLITTLE	build/dm42/: for the old DM42 with the C47 firmware (64 KiB): the ALMANAC screen, Sun and 58 stars only, with NAVINIT_LITTLE (2000–2050)

2. First start

- The C47 needs a firmware with **ATEXT** and **GRFNT**: the screens write their text with ATEXT in GRFNT 21 (the tinyFont, GRFNT 10, on the charts); only the body symbols are drawn with AGRAPH.
- Convert each text file with **python3 tools/rejig47_atext.py FILE.txt** (runs rejig and writes the ATEXT / GRFNT steps rejig 0.34 does not know; a rejig that knows them converts directly) and load the .p47 on the C47.
- The file name is the version: on the calculator the programs are always NAV and INIT. Other builds (NAVFULL_NOTBL, NAVALL, NAVCOMP) are in build/dev/.
- Load one NAV file and one NAVINIT file. **XEQ "INIT"** once: it builds the matrices and shows MATRICES READY. Then delete INIT (GTO "INIT", DELP): the matrices stay.
- Optional: load TBL, XEQ "TBL" once, delete it. The screens then show T (tables) instead of S (series).
- NAV asks DATE in the calculator's date format (CLK menu: YYYY-MM-DD, DD.MM.YYYY or MM/DD/YYYY) and reads it with the C47's own date functions; the prompt shows which.
- v2.x has no NAVTXT (text only) and no CHART or TEXT views; what changed inside is in docs/OPTIMIZATIONS.md.

3. Starting NAV

XEQ "NAV" asks four numbers, once, with INPUT (R/S keeps the value shown). At each prompt the stack is clear and Y shows only the format of that input: DATE YYYY.MMDD (DATE DD.MMYYYY or DATE MM.DDYYYY when the CLK date format is D.MY or M.DY), UT HH.MMSS, LAT DD.MMm S -, LON DDD.MMm W -.

Input	Meaning	Example
DATE	UT date in the CLK date format: YYYY.MMDD, DD.MMYYYY or MM.DDYYYY	2026.0926
UTC	UT, HH.MMSS (UT1; add DUT1 to UTC for full accuracy)	14.57

Input	Meaning	Example
LAT	latitude DD.MMm, south negative	25.20 = 25° 20' N
LON	longitude DDD.MMm, west negative	55.12 = 55° 12' E

After LON the sky is computed (the Sun, the Moon, the planets, the stars that can be above the horizon, the sun times) and kept in the matrix ALMC. Then the menu appears, and every view only draws. While the sky is computed, and while each view is computed, a box in the middle of the screen says SINKING....ABOUT; the view appears when it is complete.



4. The menu

ALMANAC 47		VALID 2000-2050	
26-09-2026 14:57 UT DR N 25 20.0 E		55 12.0	
1	ALMANAC	6	INFO
2	SPLIT	0	END
3	SKY		
4	ANIM		
5	ALLSKY		
KEY A NUMBER + MENU ↑↓ ±1 HOUR 9 SNAP			
DOES NOT REPLACE THE NAUTICAL ALMANAC			

Title ALMANAC 47, the period the matrices are valid for, the date, UT and DR in use. Under the items, the keys: + MENU, ↑ ↓ ±1 HOUR and 9 SNAP.

Key	On the menu	On a view
1 - 6	the item is highlighted and its view is drawn (6: INFO)	—
9	SNAP (a screenshot)	SNAP (a screenshot)
+	—	back to the menu
▲ / ▼	one hour later / earlier (the title shows the new time)	the same view one hour later / earlier
0	end of NAV: clears the registers R00-R99, the screen and the stack	—
other keys	ignored	ignored (R/S or EXIT stop the program)

The hours added with the arrows stay for the other views. New date or position: XEQ "NAV" again.

NAV uses the numbered registers. It uses R00-R98 while it runs (its values and its most used numbers) and clears R00-R99 (CLREGS) when you leave with 0. Keep anything you need in named variables or a matrix: NAV does not touch them (DATE, UTC, LAT, LON and the matrices of INIT stay). If you stop NAV with

R/S or EXIT, the registers keep NAV's values. Up to v2.1.0 NAV saved your registers and gave them back; v2.2.0 does not, and is smaller for it.


5. The views

All views: 23 Sep 2026 23:30 UT, 10° N 075° 30' W (the menu: 26 Sep 2026 14:57 UT, 25° 20' N 055° 12' E). Every view starts with the same line: date, UT, DR, and T / S (tables / series) at the right.

23-09-2026 23:30 UT DR N 10 00.0 W 75 30.0						S	23-09-2026 23:30 UT DR N 10 00.0 W 75 30.0						S
BODY	GHA	DEC	HC	ZN			BODY	GHA	DEC	HC	ZN		
☉ SUN	355 19.5						☉ SUN	174 26.9	S 0 22.8	3 52.7	271.2		
☾ MOON	25 09.3	S 12 19.9	35 13.9	113.0			☾ MOON	25 09.3	S 12 19.9	35 13.9	113.0		
♀ VENUS	142 57.4	S 19 47.4	17 14.7	245.5			♀ VENUS	142 57.4	S 19 47.4	17 14.7	245.5		
★37 ARCTURUS	141 06.4	N 19 02.7	26 10.6	286.4			★37 ARCTURUS	141 06.4	N 19 02.7	26 10.6	286.4		
★49 VEGA	75 51.7	N 38 48.8	61 11.1	359.4			★49 VEGA	75 51.7	N 38 48.8	61 11.1	359.4		
★51 ALTAIR	57 17.9	N 8 56.5	72 01.1	091.8			★51 ALTAIR	57 17.9	N 8 56.5	72 01.1	091.8		
★42 ANTARES	107 33.7	S 26 29.5	42 01.7	219.8			★42 ANTARES	107 33.7	S 26 29.5	42 01.7	219.8		
★56 FOMALHAUT	10 32.1	S 29 28.7	16 06.1	124.8			★56 FOMALHAUT	10 32.1	S 29 28.7	16 06.1	124.8		
NAUT TWI 10:06 23:43 MOON 92% ● WAXING							NAUT TWI 10:06 23:43 MOON 92% ● WAXING						
RISE/SET 10:51 22:57 AGE 12.8 DAYS							RISE/SET 10:51 22:57 AGE 12.8 DAYS						
MER PASS 16:54 SD 15.9 HP 56.0 SD 15.3							MER PASS 16:54 SD 15.9 HP 56.0 SD 15.3						


1 ALMANAC (ALMF): GHA ARIES, then GHA, Dec, Hc, Zn of 8 bodies — the Sun, the Moon if it is up, the first planet above the horizon, the brightest stars higher than 10°; twilight, rise/set, meridian passage, the Moon (lit part, phase symbol, age, HP, SD).

2 SPLIT (HALMH): the chart on top (Hc up, Zn across, the celestial equator dotted), the bodies below down to the bottom of the screen (8 rows).

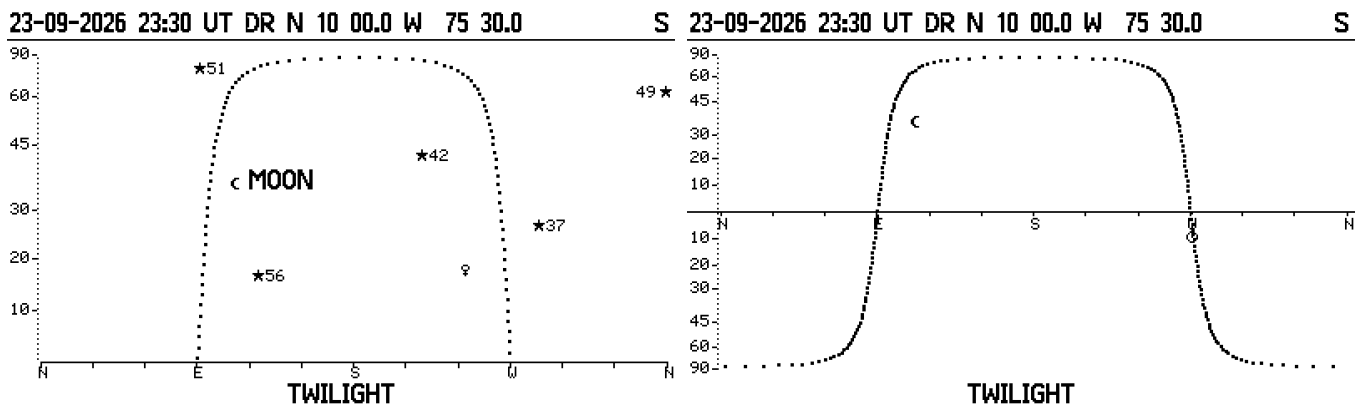

3 SKY (HORZ): full-screen chart of the 8 bodies; every 2 seconds the name of the next one is written next to its symbol (here MOON); DAY / TWILIGHT / NIGHT at the bottom.

4 ANIM (HANIM): the Sun and the Moon moving on the whole-sky chart over 12 hours (24 frames, 1 s each, 30 min apart); the first frame.

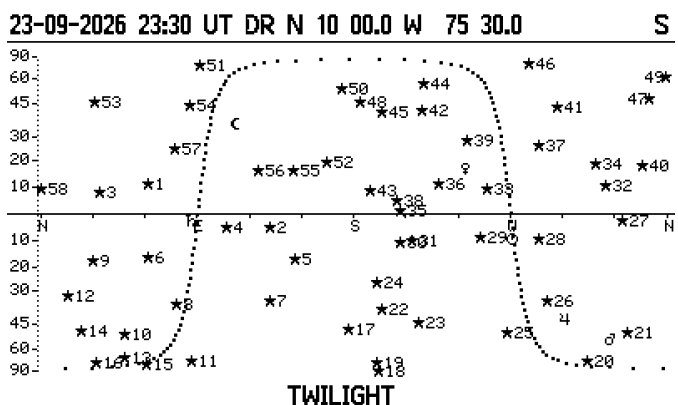

5 ALLSKY: the whole sky, over the horizon above, under the horizon below: every star, the Sun, the Moon and the planets; DAY / TWILIGHT / NIGHT.

ALMANAC 47 - INFO

GITHUB.COM/VALDESJ/ALMANAC47

COPYRIGHT 2026 VICTOR VALDES

FREE SOFTWARE: GNU GPL V3 OR LATER

NO WARRANTY - IT MAY HAVE BUGS AND ALWAYS CROSS-CHECK THE VALUES WITH THE NAUTICAL ALMANAC

THE ANTS ARE WAITING FOR A FLAG + MENU

DOES NOT REPLACE THE NAUTICAL ALMANAC

6 INFO: the repository (github.com/valdesvj/almanac47), the licence (GNU GPL v3 or later), no warranty, and the rule: always cross-check the values with the Nautical Almanac. The warning line (DOES NOT REPLACE THE NAUTICAL ALMANAC) is on the menu and on INFO only.

9 SNAP, on the menu and on every view: a screenshot of the screen (SNAP), then the same screen again.

Below the horizon: a body with a negative Hc (in practice the Sun) has its Hc shown white on black, as the Sun in the ALMANAC example above.

6. Speed and memory

- The sky is computed once for a time and place (matrix ALMC, 73×4 : GHA, Dec, Hc, Zn of the Sun, the Moon, planets 1–4 and stars 1–58). Going from view to view only draws. An arrow (a new hour) computes again.
- The celestial equator of the charts depends only on the position: its dots are computed 30 at a time as complex vectors and kept (EQ2, EQ3) for the next view. NAV deletes the matrix ALMQ that INIT makes: it is no longer used.
- The fonts read each column pattern from stack register D: NAV uses the 8-level stack while it runs and puts your stack size back when you leave with 0.
- v2.0.0 was faster and smaller than v1.1 with the same results: Horner's method for every polynomial, n-vectors ($\rightarrow$ POL / $\rightarrow$ REC) instead of trigonometric formula pairs, the nutation as matrix products, counted loops on ISG, the registers renumbered and kept.
- v2.1.0 (Supercharger) keeps the same calculation and the same results, faster again: the cos and sin of each series as one complex e^x (the C47 computes SIN and COS with 75 digits, e^x with 39), Hc and Zn straight from the body's direction vector, the tables by one M.GETM and DOT, the equator dots as complex vectors; and smaller: no unused code, the most used numbers in registers, repeated steps as subroutines. NAVFULL is 24.2 KB (31.5 KB in v2.0.0, 36.6 KB in v1.1); starting NAV takes about 17 % less work and each hour about 25 % less. Details: docs/OPTIMIZATIONS.md.
- v2.2.0 (C47 only) has the same calculation, screens and results as v2.1.0. NAVFULL is one program: NAV is its only global label and every routine is a local label with its own name (:SUNA:, :HCZ: ...), so the catalogue and the program menus show NAV alone, and your programs can use any name. It no longer saves your registers (396 steps fewer): 23.9 KB. Each jump to a routine looks for its name in one program: about 2 % more time.
- The C47 sends a new screen to the display only at a PAUSE, a key press or the end of the program: the SINKING box shows while a view is computed, then the complete view.
- With the tables (TBL) the Sun, the Moon and the planets come from the tables inside their period and the computation is about twice as fast.
- Something lives in NAV at the step after LBL 48. It is 0. Try 20 and press + or an arrow ...

7. Inside NAVFULL: the program map

NAVFULL is **one program**. NAV is its only global label; every routine is a **local label with its own name**: LBL :SUNA:, XEQ :HCZ: ... (at most 7 characters, written between colons). A local label belongs to its program, so none of them shows in the catalogue or the program menus, and none can clash with a name of yours. Below, every routine with what it does and where to find its source, so you can check it, copy it or adapt it to your own programs. The same list is in NAVFULL_LABELS.txt.

Navigation: the calculations

Label	What it does	Source
:SUNA:	Sun: VSOP87 series (matrices VL VB VR), nutation, aberration -> GHA, Dec, GHA Aries	programs/SUNA.txt
:SUNG:	Sun GHA/Dec for the sunrise iterations (tables if loaded, else SUNF)	programs/SUNA.txt
:SUNF:	Sun, low-precision formula (0.01 deg) for sunrise/twilight	programs/SUNA.txt
:SER:	sum of one series matrix with the matrix functions (COS, DOT)	programs/SUNA.txt
:SERT:	the time vectors SV1 SV2 used by SER	programs/SUNA.txt
:NUT:	nutation in longitude and obliquity (matrix NU)	programs/SUNA.txt
:STR2:	star GHA/Dec: catalogue ST, precession, aberration, nutation (after SUNA)	programs/STAR.txt
:SQK:	star, quick sin(Hc) from the catalogue (to skip stars below the horizon)	programs/STAR.txt
:MOON:	Moon: SUNA, then MOO2	programs/MOON.txt
:MOO2:	Moon GHA, Dec, HP, SD: Meeus series (matrices ML MB MCL MCB) after SUNA	programs/MOON.txt
:MOOQ:	Moon, quick low-precision formula (BODY list, ANIM)	programs/MOON.txt
:PLN2:	planet GHA/Dec/SHA/HP: VSOP87 series with light-time, after SUNA	programs/PLAN.txt
:PLN3:	planet for the screens: quick position first, full series only if it can be above the horizon	programs/PLAN.txt
:TGET:	almanac tables (TBL): Chebyshev lookup (not in NAVFULL_NOTBL)	programs/TGET.txt
:HCZ:	sight reduction: $Y = \text{Dec}$, $X = \text{GHA}$ (and the DR: R13 longitude, R14 latitude) -> $X = \text{Hc}$, $Y = \text{Zn}$ (also in R09, R05), sin Hc in "V4"	programs/CHZ.txt
:HCZI:	keeps sin/cos of the latitude for HCZ	programs/CHZ.txt
:HCZQ:	celestial equator: start of the dot-by-dot rotation	programs/CHZ.txt
:HCZR:	celestial equator: next point by rotation (no trig)	programs/CHZ.txt
:RISE:	sunrise time UT (SUNRISE program)	programs/SUNRISE.txt
:SET:	sunset time UT	programs/SUNRISE.txt
:NTWA:	nautical twilight, morning, UT	programs/SUNRISE.txt
:NTWP:	nautical twilight, evening, UT	programs/SUNRISE.txt
:TRAN:	meridian passage of the Sun, UT	programs/SUNRISE.txt
:PHA2:	Moon phase after SUNA: illumination % and age in days	programs/PHAS.txt
:SBRT:	star number by brightness rank (1st brightest ... 58th)	programs/SBRT.txt
:SNMU:	star name from its number	programs/SNMU.txt

The menu and the views

Label	What it does	Source
NAV	graphic menu (KEY?): asks DATE UTC LAT LON, keys 1-5 a view, 6 INFO, 9 SNAP, 0 ends; uses R00-R98 and clears them (CLREGS) at 0 (the only global label; INFO page inside)	programs/NAV.txt
:ALMF:	view 1 ALMANAC: GHA, Dec, Hc, Zn table of Sun, Moon, planets, stars; twilight, rise/set, Moon	programs/atext/t21/ALMF.txt
:HALMH:	view 2 SPLIT: horizon chart on top, the bodies below (8 rows)	programs/atext/t21/HALMH.txt
:HORZ:	view 3 SKY: horizon chart, the name of each body in turn every 2 s (+ back to the menu, arrows one hour)	programs/atext/t21/HORZ.txt
:HANIM:	view 4 ANIM: the Sun and the Moon moving on the whole-sky chart (24 frames)	programs/atext/t21/HANIM.txt

Label	What it does	Source
:ALLSKY:	view 5 ALLSKY: whole sky, over the horizon above, under the horizon below	programs/atext/t21/ALLSKY.txt
:WPLS:	every view holds its screen here (KEY?): + back to the menu, up / down arrow one hour later / earlier	programs/WPLS.txt

The sky kept in matrix ALMC (computed once per time and place)

Label	What it does	Source
:CSUN:	Sun from the cache (matrix ALMC); computes the whole sky (CALC) only for a new time or place	programs/CACHE.txt
:CMOO:	Moon from the cache	programs/CACHE.txt
:CPLN:	planet from the cache	programs/CACHE.txt
:CSTR:	star from the cache: its values after the over-the-horizon test (:CSQK:)	programs/CACHE.txt
:CSQK:	star from the cache: over the horizon test (computes the star the first time: SQK, STR2, HCZ)	programs/CACHE.txt
:HCZ:	Hc Zn from the cache for the body just read (else the real HCZ)	programs/CACHE.txt
:CPHA:	Moon phase from the cache	programs/CACHE.txt
:CNTA:	nautical twilight am from the cache (the five sun times: computed once per date and place)	programs/CACHE.txt
:CRIS:	sunrise from the cache	programs/CACHE.txt
:CTRN:	meridian passage from the cache	programs/CACHE.txt
:CSET:	sunset from the cache	programs/CACHE.txt
:CNTP:	nautical twilight pm from the cache	programs/CACHE.txt
:CALC:	computes Sun, Moon, planets (GHA Dec Hc Zn) into matrix ALMC; stars marked to compute when asked	programs/CACHE.txt
:CEQQ:	celestial equator of the charts: start (replay from matrix ALMQ, or compute and record)	programs/CACHE.txt
:CEQR:	celestial equator of the charts: next dot (from ALMQ, or HCZR and record)	programs/CACHE.txt

Text, symbols and screen parts

Label	What it does	Source
:PTXS:	TEXT: ATEXT in GRFNT 21 (Didier's N03 trick) - Z row of the base line, Y column, X text	programs/PTXS.txt
:PINS:	TEXT: whole number (one ATEXT)	programs/PTXS.txt
:PF1S:	TEXT: number with one decimal	programs/PTXS.txt
:PHMS:	TEXT: hh:mm from hours	programs/PTXS.txt
:PDMS:	TEXT: degrees and minutes "ddd mm.m" with sign	programs/PTXS.txt
:PDTs:	TEXT: date "dd-mm-yyyy" from a Julian Date	programs/PTXS.txt
:PZNS:	TEXT: azimuth "ddd.d"	programs/PTXS.txt
:PTTY:	TEXT in the tinyFont (GRFNT 10, the charts) - Z row of the base line, Y column, X text	tools/atext_common.py
:PTNT:	TEXT: whole number in the tinyFont	tools/atext_common.py
:PHLS:	horizontal line (X = length in pixels)	programs/PTXS.txt
:PSYB:	SYMBOL of a body, 12 rows (glyphs47, AGRAPH; the tables, the Moon phases) - Z row, Y column, X symbol	tools/generators/atext/glyphs47.py
:PSYS:	SYMBOL of a body, 7 rows (glyphs47, AGRAPH; the charts) - Z row, Y column, X symbol	tools/generators/atext/glyphs47.py
:HDR:	header of a view: date, UT, DR latitude N/S, longitude E/W (X row, Y time, Z lat, T lon; tools/navmat.py)	tools/navmat.py
:CMN:	compass row N E S W N of a chart (X row)	tools/navmat.py
:CMS:	compass row S W N E S of a chart, south up (X row)	tools/navmat.py

Shared steps: :OUT1:, :OUT2:, :OUT3:, :OUT4:, :OUT5:, :OUT6:, :OUT7:, :OUT8:, :OUT9: are runs of steps that several routines had in common, written once (tools/navmat.py, outlining).

Inner labels: inside the routines the jumps use the local labels 00-99, A-L and a-l. One number serves several routines: the C47 looks for a local label first after the GTO or XEQ, then from the start of the program, and the build checks that every jump lands where it should. The few that did not fit are :L1: ... :L25:.

Using a routine in your own program



- **Copy it from programs/** (the file in the Source column): those are the separate programs with their own names and registers, described one by one in part 2 of this manual; programs_rem/ has the same with comments, listings/ a note on each. The calculation is the same as in NAVFULL; NAVFULL has the faster and smaller form of v2.x (docs/OPTIMIZATIONS.md explains each change).
- **Reading NAVFULL itself:** build/NAVFULL.txt is the file on the calculator; build/dev/src/NAVFULL.txt is the same code with global labels, as separate programs. Inside NAVFULL the routines pass their values in R00-R42 (the build gives the registers new numbers and lets routines share them) and read the numbers below, which NAV stores at its start. A routine copied out of NAVFULL needs those numbers, the values its caller left in R00-R42, and the matrices of INIT.
- **Local registers:** every XEQ, even to a local label, starts a new level with no local registers (LocR), so a routine cannot read its caller's R.00 ...; only :HDR: uses its own (LocR 05).

The numbers in R43-R98 (stored by NAV at its start)

Reg.	Number	Reg.	Number	Reg.	Number	Reg.	Number
R43	1	R57	60	R71	90	R85	-1
R44	2	R58	212	R72	238	R86	184
R45	360	R59	207	R73	226	R87	82
R46	0	R60	143	R74	34	R88	5
R47	16	R61	142	R75	30	R89	280.46061837
R48	15	R62	180	R76	395	R90	2451545
R49	17	R63	176	R77	363	R91	241
R50	10	R64	100	R78	360.98564736629	R92	0.15643
R51	3	R65	27	R79	332	R93	6
R52	117	R66	4	R80	301	R94	388
R53	116	R67	51	R81	270	R95	29.530589
R54	3600	R68	26	R82	145	R96	199
R55	20	R69	25	R83	113	R97	164
R56	0.5	R70	24	R84	8	R98	150

8. MOON47: the Moon phase

MOON47 is a separate program: the Moon's phase page of the PC version on the calculator, without NAV, INIT or the tables. Load build/MOON47 (convert it with rejig) and **XEQ "MOON47"**. It asks nothing: the phase does not depend on where you are, so it takes the date and time from the C47's clock.

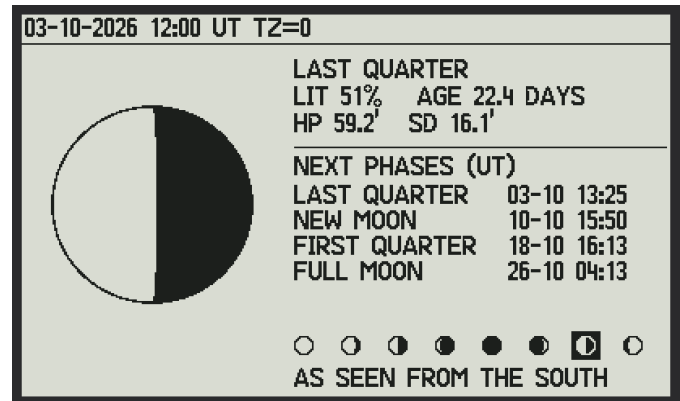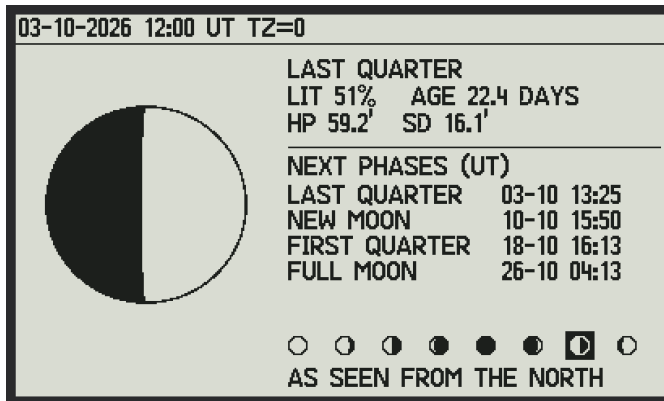

3 Oct 2026 12:00 UT, as seen from the north

the same after +/-: as seen from the south

- **The page:** the Moon as a disc (the lit part filled), the phase name, % lit, age in days, HP and SD, the next new Moon, first quarter, full Moon and last quarter (date and time UT), and the eight phase symbols with today's one inverted.
- **Keys:** +/- turns the picture to the view from the south and back (the latitude only turns the picture); any other key ends.
- **The clock is local time.** If it is not set to UT, store your offset once in the variable TZ, in hours: **4 STO "TZ"** for UT+4, **-5 STO "TZ"** for UT-5. Without TZ, MOON47 creates it with 0 and takes the clock as UT: the phase times stay right, the age and % lit are then a few hours off (% lit changes at most 0.45 % an hour). The top line shows the clock: the time UT and TZ=0, or with TZ the local time LT and your offset (TZ=+4, TZ=-5, TZ=+5:30).
- **Accuracy** against the full series of NAV, 2000-2050: phase times and age within 4 minutes (most within 1), HP 0.03', SD 0.01', % lit 0.03 %. It uses the 20 largest terms of the Moon (Meeus, ch. 47), the phases by the secant method; tests/test_moon47.py checks it.
- **Memory:** about 4.8 KB (v2.1.0: the 20 terms as matrices, their cos and sin by one complex e^x , about 24 % less work; the program and its own copies of the text and symbol routines, M7TX and M7SY, so it does not need NAVFULL and does not clash with it; in v2.2.0 they are local labels, :M7TX: ... :M7SY:, so only MOON47 shows in the program menus). It uses registers R03-R53, clears R00-R99 when it ends (CLREGS) and leaves your stack size as it was. Needs a firmware with ATEXT and GRFNT, like NAV.
- The same program runs on the old DM42 with the C47 firmware (build/dm42/MOON47). Free42 (build/free42/MOON47.raw), the NumWorks and the HP Prime have their own MOON47 with the same page: see their manuals.

Part 2 — the programs one by one

How each program works, with worked results

These programs give the data needed for sight reduction (GHA, SHA, declination, Hc, Zn) and for planning (sunrise, sunset, twilight, Moon phase, sky picture). They support, and do not replace, the Nautical Almanac. All results are apparent geocentric positions, as in the almanac. The time argument is UT (UT1): for a sight timed in UTC, add DUT1 (under 0.9 s).

The programs of this part are the single programs of the programs/ folder. Their screens draw the text with AGRAPH fonts (PTXS, PTXT, PTXB) and run on any C47 firmware. The NAV files of part 1 use other versions of the views (the screens of Oct 2026) that write the text with ATEXT and GRFNT; the calculations are the same. The ALMF and HALMV pictures below are those NAV screens.

Overview

Program	What it gives	Input	Output	Needs
SUNA	Sun and Aries	X = JD	X GHA [☉] , Y Dec [☉] , Z GHA [♈]	matrices from MATA
MATA	builds Earth-orbit and nutation matrices	—	VL, VB, VR, NU	run once
STAR	57 navigation stars + Polaris	Y = JD, X = star no.	X GHA, Y Dec, Z SHA	SUNA, matrix ST
MATST	builds star catalogue matrix	—	ST	run once
SNAM	star name	X = star no.	name on screen	—
SUNRISE	rise, set, twilight, meridian passage	Z = JD 0h, Y = lat, X = lon	X = UT hours	SUNA
PHAS	Moon phase	X = JD	X % illuminated, Y age (days)	SUNA
HORZ	picture of the sky on the horizon	Z = JD, Y = lat, X = lon	screen drawing	SUNA, STAR
ALM	Sun, Aries, Moon, planets from tables	X = t (hours in block)	X GHA, Y Dec (HP)	coefficients from the tables
TBL	almanac tables for a period (JPL), sets flag 10	—	matrices TSU...TAR	run once
TGET	Sun, Aries, Moon, planets from the tables	Y = JD, X = body 0-6	X GHA, Y Dec (Z HP, T SD)	TBL
CHZ	Hc/Zn and the inverse	T lat, Z lon, Y Dec, X GHA	X Hc, Y Zn	—
SUNSD	Sun semi-diameter	X = JD	X = SD (')	SUNA
HALMV	sight-planning screen: chart + data	Z = JD, Y = lat, X = lon	screen	see HALMV section
ALMF	full-page almanac screen	Z = JD, Y = lat, X = lon	screen	see ALMF section
PTXS / PTXT	pixel text (big / small font)	Z = y, Y = x, X = text	drawing	—

Conventions

- **Julian Date (JD):** use the C47 date function (Date→J) and add UT/24. It must be a plain number: for example 23 Sep 2026 12:00 UT = **2461307**, and 0h UT that day = 2461306.5.
- **Signs:** latitude N +, S −; longitude E +, W −; declination negative = South.
- **Angles** come out in decimal degrees. Use →HMS or the d.mmm display to read degrees and minutes.
- **Setup order:** the NAV files do it all: load NAVFULL and NAVINIT_FULL (or NAVINIT_FAST), XEQ INIT once, delete INIT. The single programs of part 2 can still be loaded one by one (programs/ folder) for other uses.

SUNA — Sun and Aries

Computes the Sun's GHA and declination and the GHA of Aries for any instant, with no tables. It is also the engine used by STAR, SUNRISE, PHAS and HORZ.

How it works

- Time: T and τ (Julian centuries and millennia of TT since J2000; $TT = UT + 69.2$ s).
- Earth's heliocentric longitude L, latitude B and distance R from the VSOP87D series stored in VL, VB, VR (56 + 3 + 7 terms). The loops count rows with DSE 55.
- $Sun = L + 180^\circ$, $\beta = -B$; FK5 correction.
- Nutation $\Delta\psi$, $\Delta\epsilon$ from the 10 largest IAU 1980 terms (matrix NU). The Moon arguments D, M, M', F are kept in R60–R63 for PHAS.
- Apparent longitude $\lambda = Sun + \Delta\psi - 20.4898''/R$ (aberration). Obliquity $\epsilon = 84381.448'' - 46.815'' \cdot T + \Delta\epsilon$.
- $Dec = \arcsin(\sin \beta \cos \epsilon + \cos \beta \sin \epsilon \sin \lambda)$; RA from $\rightarrow POL$.
- $GHA^\gamma = GMST + \Delta\psi \cdot \cos \epsilon$; $GHA^\odot = GHA^\gamma - RA \pmod{360}$.

Inputs and outputs

Input	X = JD (UT1)
Output	X = $GHA^\odot$, Y = $Dec^\odot$, Z = GHA^γ (degrees). Also R73 = Sun distance R (au): $SD^\odot = 15.99' \div R73$.
Registers	R50–R55, R60–R67, R70–R81

Example with results

23 Sep 2026, 12:00:00 UT: key **2461307 XEQ SUNA**

	Result	Deg / min	Almanac page
X $GHA^\odot$	1.9069849	1° 54.4'	1° 54.4'
Y $Dec^\odot$	-0.1931700	S 0° 11.6'	S 0° 11.6'
Z GHA^γ	182.3525029	182° 21.2'	182° 21.2'
R73 $\rightarrow SD^\odot$	1.003445 au	15.94'	15.94'

Notes

- Accuracy vs JPL/IAU reference 2000–2050: $GHA \leq 0.016'$, $Dec \leq 0.007'$, $GHA^\gamma \leq 0.003'$. Verified on the C47.
- Coefficients never need updating. ΔT (69.2 s, line 4) affects the Sun by only 0.0007' per second.

MATA and MATST — setup programs

They contain no calculation. Each creates matrices and fills them with coefficients, so you don't have to type about 590 numbers by hand. Run each once; afterwards the programs can be deleted.

Program	Creates	Contents
MATA	VL 56×4, VB 3×4, VR 7×4	VSOP87D Earth series rows: k, A, B, C (term = $A \cdot \cos(B + C \cdot \tau) \cdot \tau^k$)
MATA	NU 10×9	IAU 1980 nutation: multipliers of D, M, M', F, Ω and coefficients S, S', C, C'
MATST	ST 58×4	Star J2000 RA, Dec (deg) and proper motions (mas/yr), stars 1–57 in almanac order, 58 = Polaris

Memory kept afterwards: about 5.7 KB (VL, VB, VR, NU) + 3.7 KB (ST).

STAR — navigation stars

Gives GHA, SHA and declination of any of the 57 almanac navigation stars or Polaris (58).

How it works

- Runs SUNA for the instant (nutation, obliquity, Sun longitude, GHA^γ). Entry STR2 skips this when SUNA has already run (used by HORZ).
- Reads the star's J2000 position and proper motion from ST and applies proper motion.
- Precession J2000 $\rightarrow$ date with the IAU 2006 angles ζ , z , θ .
- Converts to ecliptic coordinates and adds nutation $\Delta\psi$ and annual aberration there (accurate even for Polaris), then back with the true obliquity.

- $SHA = 360^\circ - RA$; $GHA = GHA^\circ + SHA$.

Inputs and outputs

Input	Y = JD (UT1), X = star number 1-58
Output	X = GHA, Y = Dec, Z = SHA
Registers	R56-R59, R68-R69, R82-R89 (plus SUNA's)

Example with results

23 Sep 2026, 12:00 UT: key **2461307 ENTER 18 XEQ STAR** (Sirius), and 58 for Polaris

Star	GHA	SHA	Dec
18 Sirius	80° 46.2′	258° 25.1′	S 16° 44.9′
58 Polaris	135° 19.7′	312° 58.5′	N 89° 22.4′

Notes

- Accuracy 2025–2050: 57 stars $\leq 0.003'$; Polaris $\leq 0.04'$ in hour angle (tiny on the sky). Checked against USNO for 30 stars: $\leq 0.009'$.
- Star numbers are the official almanac numbers; the list in STAR_list.txt gives them by number and alphabetically.

SNAM — star names

Shows the name of a star from its number: key **18 XEQ SNAM** → display "18 Sirius". It stores the number in R49, jumps with GTO IND 49 to local label 01–58, loads the name as text and shows it with AVIEW. The stack is unchanged.

To show the name automatically after STAR, add `RCL 82 · XEQ "SNAM" · R↓` before STAR's last RTN.

SUNRISE — rise, set, twilight, meridian passage

Times of sunrise, sunset, civil and nautical twilight and meridian passage for any position, directly in UT.

How it works

- Starts from a first guess (06h for morning events, 18h for evening, 12h for transit).
- Computes the Sun at that time with SUNF, a low-precision formula (Astronomical Almanac, within 0.01°; the tables when loaded), then the hour angle at which the Sun reaches the event altitude: $\cos H = (\sin h_0 - \sin \phi \sin \delta) / (\cos \phi \cos \delta)$.
- Corrects the time by $(\text{target LHA} - \text{actual LHA}) / 15$ and repeats until the correction is under about 1 s (3–4 passes). With SUNF the times are within about 15 s of the full SUNA, well inside the minute shown.
- Event altitudes h_0 : rise/set $-0^\circ 50'$ (upper limb, refraction), civil -6° , nautical -12° . If the Sun never reaches it, the result is 99.

Inputs and outputs

Input	Z = JD at 0h UT of the day, Y = latitude (N+), X = longitude (E+, W–)
Labels	NTWA / CTWA (morning twilight), RISE, TRAN, SET, CTWP / NTWP (evening twilight)
Output	X = UT in decimal hours (→HMS to read); 99 = no event
Registers	R90-R99

Example with results

23 Sep 2026, latitude 10° N, longitude 0°: key **2461306.5 ENTER 10 ENTER 0**, then the label

Label	Event	UT	Almanac page (10° N)
NTWA	nautical twilight am	05:03:47	05 04
CTWA	civil twilight am	05:28:09	05 28
RISE	sunrise	05:49:09	05 49
TRAN	meridian passage	11:52:22	11 52 22
SET	sunset	17:55:28	17 56
CTWP	civil twilight pm	18:16:27	18 17
NTWP	nautical twilight pm	18:40:49	18 41

Medellín (6.25° N, 75.57° W): sunrise 10:51:24 UT (05:51 local), sunset 22:57:41 UT (17:57 local). 89.5° N: RISE gives 99 (no sunrise).

Notes

- Checked against an exact search on the JPL/IAU reference: agrees to the second.
- The almanac holds the noon declination fixed for the whole day, so its times can differ by up to a minute (sunset and civil pm above). The program is the more exact one.

PHAS — Moon phase

Percentage of the Moon's disk illuminated and the age of the Moon (days since new moon), as printed in the almanac.

How it works

- Runs SUNA, which leaves the mean Moon arguments D, M, M', F in R60-R63.
- Phase angle i (Meeus 48.4) $\rightarrow$ illuminated fraction $k = (1 + \cos i)/2$.
- Age: days since the mean new moon, corrected to the true new moon with Meeus ch. 49 terms; near new moon it checks the neighbouring lunation.

Inputs and outputs

Input	X = JD (UT1)
Output	X = % illuminated, Y = age (days)
Registers	R41-R48

Example with results

23 Sep 2026, 12:00 UT: key **2461307 XEQ PHAS** $\rightarrow$ X = **89.1 %** (waxing gibbous), Y = **12.36 days**. 10 Oct 2026 12h: 0.0 %, 29.36 d (new moon that evening); 11 Oct 12h: 0.8 %, 0.84 d.

Notes

- Accuracy vs JPL: illumination ≤ 0.3 %, age ≤ 2 minutes.

HORZ — sky picture on the horizon

Draws a chart of the whole sky: azimuth Zn across (N-E-S-W-N, ticks every 30°), altitude Hc up (ticks and labels at 30°, 60°, 90°), the celestial equator dotted, and the same bodies as ALMF, HALMV and ALMT: the Sun (☉), the Moon and planets above the horizon, and the brightest navigation stars higher than 10° until 10 bodies (★ with its number). Then an info line for each body (name, ZN, HC), 3 s each, without end: after the last the first again. UT is at the top right, the DR under it; + returns to the NAV menu, the arrows move one hour. The Sun below the horizon is not drawn; its info line shows HC with a minus sign.

How it works


- Runs SUNA once, then STAR through entry STR2 for stars 1-58 (fast: no repeated SUNA). The celestial equator is drawn as dots every 2° of hour angle.
- For each object: $LHA = GHA + \lambda$; $Hc = \text{asin}(\sin \phi \sin \delta + \cos \phi \cos \delta \cos LHA)$; Zn from $\rightarrow \text{POL}$ of $(-\cos \delta \sin LHA, \cos \phi \sin \delta - \sin \phi \cos \delta \cos LHA)$.
- Screen: column = $20 + Zn \times 375/360$; row = $225 - Hc \times 200/90$ (from the top; converted for the C47, which counts rows from the bottom). Only objects with $Hc > 0$ are drawn.
- Text (N E S W, 30 60 90, star numbers, the info line) is drawn with PTXT, the small AGRAPH font (PTNS for integers, PT1 for one decimal); the symbols with PTXS (* and @). Lines and dots use PHLS and PIXEL.

Inputs and outputs

Input	Z = JD (UT1), Y = latitude (N+), X = longitude (E+)
Output	drawing on the 400×240 screen; R96 = Hc and R97 = Zn of the last object
Needs	SUNA, STAR (STR2), CHZ, PTXT, PTXS
Registers	R90-R99, R36, R37, R42, R44, R86, R93

Example with results

23 Sep 2026, 30° N 0° E. Night 03:00 UT: key **2461306.625 ENTER 30 ENTER 0 XEQ HORZ**; day 09:00 UT: 2461306.875. Simulated screens:

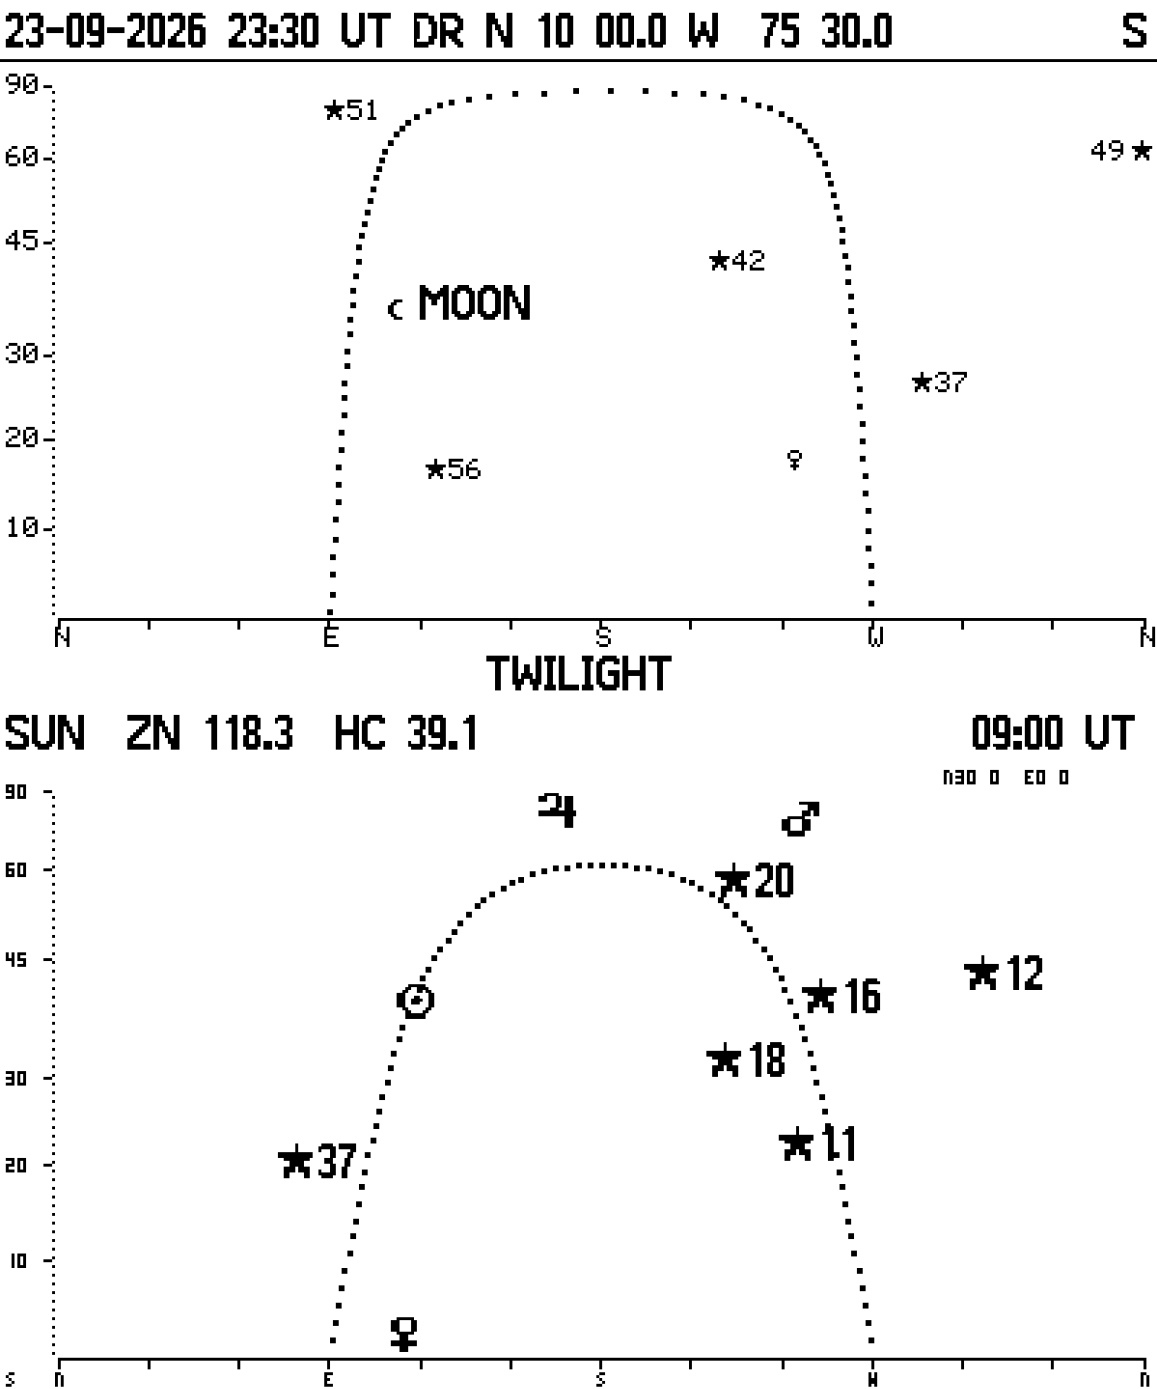

Notes

- Hc and Zn agree with the reference within 0.0013'; Sun Hc/Zn match USNO (88.0833° / 264.215° vs 88.0834° / 264.214°).
- Stars are drawn even in daylight; they are only observable in twilight.

HALMV — sight-planning screen (chart + almanac data)

One screen for twilight star sights: on the left a picture of the sky (Hc up, Zn across) with the Sun, Moon, planets and the chosen stars; on the right the date and time, your DR, GHA Aries, the Sun's GHA, Dec and SD, a table of Hc and Zn (Sun, then the Moon and planets that are above the horizon, then the brightest stars, 10 rows), the day's sun times, and the Moon's phase, HP and SD.

How it works


- First computes the sun times with SUNRISE (NTWA, RISE, TRAN, SET, NTWP for the UT date of the JD) and the Moon with PHAS, and keeps them in R13-R19.
- Runs SUNA once (Sun GHA, Dec, GHA Aries; SD = 15.994' / R from R73), then STAR through entry STR2 for stars 1-58.
- Moon (MOO2) and planets (PLN3) are computed without repeating SUNA. PLN3 first places each planet from its mean orbit (within 0.2°); if it is more than 1° below the horizon the full series is skipped, otherwise the series run once with the light time from that first distance (same result as PLAN within 0.0002'). Symbols: ☾ Moon, ♀ Venus, ♂ Mars, ♃ Jupiter, ♄ Saturn. Stars: in order of brightness (SBRT), only those higher than 10°, until the table has 10 rows.
- Hc and Zn: CHZ subroutine HCZ. Chart: column = 18 + Zn × 178/360, row = 14 + Hc × 200/90; the celestial equator is dotted every 3° of hour angle. South latitude: chart centred on N (S W N E S).
- All text and numbers are drawn with AGRAPH through PTXS (the C47 status-bar font, 12 px) and PTXT (small 3×5): strings, PINS, PDMS (deg + min), PZNS (bearing), PHMS (hh:mm), PF1S and PDTs (date from JD). Star names from SNMU. The screen is held by WPLS (+ back to the menu, arrows one hour).


Inputs and outputs

Input	Z = JD (UT1), Y = latitude (N+), X = longitude (E+)
Screen	left: chart; right: DR, date + UT, Aries, Sun SD, Sun GHA/Dec, table BODY / HC / ZN, naut. twilight AM/PM, rise/set, mer pass (UT), Moon % + WAXING/WANING/FULL/NEW + age
Needs	SUNA, STAR, CHZ, SUNRISE, PHAS, MOON, PLAN, SBRT, SNMU, PTXS + all matrices (MATA, MATST, MATM, MATP)
Registers	R10-R29, R37, R40-R48 (+ those of the programs it calls)

Example with results

23 Sep 2026, 23:30 UT, DR 10° 00' N 075° 30' W: key **2461307.4792 ENTER 10 ENTER -75.5 XEQ HALMV**. Simulated screen:

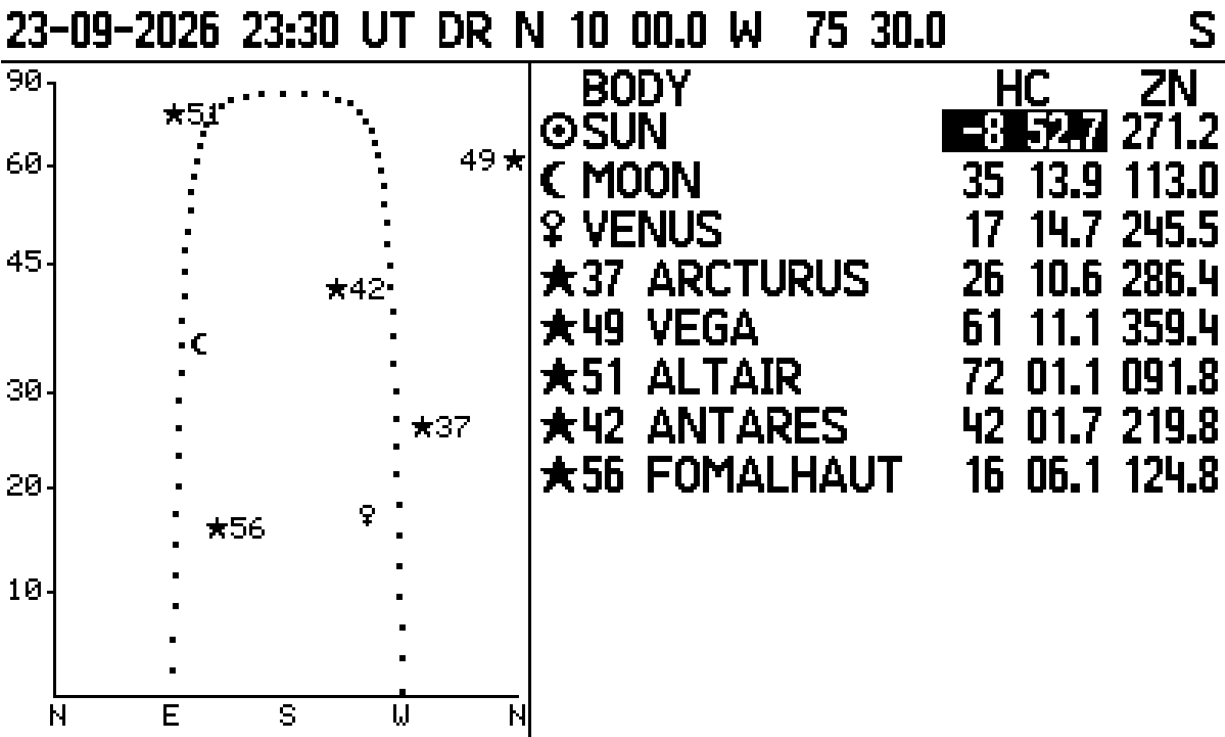

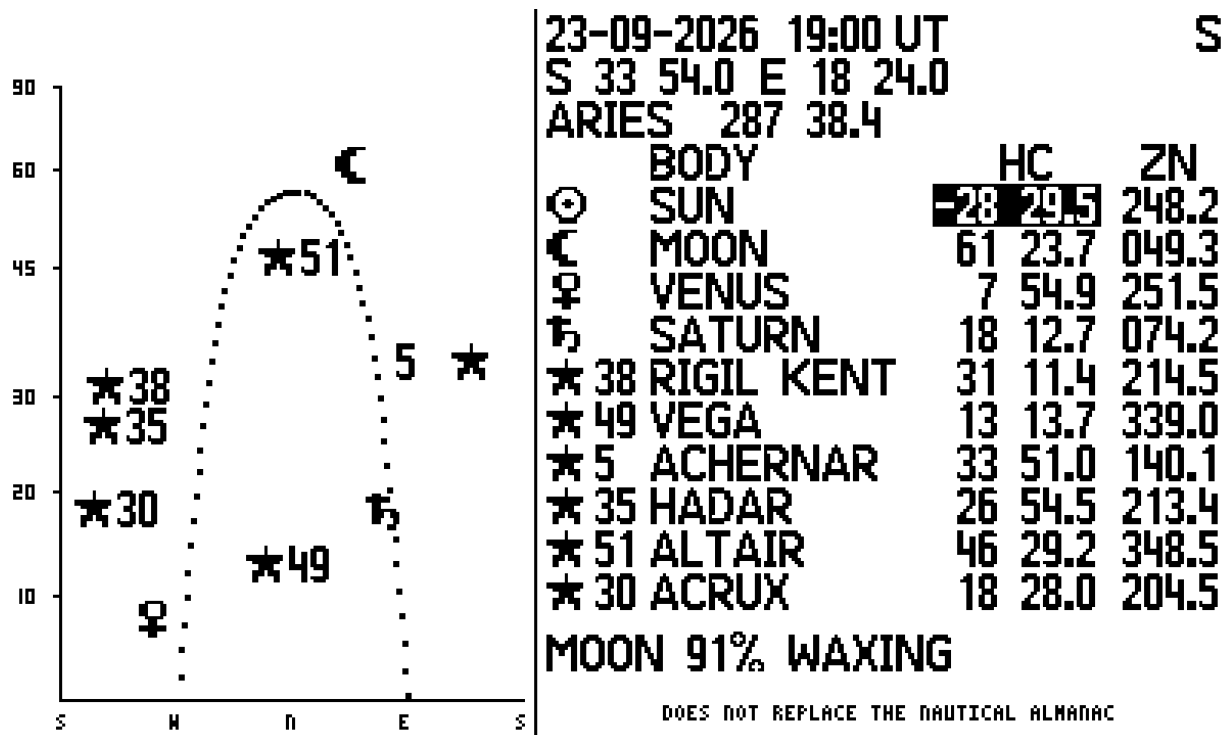

Notes

- Sun times checked against the JPL-based reference for this position: naut. twilight 10:05:46 / 23:42:41, rise 10:51:08, set 22:57:20, mer pass 16:54:18 UT — the screen rounds to the minute as the almanac does.
- All times are UT for the UT date of the JD, at the DR entered; sea level, standard refraction (as the almanac). West of Greenwich an evening event after 24h UT shows as 00:xx (next UT day).
- Hc and Zn are computed from the DR: use them to identify stars and pre-set the sextant. Near the chart edges two star numbers may overlap; the table is always exact.
- Sun SD = $959.63''/R$; it can differ by 0.1' from the printed page, which gives one SD per three days.

ALMF — full-page almanac screen

The same data as HALMV without the chart, laid out like an almanac page: GHA and Dec as well as Hc and Zn, with the same 10-row rule as HALMV (Sun, then the Moon and planets above the horizon, then the brightest stars higher than 10°), the sun times, Moon phase, Moon HP and SD, and Sun SD. The last line reads DOES NOT REPLACE THE NAUTICAL ALMANAC (also on HALMV).

How it works

- Same calculations and table rule as HALMV.
- Top line: date, UT, DR and GHA Aries. Table: symbol, number, name, GHA, Dec, Hc, Zn. Bottom left: nautical twilight and rise/set in AM/PM columns and meridian passage; bottom right: Moon % with WAXING, WANING, FULL (shown 100 %) or NEW (0 %), age, Sun SD.

Inputs and outputs

Input	Z = JD (UT1), Y = latitude (N+), X = longitude (E+)
Needs	same programs as HALMV
Registers	same as HALMV

Example with results

Same instant and DR as the HALMV example: key **2461307.4792 ENTER 10 ENTER -75.5 XEQ ALMF**. Simulated screen:

23-09-2026 23:30 UT DR N 10 00.0 W 75 30.0							S
	BODY	GHA	DEC	HC	ZN		
	ARIES	355 19.5					
☉	SUN	174 26.9	S 0 22.8	-8 52.7	271.2		
☾	MOON	25 09.3	S 12 19.9	35 13.9	113.0		
♀	VENUS	142 57.4	S 19 47.4	17 14.7	245.5		
★37	ARCTURUS	141 06.4	N 19 02.7	26 10.6	286.4		
★49	VEGA	75 51.7	N 38 48.8	61 11.1	359.4		
★51	ALTAIR	57 17.9	N 8 56.5	72 01.1	091.8		
★42	ANTARES	107 33.7	S 26 29.5	42 01.7	219.8		
★56	FOMALHAUT	10 32.1	S 29 28.7	16 06.1	124.8		
NAUT TWI 10:06 23:43							MOON 92% ● WAXING
RISE/SET 10:51 22:57							AGE 12.8 DAYS
MER PASS 16:54 SD 15.9							HP 56.0 SD 15.3

Notes

- GHA and Dec are the almanac values for that instant (Sun $\leq 0.02'$, stars $\leq 0.003'$ against JPL); read them directly for sight reduction.
- HALM is a third layout of the same data: chart on the top half, table (GHA, Dec, Hc, Zn) on the bottom half.

Supporting programs for the screens

Program	Use	Stack
PTXS	the C47 status-bar font (12 px); * = star, @ = sun, also % ; entries PINS, PDMS, PZNS, PHMS, PF1S, PDTS	Z = y, Y = x, X = text or number $\rightarrow Y = y$, X = next x
PTXT	small 3x5 pixel font, same characters and stack	as PTXS
SNMU	star name in capitals, returned in X (no display)	X = star no. $\rightarrow$ X = name
SUNSD	Sun semi-diameter 15.994' / R	X = JD $\rightarrow$ X = SD (')
CHZ / HCZ / DHA	Hc and Zn; inverse gives Dec, LHA, GHA	CHZ: T lat, Z lon, Y Dec, X GHA $\rightarrow$ X Hc, Y Zn

ALM — table method (Sun, Aries, Moon, planets)

Evaluates short Chebyshev polynomials whose coefficients you key in from the tables in C47_GHA_Dec_Almanac.pdf or the Excel file. It is the program for the Moon and the planets (Venus, Mars, Jupiter, Saturn).

How it works

- Each table line covers a block: 8 days (192 h) for Sun, Aries and planets; 1 day (24 h) for the Moon.
- $x = 2t/\text{span} - 1$, where t = hours since the start of the block.
- CHEB sums the series with the Clenshaw recurrence; ALM does it for GHA (R10...) and Dec (R20...); HP does the Moon's horizontal parallax (R30-R33).

Inputs and outputs

Store	R01 = n (5, Moon 6), R02 = span (192, Moon 24), GHA coefficients R10..., Dec R20..., Moon HP R30-R33
Input	X = t (hours since the block start, UT1)
Output	X = GHA, Y = Dec; XEQ HP $\rightarrow$ horizontal parallax (arcmin)

Store	R01 = n (5, Moon 6), R02 = span (192, Moon 24), GHA coefficients R10..., Dec R20..., Moon HP R30-R33
Registers	R01-R09, R10-R33, R40-R41

Example with results

Sun, 23 Sep 2026 12:00 UT: block 2026-09-17, $t = 6 \times 24 + 12 = 156$

	c0	c1	c2	c3	c4
GHA	1621.68475	1440.35480	-0.00108	-0.00024	-0.00000
Dec	0.77751	-1.55320	-0.00149	0.00024	-0.00000

Result: GHA 1° 54.4', Dec S 0° 11.6' (same as SUNA).

Moon, 23 Sep 2026 19:00 UT: block 2026-09-23, $t = 19$

	c0	c1	c2	c3	c4	c5
GHA	217.86332	174.54982	0.01758	-0.00081	-0.00002	0.00000
Dec	-14.82363	2.56120	0.04565	-0.00100	-0.00001	-0.00000
HP	55.738	0.303	0.004	-0.000		

Result: GHA 319° 40.8', Dec S 13° 20.6', HP 55.91' ($SD \approx 0.2725 \times HP = 15.24'$).

Notes

- Accuracy 0.002' (HP 0.001'). Tables valid 1 Sep 2026 – 31 Dec 2027; later years with `c47_almanac_generator.py`.
- Not yet run on the C47: check RCL IND and DSE with the Sun example.

TBL and TGET — almanac tables, and the T / S switch

Precise GHA and Dec for a limited period, taken from Chebyshev tables fitted to the JPL ephemeris (the same source as the printed almanac). Once the tables are loaded, the Sun, Aries, Moon and planets on every screen come from them automatically, the screens need about half the program steps, and each screen shows **T** (tables) or **S** (series). Outside the table period everything falls back to the series (SUNA, MOON, PLAN), which work for any date.

How it works

- **Making the tables (PC):** `tools/almanac/c47_almanac_generator.py` computes apparent GHA and Dec from JPL DE421 with the IAU 2006/2000A precession-nutation (ERFA) and fits a Chebyshev polynomial to each block: 8 days (5 terms) for the Sun, Aries and planets, 1 day (6 terms, plus 4 for HP) for the Moon. The tables for 1 Sep 2026 – 31 Dec 2027 are in the Excel file.
- **Turning them into a C47 program:** `tools/almanac/tab2c47.py` START END writes TBL.txt (convert with `rejig`). TBL builds one matrix per body — TSU Sun, TVE Venus, TMA Mars, TJU Jupiter, TSA Saturn, TMO Moon, TAR Aries — and sets flag 10. Row 1 of each matrix holds the JD of the first block, the block length in days, the number of blocks and the number of terms; each following row holds the coefficients of one block.
- **TGET** finds the block for the JD, computes $x = 2 (JD - \text{block start}) / \text{length} - 1$ and sums the series (Clenshaw) for GHA (MOD 360), Dec and, for the Moon, HP; $SD = 358473400 \sin HP / 6378.14 / 60$.
- **The switch (flag 10 set):** SUNA replaces the Sun GHA/Dec (R81, R77) and GHA Aries (R80) with the table values; the stars keep their own calculation with that GHA Aries. SUNG, used by the SUNRISE iterations, takes the Sun from the tables (outside them, the low-precision SUNF). MOO2 and PLN2 call TGET first; if the date is outside the table they compute the series. MOO2 sets flag 11 when the Moon came from the tables.
- **The letter on the screens:** T = flag 11 (the Moon, and so everything except the stars, from the tables), S = series. ALMF and HALMV bottom right, HORZ and HORZS bottom left, ALMT at the end of the first line. On days at the edge of the period (the Moon table starts or ends one day before the 8-day blocks) the screen shows S while the Sun and planets may already come from the tables.

Inputs and outputs

TBL	run once: XEQ TBL → builds the matrices, sets flag 10, shows “TBL 26-09-2026 TO 31-01-2027”. The TBL program can then be deleted; the matrices stay.
TGET in	Y = JD (UT1), X = body: 0 Sun, 1 Venus, 2 Mars, 3 Jupiter, 4 Saturn, 5 Moon, 6 Aries
TGET out	X = GHA, Y = Dec (degrees); Moon also Z = HP, T = SD (arcmin); Aries Y = 0. X = -1 when the date is outside the table.
Flags	10 = tables loaded (CF 10 = use the series only); 11 = Moon from the tables (T on the screens)
Registers	TGET: R00-R09, R35-R39 (the MOON/PLAN work registers)
Programs	TBL, TGET and the updated SUNA, SUNRISE, MOON, PLAN, ALMF, HALMV, HORZ, HORZS, ALMT

Example with results

Cape Town (33° 54' S, 18° 24' E), 23 Nov 2026 09:00 UT, JD 2461367.875. Tables (TGET) against the series programs:

Body	GHA tables	Dec tables	GHA series	Dec series	ΔGHA	ΔDec
Sun	318° 24.7'	S 20° 22.4'	318° 24.7'	S 20° 22.4'	0.002'	0.004'
Moon	157° 34.8'	N 20° 40.0'	157° 34.8'	N 20° 40.0'	0.006'	0.016'
Venus	354° 32.5'	S 9° 15.4'	354° 32.4'	S 9° 15.4'	0.023'	0.018'

Moon HP 60.10' and SD 16.38' from the tables (series 60.10', 16.38'). GHA Aries 197° 21.2'. Outside the table (1 Mar 2027) TGET returns -1 for the Moon.

Program steps for the same screens, series → tables:

Screen	Series	Tables	Saving
ALMF	100,142	38,490	62 %
HALMV	109,732	48,080	56 %
HORZS	67,201	27,990	58 %

ALMF with the tables — note the T in the bottom right corner:

23-11-2026 09:00 UT DR S 33 54.0 E 18 24.0						T
	BODY	GHA	DEC	HC	ZN	
	ARIES	197 21.2				
☉	SUN	318 24.7 S 20 22.4	65 25.4	062.6		
♀	VENUS	354 32.5 S 9 15.4	62 38.2	331.3		
♂	MARS	45 31.2 N 13 49.3	12 46.3	296.6		
♃	JUPITER	48 26.8 N 13 26.5	10 49.4	294.4		
★ 17	CANOPUS	101 12.5 S 52 42.4	11 15.5	212.5		
★ 38	RIGIL KENT	337 00.0 S 60 56.7	62 47.5	175.1		
★ 37	ARCTURUS	343 08.0 N 19 02.5	37 02.3	358.2		
★ 35	HADAR	345 55.6 S 60 30.0	63 15.1	184.7		
★ 30	ACRUX	10 20.0 S 63 14.7	55 39.5	202.6		
NAUT TWI 02:28 18:38 MOON 98% WAXING						
RISE/SET 03:31 17:35 AGE 14.1 DAYS						
MER PASS 10:33 SD 16.2 HP 60.1 SD 16.4						

DOES NOT REPLACE THE NAUTICAL ALMANAC

Notes

- Differences between tables and series are the series' own error: at most about 0.005' for the Sun, 0.02' for the planets and 0.07' for the Moon. On the screens this changes at most the last digit (0.1').
- One TGET call takes about 265 steps (Moon 400) against 2 000–12 000 for the series; that is where the time saving comes from.
- The tables expire: load the next period in time (a quarter or a year per file, depending on memory). TBL for 26 Sep 2026 – 31 Jan 2027 holds 3 054 numbers, about the size of MATP.
- ΔT (TT – UT1) is fixed in the generator (69.2 s). One second of error moves the Moon by about 0.01'.

- The PC version (python/native/c47pc.py) reads the same tables (by default build/TBL_5.txt, 1 Oct 2026 – 30 Sep 2031) and gives the same screens (box “Almanac tables”, or --tables / --series).

Using the results for Hc and Zn

- GHA and Dec at the sight time (UT = UTC + DUT1): SUNA (Sun), STAR (stars), ALM (Moon, planets).
- $LHA = GHA + \lambda (E +), \text{ mod } 360$.
- $Hc = \text{asin}(\sin \varphi \sin \delta + \cos \varphi \cos \delta \cos LHA)$.
- $Zn = \text{atan2}(-\cos \delta \sin LHA, \cos \varphi \sin \delta - \sin \varphi \cos \delta \cos LHA), \text{ mod } 360$.
- Intercept = Ho – Hc, toward Zn if positive. The C47 key →HcZ may do these steps directly.
- For Ho you still need index error, dip, refraction, SD (☉ from R73, ☾ from ALM HP) and the almanac's planet corrections.

Python and NumWorks version

nav.py + navdata.py contain the same methods (SUNA, STAR, SUNRISE, PHAS) for a computer or a NumWorks. The menu asks for year, month, day and UT (hh:mm:ss) and computes the JD itself. Results are identical to the C47 programs (for example Sun 23 Sep 2026 12h: GHA 1° 54.4′, Dec S 0° 11.6′).

PC version (c47pc 1.5)

python/native/c47pc.py shows the same screens in a window on the PC (GTK 3), with its own calculations and no calculator programs, identical pixel for pixel to the C47. – / + step the UT (keys or the buttons next to Now UTC) by 1 s to 999 days (1 h by default); hold the key to watch the sky move. It also writes a screen to PNG (--png) or the ALMT lines as text.

Register map

Program	Registers
SUNA	50–55, 60–67, 70–81
STAR	56–59, 68–69, 82–89
SUNRISE, HORZ	90–99
PHAS	41–48
SNAM	49
ALM	01–09, 10–33, 40–41
CHZ	91–92, 94–97
PTXS / PTXT	30–36
HALMV, ALMF, HALM	10–29, 37, 40–48 (work registers, results of SUNRISE/PHAS kept in 13–19)

C47 notes

- The C47 does not treat →DEG and flag 77 like the HP-42S; the programs avoid both (verified on the C47 with SUNA).
- Memory: NAVFULL about 8 000 steps (24.2 KB); the FULL matrices about 6 000 numbers (FAST about 3 400), plus the cache matrix ALMC (73 × 4) and, while the charts are drawn, the equator dots EQ2 / EQ3 (NAV deletes the ALMQ that INIT makes).
- Keep the printed Nautical Almanac as the primary reference; use the calculator as support and cross-check.