


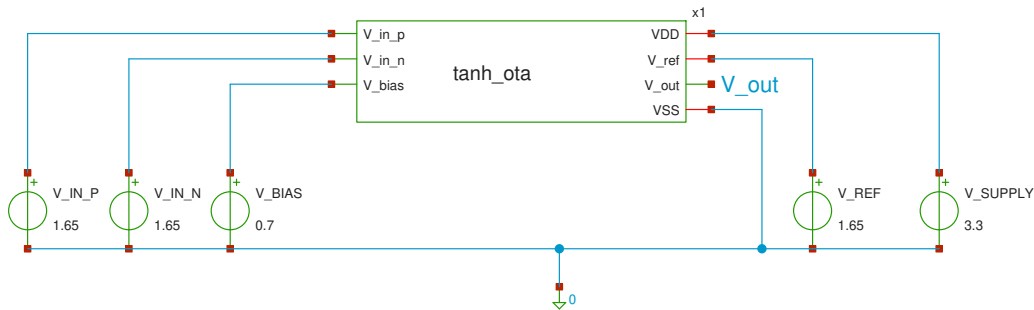

COMMANDS

```
.control
  dc V_IN_P 1.4 1.9 0.002
  let V_out = v(V_out)
  plot V_out title "tanh OTA: Saturating Transfer Characteristic"
  wrdata /foss/designs/analog-perceptron-gf180mcu/plots/tanh_ota_sweep.txt V_out
.endc
```

MODELS

```
.include $::180MCU_MODELS/design.ngspice
.lib $::180MCU_MODELS/sm141064.ngspice typical
.lib $::180MCU_MODELS/sm141064.ngspice res_typical
* .lib $::180MCU_MODELS/sm141064.ngspice res_statistical
```