



LEVELS ASSEMBLY MANUAL

1. PREPARE CASES


Use iron to press in heat set inserts on both the top cap of the trackball carrier and the case..

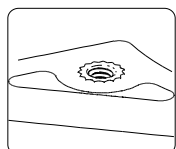

Set inserts flush with case

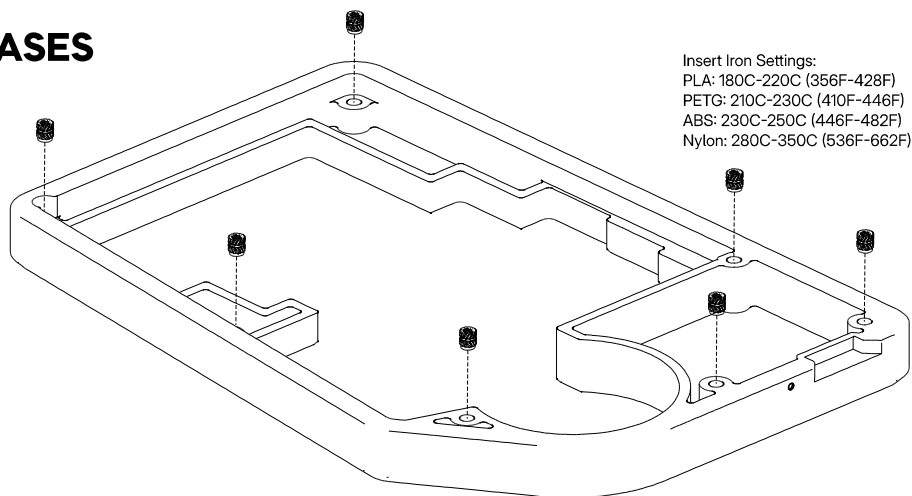


Insert Iron Settings:
PLA: 180C-220C (356F-428F)
PETG: 210C-230C (410F-446F)
ABS: 230C-250C (446F-482F)
Nylon: 280C-350C (536F-662F)

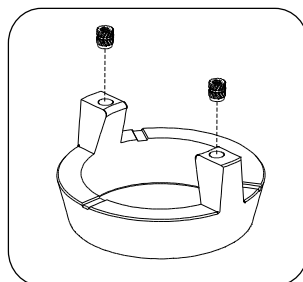

**good.
great.
grand.
wonderful.**
ergokeyboards.com

2. INSTALL JST CONNECTORS

Solder battery connection on the topside of the PCB, with the female end facing towards the center of the board.

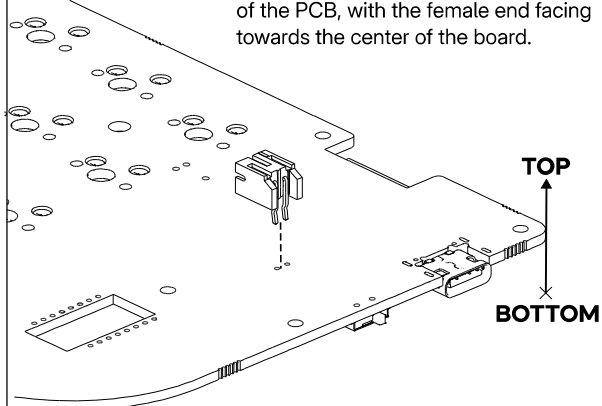


3. INSTALL TRACKBALL SENSORS

Carefully place the sensors in their correct orientation and solder them in place. Careful to not overheat the sensor as it is not tolerant to a lot of heat.


NOTE: ensure you install the sensors with pin 1 in the correct position as marked on the PCB.

This is crucial for operation, and very easy to mess up.

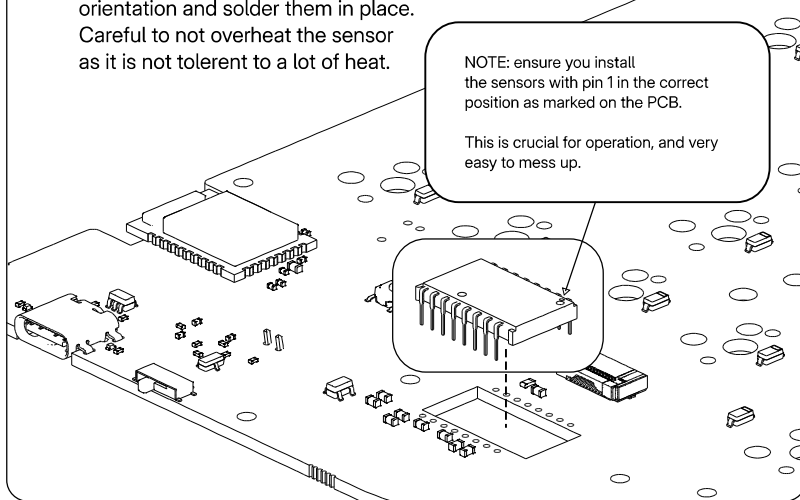

4. INSTALL HOT SWAP SOCKETS

Place and solder sockets using the silkscreen outline as your guide.

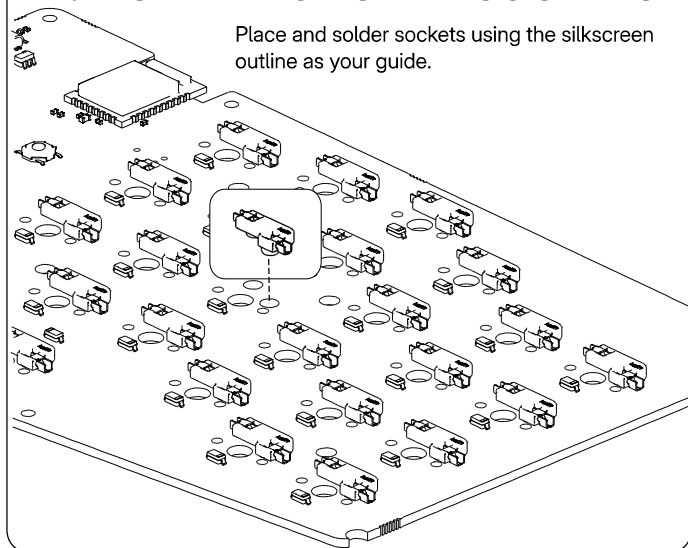

5. INSTALL PLATE & SWITCHES

Insert keyswitches in each corner of the plate. Use them as a guide to install the plate onto the board. Install the remaining switches with care as to not bend any pins.

