


DWG NO.: 3800-01


DATE: 10/08/10

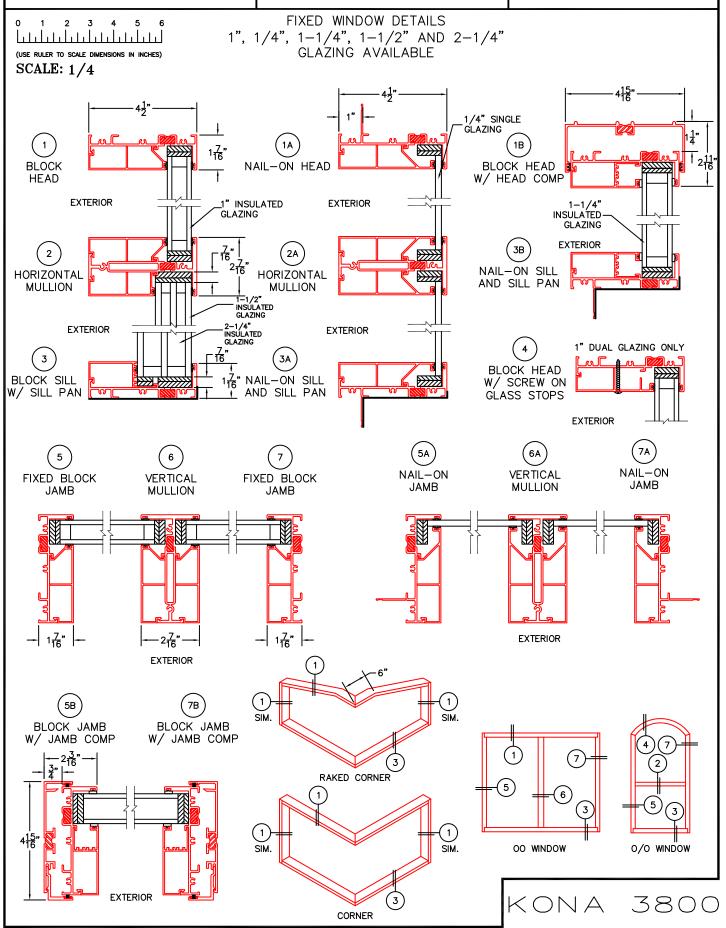



DWG NO.: 3800-01\_01\_02\_03


DATE: 10-08-10

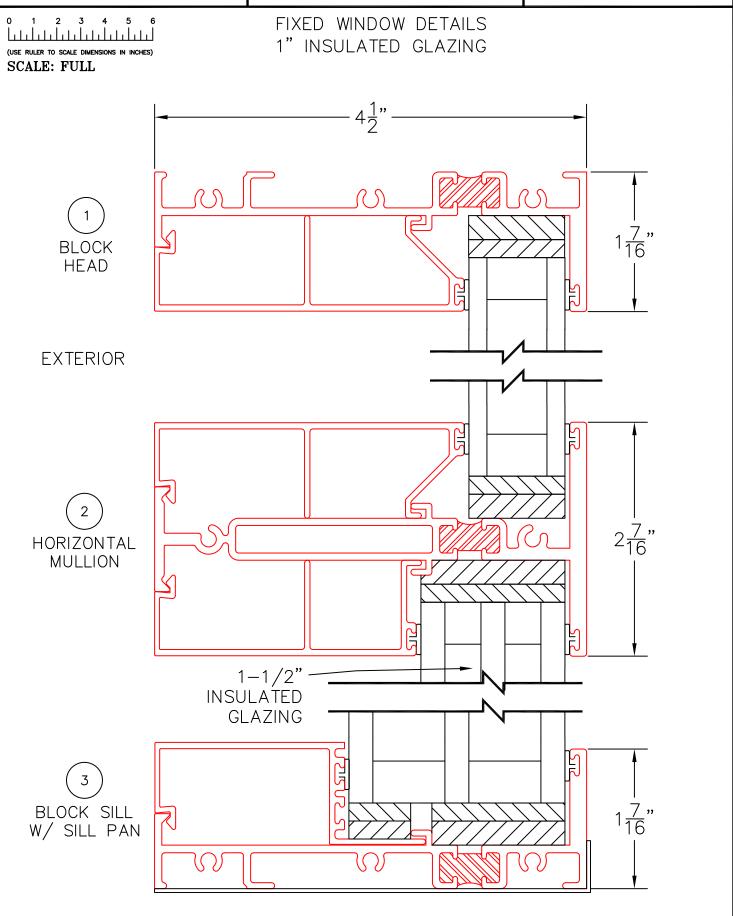




DWG NO.: 3800-01\_01A\_03A

DATE: 03-14-06

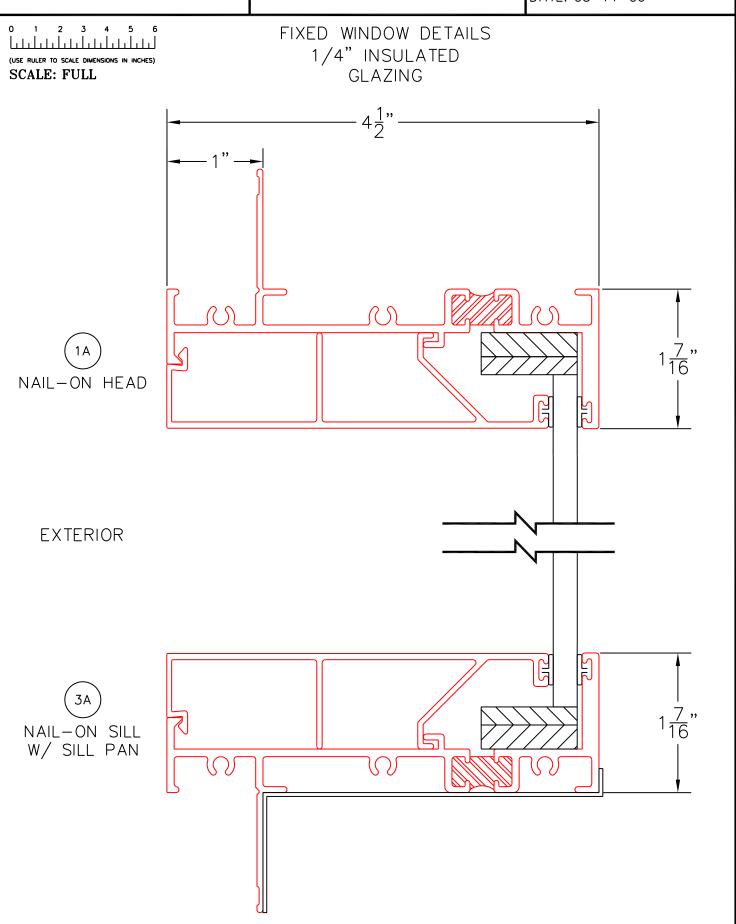

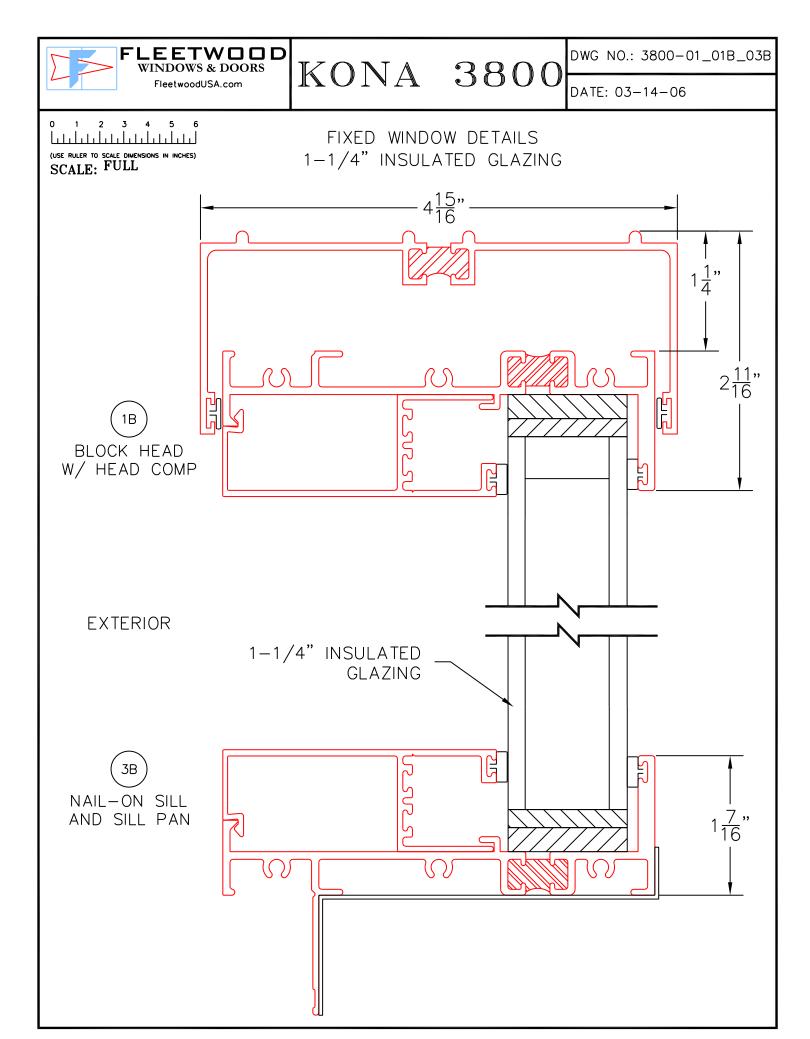




DWG NO.: 3800-01\_04


DATE: 03-14-06

ladadadadadadad (use ruler to scale dimensions in inches)  $SCALE\colon\thinspace FULL$  FIXED WINDOW DETAILS 1" INSULATED GLAZING

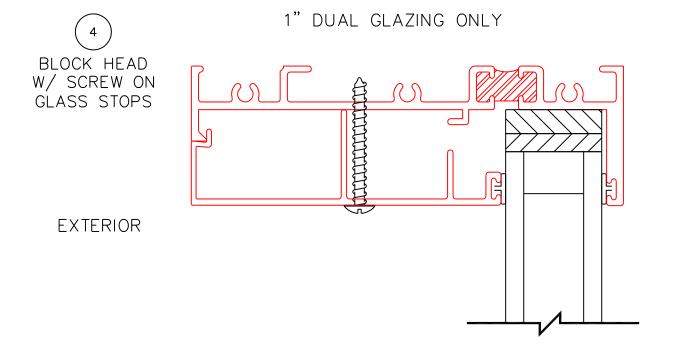




DWG NO.: 3800-01\_05\_06\_07

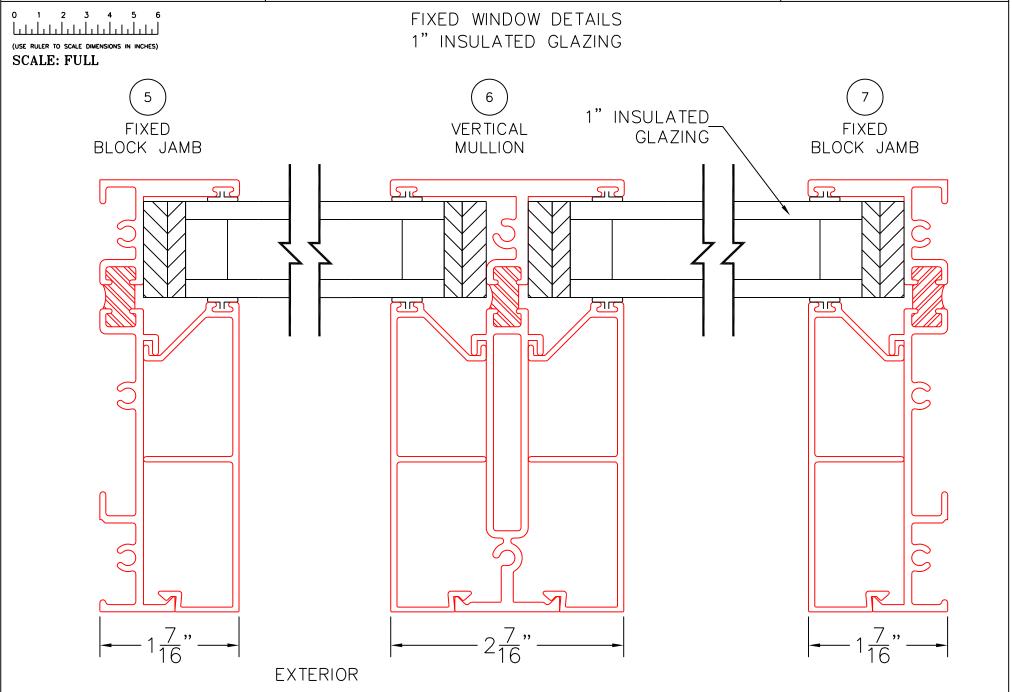




DWG NO.: 3800-01\_05A\_06A\_07A

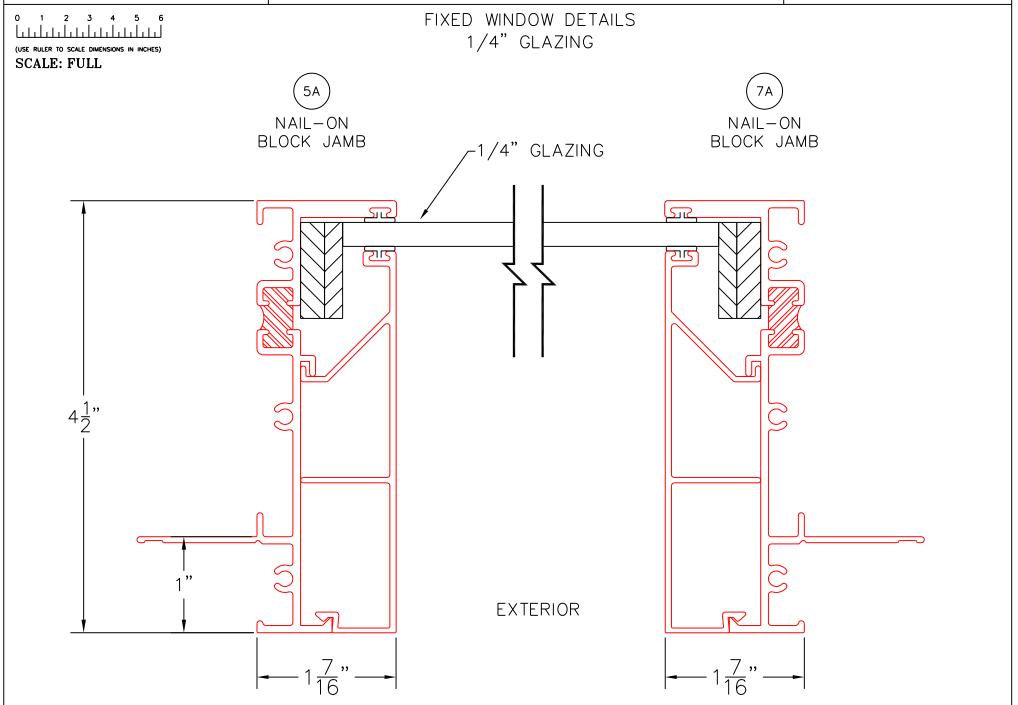



DWG NO.: 3800-01\_05B\_07B

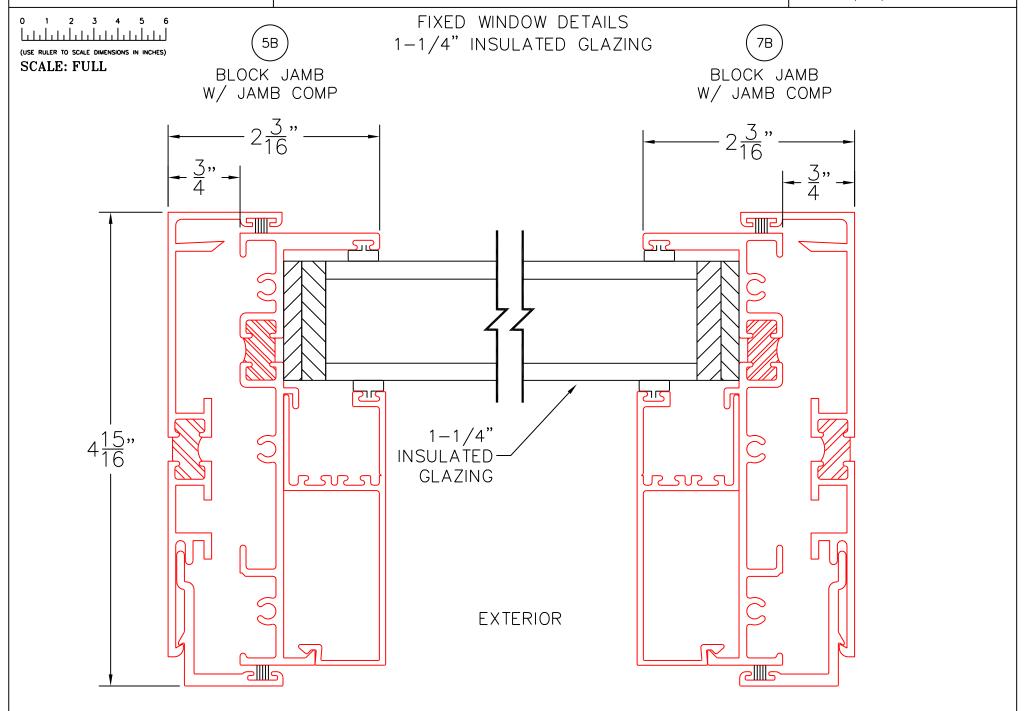




DWG NO.: 3800-02

DATE: 03-25-10




(USE RULER TO SCALE DIMENSIONS IN INCHES)

SCALE: 1/4

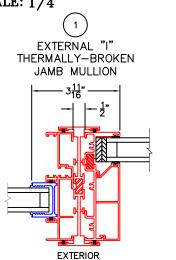


FLEETWOOD 1000 TO KONA 3800


JAMB MULLION DETAILS

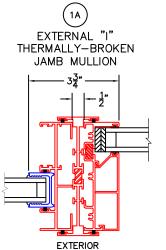


NORWOOD 3000 TO KONA 3800

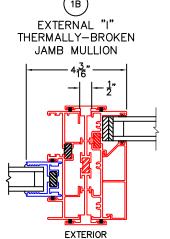


GLACIER 3300 TO KONA 3800

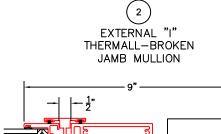

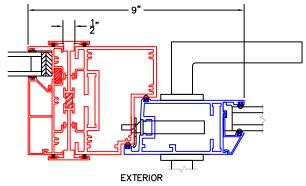


KONA 3800 TO PACIFIC 3500




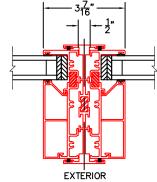


KONA 3800 TO KONA 3800

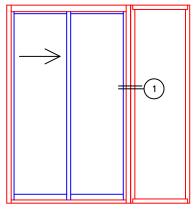

KONA MULLED TO XO SLIDING DOOR

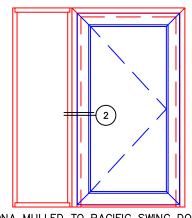

KONA MULLED TO PACIFIC SWING DOOR

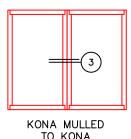

TO KONA




DWG NO.: 3800-02\_01

DATE: 03-25-10

(USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE: FULL

THERMALLY-BROKEN JAMB MULLION DETAILS 1" INSULATED GLAZING

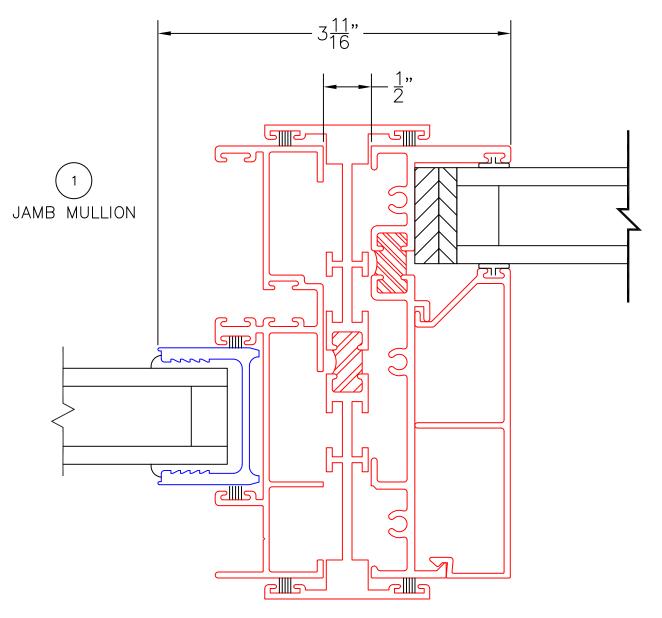

**EXTERIOR** FLEETWOOD 1000-1 TO KONA 3800




DWG NO.: 3800-02\_01A

DATE: 03-25-10

(USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE: FULL

THERMALLY-BROKEN JAMB MULLION DETAILS 1" INSULATED GLAZING

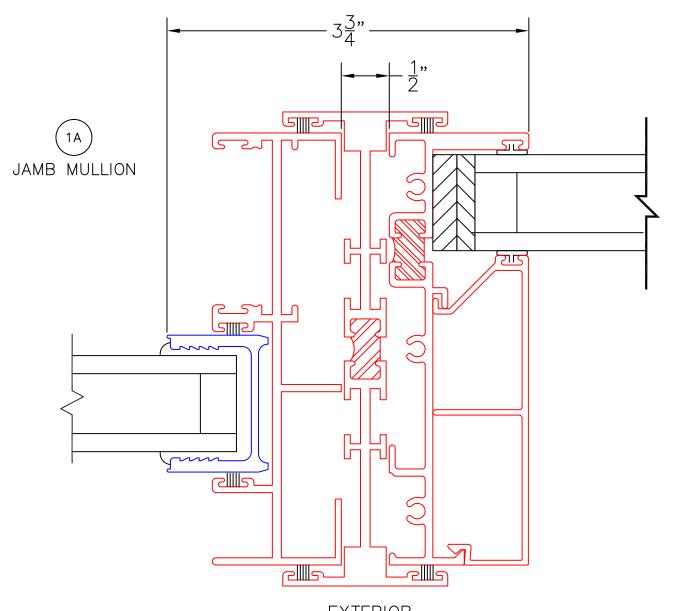

**EXTERIOR** NORWOOD 3000 TO KONA 3800




DWG NO.: 3800-02\_01B

DATE: 03-25-10

(USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE: FULL

THERMALLY-BROKEN JAMB MULLION DETAILS 1" INSULATED GLAZING

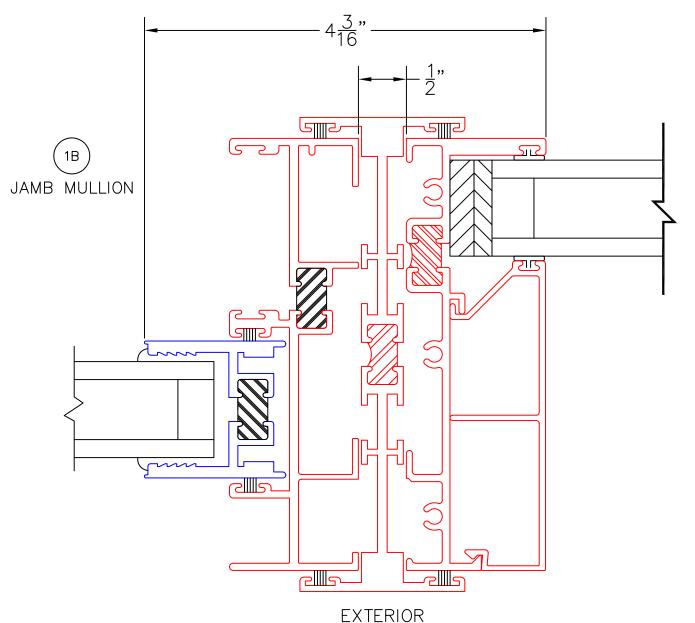


GLACIER 3300 TO KONA 3800



DWG NO.: 3800-02\_02

DATE: 03-25-10

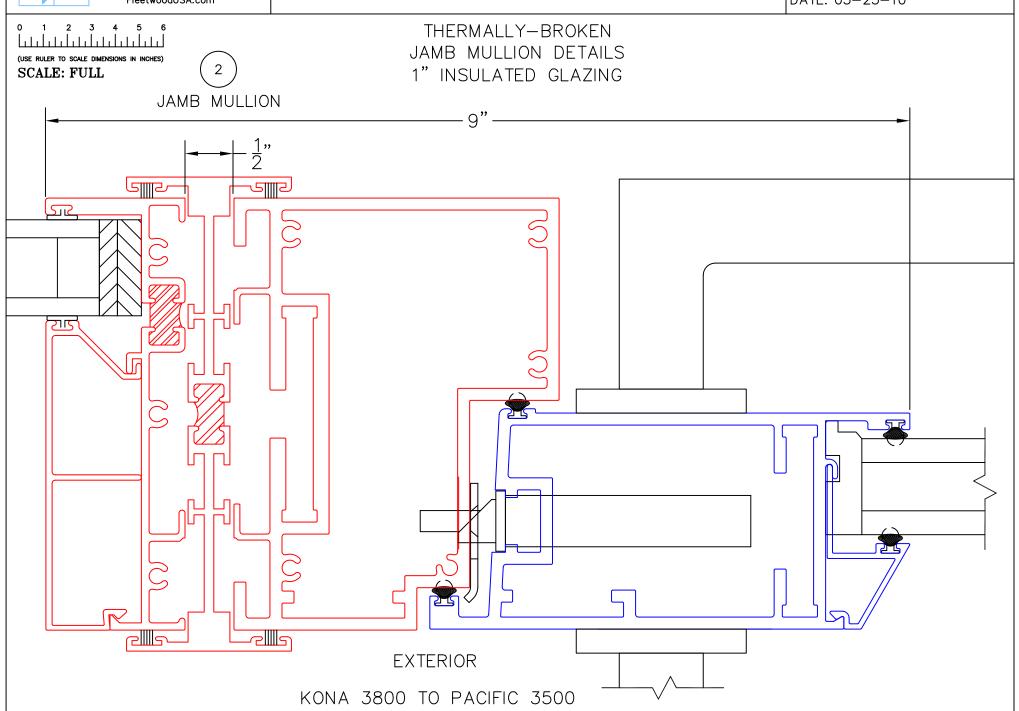




DWG NO.: 3800-02\_03

DATE: 03-25-10

(USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE: FULL


THERMALLY-BROKEN JAMB MULLION DETAILS 1" INSULATED GLAZING

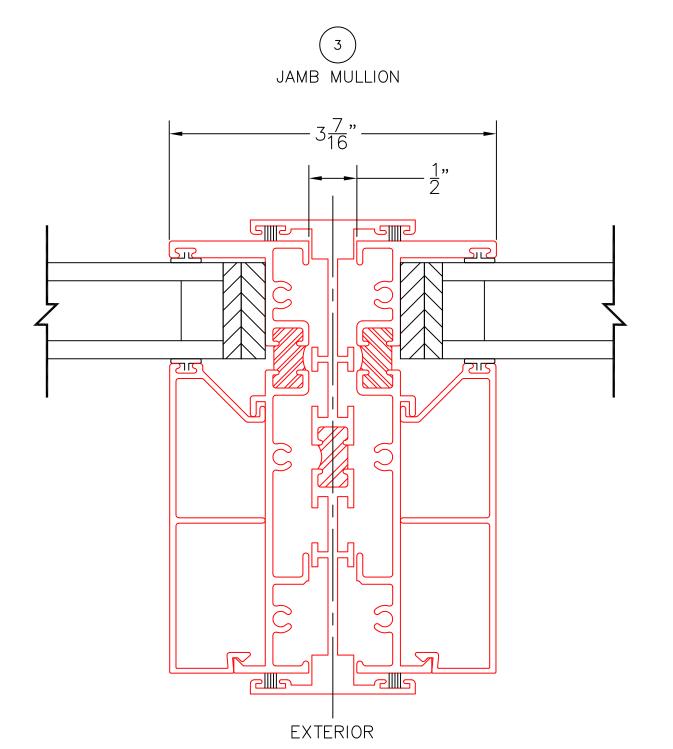

KONA 3800 TO KONA 3800



DWG NO.: 3800-04

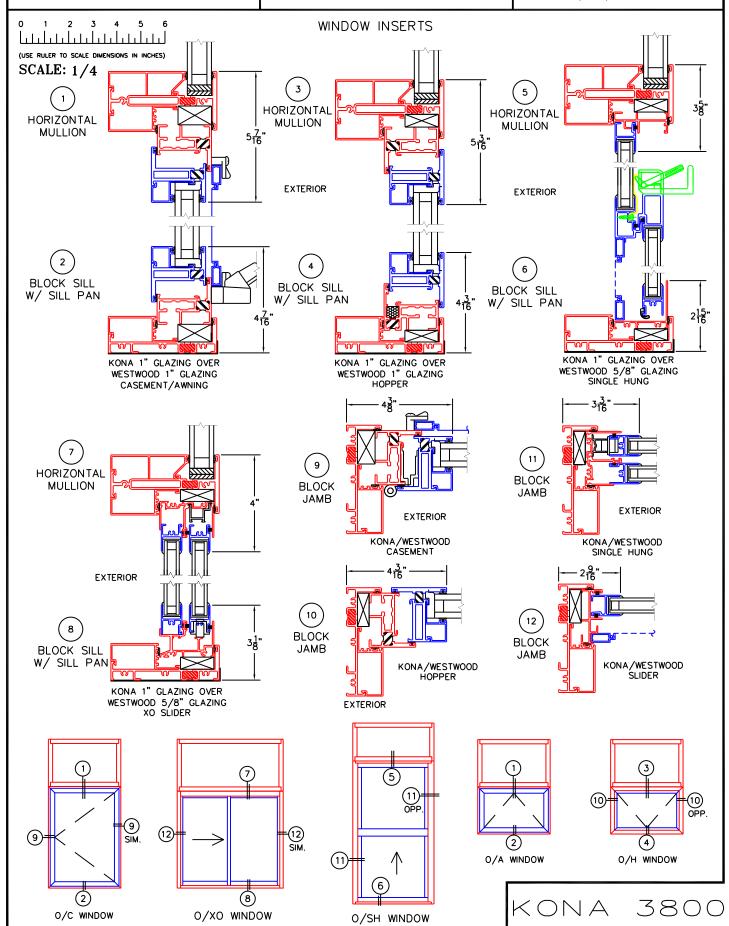



DWG NO.: 3800-04\_01

DATE: 03-14-06

FIXED WINDOW DETAILS 1" INSULATED GLAZING (use ruler to scale dimensions in inches)  $SCALE; \ FULL$ HORIZONTAL MULLION 5<del>7</del>7 **EXTERIOR** KONA 1" GLAZING OVER WESTWOOD 1" GLAZING CASEMENT




DWG NO.: 3800-04\_02

DATE: 03-14-06

0 1 2 3 4 5 6 (use ruler to scale dimensions in inches)  $SCALE; \begin{tabular}{ll} FULL \\ \hline \end{tabular}$ 

WINDOW INSERT DETAILS 1" INSULATED GLAZING

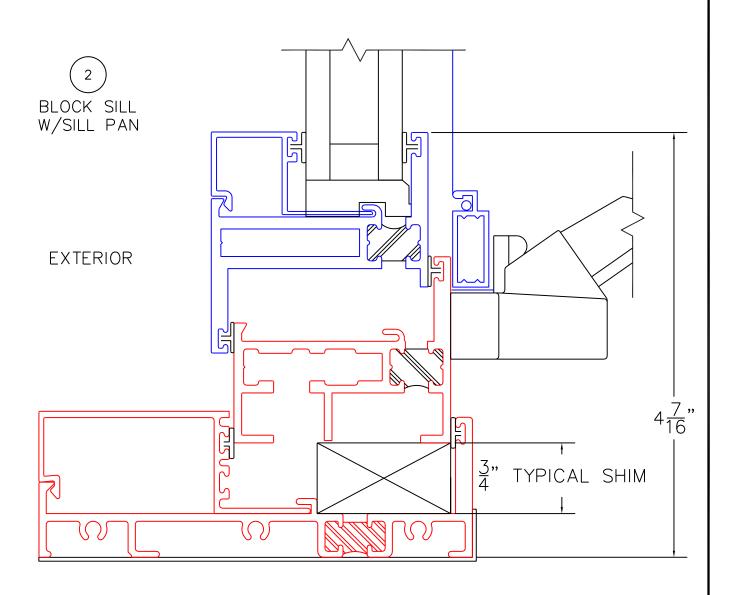


KONA 1" GLAZING OVER WESTWOOD 1" GLAZING CASEMENT



DWG NO.: 3800-04\_03

DATE: 03-14-06

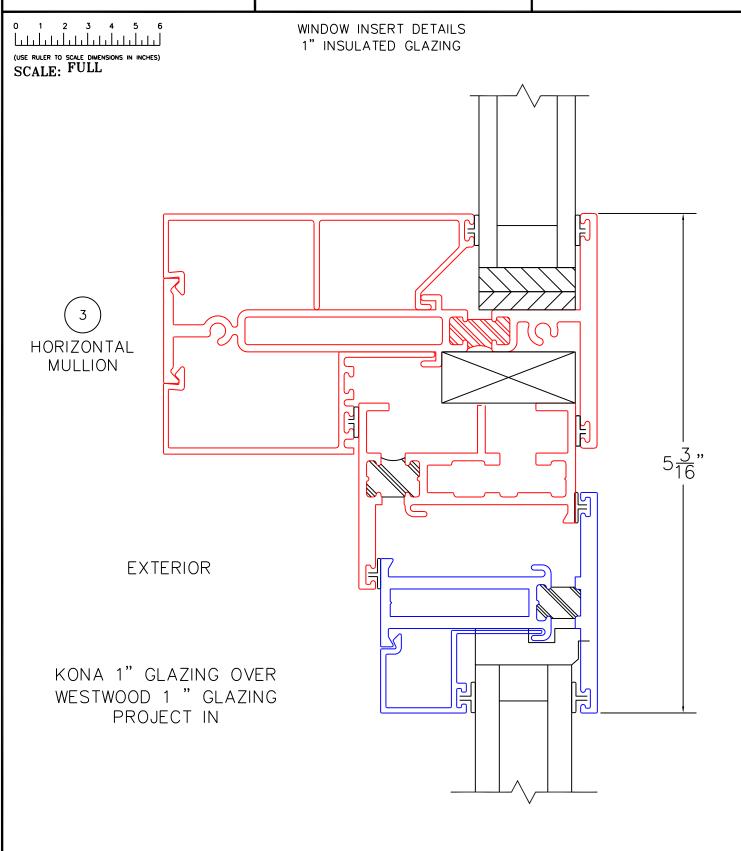




DWG NO.: 3800-04\_04

DATE: 03-14-06

0 1 2 3 4 5 6 (use ruler to scale dimensions in inches)  $SCALE; \begin{tabular}{ll} FULL \\ \hline \end{tabular}$ 

WINDOW INSERT DETAILS 1" INSULATED GLAZING

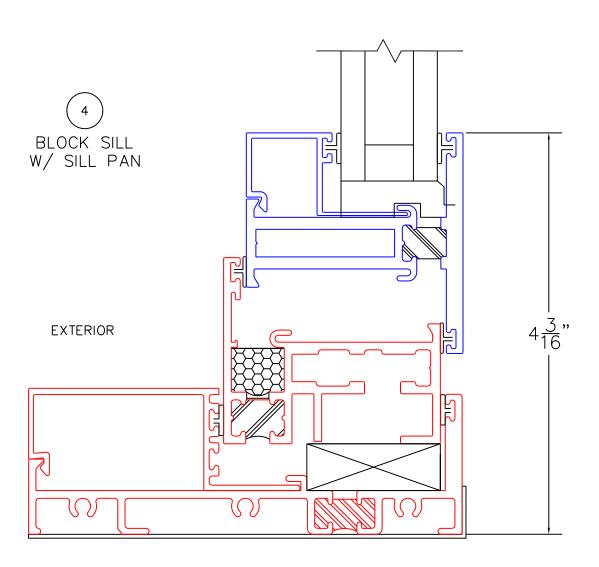


KONA 1" GLAZING OVER WESTWOOD 1" GLAZING PROJECT-IN



DWG NO.: 3800-04\_05

DATE: 03-14-06

(USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE: FULL

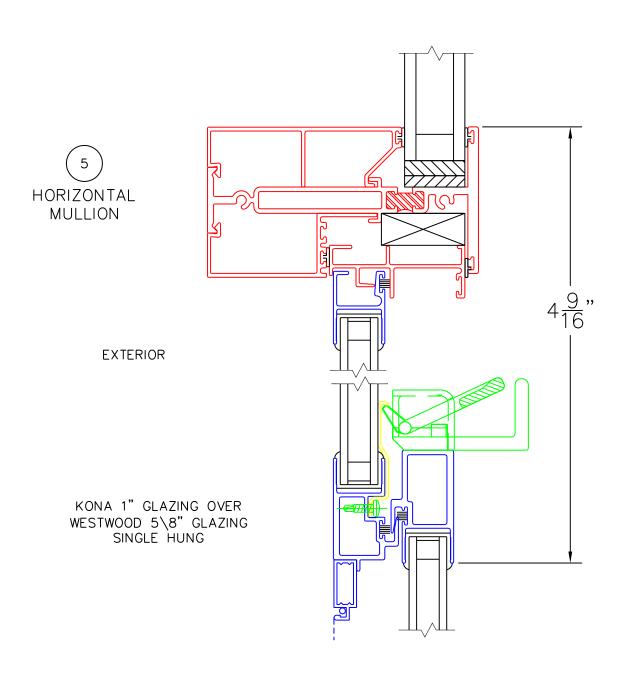




DWG NO.: 3800-04\_06

DATE: 03-14-06

(use ruler to scale dimensions in inches)  $SCALE\colon\thinspace FULL$ 

WINDOW INSERT DETAILS 1" INSULATED GLAZING

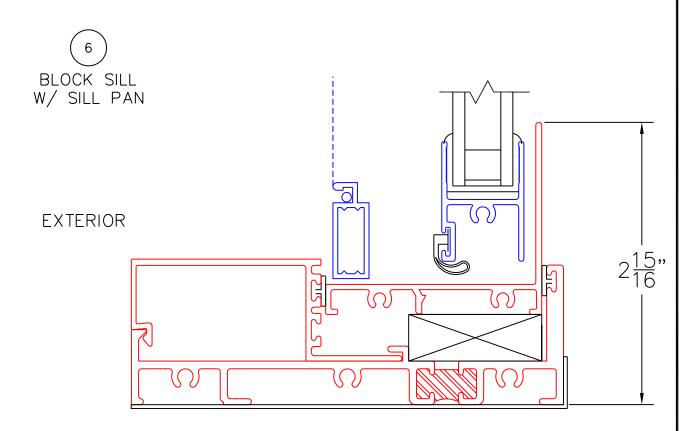

KONA 1" GLAZING OVER WESTWOOD 5/8" GLAZING SINGLE HUNG




DWG NO.: 3800-04\_07

DATE: 03-14-06

(use ruler to scale dimensions in inches) SCALE: FULL

WINDOW INSERT DETAILS 1" INSULATED GLAZING

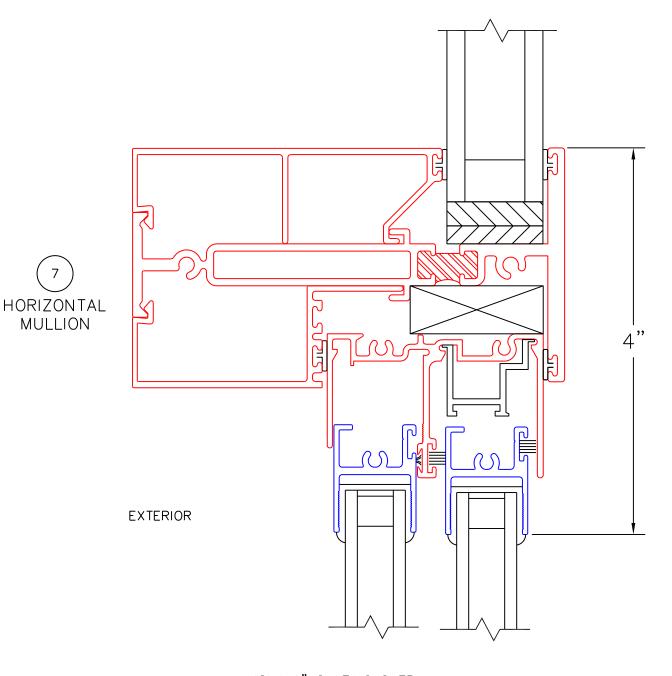

KONA 1" GLAZING OVER WESTWOOD 5\8" GLAZING SINGLE HUNG




DWG NO.: 3800-04\_08

DATE: 03-14-06

(USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE:

WINDOW INSERT DETAILS 1" INSULATED GLAZING

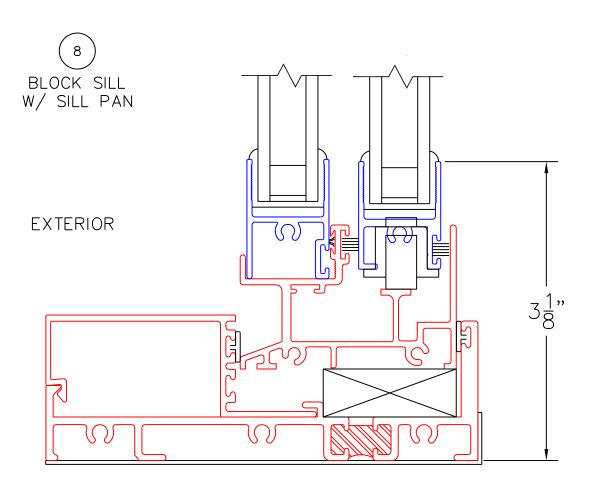


KONA 1" GLAZING OVER WESTWOOD 5/8" GLAZING XO SLIDER



DWG NO.: 3800-04\_09

DATE: 03-14-06

(use ruler to scale dimensions in inches)  $SCALE; \begin{tabular}{ll} FULL \\ \hline \end{tabular}$ 

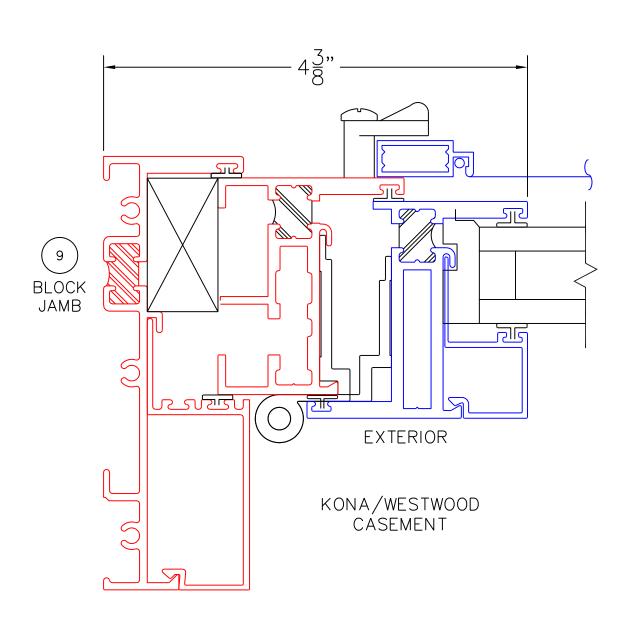




DWG NO.: 3800-04\_10

DATE: 03-14-06



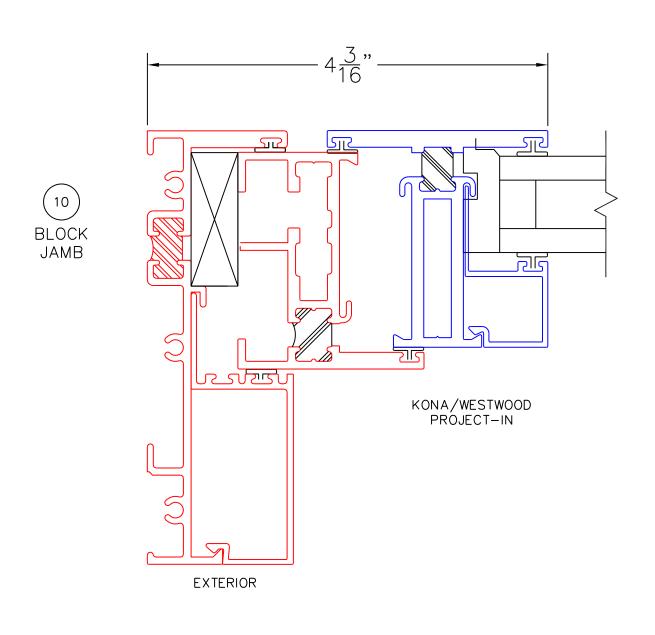




DWG NO.: 3800-04\_11

DATE: 03-14-06

(use ruler to scale dimensions in inches)  $SCALE\colon\thinspace FULL$ 



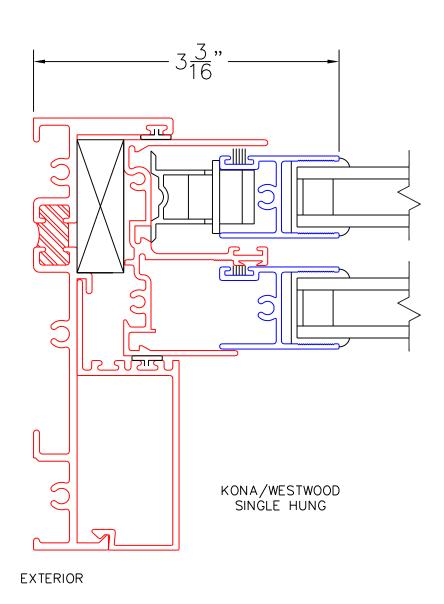




DWG NO.: 3800-04\_12

DATE: 03-14-06

0 1 2 3 4 5 6

WINDOW INSERT DETAILS 1" INSULATED GLAZING

(use ruler to scale dimensions in inches)  $SCALE\colon\thinspace FULL$ 

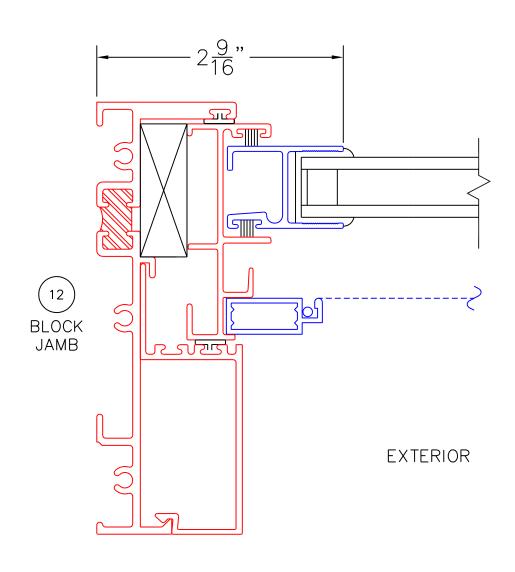

KONA/WESTWOOD SLIDER