


DWG NO.: 3800-04

DATE: 07/02/07

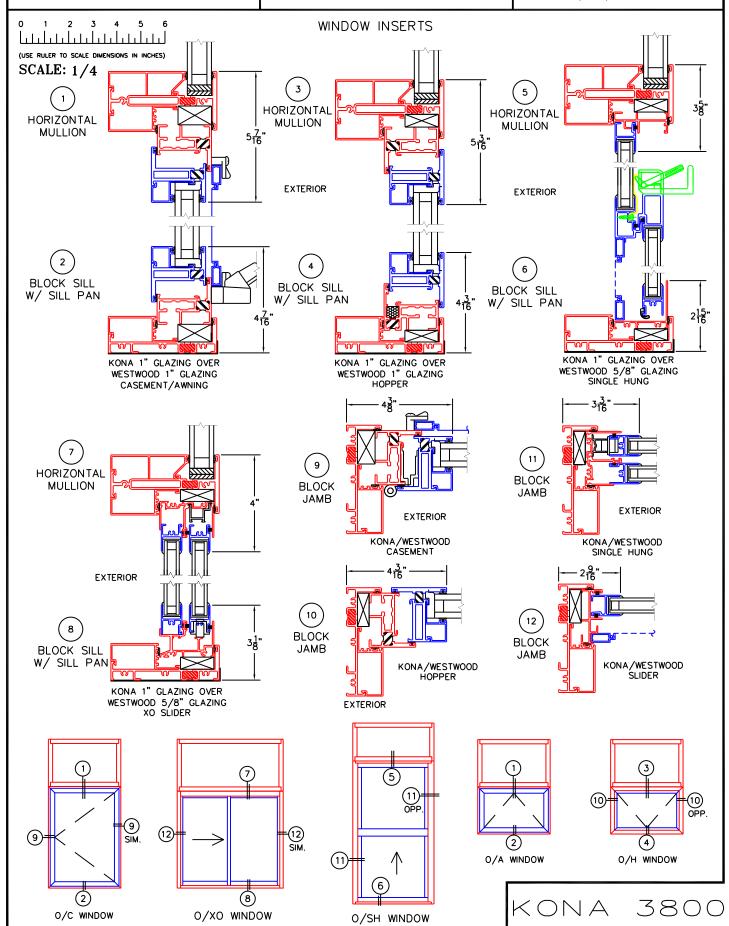



DWG NO.: 3800-04\_01

DATE: 03-14-06

FIXED WINDOW DETAILS 1" INSULATED GLAZING (use ruler to scale dimensions in inches)  $SCALE; \ FULL$ HORIZONTAL MULLION 5<del>7</del>7 **EXTERIOR** KONA 1" GLAZING OVER WESTWOOD 1" GLAZING CASEMENT




DWG NO.: 3800-04\_02

DATE: 03-14-06

0 1 2 3 4 5 6 (use ruler to scale dimensions in inches)  $SCALE; \begin{tabular}{ll} FULL \\ \hline \end{tabular}$ 

WINDOW INSERT DETAILS 1" INSULATED GLAZING

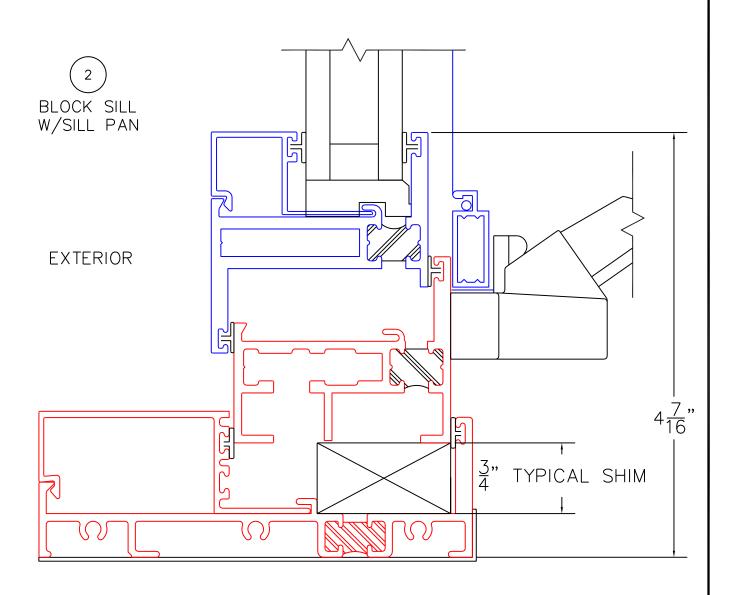


KONA 1" GLAZING OVER WESTWOOD 1" GLAZING CASEMENT



DWG NO.: 3800-04\_03

DATE: 03-14-06

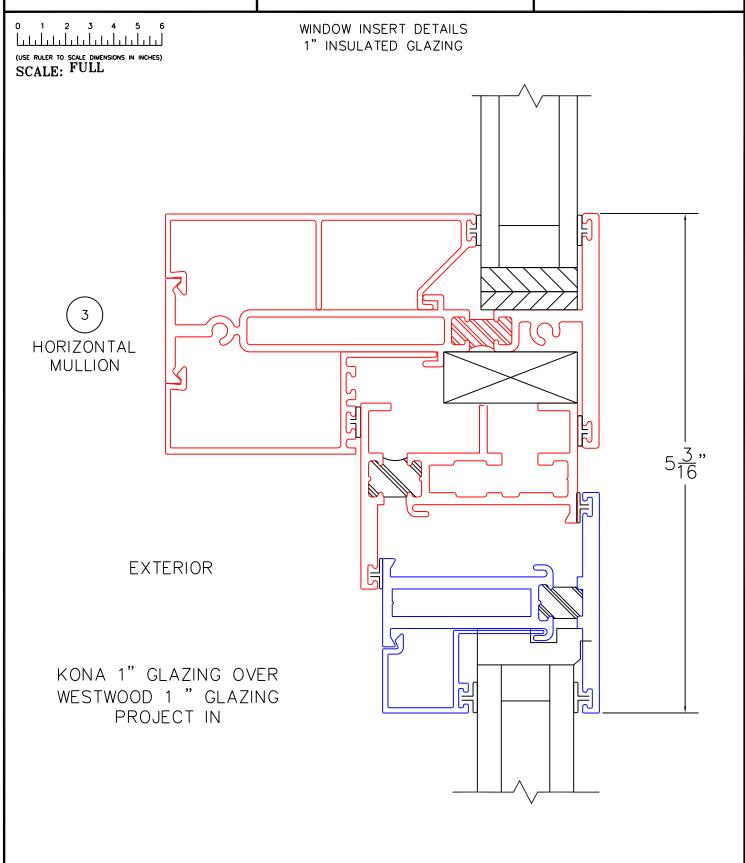




DWG NO.: 3800-04\_04

DATE: 03-14-06

0 1 2 3 4 5 6 (use ruler to scale dimensions in inches)  $SCALE; \begin{tabular}{ll} FULL \\ \hline \end{tabular}$ 

WINDOW INSERT DETAILS 1" INSULATED GLAZING

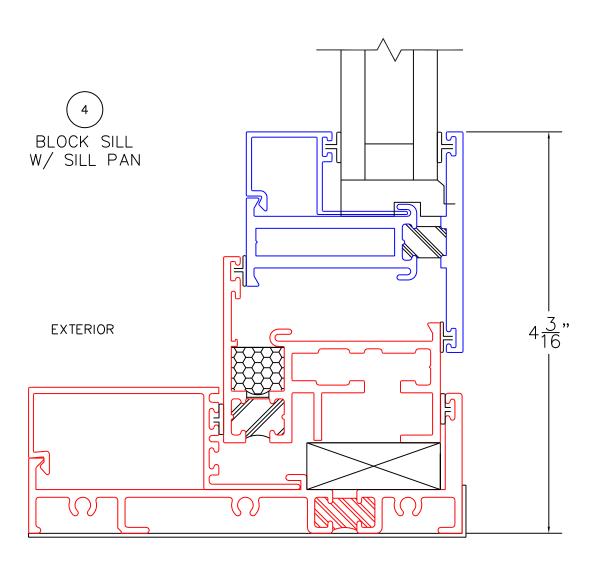


KONA 1" GLAZING OVER WESTWOOD 1" GLAZING PROJECT-IN



DWG NO.: 3800-04\_05

DATE: 03-14-06

(USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE: FULL

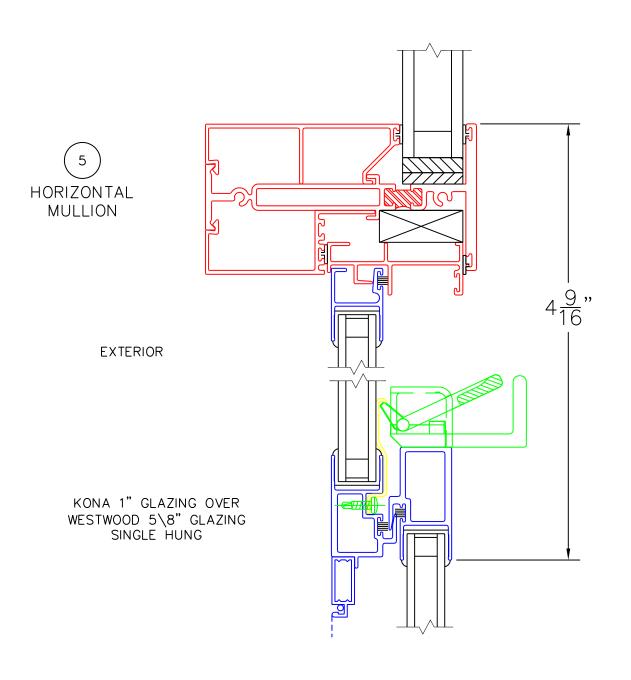




DWG NO.: 3800-04\_06

DATE: 03-14-06

(use ruler to scale dimensions in inches)  $SCALE\colon\thinspace FULL$ 

WINDOW INSERT DETAILS 1" INSULATED GLAZING

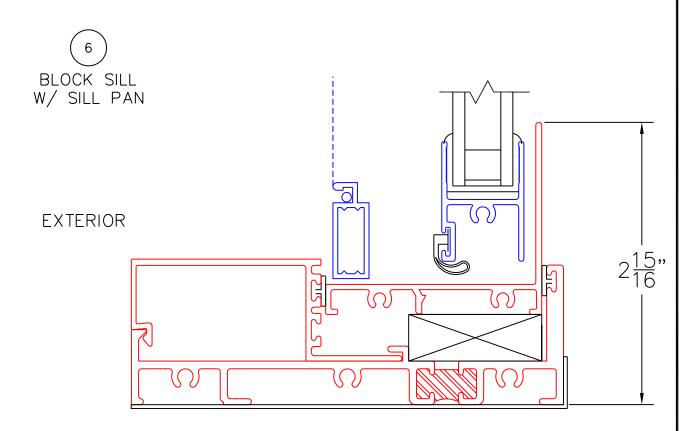

KONA 1" GLAZING OVER WESTWOOD 5/8" GLAZING SINGLE HUNG




DWG NO.: 3800-04\_07

DATE: 03-14-06

(use ruler to scale dimensions in inches) SCALE: FULL

WINDOW INSERT DETAILS 1" INSULATED GLAZING

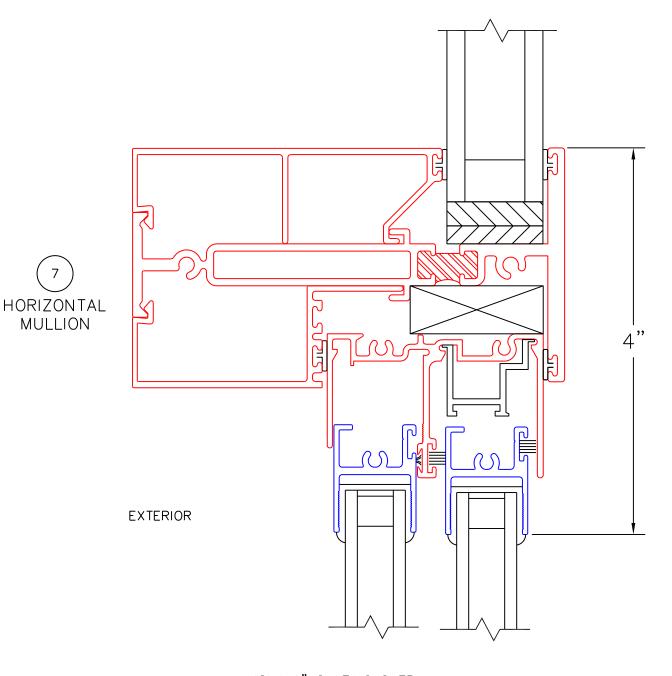

KONA 1" GLAZING OVER WESTWOOD 5\8" GLAZING SINGLE HUNG




DWG NO.: 3800-04\_08

DATE: 03-14-06

(USE RULER TO SCALE DIMENSIONS IN INCHES) SCALE:

WINDOW INSERT DETAILS 1" INSULATED GLAZING

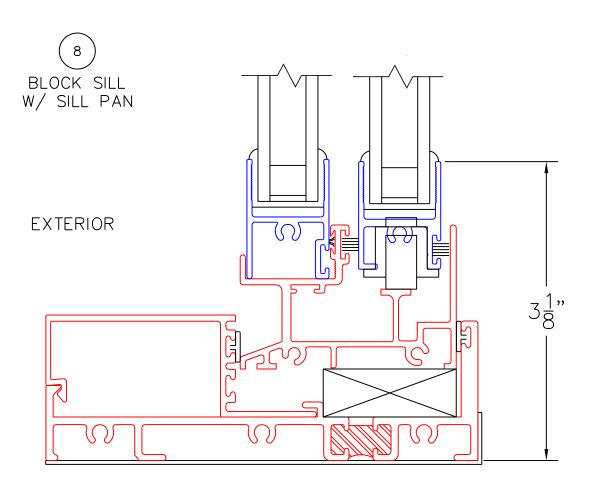


KONA 1" GLAZING OVER WESTWOOD 5/8" GLAZING XO SLIDER



DWG NO.: 3800-04\_09

DATE: 03-14-06

(use ruler to scale dimensions in inches)  $SCALE; \begin{tabular}{ll} FULL \\ \hline \end{tabular}$ 

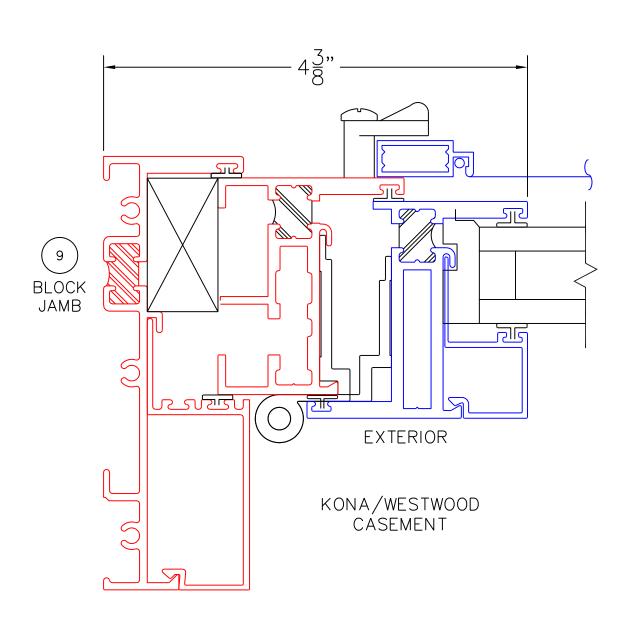




DWG NO.: 3800-04\_10

DATE: 03-14-06



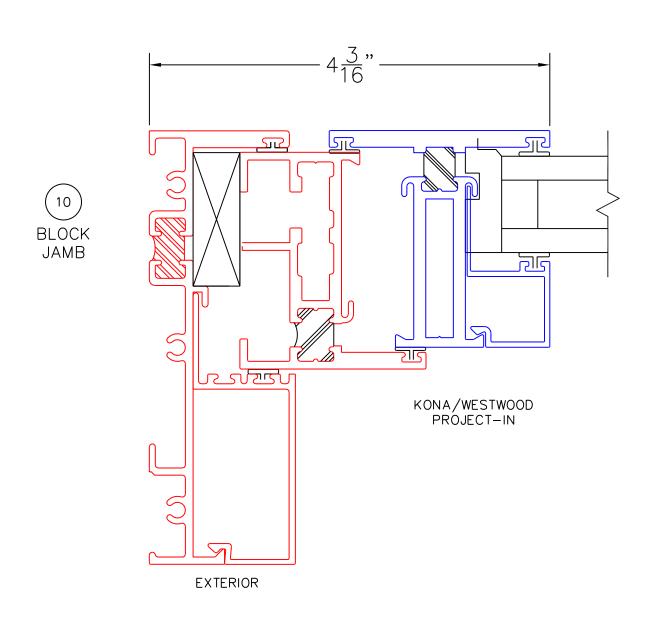




DWG NO.: 3800-04\_11

DATE: 03-14-06

(use ruler to scale dimensions in inches)  $SCALE\colon\thinspace FULL$ 



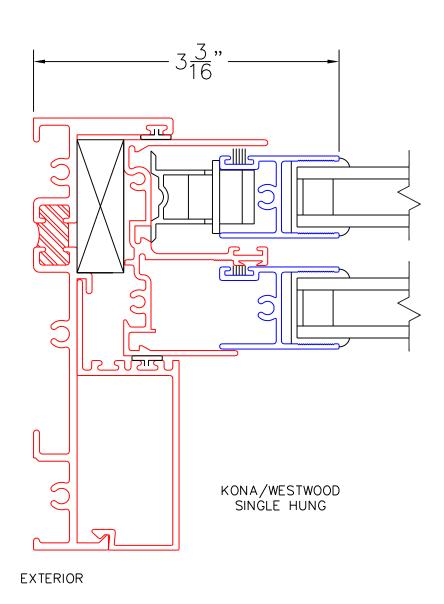




DWG NO.: 3800-04\_12

DATE: 03-14-06

0 1 2 3 4 5 6

WINDOW INSERT DETAILS 1" INSULATED GLAZING

(use ruler to scale dimensions in inches)  $SCALE\colon\thinspace FULL$ 

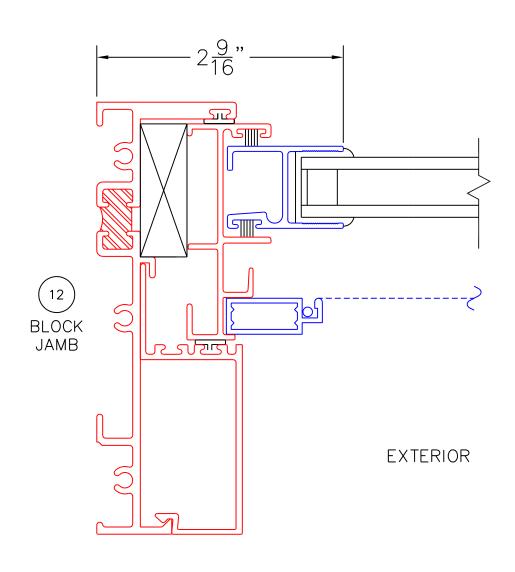

KONA/WESTWOOD SLIDER