




AC-SENSING / START

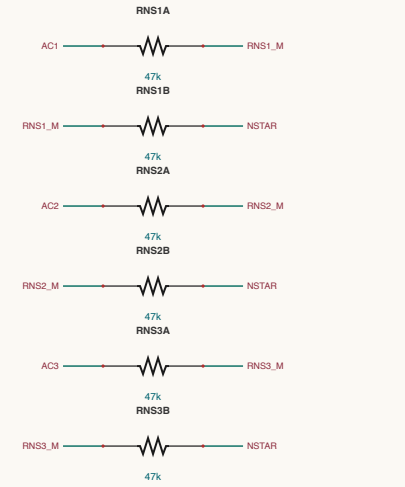


AC-SENSING / SENSE-VAC1

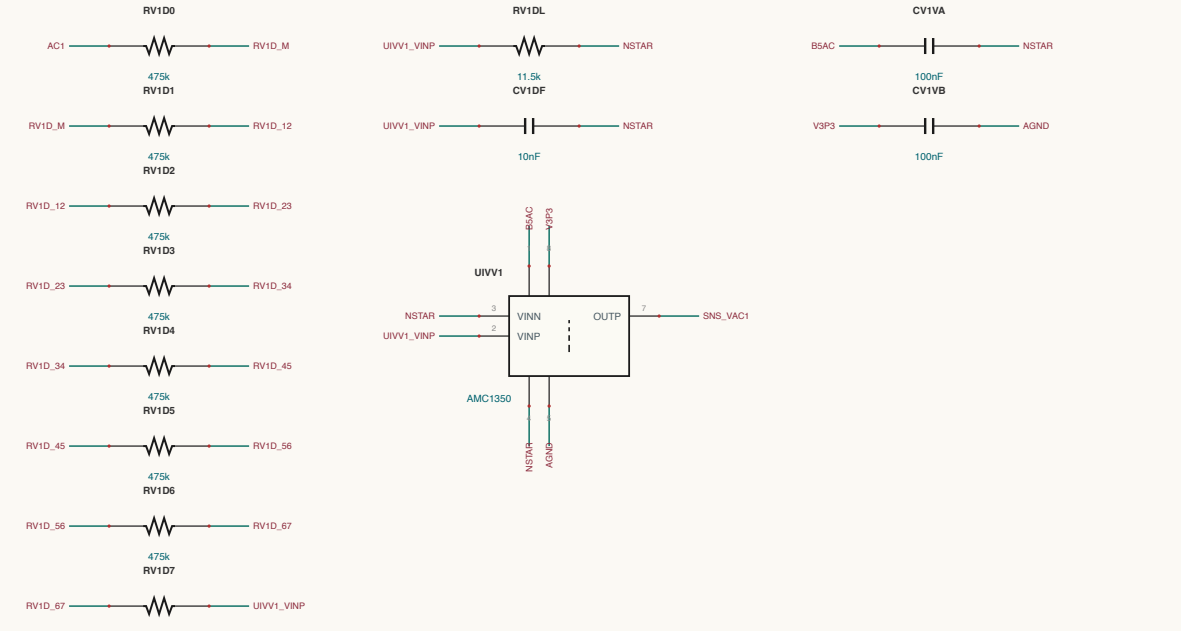


AC-SENSING / SENSE-VAC2

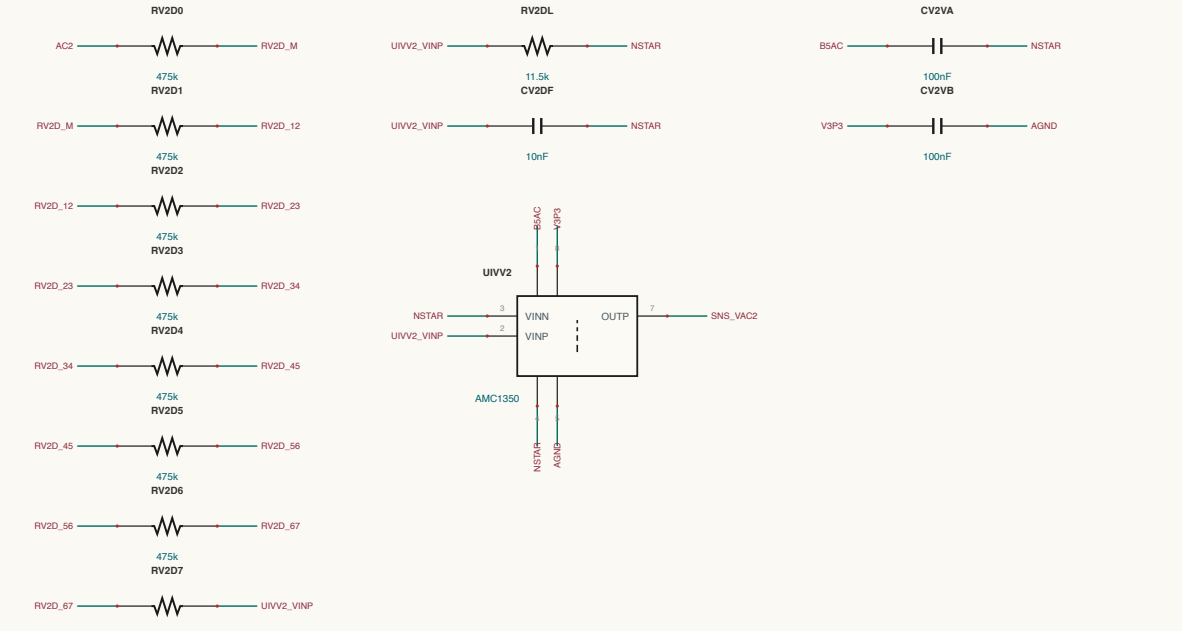


CONTROL / GROUNDING

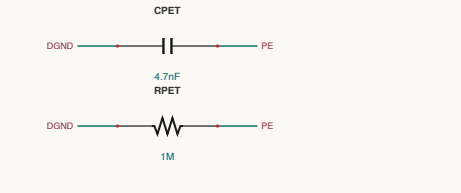


CONTROL / GND-DRIVER

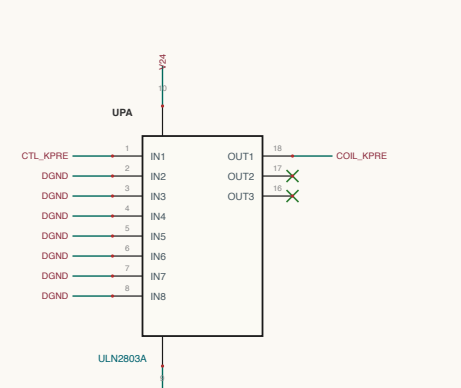


DC-LINK / BUS-STUDS

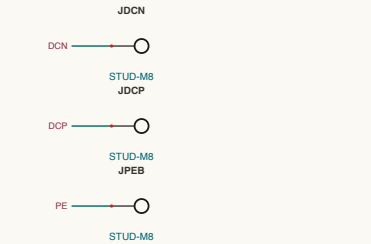


DC-LINK / BUS-BANKS

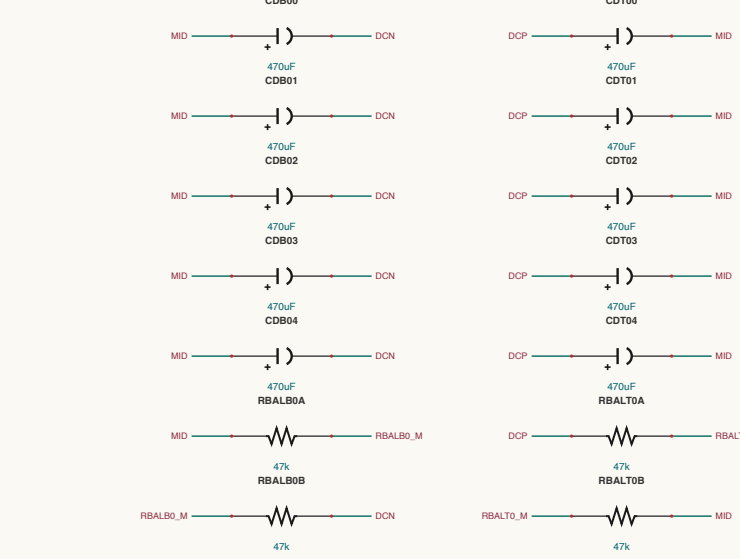


VIENNA-PFC / PHASE-C0

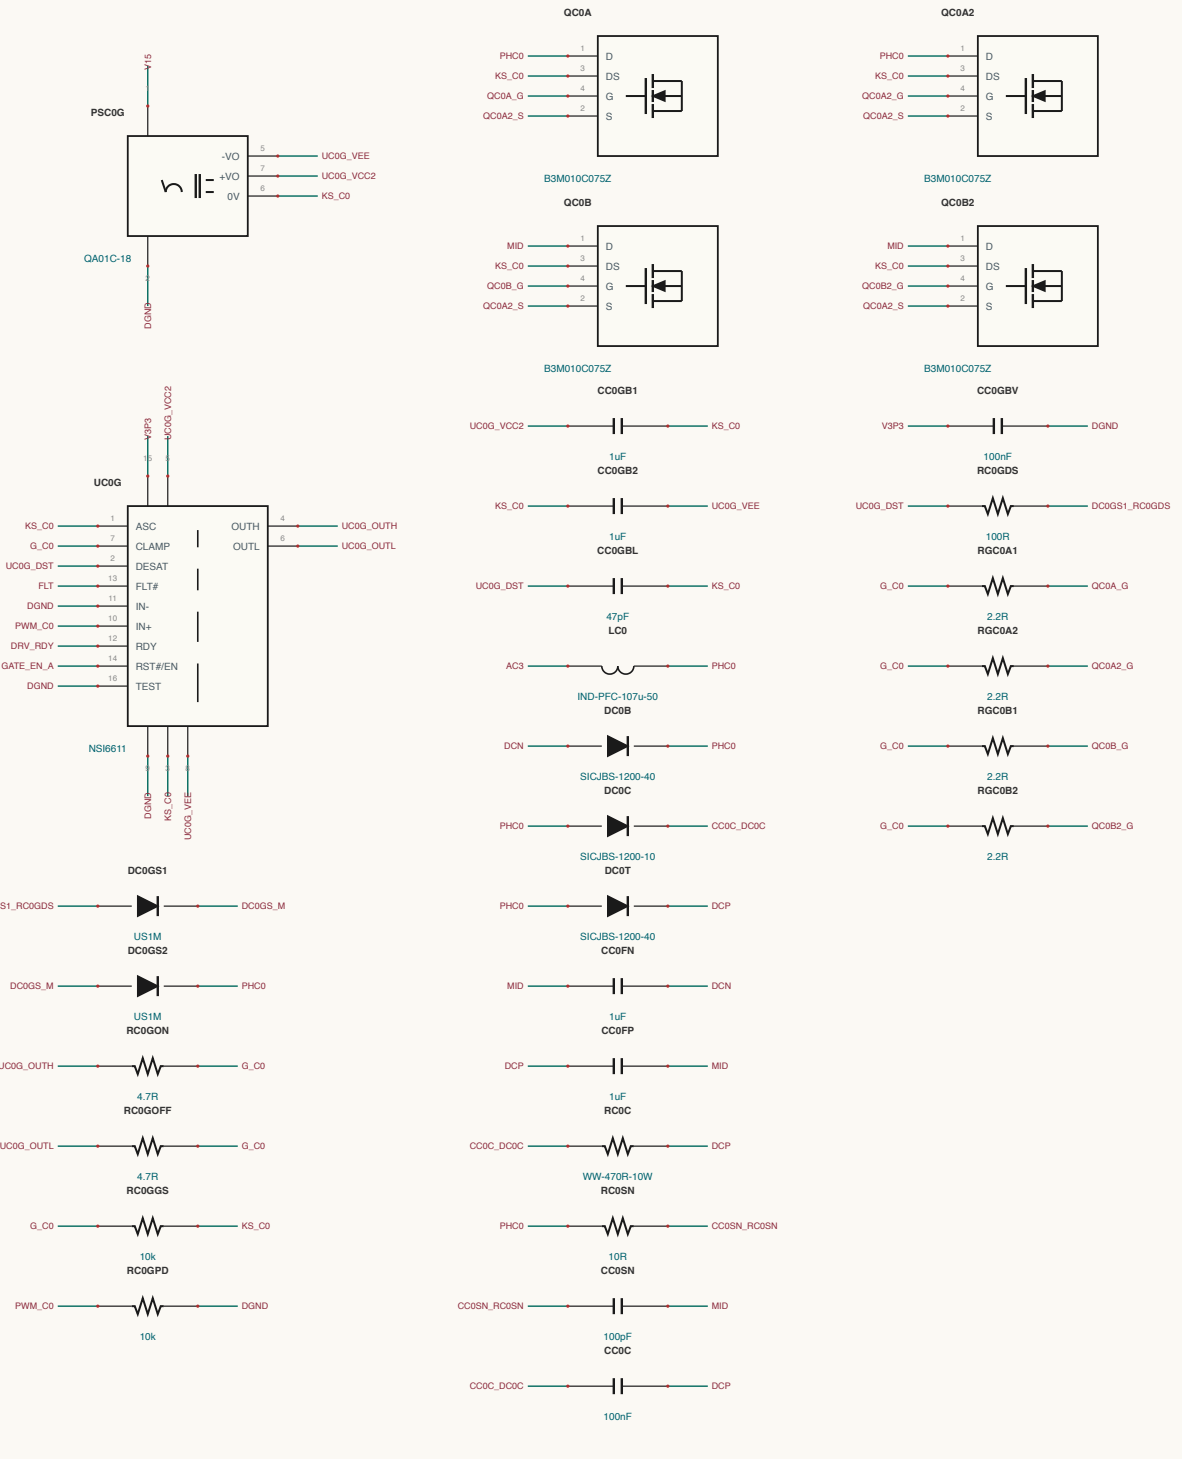


AC-SENSING / SENSE-VAC3

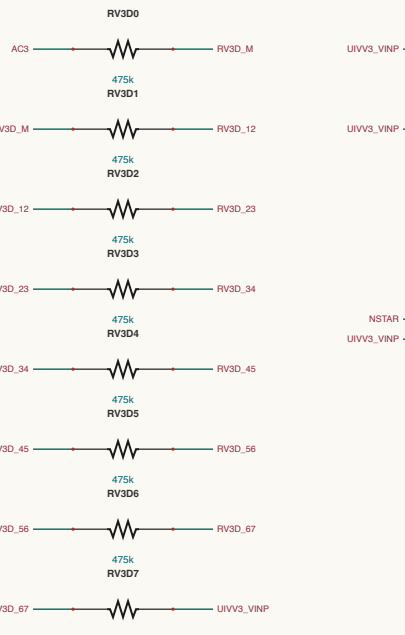


AC-SENSING / SENSE-VBUS

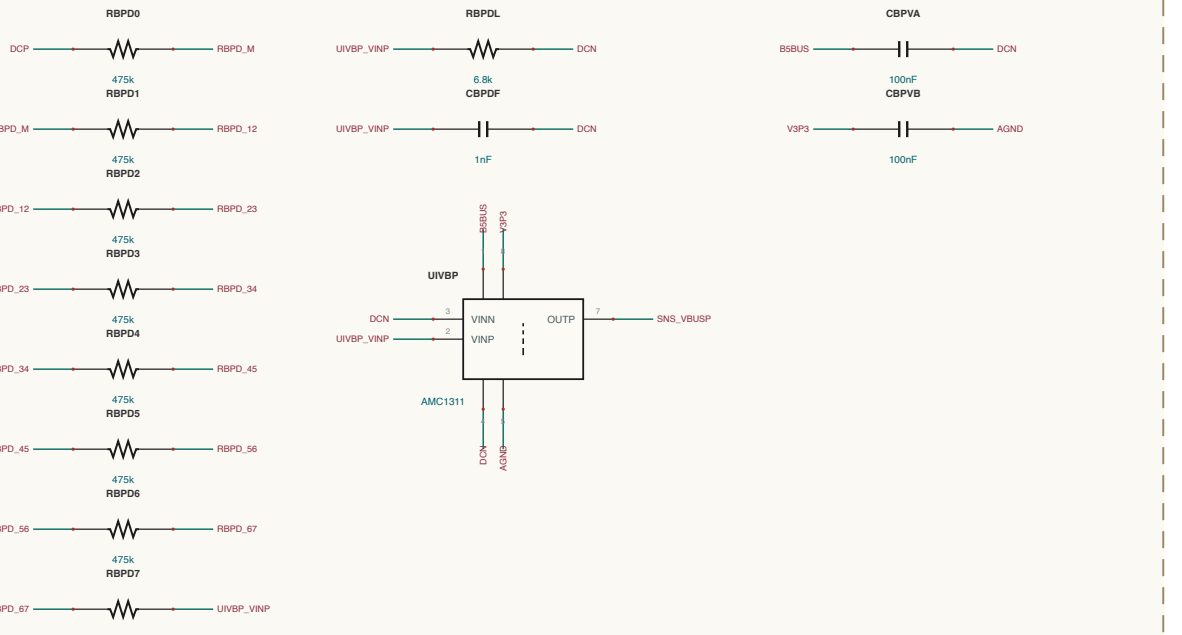


AC-SENSING / SENSE-VMD

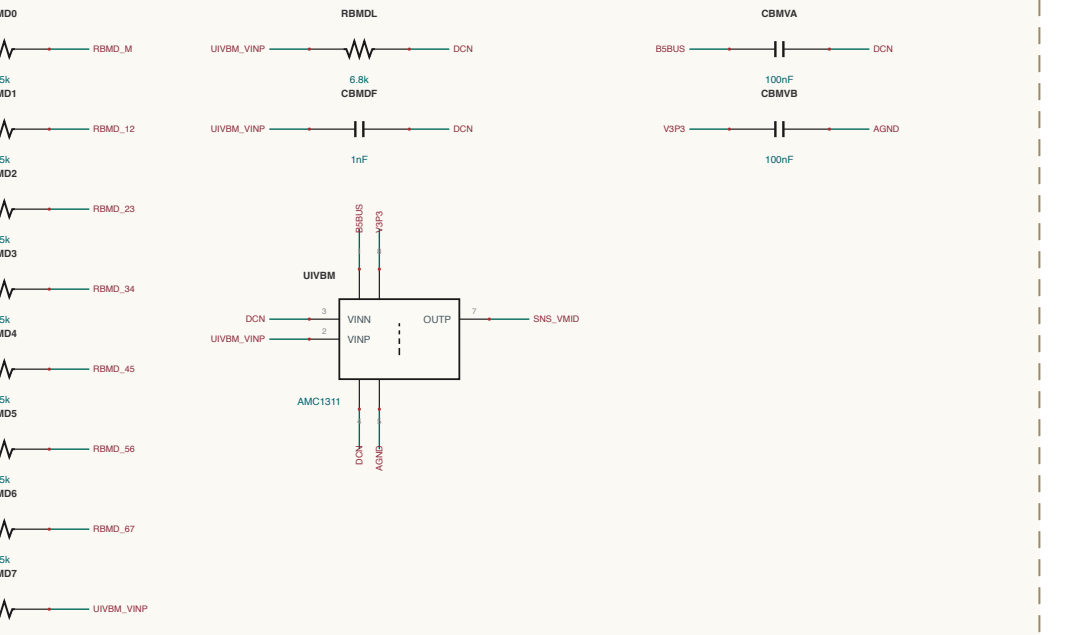


DC-LINK / DISCHARGE

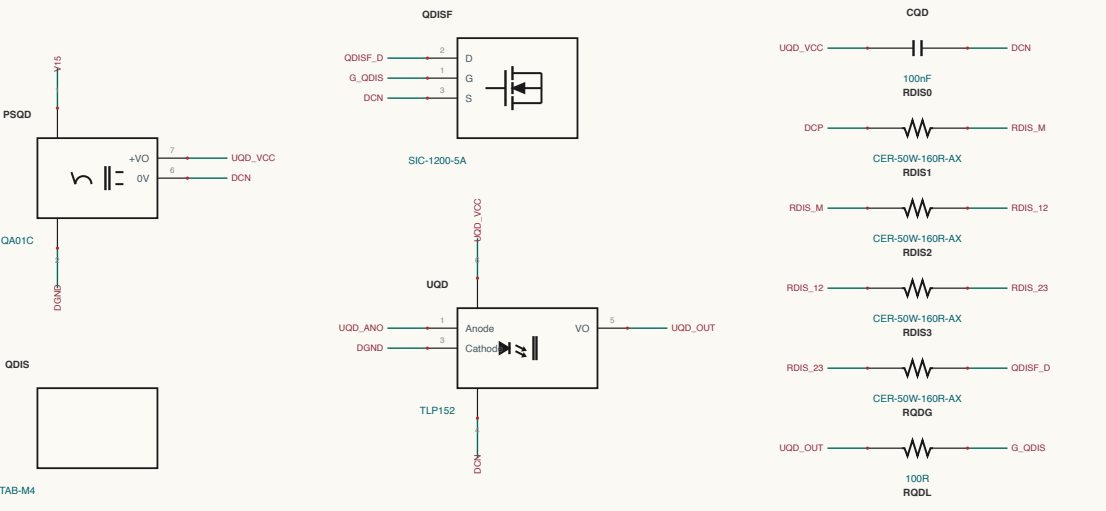


AC-SENSING / ISO-BIAS

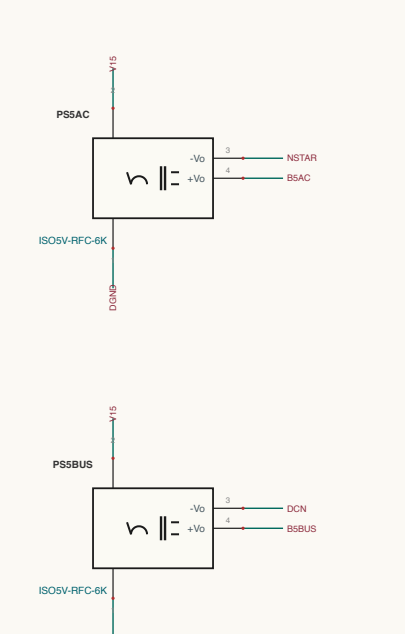


AC-SENSING / LINE-CTS-0

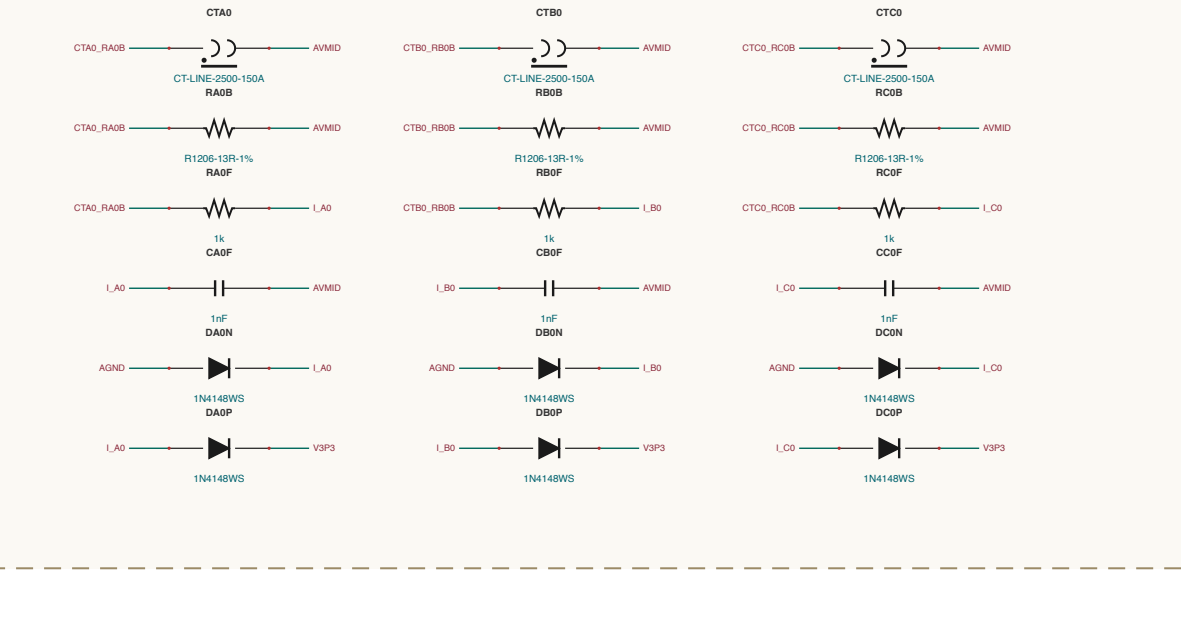


AUX-POWER / RAILS

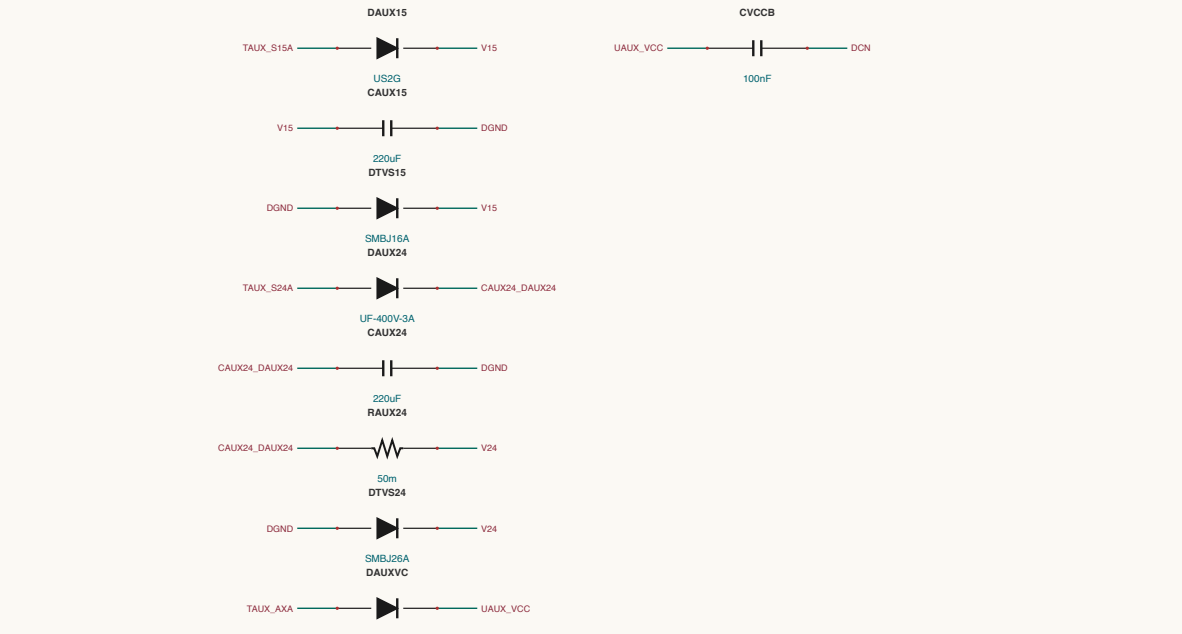


AUX-POWER / FANS

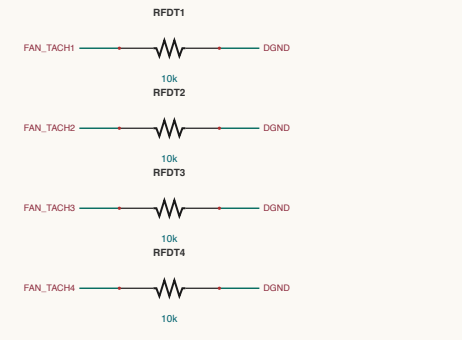


AUX-POWER / INTERCONNECT

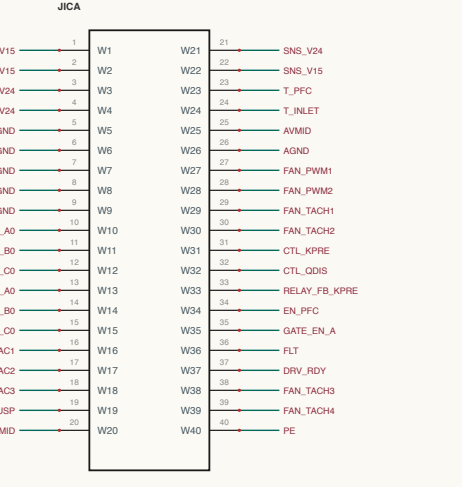


INPUT-EM / AC-ENTRY

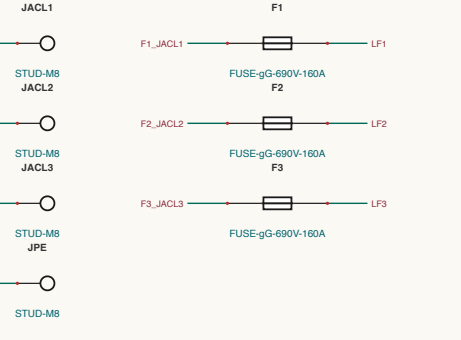


INPUT-EM / SURGE

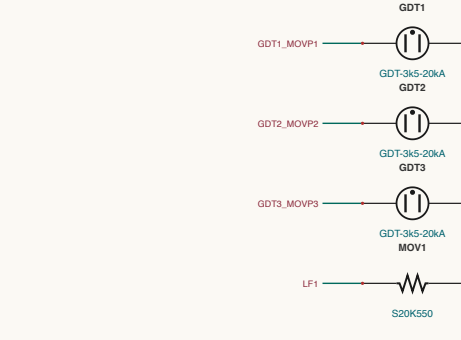


INPUT-EM / EMI-FILTER

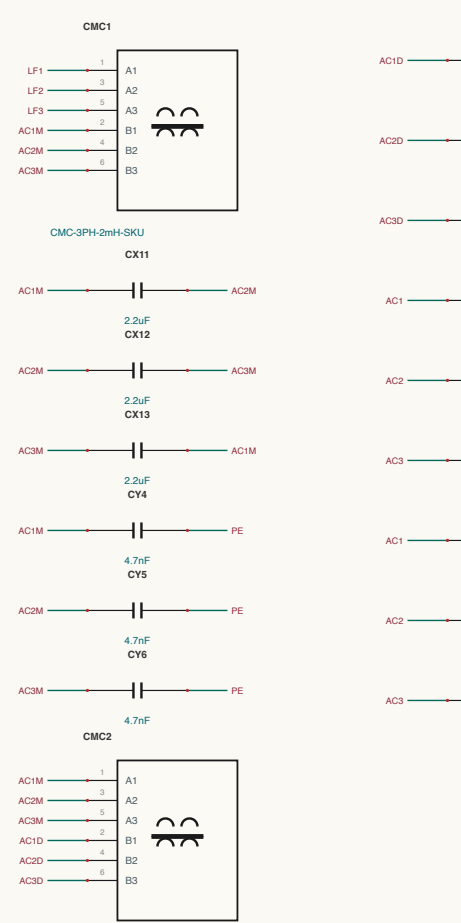


INPUT-EM / PRECHARGE

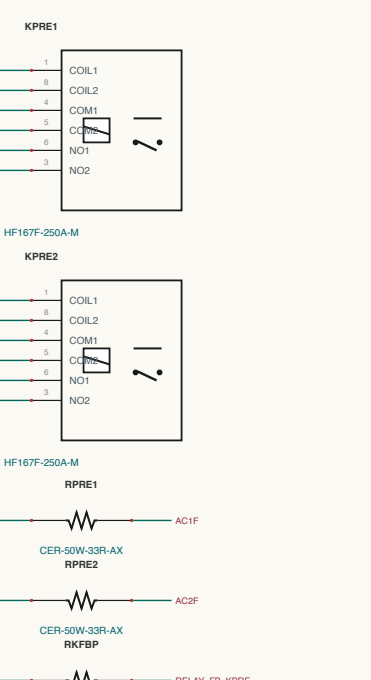


AC-SENSING / NTC

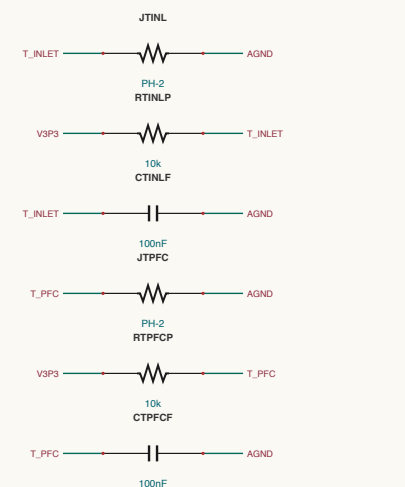


AUX-POWER / FLYBACK

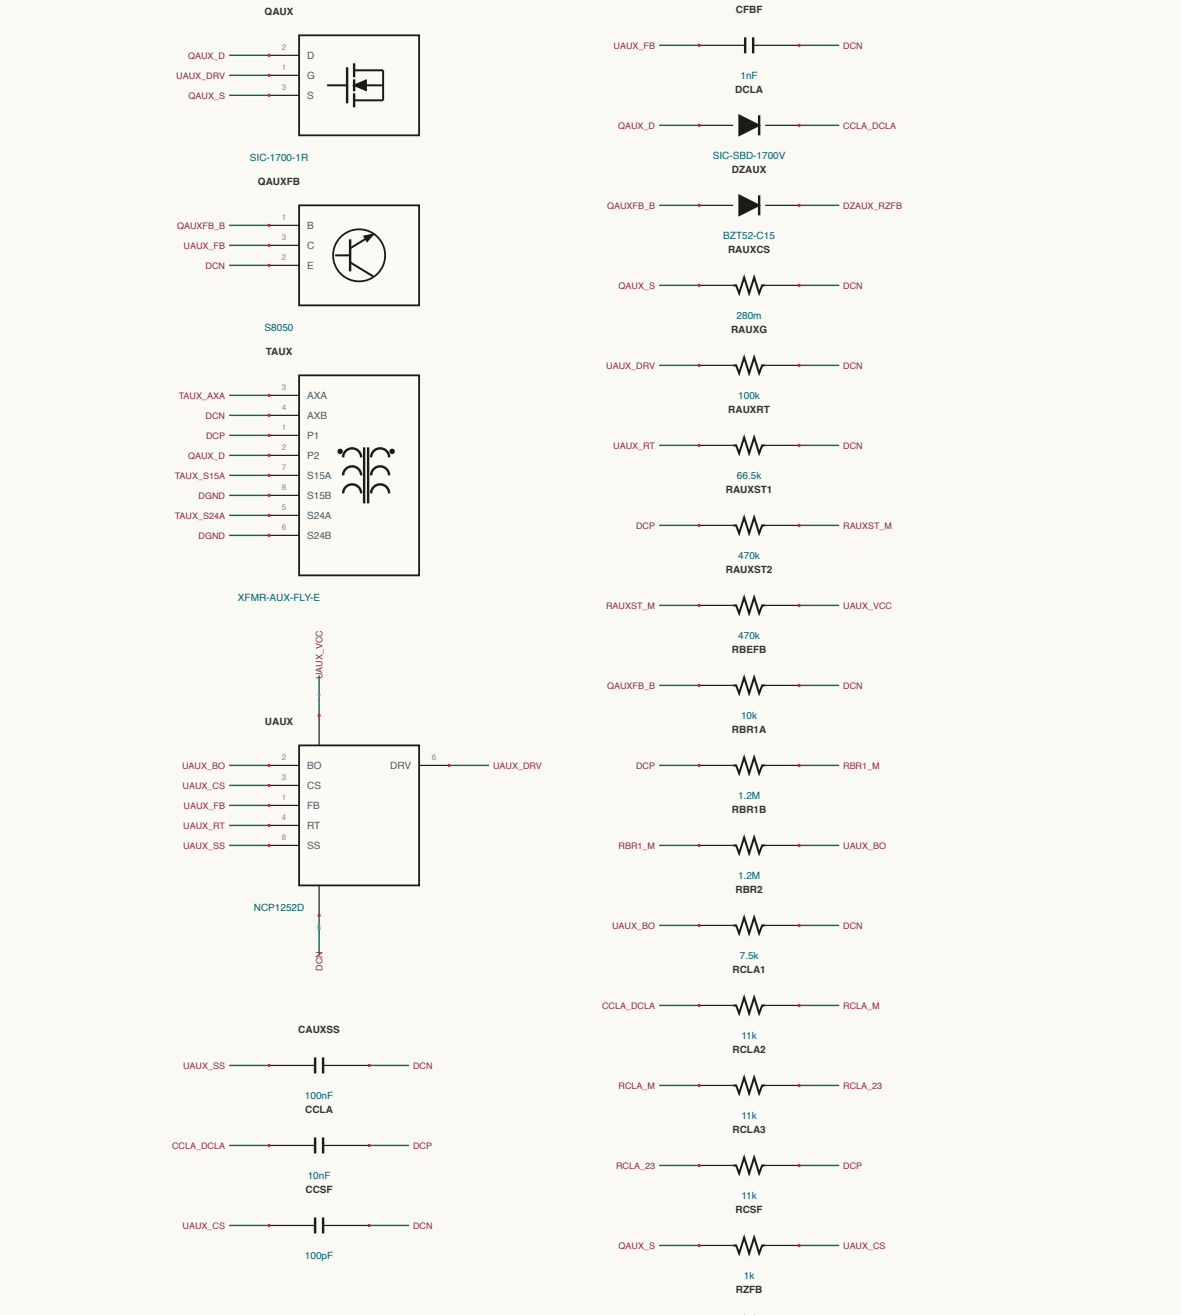


AUX-POWER / BUCK-V0

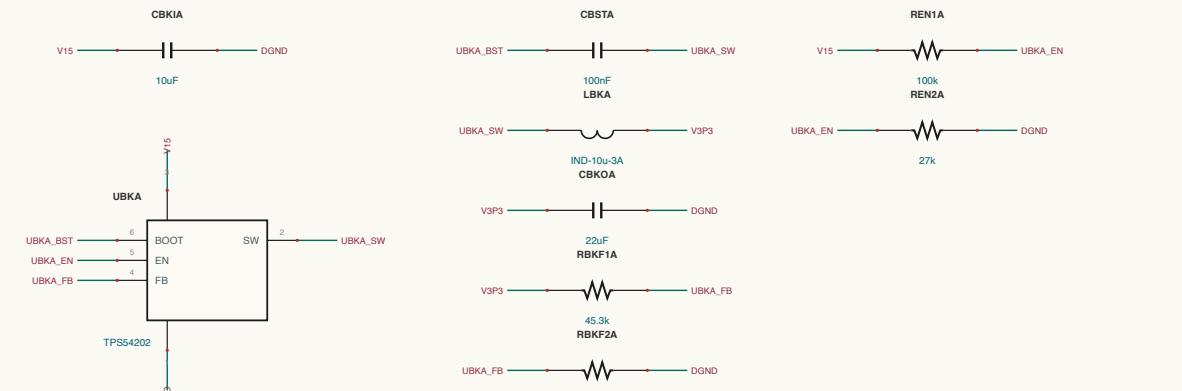


CONTROL / CARD-IF

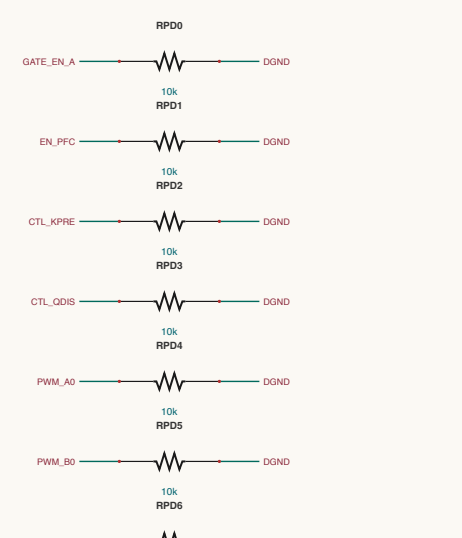

VIENNA-PFC / PHASE-A0

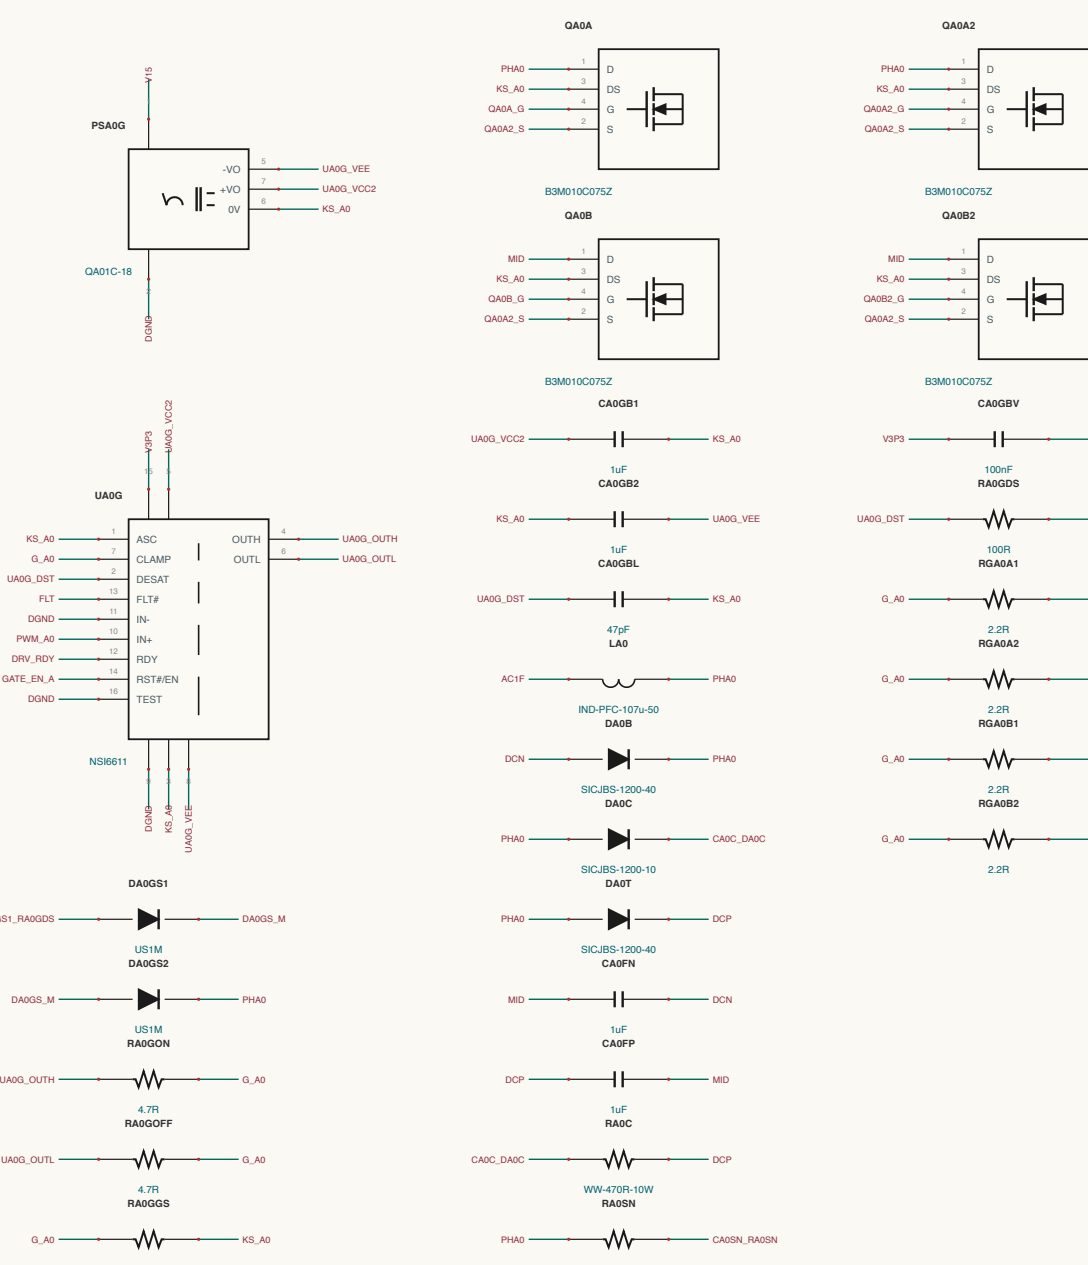

VIENNA-PFC / PHASE-B0

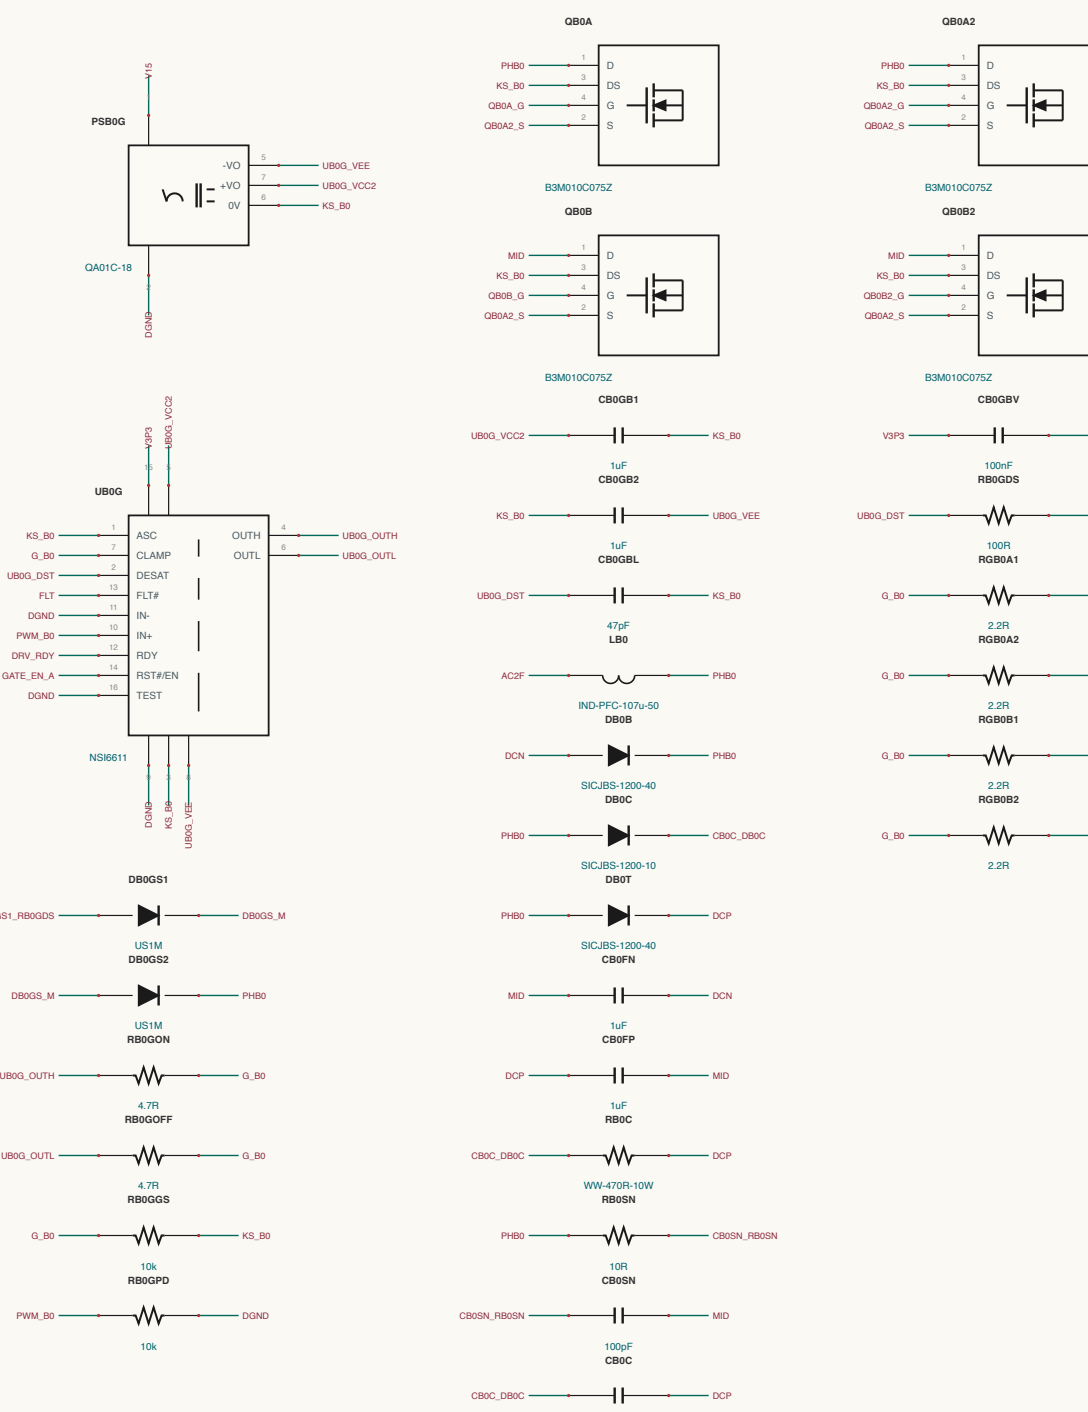

SHEET INDEX

- 50 kW 1 - 7 of 2
- AC-SENSING - 3 sections
- AUX-POWER - 3 sections
- CONTROL - 4 sections
- DC-LINK - 4 sections
- INPUT-EM - 4 sections
- VIENNA-PFC - 3 sections
- 50 kW 2 - 20 sections - 137 components

NET NAMING

- Internal junctions are named for what they join
- Locals: often made at that IC pin e.g. GND01, VDDP
- Problems: 20 independent of a section pin e.g. R10A12A, B
- Problems: entire top between Problems like e.g. R10A1, B1
- all others are explicit design nets

MAGNETICS CONSTRUCTION

- Identify per disassembly and items, gaps, fill, acceptance times from them
- D1 LAR-LCE 5x T10 (3x standard (CATALOG AL21), 2x4 + 1 501 1011 = 10 1011AL, 1x4x41 0102A (p. 0101)
- D2 LAR-LCE 5x T10 (3x 501 1011, 2x 501 1012 = 10 1011AL, 1x4x41 0102A (p. 0101)
- C at 1000 sections