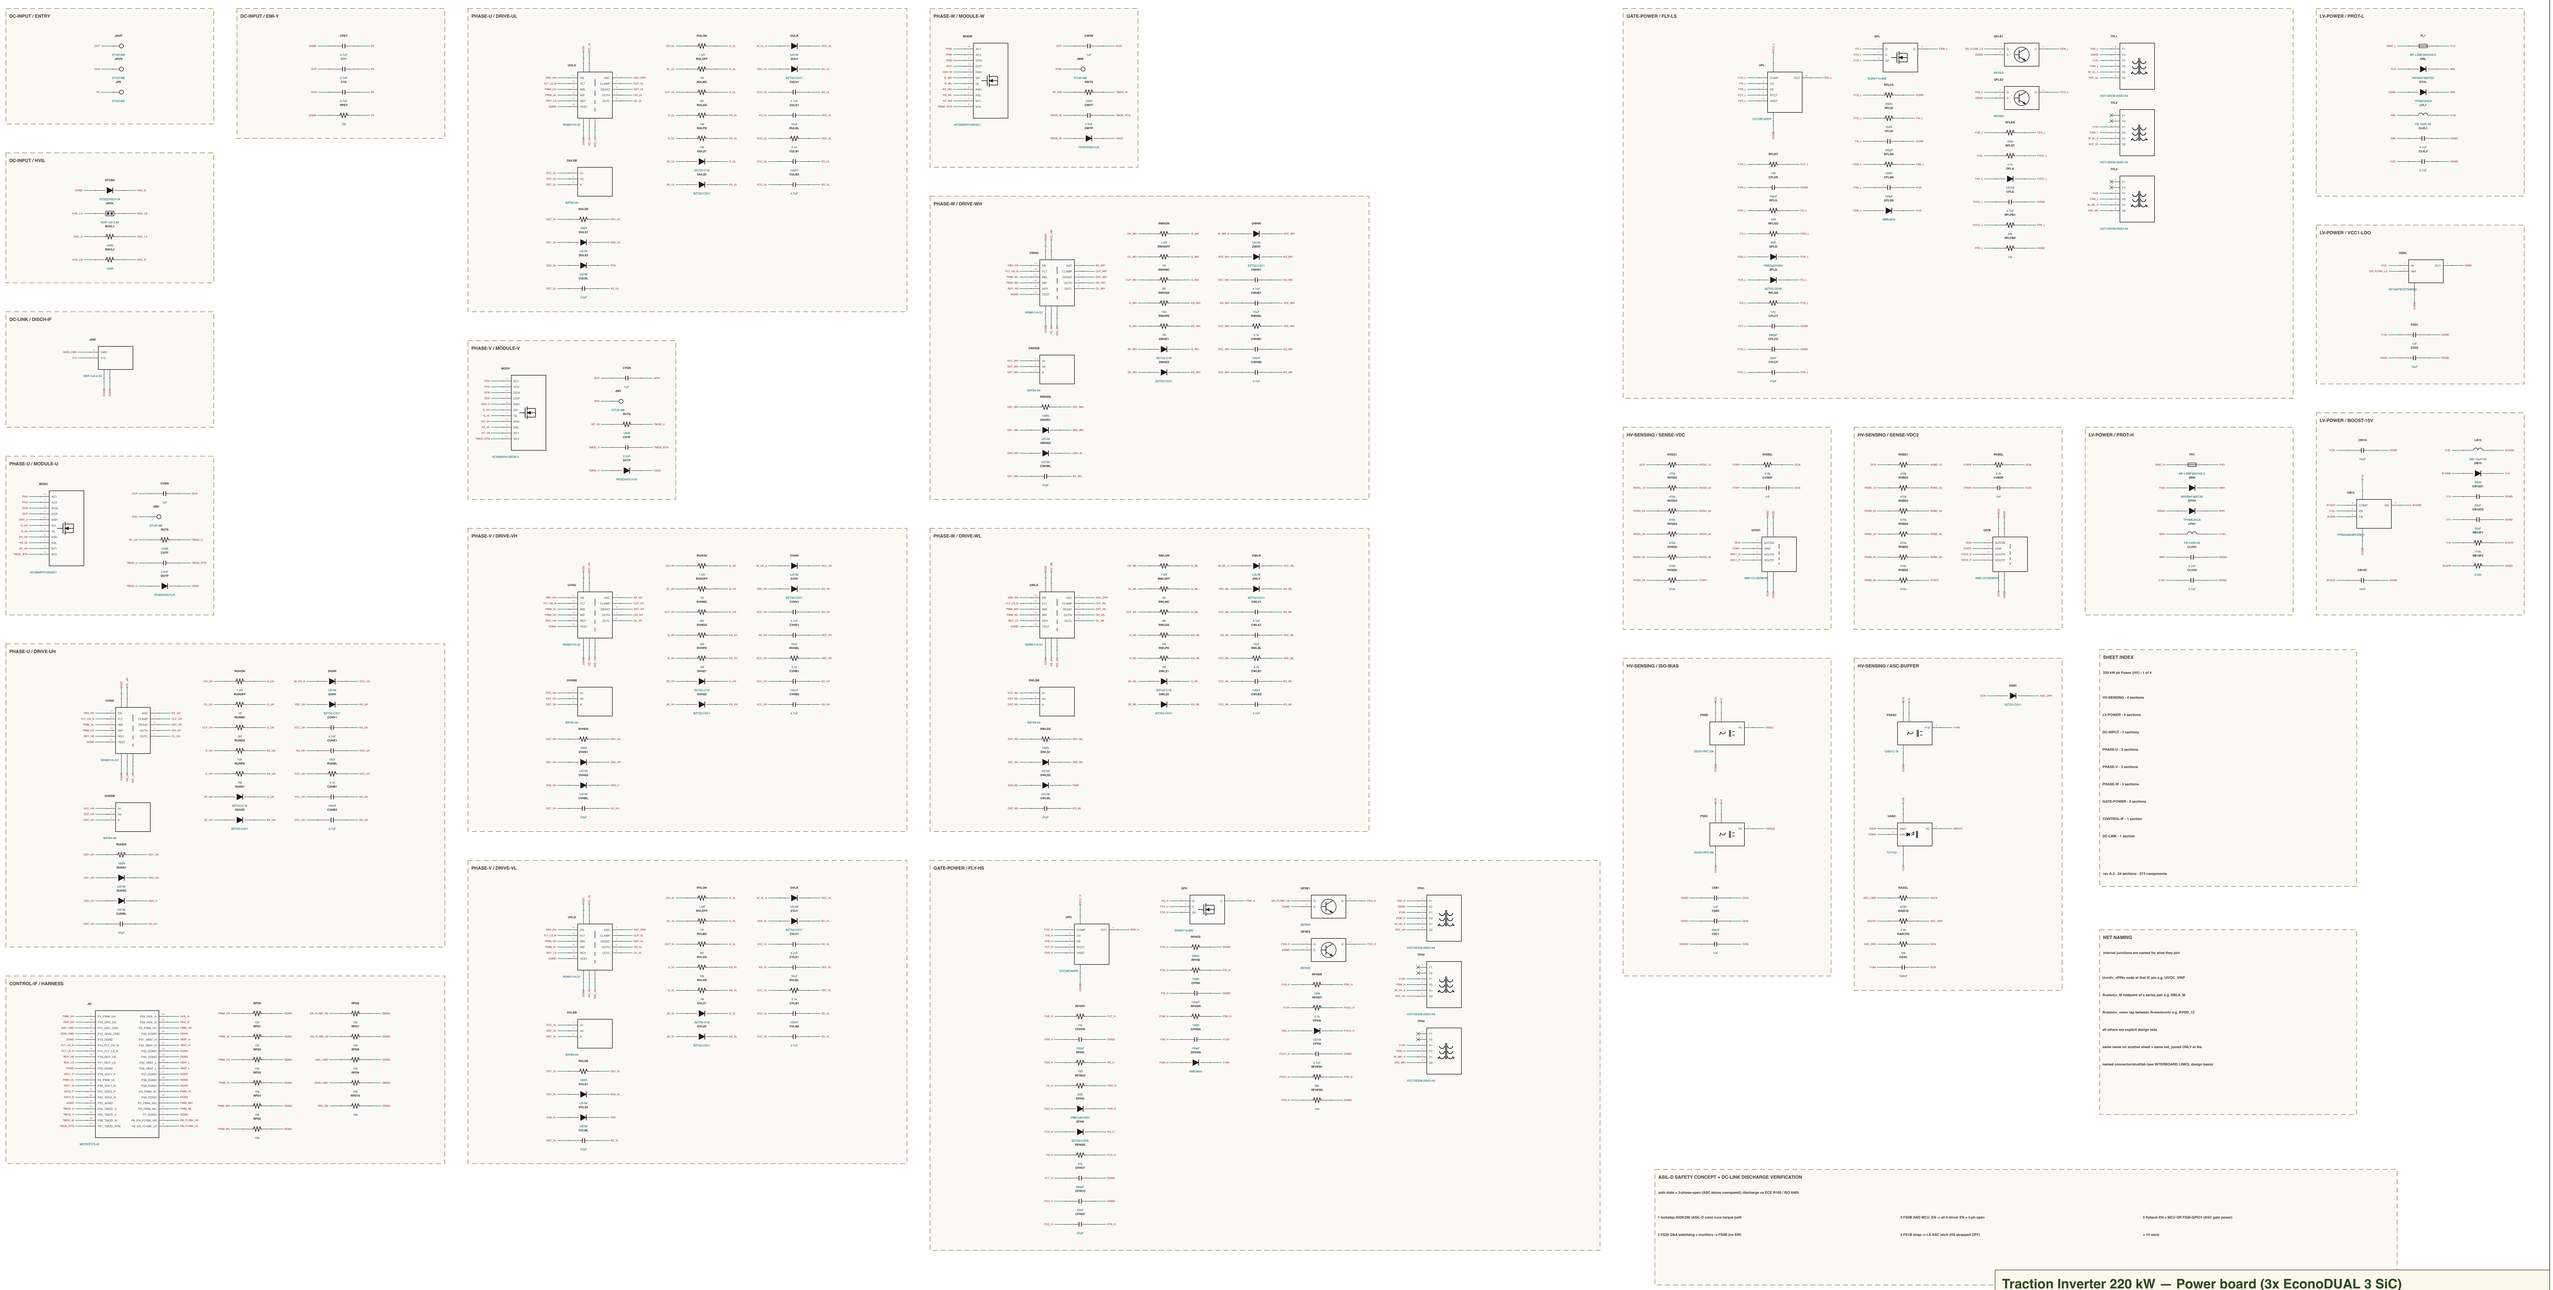

Traction Inverter 220 kW — Power board (3x EconoDUAL 3 SiC)

Traction Inverter 220 kW pk - Power (HV), sheet 1 of 4

2026-09-09 · rev A.3

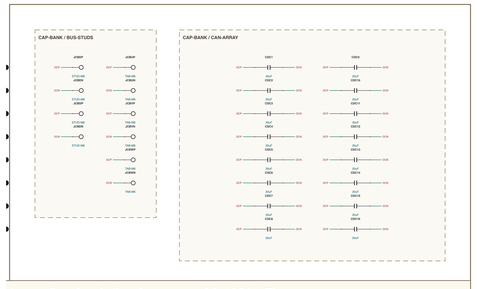

rter — Cap bank (busbar assembly, 320 uF)

20 kW pk - Cap bank (HV, busbar), sheet 2 of 4

2026-09-09 · rev A.3

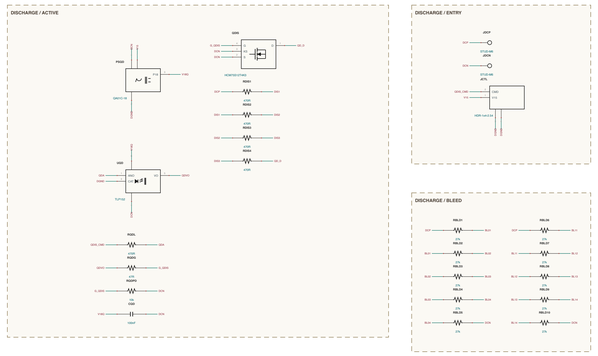

(220 kW pk Discharge (PN) 3of4)

NET NAMING: Grn/HV, uPWM, n-mos

Traction Inverter — Discharge board (bolt-on, XM3 pattern)

Traction Inverter 220 kW pk - Discharge (HV, bolt-on), sheet 3 of 4

2026-09-09 · rev A.3

CONTROL / MCU

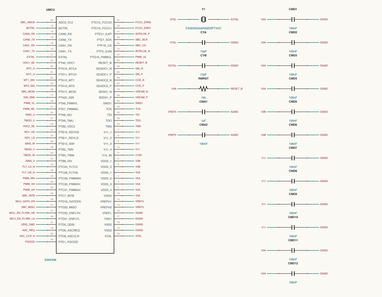

CONTROL / SWD-BOOT

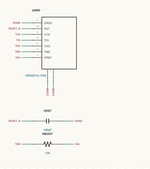

SBC / FS26

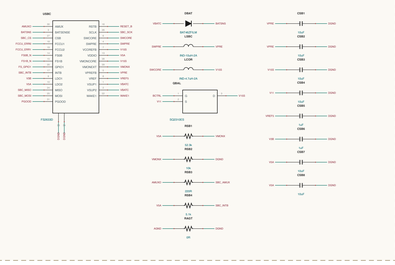

SAFETY / GATE-EN

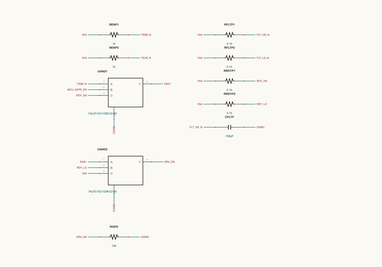

TEMP / MOTOR-TEMP

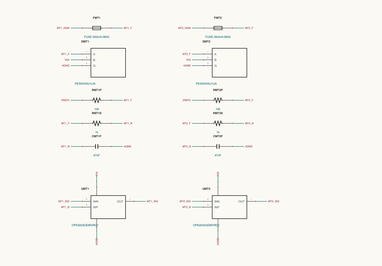

CARD-IF / HARNESS

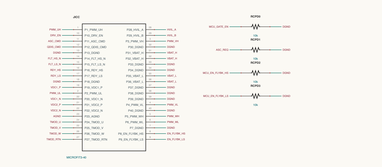

SBC / LV-INPUT

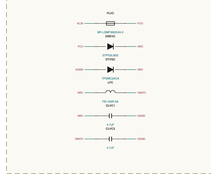

SBC / WAKE

SAFETY / FLYBK-EN

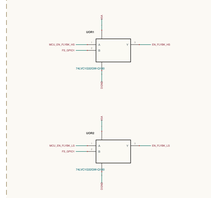

SAFETY / ASC-LATCH

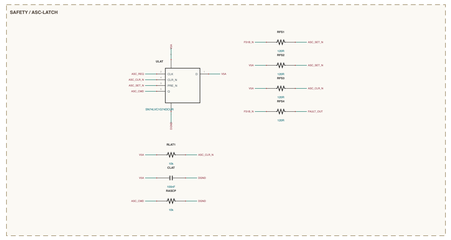

SAFETY / INTERLOCK

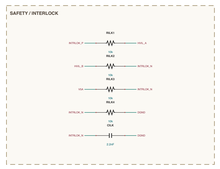

TEMP / MOD-NTC

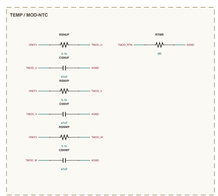

TEMP / BOARD-NTC

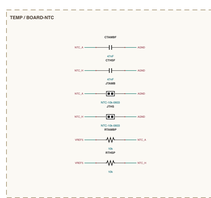

RESOLVER / SIN

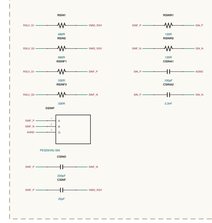

RESOLVER / COS

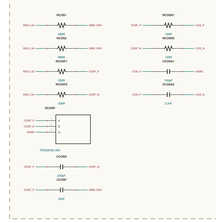

RESOLVER / VMID

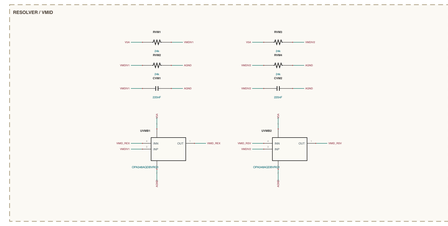

PHASE-SENSE / HALL-CONN

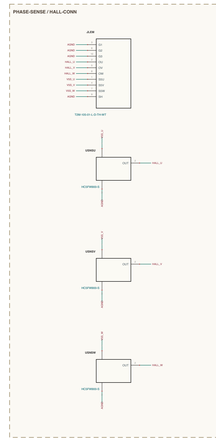

RESOLVER / EXCITER

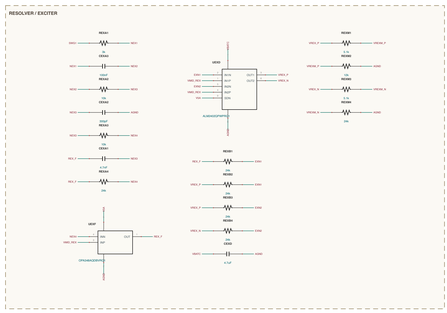

COMMS / CAN-FD1

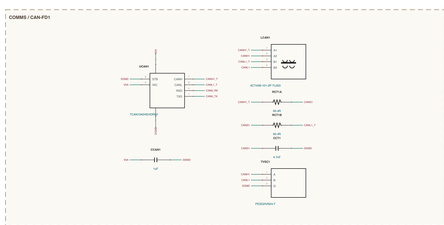

COMMS / CAN-FD2

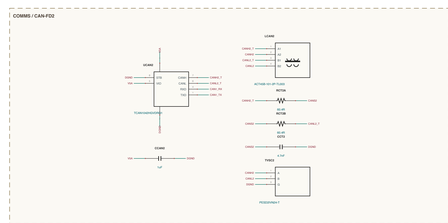

PHASE-SENSE / SENSE-IU

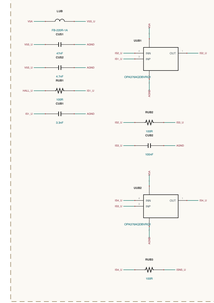

PHASE-SENSE / SENSE-IV

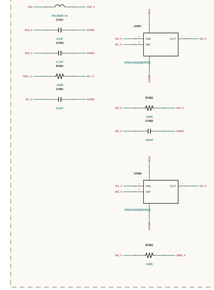

PHASE-SENSE / SENSE-IW

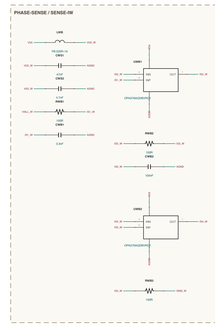

VEHICLE-IF / CONNECTOR

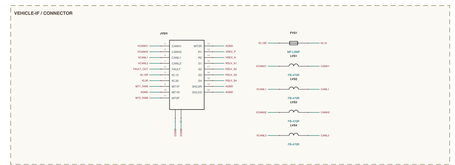

VDC-RECEIVE / CH 1

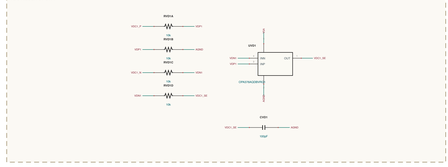

VDC-RECEIVE / CH 2

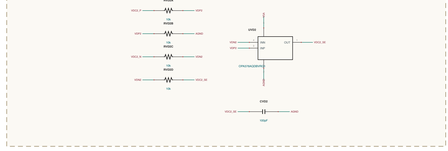

SHEET INDEX

ISO 26262 ASIL D

220 kW pk Control card (LV) - 4 of 4

PHASE-SENSE - 4 sections

RESOLVER - 4 sections

SAFETY - 4 sections

SBC - 2 sections

TEMP - 2 sections

COMMS - 2 sections

CONTROL - 2 sections

VDC-RECEIVE - 2 sections

CARD-IF - 1 section

VEHICLE-IF - 1 section

rev A.3 - 35 sections - 219 components

NET NAMING

Internal junctions are named for what they join

Overlv_xPWm node at that IC pin e.g. U9VDC_VINP

Rsdetxm_M midpoint of a series pair e.g. R8LA_M

Rsdetxm_xmtx-tap between Rsdetxmxtx e.g. RVDD_12

All others are explicit design nets

same name on another sheet = same net, joined ONLY at the

named connector/stub/tab (see INTERBOARD LINKS, design basis)