


OT-2 lid camera mount — drill template, ACTUAL SIZE

Print at 100% / “Actual size”, then check both scale bars below before drilling.

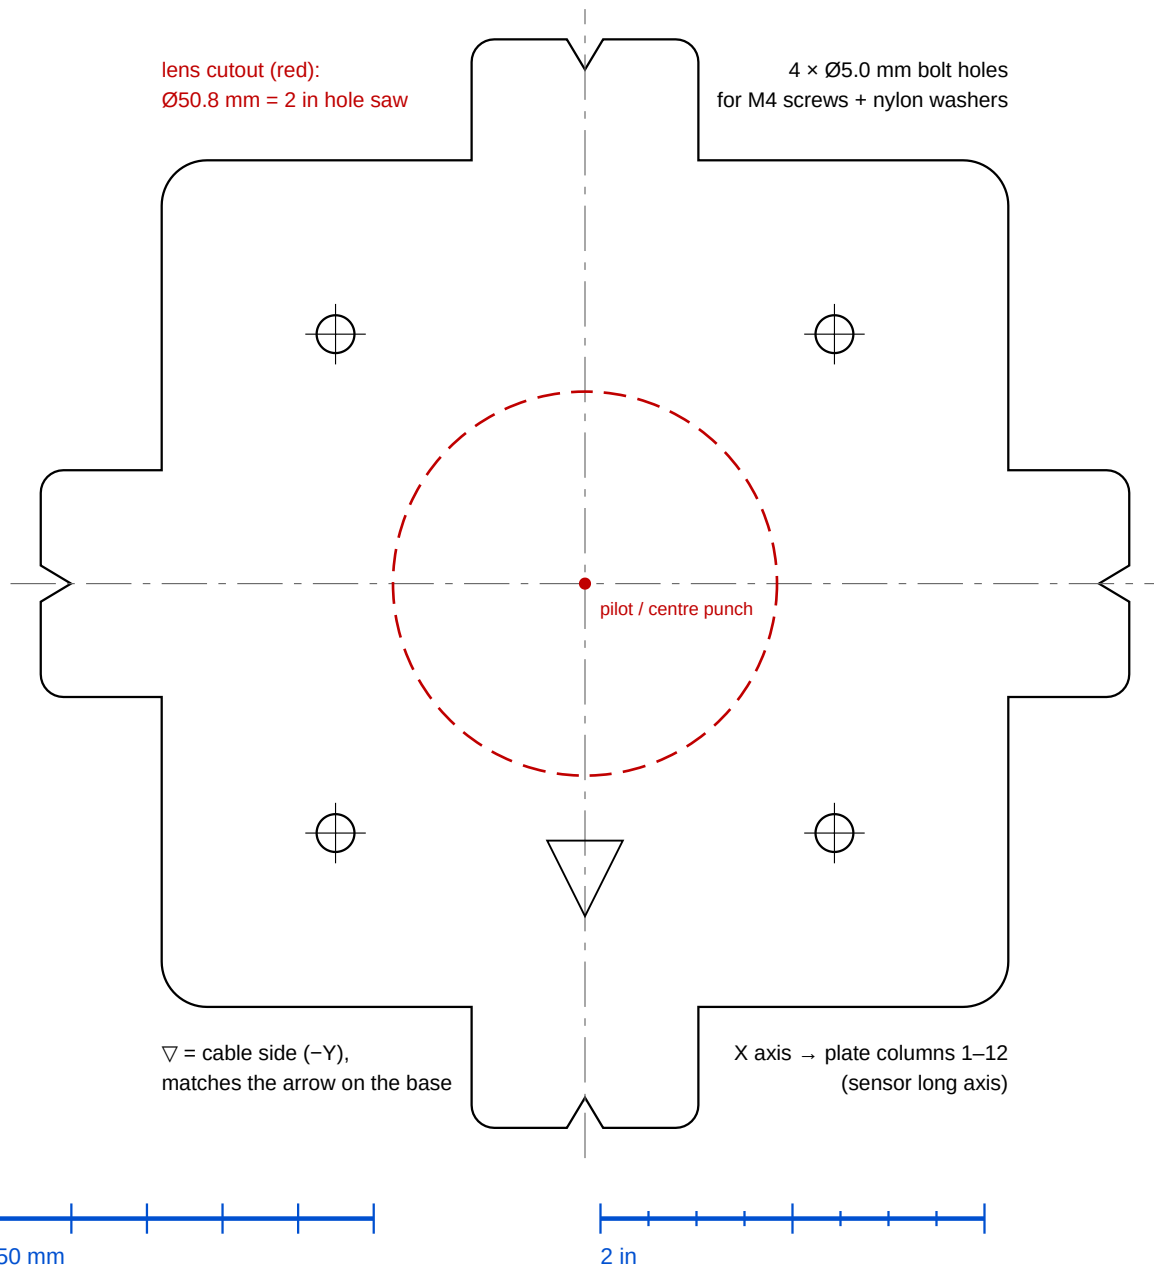

1. Tape the mount down first and position it with the live preview (preview_server.py) until the plate is centred and square. Trace the base outline and the four tab notches onto the lid with a fine marker.
2. Line this sheet (or the printed drill template) up with the tracing and centre-punch the five marks.
3. Take the window off (4 screws, slide, lift). Clamp it over a wooden backer board, keep any film on, and use a sharp plastic or step drill at low speed with light pressure; ease off before breaking through.
4. Cut the lens hole with a 50.8 mm (2 in) hole saw at low speed; deburr every edge.
5. Bolt with M4 x 18 pan-head screws from inside the robot into the nuts trapped in the base, with a nylon washer under each head: the pipette head passes ~9 mm below the window.
Snug only: acrylic cracks from over-tightening and from holes drilled near an edge.