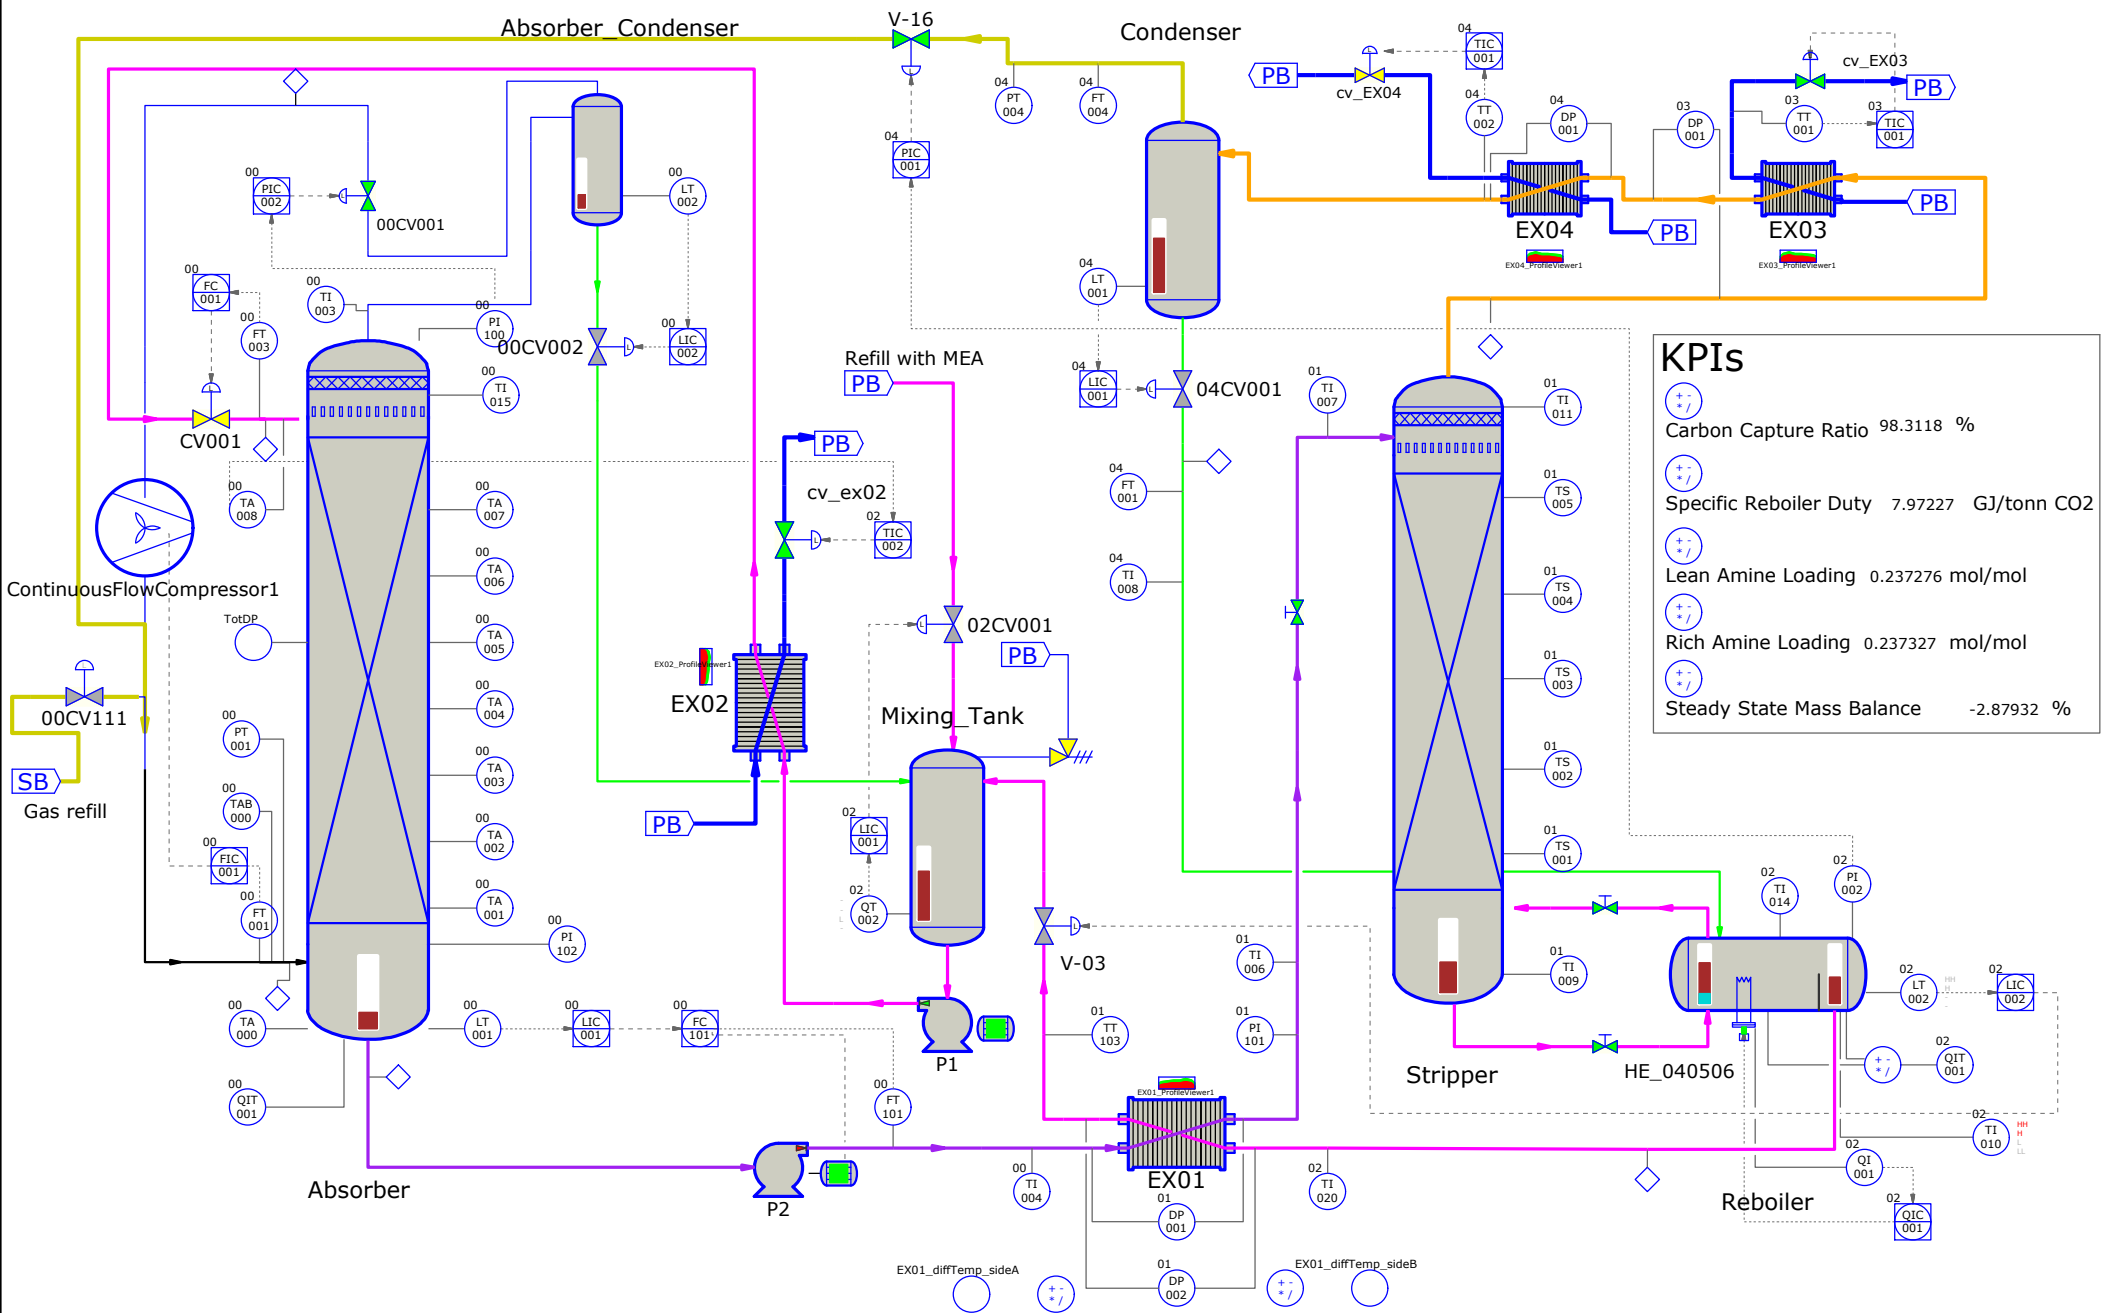


Rich side DP 1.5 bar. Probably too much
 bar. Use reference flow for pressure drop

Rev	Comment	Date	By

Project	
Description	
Drawing Name	
Created By	Date