


Parts 4 and 5: The Clamps

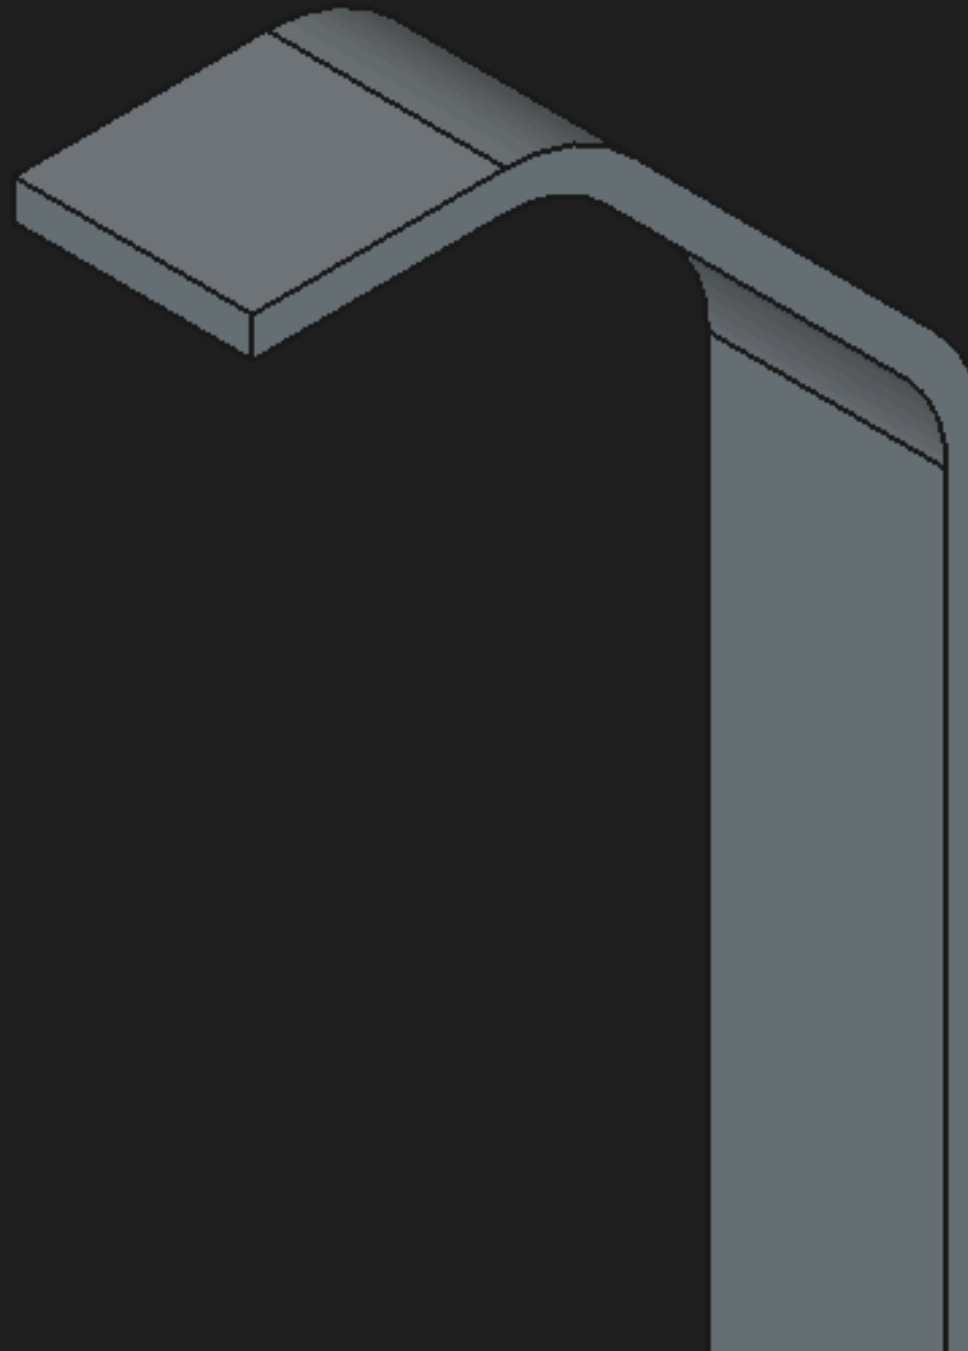

Two ways to make a bent strap

HOW THE TUTORIAL DOES IT


- 1 Draw the bent centre line
- 2 Round the corners
- 3 Use **Offset Entities** to push a copy inward 0.5 in
- 4 Close the two ends to make a closed shape
- 5 Extrude it 3 in

HOW WE DO IT


- 1 Draw the bent centre line
- 2 Round the corners
- 3 Draw the strap's cross-section on a separate sketch
- 4 **Additive Pipe:** push the section along the line

Same solid either way. But now the model knows the *section* and the *path* as two separate things you can edit. Change the section to 4 by 3/8 and the strap re-sweeps along the same path.


Additive Pipe replaces two SolidWorks tools

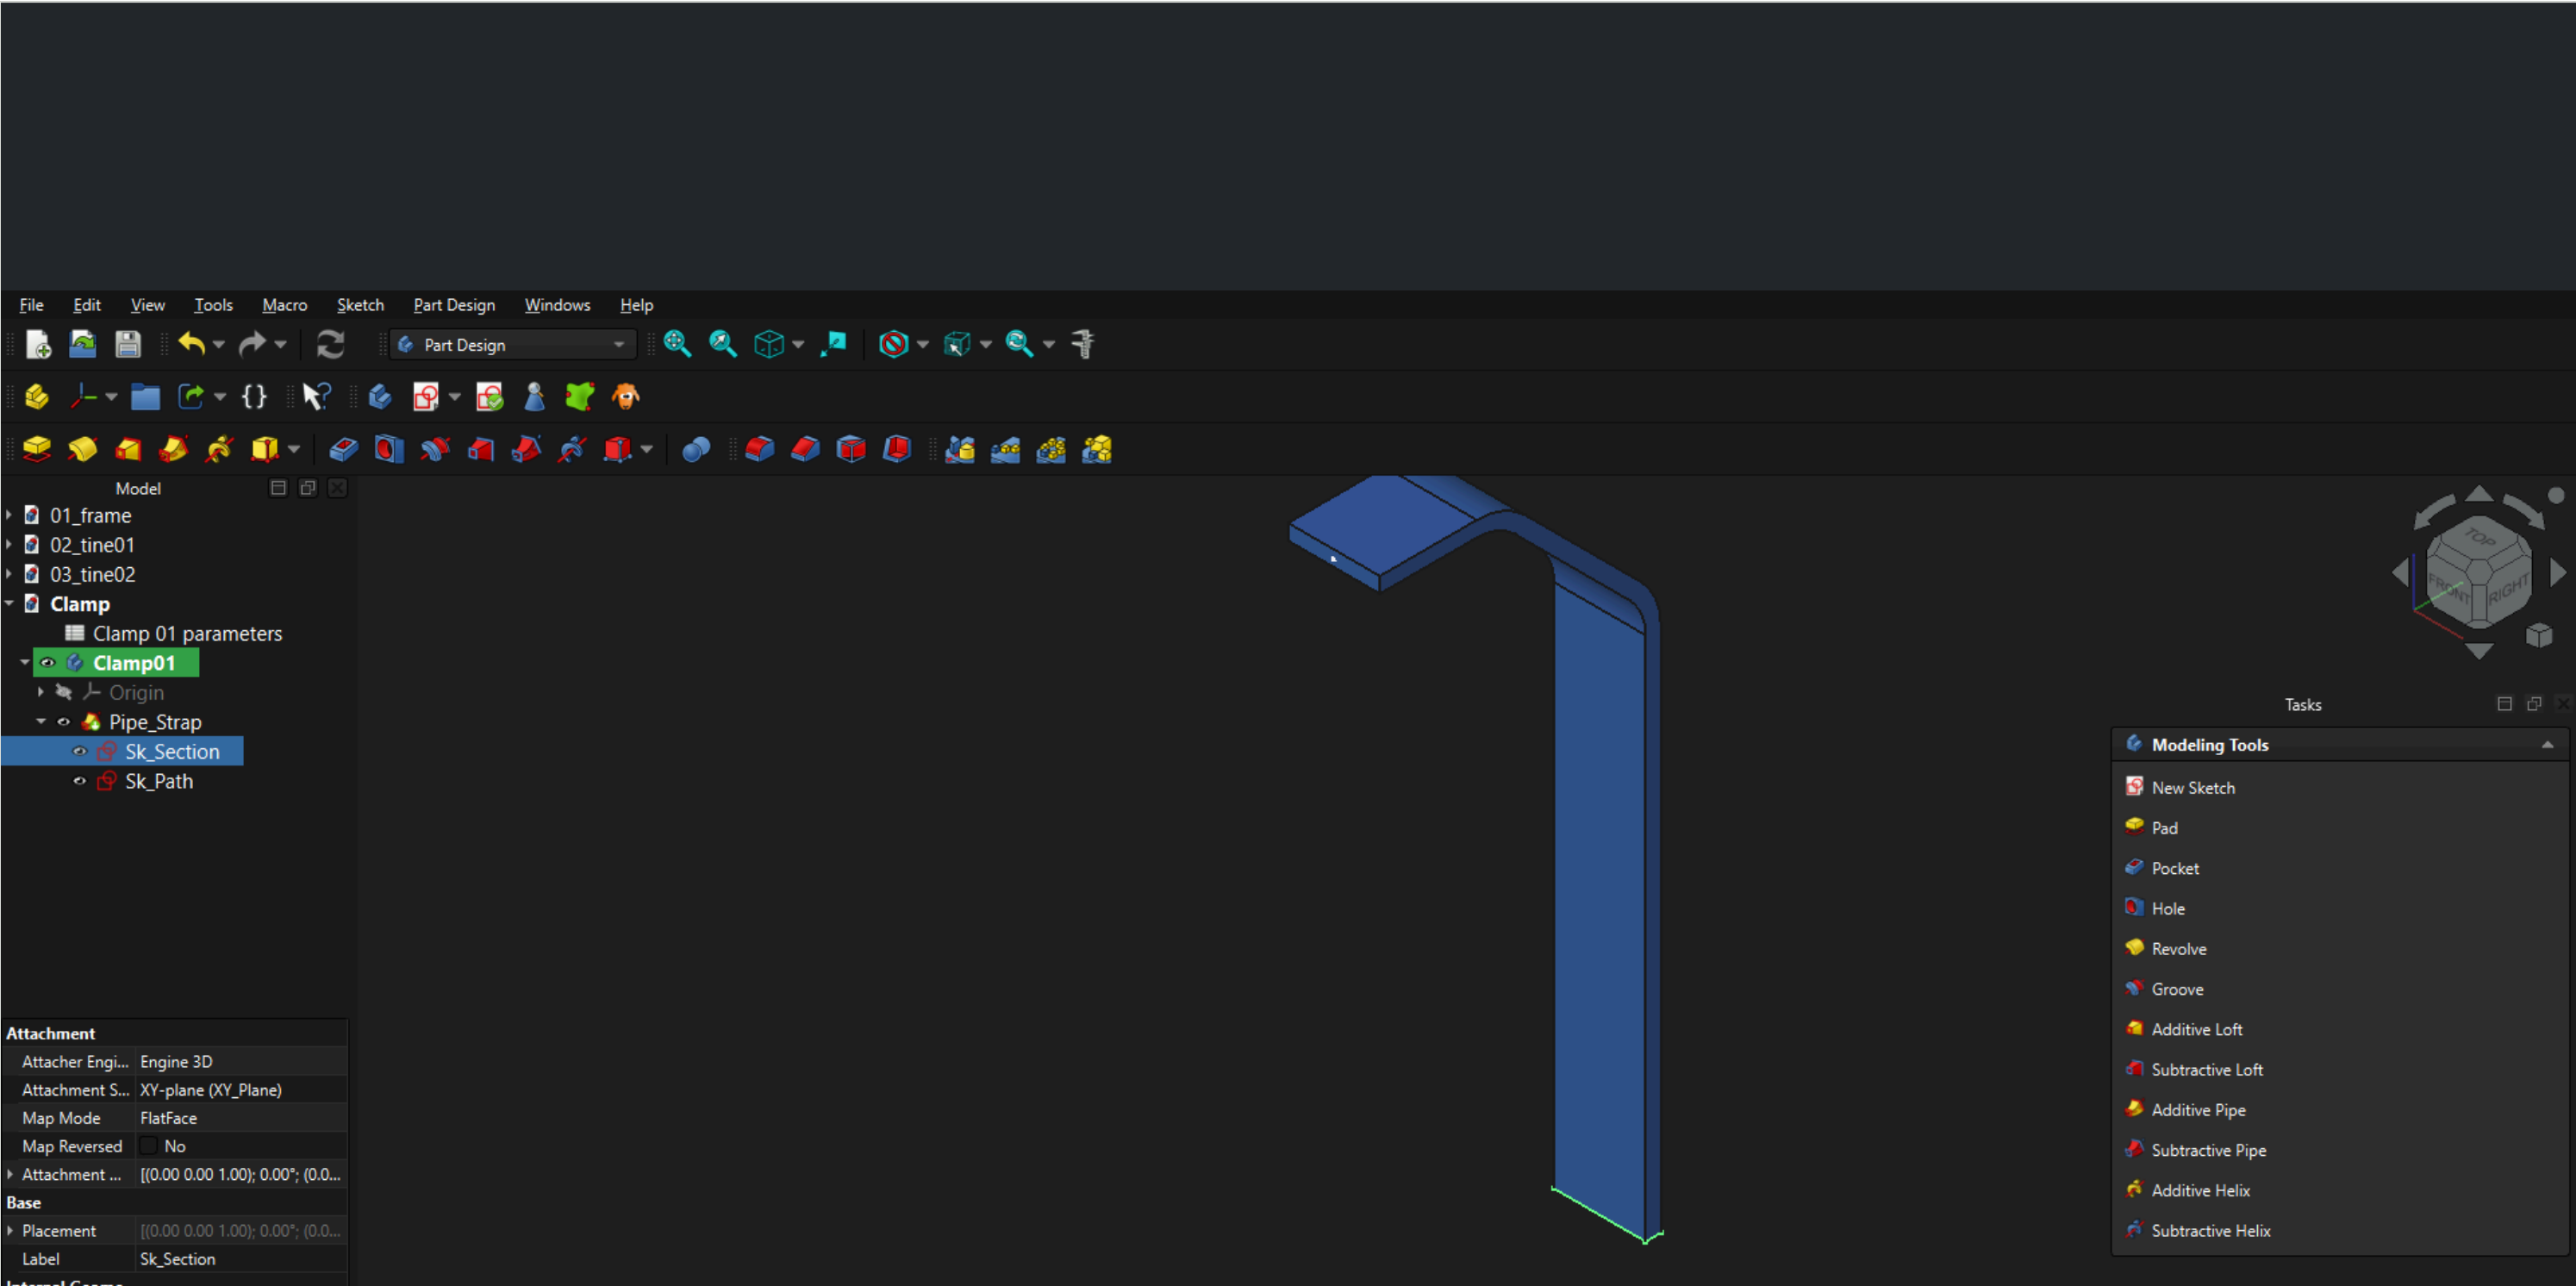


The path

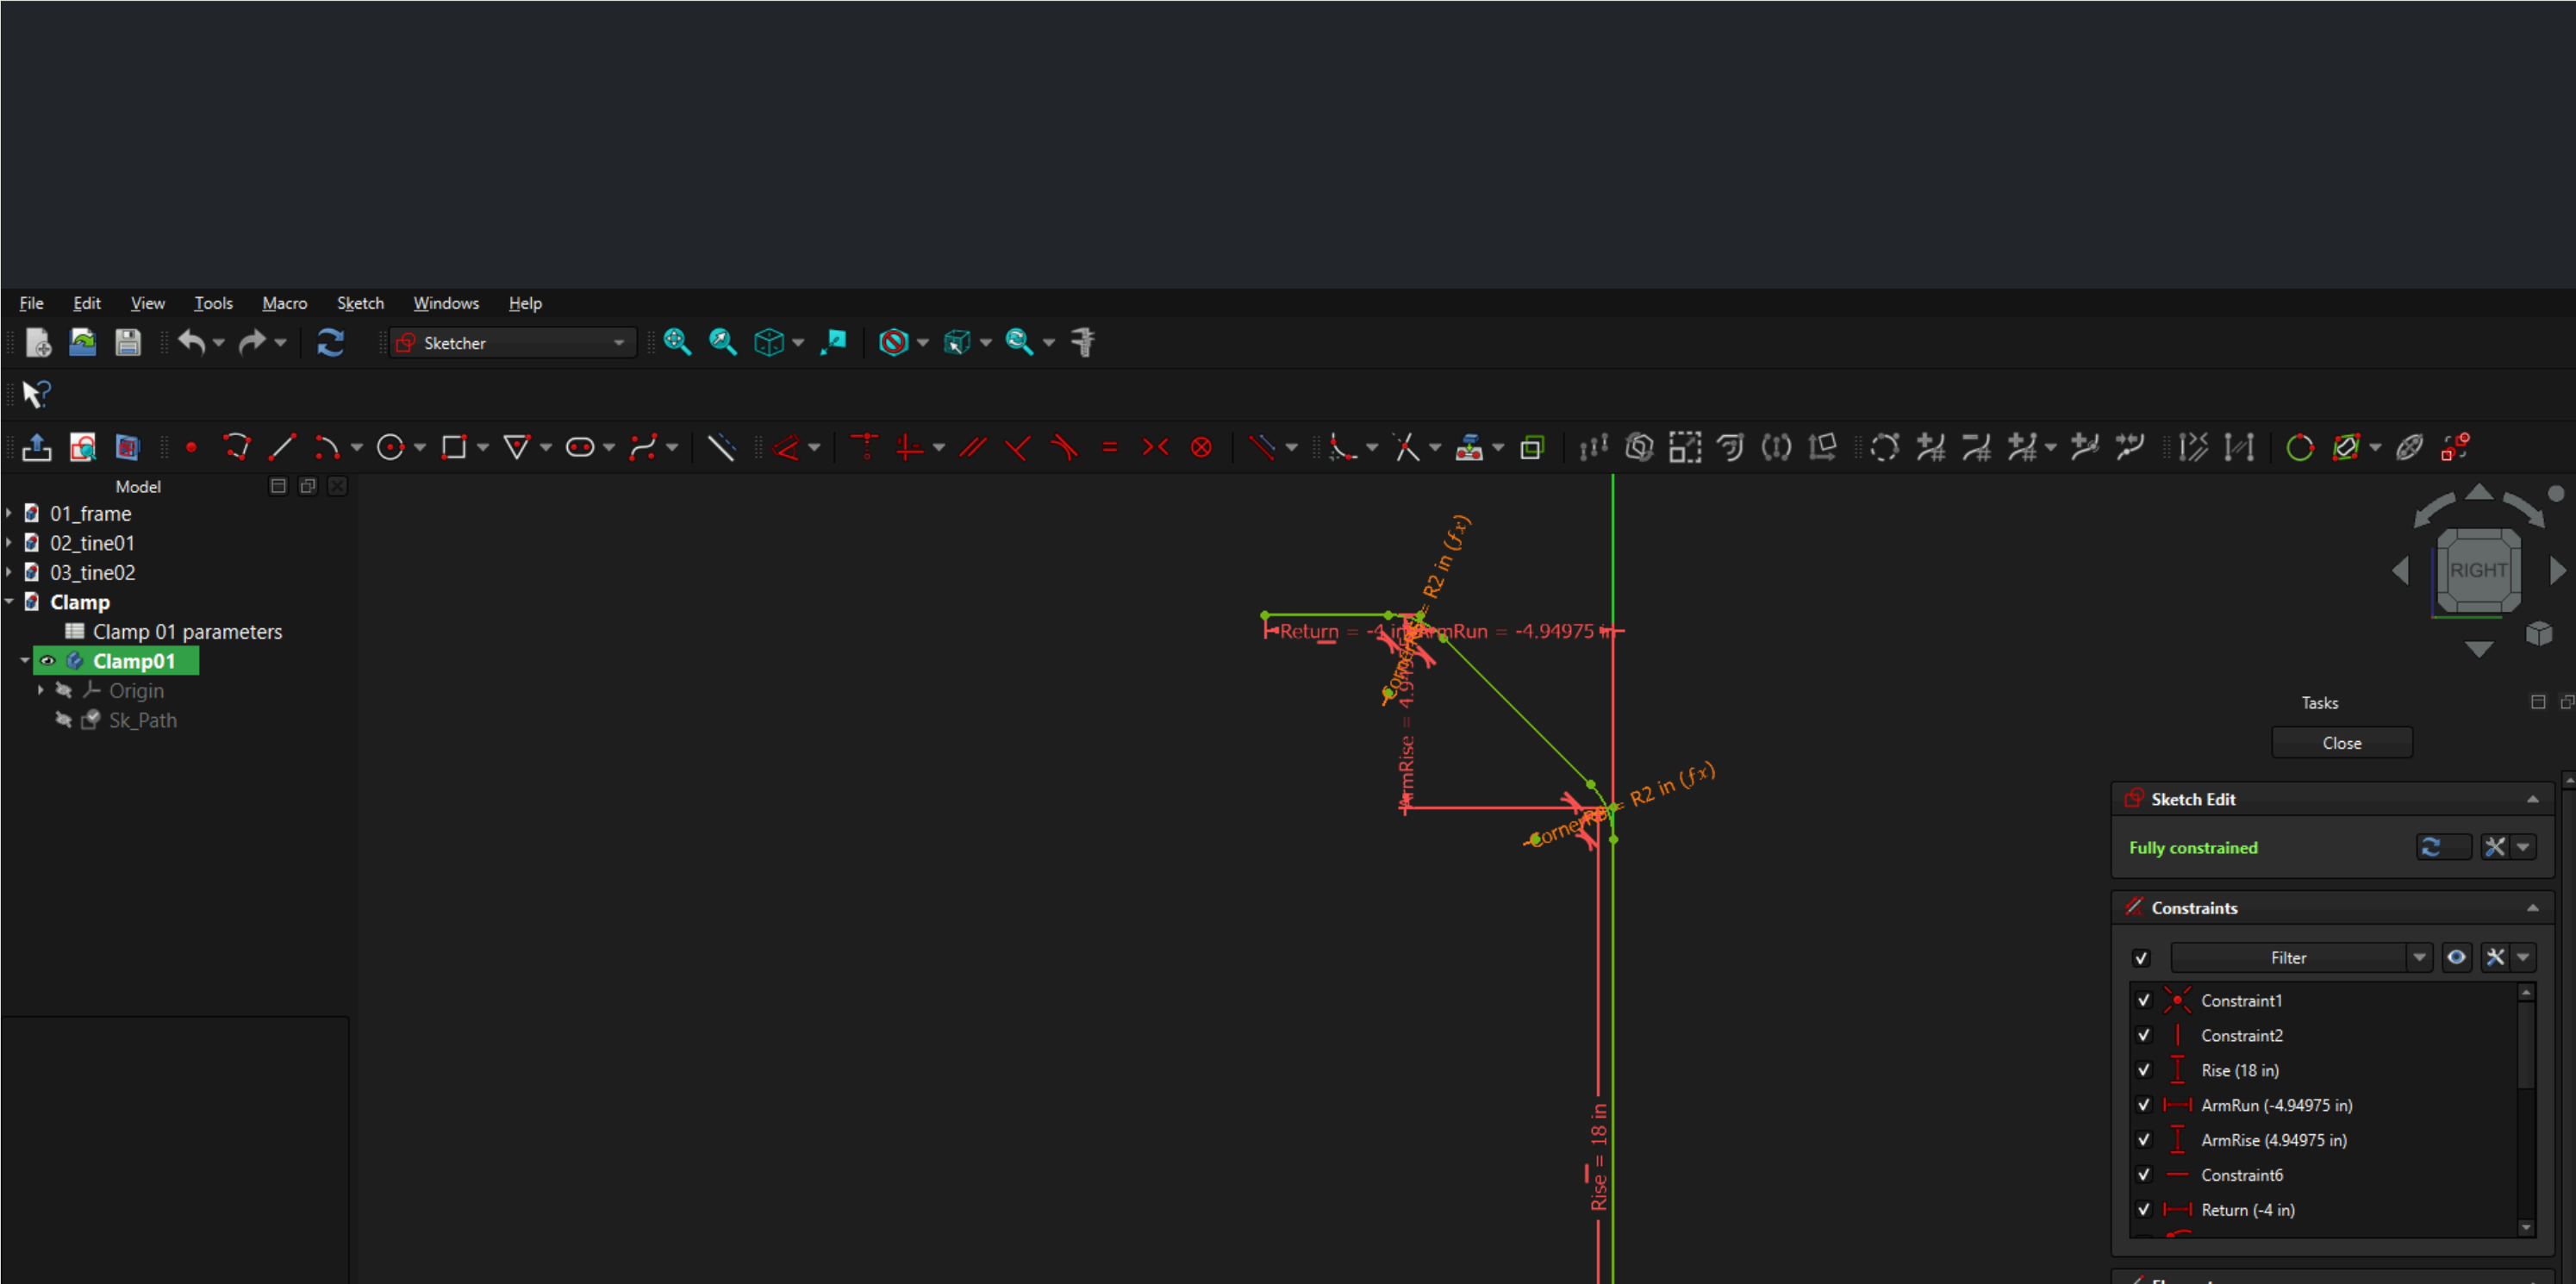


The radius the fillet forgets

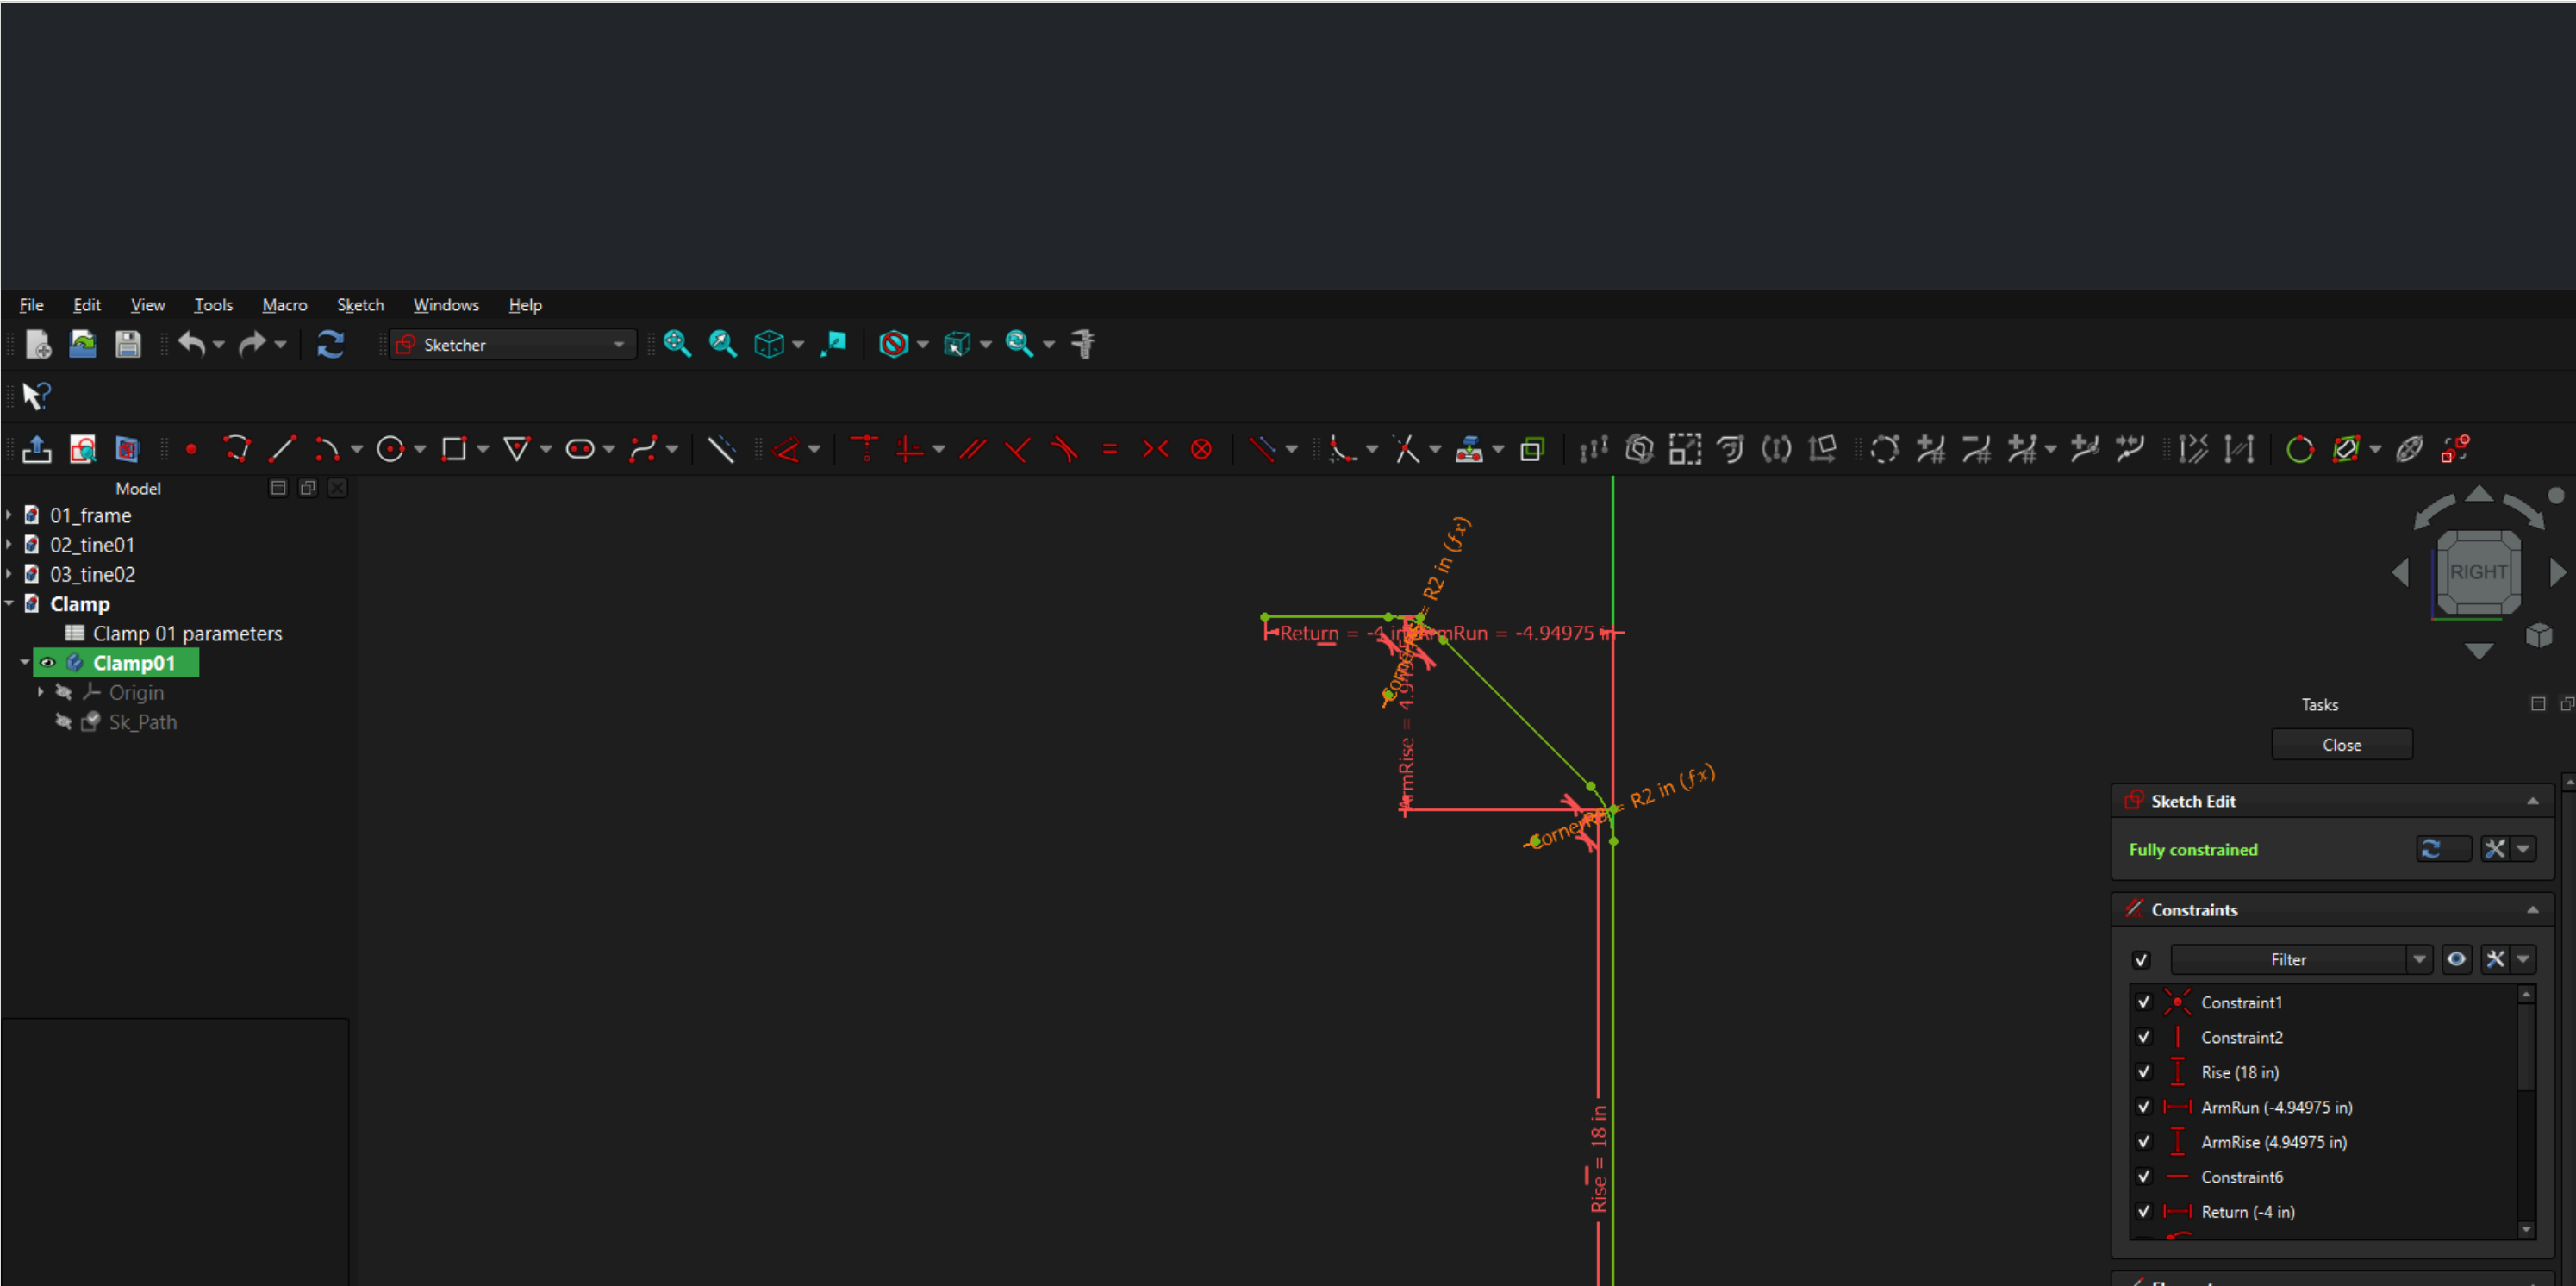

The section, and where it sits

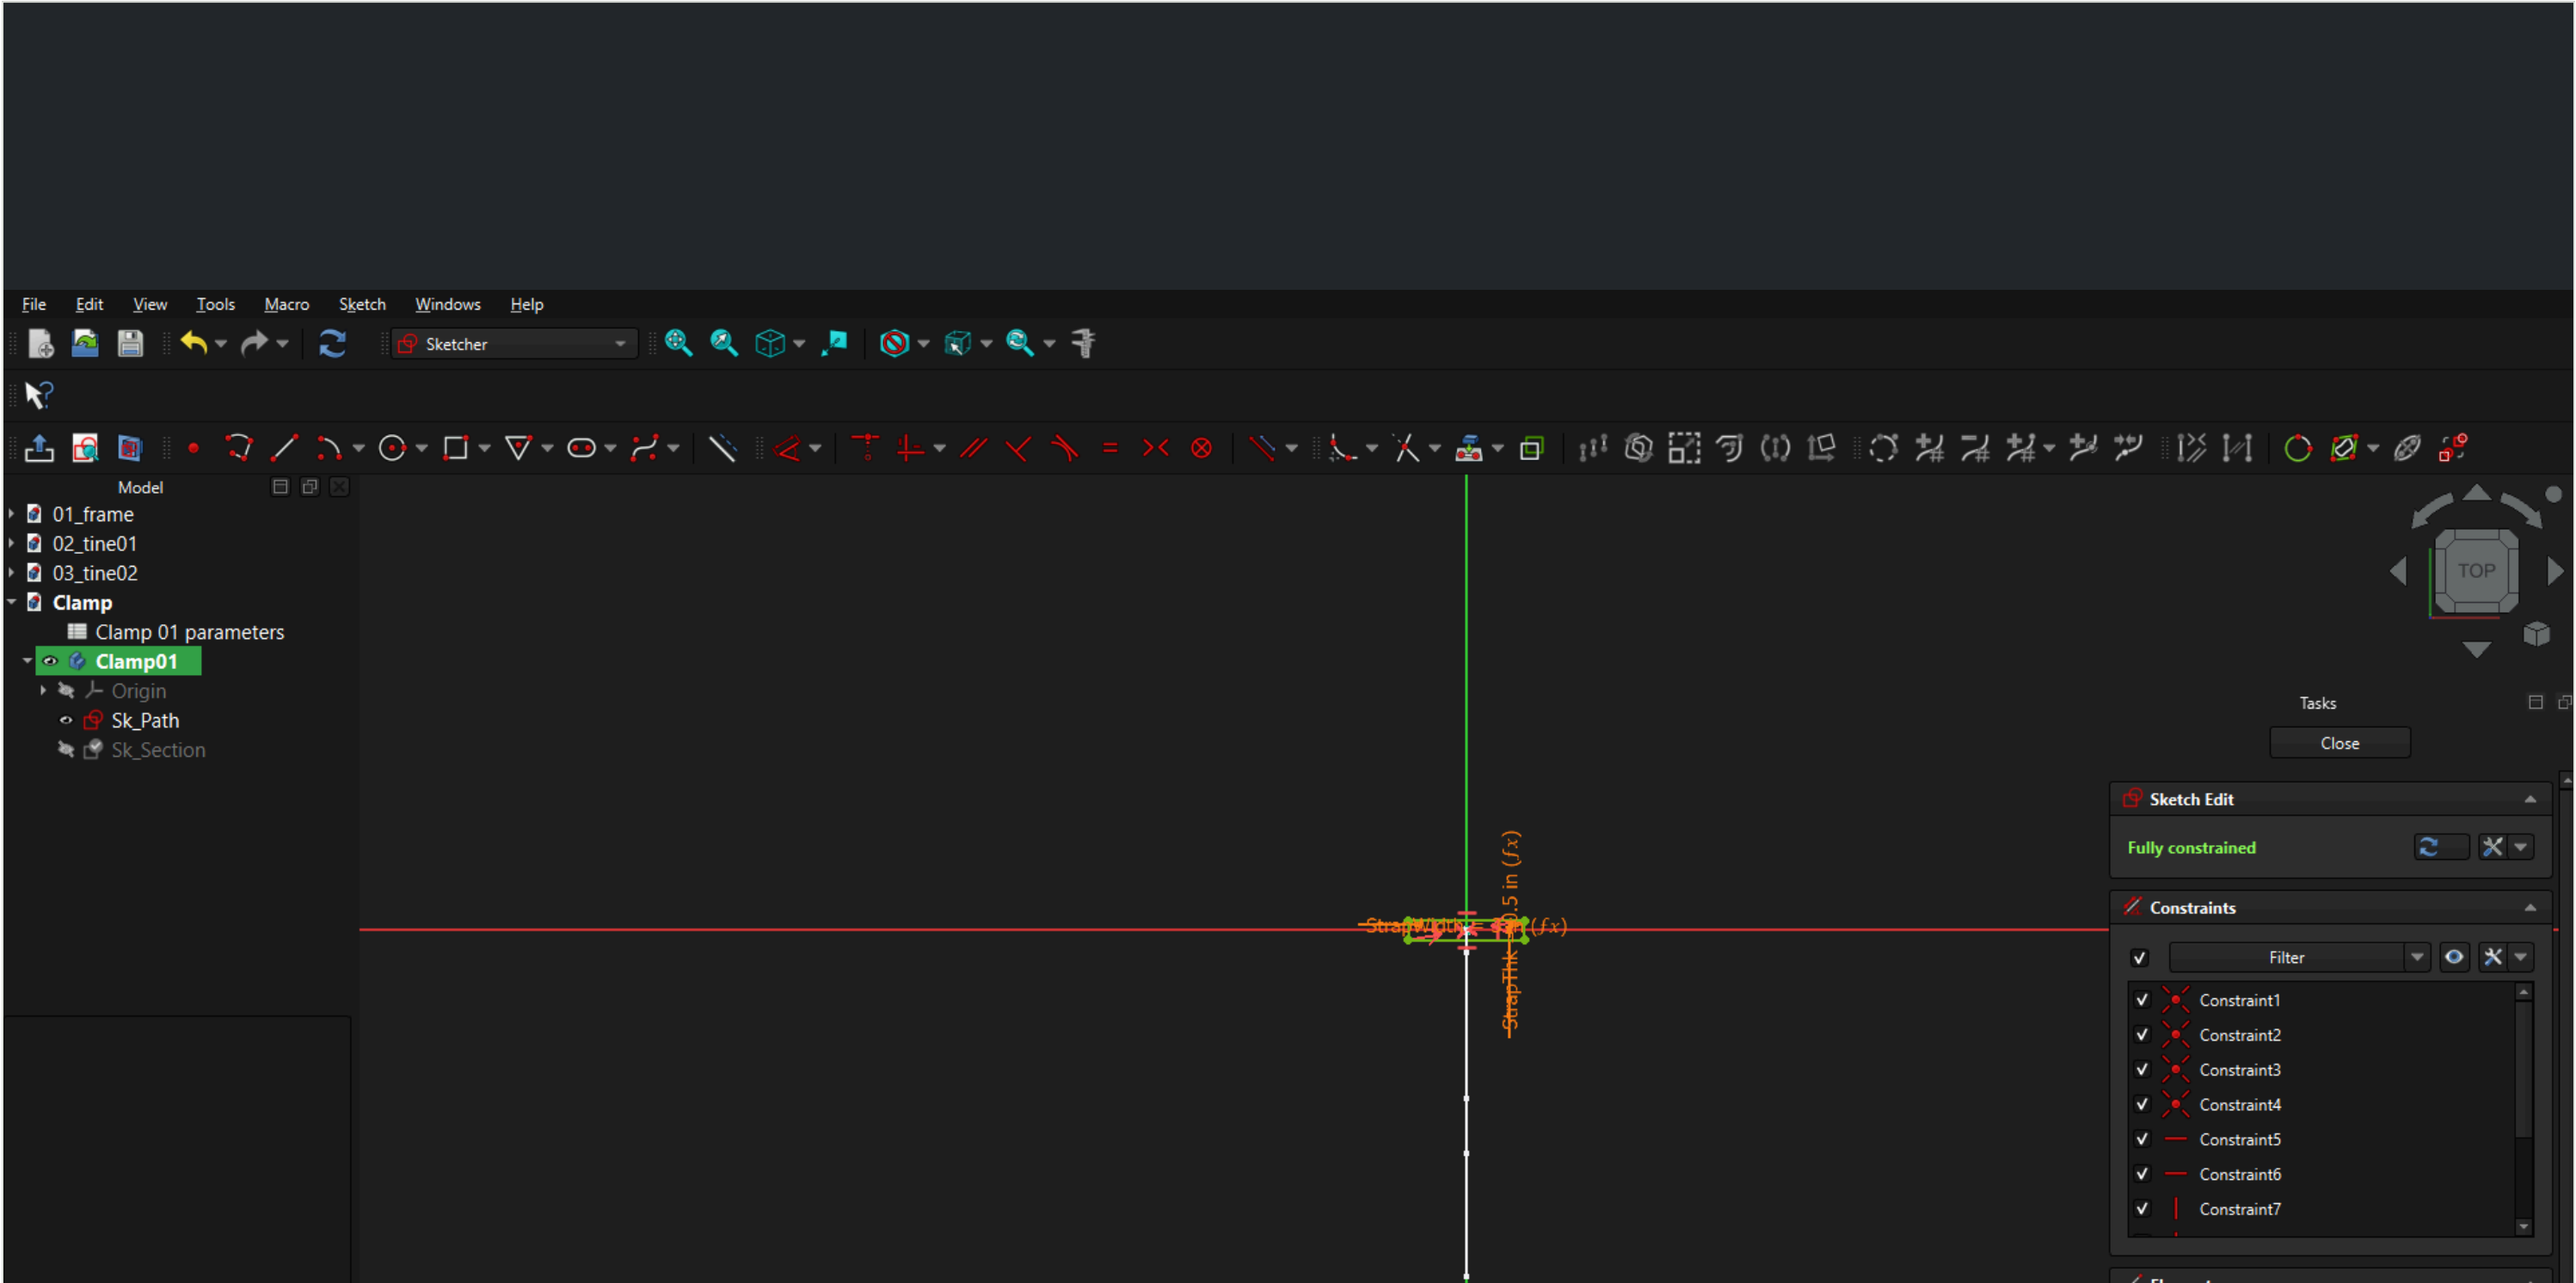

Clamp 02 is the same recipe

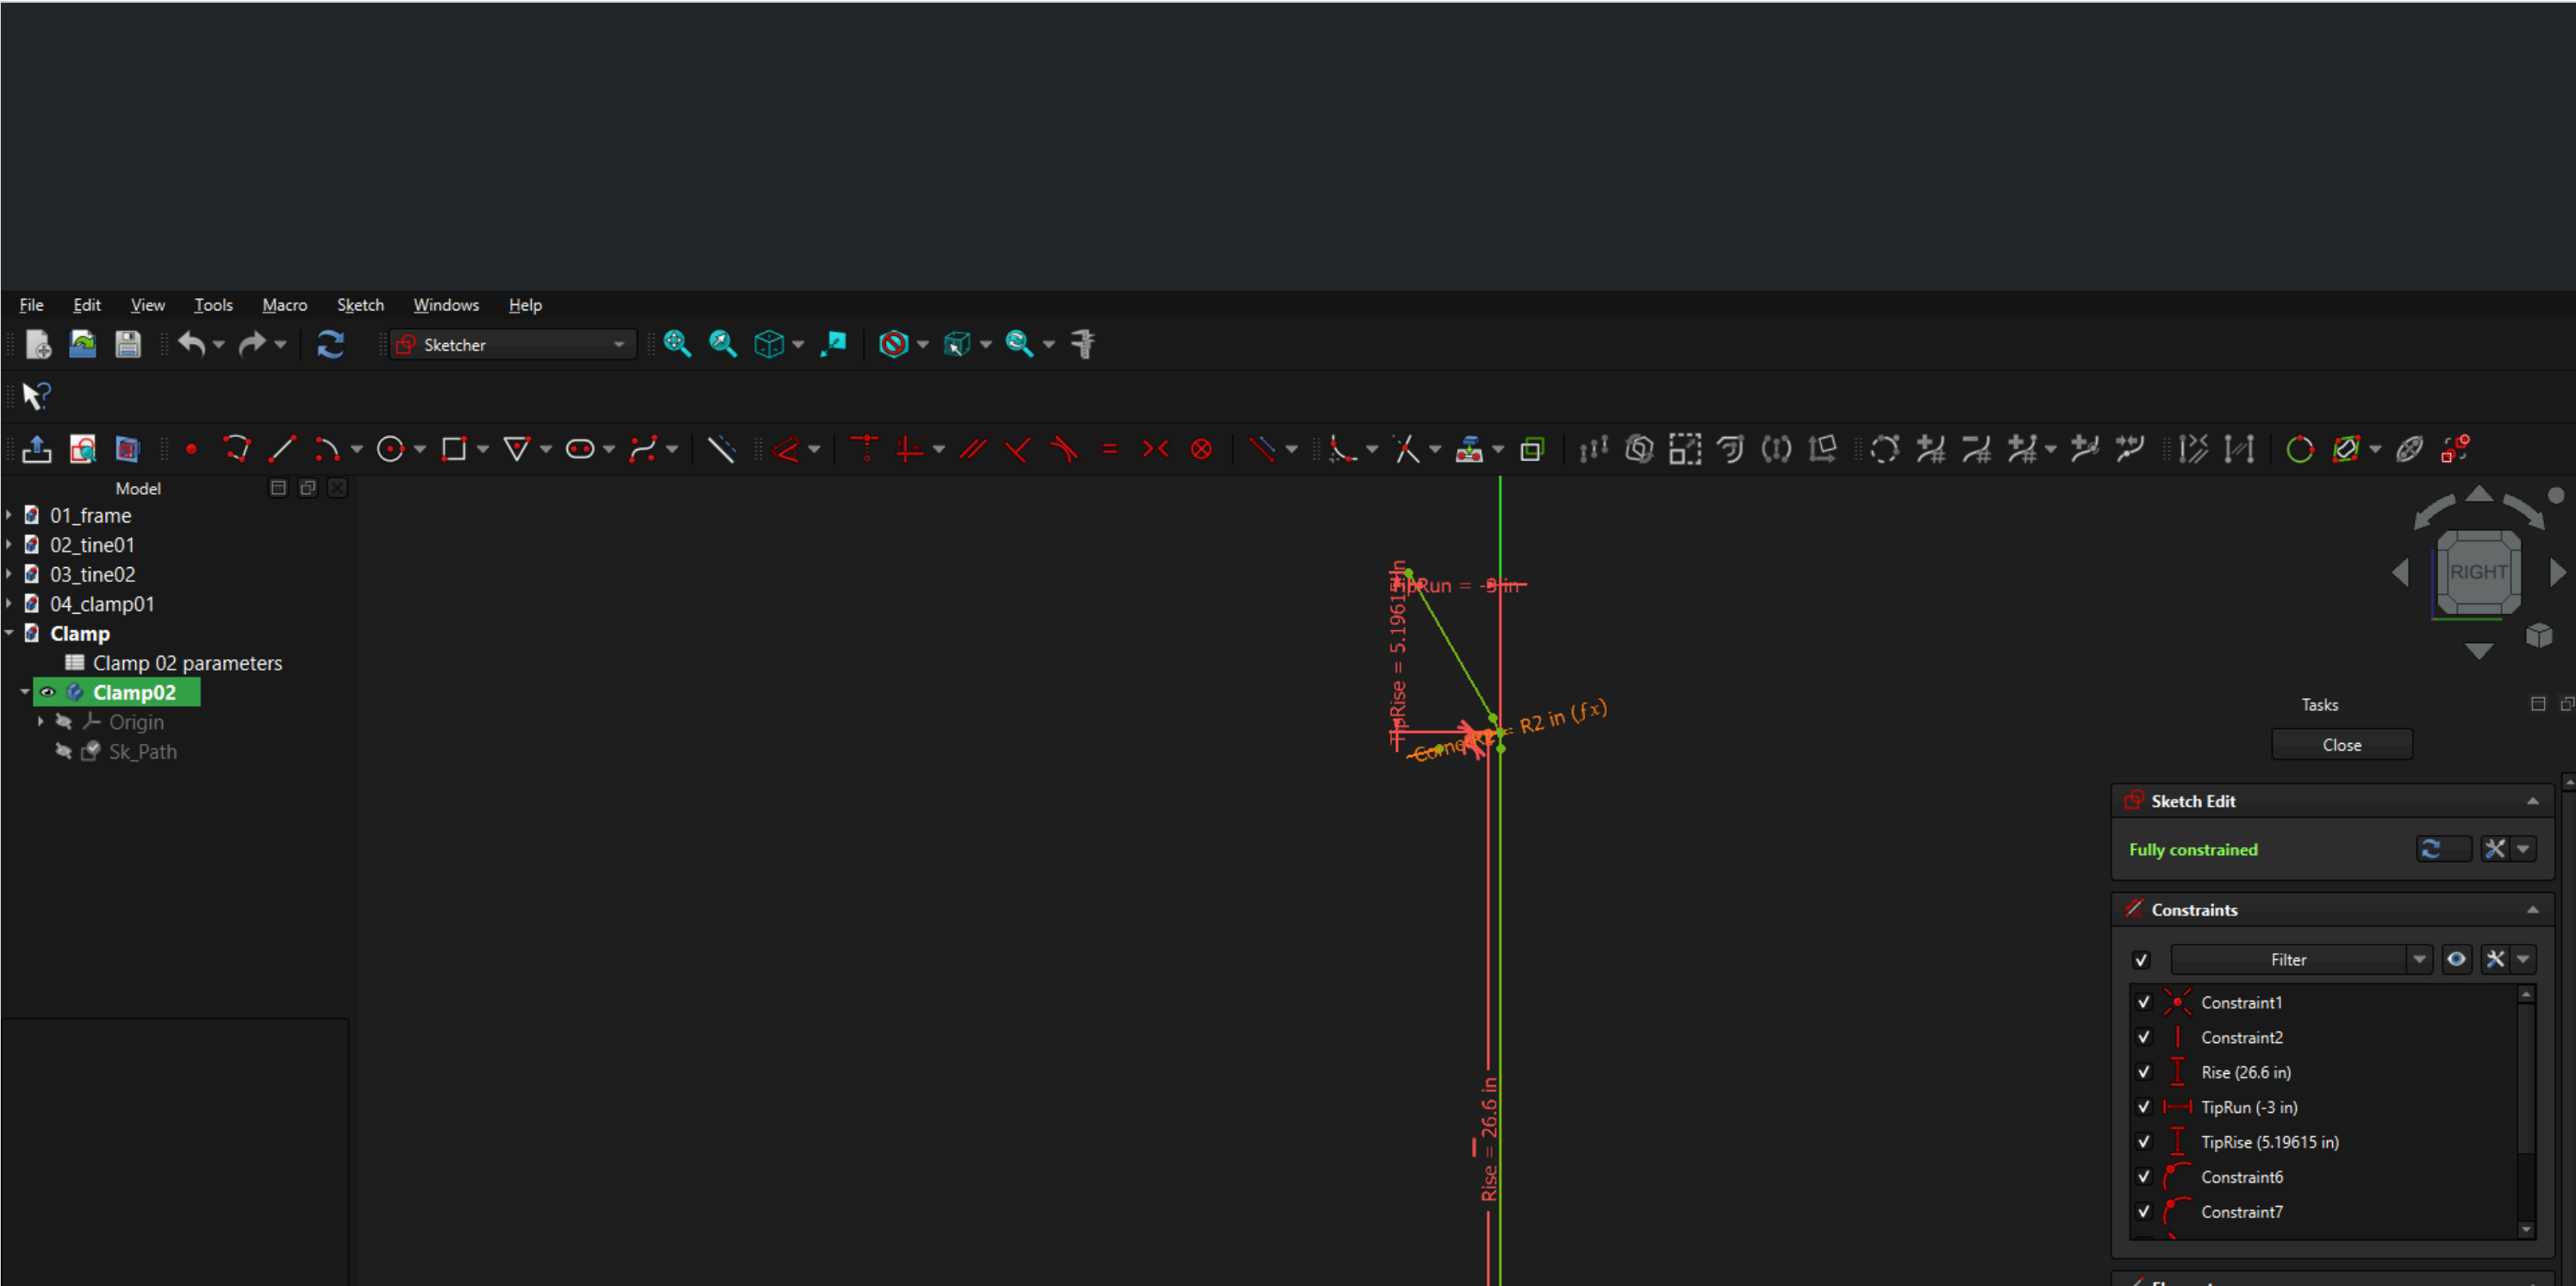

What these parts are for

