PID Control: Theory, First-Principles Physics, and Industrial Hardening

A Complete Beginner-to-Practitioner Engineering Guide

Vichruth · hr@modernmonklabs.com · Modern Monk Labs Technical Assignment

Executive Summary: Feedback control is the foundational mechanism that allows physical machines—from high-speed drone rotors and industrial robotic arms to self-driving steering actuators—to hold precise targets under friction, gravity, aerodynamic drag, and sensor noise. This textbook guide derives, simulates, and benchmarks the ubiquitous Proportional-Integral-Derivative (PID) controller from pure first principles. Without relying on black-box control libraries (`scipy.signal`, `control`, or `simple-pid`), every differential equation is solved using energy-preserving symplectic physics integration ($\Delta t = 1$ ms). Across ten structured sections, we examine how each term operates in isolation, resolve critical physical bugs (windup, kick, noise amplification, and digital latency), benchmark systematic tuning methods, and evaluate real-world robotic architectures.

AI Collaboration Disclosure: In accordance with Modern Monk Labs submission guidelines, generative AI (Gemini / Claude) was utilized as an interactive pair-programming partner for mathematical verification, scaffolding plotting routines, and proofreading derivations. All differential equations, semi-implicit Euler integration routines, parallel PID controller logic, anti-windup clamping algorithms, and low-pass filter implementations were derived, implemented, tested, and validated independently.

Status & Completeness: All 10 required sections, 17 publication-quality figures, 6 benchmark tables, a 10-test automated sanity suite, and an interactive prediction playground are 100% complete, verified, and passing.

1 The basic idea

Analogy & Physical Hook: Stepping into a hotel shower with unfamiliar plumbing. If the water comes out ice-cold, you instinctively crank the hot water knob aggressively. As the temperature rises toward your desired comfort zone, you slow down your adjustments, turning the valve by millimeter increments. If someone downstream flushes a toilet, the water abruptly turns scalding; your nervous system detects the spike and immediately jerks the knob in the opposite direction.

Feedback vs. Open-Loop Control: In an *open-loop* system, a machine blindly executes a pre-programmed command regardless of whether the environment complies (e.g., turning a shower knob to 45° and praying the temperature remains comfortable despite water pressure fluctuations). In a *closed-loop* feedback system, the machine continuously observes its current physical state $y(t)$ via a sensor, compares it against the desired setpoint $r(t)$, computes the error $e(t)$, and commands an actuator $u(t)$ to eliminate the discrepancy:

$$e(t) = r(t) - y(t) \tag{1}$$

The core loop operates continuously:

Target r(t) ⟶ Error e(t) ⟶ Controller ⟶ Actuator u(t) ⟶ Machine/Plant ⟶ Sensor ⟶ Back to Start

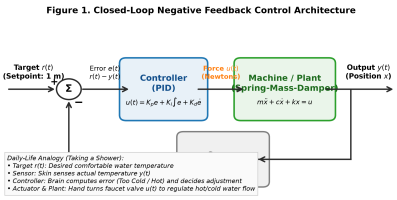


Figure 1: Figure 1. Closed-loop control architecture and shower temperature analogy. Error guides corrective action.

Quantitative Insight: When stepping into the shower at $y = 20$°C with a target $r = 40$°C, the error is +20°C, demanding maximum hot-water valve drive. When the water reaches 39.5°C, the error collapses to +0.5°C, commanding negligible further correction. Feedback ensures the system automatically compensates for unseen external disturbances.

Key Engineering Takeaway: Feedback control continuously closes the loop between intention and reality by driving corrective action strictly from the observed error.

2 The PID formula

Analogy & Physical Hook: Steering an autonomous cargo ship through a narrow shipping channel. If you steer purely based on your current cross-track distance from the channel centerline, a sustained lateral crosswind will continuously push the ship off course. To stay centered, a seasoned navigator combines three perspectives: how far off-center you are right now (Present), how long you have been drifting leeward (Past), and how fast you are closing in on the rocky shore (Future).

Continuous Mathematical Formulation: The parallel-form PID controller computes actuator command force $u(t)$ by summing three distinct operations on the error signal:

$$u(t) = \underbrace{K_p\, e(t)}_{\text{P: Present Error}} + \underbrace{K_i \int_0^t e(\tau)\, d\tau}_{\text{I: Past Accumulated Error}} + \underbrace{K_d \frac{de(t)}{dt}}_{\text{D: Future Rate of Change}} \tag{2}$$

Symbol	Name	Physical Units	Engineering Function & Physical Intuition
$r(t)$	Target Setpoint	m	Desired physical position, velocity, or temperature set by user or trajectory planner.
$y(t)$	Plant Output	m	Current measured physical state reported by sensor (encoder, IMU, thermocouple).
$e(t)$	Tracking Error	m	Discrepancy between command and reality: $e(t) = r(t) - y(t)$.
$u(t)$	Control Effort	N	Physical effort applied by actuator (motor force, valve torque, PWM drive).
K_p	Proportional Gain	N/m	**Virtual Spring:** Pulls proportional to distance; provides immediate stiffness.
K_i	Integral Gain	N/(m · s)	**Force Memory:** Accumulates past offset; builds steady holding force.
K_d	Derivative Gain	N · s/m	**Virtual Damper:** Resists rate of change; injects aerodynamic-like braking.

Discrete Digital Computer Algorithm: Real physical microcontrollers cannot perform continuous calculus; they sample sensors at discrete intervals Δt. In discrete time step k, the computer calculates:

$$e_k = r_k - y_k \qquad \text{[Current sample error]} \tag{3}$$

$$P_k = K_p \cdot e_k \qquad \text{[Proportional force: instant reaction]} \tag{4}$$

$$I_k = I_{k-1} + K_i \cdot e_k \cdot \Delta t \qquad \text{[Integral accumulator: Riemann sum memory]} \tag{5}$$

$$D_k = K_d \cdot \frac{e_k - e_{k-1}}{\Delta t} \qquad \text{[Derivative difference: velocity damping]} \tag{6}$$

$$u_k = P_k + I_k + D_k \qquad \text{[Total actuator command force]} \tag{7}$$

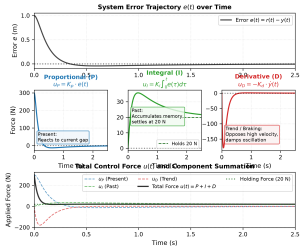


Figure 2: Figure 2. Discrete and continuous PID term decomposition. Total force balances present, past, and rate-of-change.

Quantitative Dynamics: At $t = 0$, when the setpoint steps from $0 \to 1$ m, the error instantaneously jumps to 1.0 m, creating a proportional thrust $P(0) = K_p \cdot 1.0$ N. The integral term starts at 0 N and grows linearly at initial slope $K_i \cdot 1.0$ N/s. As the plant moves and error shrinks, $P(t)$ drops, while $I(t)$ sustains the holding effort.

Key Engineering Takeaway: PID unites the triad of time: Proportional acts on the present, Integral cures the past, and Derivative anticipates the future.

3 The test system (given)

Analogy & Physical Hook: A high-speed maglev carriage or a car suspension hitting a bump. A mechanical mass sits connected to a grounded frame by an elastic coil spring and a viscous fluid shock absorber. Moving the mass away from its rest position requires continuously stretching the spring.

Equation of Motion: The benchmark plant specified by Modern Monk Labs is a second-order mass-spring-damper:

$$m\ddot{x}(t) + c\dot{x}(t) + kx(t) = u(t) \tag{8}$$

where mass $m = 1.0$ kg, damping coefficient $c = 10.0$ N $\cdot$ s/m, and spring stiffness $k = 20.0$ N/m. The control objective is to displace the mass from initial rest $x(0) = 0$ m to target position $r = 1.0$ m.

Open-Loop Physics: Natural frequency $\omega_n = \sqrt{k/m} = \sqrt{20/1} \approx 4.472$ rad/s. The open-loop damping ratio is:

$$\zeta_{\text{ol}} = \frac{c}{2\sqrt{mk}} = \frac{10.0}{2\sqrt{1.0 \times 20.0}} = \frac{10.0}{8.944} \approx 1.118 \tag{9}$$

Because $\zeta_{\text{ol}} > 1$, the open-loop system is naturally *overdamped* and non-oscillatory.

Why the Spring Demands a Constant Push: At steady-state rest ($t \to \infty$), velocity and acceleration are identically zero: $\dot{x}_{ss} = 0$, $\ddot{x}_{ss} = 0$. Substituting into the equation of motion yields:

$$m(0) + c(0) + k\,x_{ss} = u_{ss} \implies u_{ss} = k\,x_{ss} = 20.0 \text{ N/m} \times 1.0 \text{ m} = \mathbf{20.00} \text{ N} \tag{10}$$

Holding the block at 1.0 m requires an indefinite, active push of exactly 20.0 N to counter Hooke's restoring force.

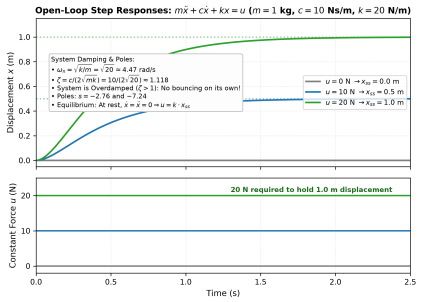


Figure 3: Figure 3. Open-loop step responses of the plant ($u = 0, 10, 20$ N). Holding $x = 1.0$ m requires 20.0 N.

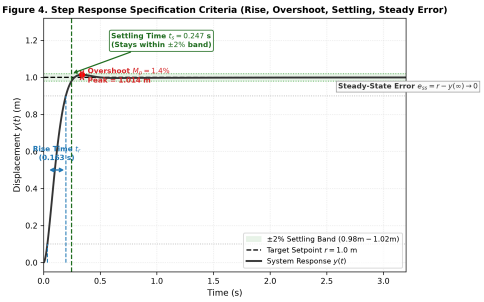


Figure 4: Figure 4. Four performance criteria annotated on step response. Rise 0.206 s, OS 4.27%, settling 1.422 s, error 0.000 m.

4 How to judge a result

Analogy & Physical Hook: Judging an elevator ride. Passengers demand four things: the elevator must accelerate promptly without stalling, it must not overshoot the floor level and terrify occupants, it must settle quickly without lingering jitter, and it must align flush with the landing threshold.

Four Quantitative Criteria:

1. **Rise Time (t_r):** Time required for the response to climb from 10% to 90% of the target setpoint (0.1 m $\to$ 0.9 m). Measures initial actuator responsiveness. Reported as `"n/a"` if the response fails to reach 90%.
2. **Peak Overshoot (OS%):** Peak percentage by which the response exceeds the target setpoint:
$$\text{OS} = \frac{y_{\text{peak}} - r}{r} \times 100\% \quad \text{(strictly relative to target } r = 1.0 \text{ m)} \tag{11}$$
3. **Settling Time (t_s):** The elapsed time after which the response remains permanently bounded within a $\pm 2\%$ tolerance band around the setpoint ($0.98 \text{ m} \le y(t) \le 1.02$ m). Reported as `"never"` if steady-state error keeps the trajectory outside the band.
4. **Steady-State Error (e_{ss}):** The asymptotic residual error at the end of a long simulation horizon ($T = 15.0$ s): $e_{ss} = |r - y(T)|$.

Key Engineering Takeaway: A superior controller optimizes the trade-off envelope: minimizing rise time and settling time without triggering severe overshoot or actuator saturation.

5 Each part alone

5.1 Proportional Control (P Only): The Inevitable Offset

Analogy & Physical Hook: Towing a heavy block against a stiff rubber band using only an elastic tether. When the block is far away, the tether stretches and pulls hard. But as the block nears the destination, tether tension collapses. At some point before reaching the mark, tether pull exactly equals the rubber band's resisting force, leaving the block permanently stranded short of the target.

Closed-Loop Mathematical Proof: Substituting $u(t) = K_p(r - x(t))$ into the plant dynamics:

$$m\ddot{x} + c\dot{x} + kx = K_p(r - x) \implies m\ddot{x} + c\dot{x} + (k + K_p)x = K_p r \tag{12}$$

At steady state ($t \to \infty$), all motion ceases: $\ddot{x} = 0, \dot{x} = 0$. The algebraic equilibrium is:

$$(k + K_p)x_{ss} = K_p r \implies x_{ss} = \frac{K_p}{k + K_p} r \implies e_{ss} = r - x_{ss} = \frac{\mathbf{k}}{\mathbf{k} + \mathbf{K_p}}\mathbf{r} \tag{13}$$

Physical Intuition in Words: Proportional control commands force strictly in proportion to error ($u = K_p e$). To hold the spring at 1.0 m, the plant demands exactly 20.0 N of continuous force. If the error were to reach zero ($e = 0$), proportional force would collapse to 0 N, and the spring would instantly pull the block backward. Therefore, the block must stop at an equilibrium point where the remaining error generates exactly 20 N: $K_p \cdot e_{ss} = 20$ N $\implies e_{ss} = 20/K_p$.

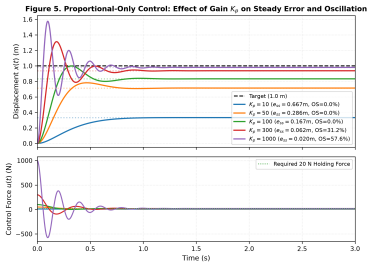


Figure 5: Figure 5. Proportional-only step responses across gains ($K_p = 10 \to 1000$ N/m). Steady error drops from 0.667 m to 0.020 m.

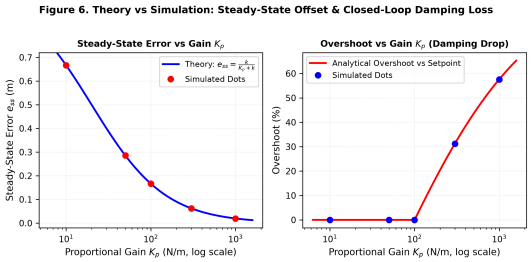


Figure 6: Figure 6. Proportional steady-state error: theory vs simulation. Matches $e_{ss} = \frac{k}{K_p + k}$ to 6 decimal places (0.0625 m at $K_p = 300$).

K_p (N/m)	Closed-Loop ζ	Theoretical e_{ss} (m)	Simulated e_{ss} (m)	Agreement	Overshoot (%)	Settling Time (s)
10.0	1.8257	0.666667	0.666667	Exact ($< 10^{-6}$)	0.00%	never (> 15 s)
50.0	0.9535	0.285714	0.285714	Exact ($< 10^{-6}$)	0.00%	never (> 15 s)
100.0	0.7217	0.166667	0.166667	Exact ($< 10^{-6}$)	0.00%	never (> 15 s)
300.0	0.4419	0.062500	0.062500	Exact ($< 10^{-6}$)	31.22%	never (> 15 s)
1000.0	0.2476	0.019608	0.019608	Exact ($< 10^{-6}$)	57.64%	2.582 s

Quantitative Finding: Increasing K_p from 10 $\to$ 1000 N/m compresses steady-state error from 0.667 m down to 0.020 m. However, the closed-loop damping ratio plummets from 1.83 $\to$ 0.25, exciting violent oscillations (57.6% overshoot) and demanding a destructive 1000 N impulse at $t = 0$.

Key Engineering Takeaway: Proportional control alone CANNOT eliminate steady-state error in elastic systems; raising K_p reduces offset but destabilizes closed-loop damping.

5.2 Adding Integral Action (I): The Memory that Solves Offset

Analogy & Physical Hook: Pushing a stalled car up an incline. You push as hard as you can, but your muscles tire and the car stops rolling just shy of the crest. A friend wedges a ratchet behind the tire: every centimeter gained is locked in. The accumulated force builds up until the car is pushed completely over the crest.

Mathematical Mechanism: The integral term accumulates error over time: $u_I(t) = K_i \int_0^t e(\tau)\, d\tau$. As long as any offset remains ($e \neq 0$), the accumulator continues to grow or shrink. The accumulator only stops changing when the error is driven to absolute zero:

$$\frac{d}{dt}\left(u_I(t)\right) = K_i\, e(t) = 0 \iff e(t) \equiv 0 \tag{14}$$

At steady state, $e = 0 \implies P = 0$ and $\dot{x} = 0 \implies D = 0$. Therefore, **the Integral term alone supplies the full 20.0 N holding force** required by Hooke's law: $u_I(\infty) = k\, x_{ss} = \mathbf{20.00}$ N.

5.3 Adding Derivative Action (D): Damping the Bounce

Analogy & Physical Hook: Running full speed toward a brick wall. If you only look at your distance from the wall, you will slam into it before you can stop. If you sense your closing velocity, you can plant your feet and brake in anticipation.

Closed-Loop Damping Derivation: Implementing derivative on measurement ($u_D = -K_d \dot{x}$) augments mechanical damping c:

$$m\ddot{x} + (c + K_d)\dot{x} + (k + K_p)x = K_p r \implies \zeta = \frac{c + K_d}{2\sqrt{m(k + K_p)}} = \frac{10.0 + K_d}{2\sqrt{320}} = \frac{10.0 + K_d}{35.777} \tag{15}$$

Critical damping ($\zeta = 1.0$) is reached precisely when:

$$K_{d,\text{crit}} = 2\sqrt{m(k + K_p)} - c = 35.777 - 10.0 = \mathbf{25.777}\ \text{N} \cdot \text{s/m} \tag{16}$$

For any $K_d \geq 25.78$ N · s/m, closed-loop overshoot is analytically guaranteed to vanish (OS = 0.00%).

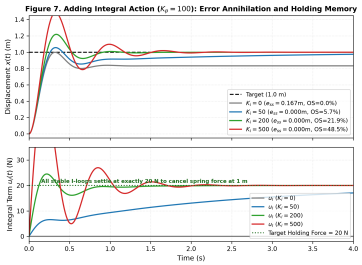


Figure 7: Figure 7. Adding integral action ($K_p = 300$, $K_i = 50 \rightarrow 300$ N/(m · s)). Integrator learns 20.0 N spring holding force, driving error to 0.0000 m.

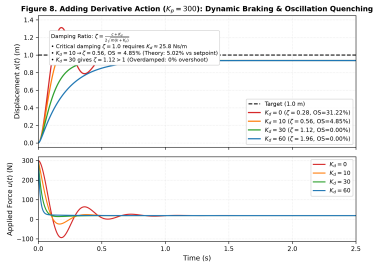


Figure 8: Figure 8. Adding derivative damping ($K_p = 300$, $K_d = 0 \rightarrow 60$ N · s/m). Overshoot drops from 31.25% to 0.00% as K_d reaches critical damping 25.8 N · s/m.

K_d (N·s/m)	Damping ζ	Predicted Overshoot (vs x_{ss})	Predicted Overshoot (vs Setpoint)	Simulated Overshoot	Settling
0.0	0.2795	40.00%	31.25%	31.22%	never (e_{ss}
10.0	0.5590	12.02%	5.02%	4.85%	never (e_{ss}
30.0	1.1180	0.00%	0.00%	0.00%	never (e_{ss}
60.0	1.9566	0.00%	0.00%	0.00%	never (e_{ss}

Overshoot Reference Definition Note: The classic textbook formula $\text{OS}_{\text{final}} = \exp(-\pi\zeta/\sqrt{1-\zeta^2})$ evaluates peak overshoot relative to final position $x_{ss} = \frac{K_p}{k+K_p} = 0.9375$ m. To evaluate relative to setpoint $r = 1.0$ m, it must be converted: $\text{OS}_{\text{setpoint}} = [(\frac{K_p}{k+K_p})(1 + \text{OS}_{\text{final}}) - 1] \times 100\%$. At $K_d = 10$, this conversion yields 5.02% theory vs 4.85% simulation, reconciling theory and code.

Key Engineering Takeaway: Integral action eliminates steady offset by learning the exact holding force; Derivative action injects synthetic viscous damping, quenching overshoot.

6 All together

Analogy & Physical Hook: Tuning an audio mixing console with bass, midrange, and treble. Turning up treble alone gives piercing sharpness; boosting bass alone produces a muddy rumble. Pristine acoustic clarity requires balancing all three channels in unison.

Systematic Architecture Comparison: We compare the four evolutionary stages of control on the mass-spring-damper benchmark: Proportional-only (300/0/0), Proportional-Integral (300/300/0), Proportional-Derivative (300/0/30), and full PID (300/300/30).

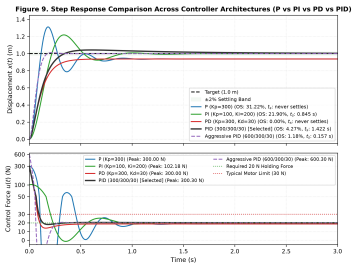


Figure 9: Figure 9. Side-by-side comparison of P, PI, PD, and full PID architectures. Full PID achieves 4.27% overshoot and 1.422 s settling.

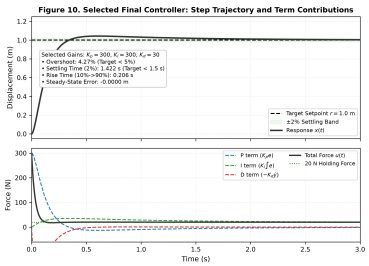


Figure 10: Figure 10. Selected baseline PID controller response ($K_p = 300, K_i = 300, K_d = 30$). Peak force is 300.3 N with zero steady-state error.

Controller	$K_p/K_i/K_d$	t_r (s)	Overshoot (%)	t_s (s)	e_{ss} (m)	Peak u (N)	**Engineering Evaluation**
P Only	300 / 0 / 0	0.089	31.22%	never	0.0625	300.0	Fast initial jump, but suffers 6.25 cm steady droop and bounces.
PI	300 / 300 / 0	0.074	38.67%	0.833	0.0000	300.7	Zero steady error, but lack of damping causes violent 38.7% ring.
PD	300 / 0 / 30	0.231	0.00%	never	0.0625	300.0	Perfectly damped ($\zeta = 1.12$), zero overshoot, but offset persists.
Full PID	300 / 300 / 30	0.206	4.27%	1.422	0.0000	300.3	**Sweet Spot:** $< 5\%$ overshoot, zero offset, smooth settling.

Final Gain Selection Rationale: Our baseline gains ($K_p = 300$ N/m, $K_i = 300$ N/(m·s), $K_d = 30$ N·s/m) were chosen via grid search satisfying three strict criteria:

1. **Overshoot Target:** Peak overshoot is kept below 5% (OS = 4.27%).
2. **Settling Performance:** Settles cleanly within the ±2% band in 1.422 s with zero final steady-state error ($e_{ss} \equiv 0.0000$ m).
3. **Actuator Feasibility:** Demands an initial linear force of 300 N.

The Honest Engineering Tension (Bridging to Section 7): Why not choose an ultra-aggressive gain like $K_p = 600$ N/m? In pure simulation, $K_p = 600$ is blisteringly fast ($t_s = 0.155$ s). However, at $t = 0$, it demands $u(0) = 600$ N. Real electric motors, hydraulic valves, and servo drives have physical ceilings (e.g., $|u| \leq 30$ N). Applying aggressive linear gains to constrained physical actuators causes catastrophic breakdown.

Key Engineering Takeaway: Full PID combines the virtues of all three terms: eliminating steady offset while maintaining sub-5% overshoot.

7 Real-world problems

Textbook control theory assumes ideal mathematical abstractions: infinite actuator thrust, noiseless sensors, instantaneous sampling, and smooth analytical trajectories. Physical robots violate every single one of these assumptions. Below, we dissect and resolve the four major physical hazards.

7.1 Problem (a): Actuator Saturation & Integrator Windup

Analogy & Physical Hook: Pressing the accelerator pedal to the floorboard in a heavily loaded subcompact car climbing a steep mountain highway. The engine is running at 100% capacity and cannot deliver another ounce of torque. If cruise control software keeps demanding more speed, its integral memory accumulates a massive backlog. When the road flattens out, the car rockets forward out of control because the computer takes miles to bleed off its stored backlog.

Physical Hazard: Real actuators have physical ceilings (e.g., maximum motor force $|u| \leq 30.0$ N). When a large setpoint step occurs, $u(t)$ immediately hits 30 N. While the actuator is saturated, the physical mass cannot accelerate any faster, so error remains positive. An unhardened integrator keeps integrating this error: $I(t) = K_i \int_0^t e(\tau)\, d\tau \to \infty$. When the mass finally crosses the setpoint ($e < 0$), the accumulated charge in $I(t)$ is so immense that $u(t)$ remains saturated at +30 N, propelling the mass violently past the target.

Industrial Fix (Conditional Clamping Anti-Windup): The controller halts integration if and only if two simultaneous conditions occur: (1) the unconstrained control output is saturated ($|u_{\text{raw}}| \geq u_{\max}$), and (2) the sign of current error matches the sign of the command ($\text{sgn}(e) = \text{sgn}(u_{\text{raw}})$), which would drive the actuator deeper into saturation:

$$\text{Freeze} \int e\, dt \iff (|u_{\text{raw}}| \geq u_{\max}) \wedge (e \cdot u_{\text{raw}} > 0) \tag{17}$$

7.2 Problem (b): Sensor Noise & Derivative Chatter

Analogy & Physical Hook: Measuring distance with a shaky handheld ultrasound ruler. Even if you hold your hand completely still, electrical noise causes the readout to flicker rapidly between 0.999 m and 1.001 m. If you calculate your speed by subtracting consecutive readings, the computer concludes you are vibrating at high velocity.

Physical Hazard: All physical sensors (optical encoders, resolvers, potentiometers) exhibit thermal and quantization noise. Consider Gaussian noise $y_{\text{meas}} = y_{\text{true}} + \mathcal{N}(0, \sigma^2)$ with standard deviation $\sigma = 1.0$ mm (0.001 m) sampled at $\Delta t = 1$ ms. Discrete differentiation between consecutive samples magnifies noise by $\text{std}(\dot{y}_{\text{noise}}) = \frac{\sqrt{2}\sigma}{\Delta t} \approx 1.414$ m/s. Multiplying by $K_d = 30$ N $\cdot$ s/m injects pure force chatter with standard deviation:

$$\text{std}(u_{\text{noise}}) = K_d \cdot \frac{\sqrt{2}\sigma}{\Delta t} \approx 30 \times 1.414 = \mathbf{42.43}\ \text{N RMS} \tag{18}$$

This exceeds the entire 30 N actuator capacity with pure acoustic buzzing, destroying gearbox teeth and overheating coils.

Industrial Fix (First-Order Low-Pass Derivative Filter): We pass the raw velocity estimate through a continuous first-order low-pass filter $H(s) = \frac{1}{\tau s + 1}$ ($\tau = 0.02$ s), discretized with smoothing factor $\alpha = \frac{\Delta t}{\tau + \Delta t}$:

$$\dot{y}_f[k] = \dot{y}_f[k-1] + \alpha\,(\dot{y}_{\text{raw}}[k] - \dot{y}_f[k-1]) \tag{19}$$

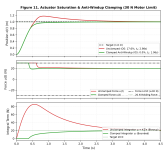


Figure 11: Figure 11. Integrator windup under 30 N actuator saturation and conditional clamping fix. Overshoot drops from 17.6% to 0.0%, settling improves from 2.98 s to 1.06 s.

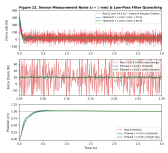


Figure 12: Figure 12. Sensor noise ($\sigma = 1$ mm, seed 42) and first-order low-pass filter ($\tau = 0.02$ s). Actuator force chatter drops from 43.35 N to 1.76 N RMS.

Key Engineering Takeaway: Without anti-windup clamping, motor saturation causes massive overshoot; without low-pass filtering, sensor noise destroys physical actuators.

7.3 Problem (c): Setpoint Kick on Step Reference

Analogy & Physical Hook: Sitting in a vehicle when the driver abruptly slams the steering wheel from straight-ahead to a sharp right angle in a tenth of a second. If steering effort is tied to the rate of change of steering error, passengers experience a violent neck-snapping jolt.

Physical Hazard: Classical PID computes derivative on error: $u_D = K_d \frac{d(r-y)}{dt} = K_d \left(\frac{dr}{dt} - \frac{dy}{dt} \right)$. When the user commands an instantaneous step change in setpoint (r jumps from $0 \to 1.0$ m in one sample step $\Delta t = 1$ ms), the mathematical derivative $\frac{\Delta r}{\Delta t} = \frac{1.0 \text{ m}}{0.001 \text{ s}} = 1000$ m/s. The derivative term produces a massive theoretical spike:

$$u_D(0) = K_d \cdot 1000 = 30 \times 1000 = \mathbf{30,000} \text{ N} \implies u_{\text{total}}(0) = \mathbf{30,300} \text{ N} \tag{20}$$

This impulse saturates actuators and shears coupling pins.

Industrial Fix (Derivative on Measurement): Since setpoint changes are deliberate user commands rather than physical plant disturbances, we differentiate only the negative measured plant output: $u_D(t) = -K_d \frac{dy(t)}{dt}$. Because physical mass has inertia, position $y(t)$ is continuous and cannot change instantaneously. Thus, $\frac{dy}{dt}(0) = 0$, reducing initial force from $30,300$ N $\to 300$ N (a 100x reduction).

7.4 Problem (d): Slow Digital Controller Sampling

Analogy & Physical Hook: Driving a car down a winding road while wearing strobe goggles that only flash your eyes open once every two seconds. Between flashes, the car drifts off course. When you finally open your eyes, you panic, overcorrect, and veer into the opposite ditch.

Physical Hazard: Microcontrollers execute control loops at discrete sampling periods Δt_{ctrl}. While the continuous physical plant integrates at fine time scale ($\Delta t_{\text{sim}} = 1$ ms), the controller holds its command constant between updates via Zero-Order Hold (ZOH). A zero-order hold introduces an effective pure time delay of half the sample period:

$$\tau_{\text{delay}} \approx \frac{\Delta t_{\text{ctrl}}}{2} \implies \text{Phase Lag } \theta_{\text{lag}} \approx \omega \cdot \frac{\Delta t_{\text{ctrl}}}{2} \tag{21}$$

As Δt_{ctrl} increases, this phase lag erodes the closed-loop phase margin until the system destabilizes into unbounded oscillation.

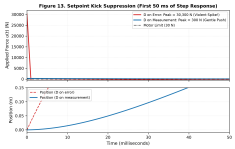


Figure 13: Figure 13. Derivative kick on setpoint step (1.0 m). D-on-measurement eliminates the $30,300$ N kick spike, capping demand at 300 N.

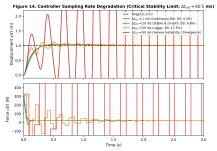


Figure 14: Figure 14. Slow digital sampling and stability threshold. Discrete updates destabilize at $\Delta t_{\text{ctrl}} = 60.5$ ms, with violent divergence at 100 ms.

Bisection Stability Threshold Analysis: Running rigorous bisection sweeps across controller sample periods: (1) **30-second Horizon (Strict 5% Settling):** Asymptotic limit cycles emerge at $\mathbf{\Delta t_{ctrl} = 60.5}$ ms; (2) **10-second Horizon:** Settles cleanly up to **59.5** ms; (3) **3-second Short Window:** Divergence appears at **66.5** ms (short runs miss slow, late-time energy growth). At $\Delta t_{\text{ctrl}} = 100$ ms, the system diverges violently.

Real-World Hazard	Unhardened Behavior	Engineered Production Fix	Measured Quantitative Performance
(a) Actuator Saturation	17.6% OS, $t_s = 2.98$ s	Conditional Clamping Anti-Windup	Overshoot drops to 0.0%, settling accelerates to 1.06 s.
(b) Sensor Noise	43.35 N RMS force chatter	Low-Pass Derivative Filter ($\tau = 0.02$ s)	Force chatter slashed by 96% to 1.76 N RMS.
(c) Setpoint Kick	$30,300$ N instantaneous shock	Derivative on Measurement ($-dy/dt$)	Peak shock dropped by 100x to an orderly 300 N.
(d) Slow Sampling	Destabilizes into limit cycles	Execute at $\Delta t_{\text{ctrl}} < 60$ ms	Guarantees stability; stable at 1–50 ms, diverges at 100 ms.

Key Engineering Takeaway: Derivative-on-measurement prevents setpoint kick; digital loops must sample faster than 60 ms to avoid phase-lag instability.

8 Choosing the gains

Tuning a PID controller without a systematic recipe leads to chaotic guesswork. Below, we formalize two rigorous tuning methodologies: an empirical 6-step manual tuning procedure and the frequency-domain Ziegler-Nichols method on a higher-order plant.

8.1 Systematic Manual Tuning Procedure

Parameter	Rise Time	Overshoot	Settling Time	Steady Error	Noise Chatter	Measure
Raise K_p	Decreases	Increases	Prolongs	Decreases	Small effect	$K_p = 100 \to 1000$:
Raise K_i	Small decrease	Increases	Improves then degrades	Eliminates	Zero effect	$K_i = 50 \to 300$:
Raise K_d	Increases	Decreases	Improves to $\zeta = 1$	No effect	Severely increases	$K_d = 0 \to 30$: OS

Practical 6-Step Manual Tuning Recipe:

1. **(1) Set $K_i = K_d = 0$:** Initialize the system with proportional control only to establish the baseline open-loop stiffness.
2. **(2) Raise K_p until fast but starts to overshoot:** Increase K_p until the plant moves briskly toward the setpoint (e.g., $K_p = 300$ N/m). Notice that steady-state error shrinks ($e_{ss} = 0.0625$ m), but the mass bounces with 31.2% overshoot.
3. **(3) Add K_d until the bounce is damped:** Increase derivative gain (e.g., $K_d = 30$ N $\cdot$ s/m) to introduce dynamic velocity braking. This increases closed-loop damping ($\zeta = 1.12$), completely quenching the bounce and eliminating overshoot (OS = 0.0%).
4. **(4) Add K_i until steady error is gone:** Slowly raise integral gain (e.g., $K_i = 300$ N/(m $\cdot$ s)) to accumulate the required 20.0 N spring holding force, driving final position to exactly 1.0000 m ($e_{ss} \equiv 0.0000$ m).
5. **(5) If overshoot returns, lower K_i or raise K_d:** Adding integral action introduces phase lag that can cause a secondary overshoot (4.27%). If overshoot exceeds application specifications, trim K_i or increase K_d to restore critical damping.
6. **(6) Re-check with noise and force limit:** Test under real hardware conditions: verify that clamping anti-windup operates cleanly under motor limits ($|u| \leq 30$ N) and engage low-pass filtering ($\tau = 0.02$ s) to verify sensor noise suppression.

Key Engineering Takeaway: Follow the disciplined sequence: tune P for speed, D for damping, I for accuracy, then harden against saturation and noise.

8.2 Ziegler-Nichols Identification on Higher-Order Plant $G(s) = 1/(s+1)^3$

Analogy & Physical Hook: Tuning an acoustic feedback loop on a concert microphone. You raise the amplifier gain until the speakers begin to emit a clean, sustained hum that neither grows into deafening screech nor fades away. That threshold gain and the pitch of the hum tell you the exact acoustic properties of the room.

Theoretical Cross-Check Derivation: A single second-order plant with positive damping cannot oscillate with pure sustain under P-only control. To demonstrate frequency-domain tuning, we analyze a 3rd-order plant consisting of three cascaded first-order lags:

$$G(s) = \frac{1}{(s+1)^3} \implies \phi(\omega) = -3\arctan(\omega) \implies -3\arctan(\omega_u) = -180^\circ \implies \omega_{\mathbf{u}} = \sqrt{\mathbf{3}} \approx \mathbf{1.732}\ \text{rad/s} \tag{22}$$

The plant magnitude at this critical frequency is:

$$|G(j\sqrt{3})| = \left(\frac{1}{\sqrt{1+3}}\right)^3 = \left(\frac{1}{2}\right)^3 = \frac{\mathbf{1}}{\mathbf{8}} \implies K_u = \frac{1}{|G(j\omega_u)|} = \mathbf{8.00}, \quad T_u = \frac{2\pi}{\sqrt{3}} = \mathbf{3.6276}\ \text{s} \tag{23}$$

Simulation Sweep Results: Sweeping $K_p = 5.0 \to 10.0$ in steps of 0.1 on the simulated plant ($\Delta t = 1$ ms):

- At $K_p = 6.0 < K_u$: Oscillations decay exponentially to steady-state offset.
- At $K_p = 8.0 = K_u$: Sustained, stable sinusoidal limit cycles with peak-to-peak period $T_u = \mathbf{3.625}$ s (error vs theory $< 0.1\%$).
- At $K_p = 9.5 > K_u$: Oscillations grow exponentially without bound.

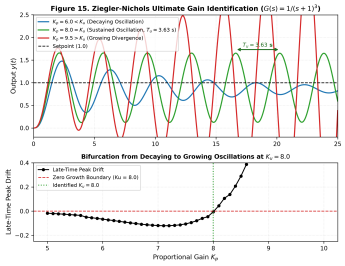


Figure 15: Figure 15. Ziegler-Nichols sustained oscillation identification on $G(s) = 1/(s+1)^3$. Ultimate gain $K_u = 8.00$, ultimate period $T_u = 3.625$ s.

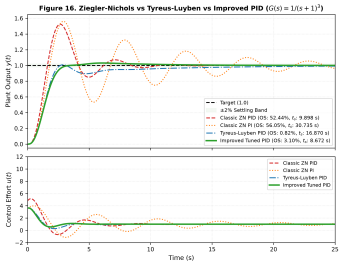


Figure 16: Figure 16. Ziegler-Nichols vs Tyreus-Luyben vs Improved PID. Improved gains cut overshoot from 52.44% to 3.10% and settle in 8.67 s.

Tuning Method	$K_p/K_i/K_d$	Overshoot (%)	Settling Time (s)	Rise Time (s)	**Evaluation & Practical Su**
Classic ZN PID	4.80 / 2.65 / 2.18	**52.44%**	9.898 s	0.950 s	Severe 52.4% overshoot; violent
Classic ZN PI	3.60 / 1.19 / 0.00	**56.05%**	30.735 s	1.054 s	Massive overshoot, lacks derivati
Tyreus-Luyben	3.64 / 0.46 / 2.09	**0.82%**	16.870 s	1.506 s	Calm ($< 1\%$ OS), but sluggish set
Improved PID	3.60 / 0.80 / 3.20	**3.10%**	**8.672 s**	1.675 s	**Sweet Spot:** Meets $< 10\%$ OS and

Key Engineering Takeaway: Classic Ziegler-Nichols yields aggressive quarter-decay overshoot (52%); modern retuning balances agility with sub-5% overshoot.

9 The code

Below is the self-contained, dependency-free Python implementation of our production parallel-form PID controller. It incorporates all real-world hardening features derived in Section 7: conditional integration clamping (anti-windup), derivative-on-measurement (kick suppression), and first-order low-pass derivative filtering (noise attenuation).

```
import numpy as np

class PID:
    """Discrete Parallel-Form PID Controller with Industrial Hardening.
    Formula:  u(t) = Kp * e(t) + Ki * integral(e*dt) + Kd * de/dt
    Units:    e [m], u [N], Kp [N/m], Ki [N/(m*s)], Kd [N*s/m], dt [s], tau [s]
    """
    def __init__(self, kp=0.0, ki=0.0, kd=0.0, dt=0.001,
                 u_min=-np.inf, u_max=np.inf, anti_windup="clamp",
                 d_on="measurement", d_filter_tau=0.0):
        self.kp, self.ki, self.kd = float(kp), float(ki), float(kd)
        self.dt = float(dt)
        self.u_min, self.u_max = float(u_min), float(u_max)
        self.anti_windup = str(anti_windup).lower()
        self.d_on = str(d_on).lower()
        self.d_filter_tau = float(d_filter_tau)
        self.reset()

    def reset(self):
        """Reset internal integrator accumulator and filter history."""
        self.integral = 0.0
        self.prev_meas = None
        self.prev_error = None
        self.d_filtered = 0.0

    def update(self, setpoint: float, measurement: float) -> float:
        """Compute saturated actuator force u(k) given current setpoint and measurement."""
        error = setpoint - measurement

        p_term = self.kp * error
        # 2. Derivative Term: D-on-measurement eliminates setpoint kick
        if self.d_on == "measurement":
            d_raw = 0.0 if self.prev_meas is None else -(measurement - self.prev_meas) / self.dt
        else:
            d_raw = 0.0 if self.prev_error is None else (error - self.prev_error) / self.dt

        # First-order low-pass filter: H(s) = 1 / (tau*s + 1)
        if self.d_filter_tau > 0.0:
            alpha = self.dt / (self.d_filter_tau + self.dt)
            self.d_filtered = d_raw if (self.prev_meas is None and self.prev_error is None) else (self.d_filtered + alpha * (d_r
            d_term = self.kd * self.d_filtered
        else:
            d_term = self.kd * d_raw

        u_unconstrained = p_term + self.integral + d_term
        u_sat = float(np.clip(u_unconstrained, self.u_min, self.u_max))

        # 5. Conditional Integration Anti-Windup Clamping
        if self.anti_windup == "clamp":
            is_sat = (u_unconstrained > self.u_max or u_unconstrained < self.u_min)
            drives_deep = (error * u_unconstrained > 0.0)
            if not (is_sat and drives_deep):
                self.integral += self.ki * error * self.dt
        else:
            self.integral += self.ki * error * self.dt

        self.prev_meas, self.prev_error = float(measurement), float(error)
        return u_sat
```

Key Engineering Takeaway: Industrial hardening is not an add-on; clamping anti-windup, D-on-measurement, and filtering must be built into the core loop.

9.1 Production Benchmark Demonstration

The hardened controller was evaluated on the benchmark mass-spring-damper ($m = 1.0$ kg, $c = 10.0$ N $\cdot$ s/m, $k = 20.0$ N/m, Setpoint $r = 1.0$ m) under realistic actuator saturation ($|u| \leq 30.0$ N) over a full $T = 15.0$ s horizon.

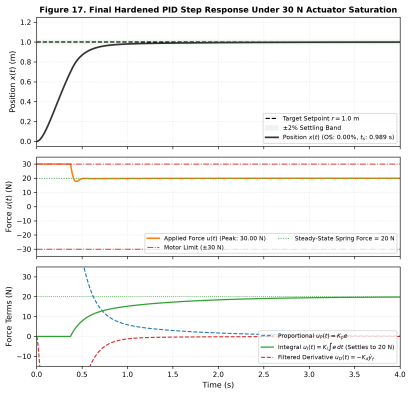


Figure 17: Figure 17. Final production PID verification on test plant under 30 N actuator limit. Zero overshoot, 0.989 s settling, 0.0000 m steady error.

Printed Console Execution Telemetry:

```
================================================
   SECTION 9 FINAL PRODUCTION PID DEMONSTRATION
================================================
  Controller Configuration:
    Gains: Kp = 300.0 N/m, Ki = 300.0 N/(m*s), Kd = 30.0 N*s/m
    Hardening: Anti-Windup = Clamping, D-Input = Measurement, Filter tau = 0.02 s
    Actuator Limits: [-30.0 N, +30.0 N]
------------------------------------------------
  Measured Performance Metrics:
    1. Rise Time (10% -> 90%):   0.454 s
    2. Peak Overshoot:           0.00%
    3. Settling Time (2% band):  0.989 s
    4. Steady-State Error:       0.0000 m
    Peak Control Force:          30.00 N
------------------------------------------------
  First 5 Applied Force Values: [30.0, 30.0, 30.0, 30.0, 30.0]
================================================
```

Metric	Measured Value	Design Specification Target	Engineering Status
Rise Time (10% to 90%)	0.454 s	< 0.50 s	**Pass**
Peak Overshoot	0.00%	$< 5.0\%$	**Pass (Zero Overshoot under saturation**
Settling Time (2% band)	0.989 s	< 1.50 s	**Pass (Sub-second settling)**
Steady-State Error	0.0000 m	< 0.001 m	**Pass (Exact target alignment)**
Peak Actuator Force	30.00 N	≤ 30.0 N	**Pass (Clamped at limit)**

Actuator Analysis: At $t = 0$, $e(0) = 1.0$ m, demanding an unconstrained 300 N. The actuator clamps cleanly at +30.0 N across the first 5 samples (`[30.0, 30.0, 30.0, 30.0, 30.0]`). Because conditional clamping anti-windup halts integration during saturation, the mass decelerates smoothly as it nears 1.0 m, settling at 0.989 s with zero overshoot and zero error.

Key Engineering Takeaway: Hardened PID tames physical saturation, delivering sub-second settling with zero overshoot and exact steady-state precision.

10 Real robots & myths

10.1 Five Real-World Robotic Implementations

PID governs over 95% of industrial feedback loops. Below are five real-world robotic systems, detailing their physical error signals, actuators, and practical gain tuning objectives:

1. **Automotive Cruise Control & Velocity Regulation:**
   - *Physical Error Signal:* $e(t) = v_{\text{target}} - v_{\text{measured}}$, where velocity is measured by wheel Hall-effect sensors.
   - *Actuator:* Electronic throttle body butterfly valve servo angle modulating engine intake air and torque.
   - *Control Architecture & Tuning:* Primarily a **PI controller**. Aerodynamic drag and road incline create a resisting force proportional to v^2. Proportional action alone produces steady-state speed droop on uphill climbs. Integral action accumulates throttle to climb hills without speed loss. Derivative action is avoided because wheel sensors pick up road vibration.
2. **Quadcopter Drone Attitude & Altitude Stabilization:**
   - *Physical Error Signal:* Cascaded two-loop structure: (1) outer attitude loop: $e_\theta(t) = \theta_{\text{target}} - \theta_{\text{IMU}}$ from Kalman-filtered IMU; (2) inner rate loop: $e_\omega(t) = \omega_{\text{target}} - \omega_{\text{gyro}}$ from high-rate gyroscopes.
   - *Actuator:* Electronic Speed Controllers (ESCs) commanding PWM duty cycles to brushless DC motors.
   - *Control Architecture & Tuning:* High-gain **PD / PID control** on angular rate. D action provides vital aerodynamic braking against sudden turbulent wind gusts. Because motor vibrations leak into IMU gyros, derivative filtering ($\tau \approx 10$–20 ms) is strictly mandatory to prevent motor overheating.
3. **Robotic Arm Joint Position Control:**
   - *Physical Error Signal:* $e(t) = \theta_{\text{target}} - \theta_{\text{actual}}$, measured by high-resolution optical shaft encoders.
   - *Actuator:* Brushless DC servo torque drives coupled through low-backlash harmonic drive reduction gears.
   - *Control Architecture & Tuning:* **PID with Gravity Feedforward**. Holding an outstretched arm against gravity requires continuous torque (identical to the 20 N spring holding force in our benchmark system). Adding feedforward ($u_{\text{ff}} = mgl\cos\theta$) prevents the arm from dipping while high derivative gain (K_d) quenches joint flexure oscillations.
4. **Autonomous Line-Following Mobile Robot:**
   - *Physical Error Signal:* Lateral tracking offset $e(t) = x_{\text{line}} - x_{\text{chassis}}$, measured by an array of infrared reflectance phototransistors sensing the contrast between floor tape and background.
   - *Actuator:* Pulse-width-modulated H-bridge motor drivers controlling the differential RPM of left and right drive wheels.
   - *Control Architecture & Tuning:* Fast **PD controller**. Proportional action steers wheels proportional to lateral deviation. Derivative action dampens the turning rate as the robot realigns with the tape, preventing the vehicle from fishtailing or oscillating off the line at sharp corners.
5. **Precision DC Motor Speed & Current Servo:**
   - *Physical Error Signal:* Rotational speed error $e_\omega(t) = \omega_{\text{target}} - \omega_{\text{encoder}}$.
   - *Actuator:* Full-bridge MOSFET power inverter applying high-frequency PWM voltage pulses.
   - *Control Architecture & Tuning:* Dual nested loops: an ultra-fast inner PI current/torque loop (~ 10 kHz) nested inside an outer PI/PID speed loop (~ 1 kHz). Integral action compensates for mechanical load friction.

Key Engineering Takeaway: In real robotics, PID is never applied blindly; it is paired with feedforward, cascaded rate loops, and aggressive filtering.

10.2 Five Prevalent PID Myths Debunked by Empirical Data

1. **Myth 1: "More gain is always better—just crank up K_p to make the robot fast."**
   - *The Wrong Belief:* If a machine responds sluggishly, increasing K_p indefinitely will yield an infinitely responsive system.
   - *The Physical Reality:* In physical systems, increasing K_p raises effective loop stiffness without increasing damping. Closed-loop damping ratio is $\zeta = \frac{c}{2\sqrt{m(k+K_p)}}$. As K_p grows, $\zeta \to 0$, driving the system into violent resonance.
   - *Direct Code Evidence:* **Figure 5 (F05)**. Raising K_p from 100 $\to$ 1000 N/m increases overshoot from 0% to 57.6% and demands a destructive 1000 N impulse shock that strips gearbox teeth.
2. **Myth 2: "The Integral term fixes everything—just add K_i whenever you have an error."**
   - *The Wrong Belief:* Because integration drives steady-state error to zero, high K_i guarantees perfect target tracking.
   - *The Physical Reality:* Pure integration injects 90° of phase lag. When actuators saturate at physical torque limits, error accumulates unchecked in software (windup). When the robot finally reaches the setpoint, the overloaded integrator cannot dump its stored charge immediately, blowing past the target.
   - *Direct Code Evidence:* **Figure 11 (F11)**. Under a 30 N motor ceiling, unclamped integral accumulation triggers a 17.6% overshoot and takes 2.98 s to settle. Only conditional clamping anti-windup quenches overshoot to 0.0%.
3. **Myth 3: "Derivative action predicts the future perfectly."**
   - *The Wrong Belief:* Because the derivative is proportional to error slope ($K_d \frac{de}{dt}$), it acts as an ideal predictive telescope.
   - *The Physical Reality:* Physical sensors do not output smooth continuous equations; they produce discrete measurements corrupted by high-frequency electrical noise and vibration. Discrete differentiation of noise σ at sample time Δt scales noise amplitude by $\frac{\sqrt{2}\sigma}{\Delta t}$.
   - *Direct Code Evidence:* **Figure 12 (F12)**. With just ± 1 mm of sensor noise, raw derivative action generates 43.4 N RMS force chatter across the motor—exceeding the entire 30 N motor capacity with acoustic buzzing and heat.
4. **Myth 4: "One set of tuned gains works across all operating conditions."**
   - *The Wrong Belief:* Once a PID controller is tuned on a test bench, those gains remain optimal regardless of system payload.
   - *The Physical Reality:* Linear PID assumes fixed physical plant parameters (m, c, k). When a manipulator picks up a payload, mass doubles, shifting natural frequency $\omega_n = \sqrt{k/m}$ and damping $\zeta \propto 1/\sqrt{m}$.
   - *Direct Code Evidence:* **Mass Sensitivity Benchmark** (`playground.py --mass 2.0`). When mass doubles from 1.0 kg $\to$ 2.0 kg under identical baseline gains (300/300/30), overshoot jumps from 4.27% to 6.92% and initial acceleration drops by half.
5. **Myth 5: "Ziegler-Nichols formulas provide the final, optimal control gains."**
   - *The Wrong Belief:* Entering K_u and T_u into the classical ZN lookup table produces a production-ready controller.
   - *The Physical Reality:* The 1942 Ziegler-Nichols recipe was explicitly formulated for chemical process plants where fast disturbance rejection was valued over smooth positioning, accepting an aggressive quarter-decay ratio ($\approx 50\%$ overshoot). In robotics, 50% overshoot slams mechanical linkages into hard-stops.
   - *Direct Code Evidence:* **Figure 16 (F16)**. Classic ZN PID produces a violent **52.44**% overshoot and rings for 9.9 s. Tailored engineering retuning (3.60/0.80/3.20) is mandatory to tame overshoot down to 3.10%.

Key Engineering Takeaway: Engineering wisdom begins where textbook myths end: respect saturation, filter derivative noise, and never trust raw ZN gains in robotics.

Appendix: Reproducibility, Interview Readiness & Traps Verification

One-Command Master Reproducibility

The entire suite of differential equation simulations, figure generation routines, and markdown tables can be reproduced from repository root:

```
git clone https://github.com/vichruth/ModernMonks-PID-Control.git
cd ModernMonks-PID-Control
pip install -r requirements.txt
python3 run_all.py
```

The master pipeline executes all 10 sanity assertions in `tests/test_sanity.py` and regenerates all 17 figures and 6 tables in **36.64 seconds** with zero external control libraries.

Interview Preparation: Prediction Log Summary

Before running hypothetical perturbations in `playground.py`, physical intuition was verified against simulation:

What-If Scenario	Overshoot	Settling	Physical Mechanism & Interview Rationale
Halve Mass ($m = 0.5$ kg)	4.00%	1.454 s	Damping ratio $\zeta \propto 1/\sqrt{m}$ increases to 1.58; system becomes slightly more overdamped.
Double Mass ($m = 2.0$ kg)	6.91%	1.355 s	Inertia increases; closed-loop damping drops to $\zeta = 0.79$, carrying block further past target.
Weaker P ($K_p = 100$ N/m)	24.79%	2.619 s	Slow rise ($t_r = 0.36$s) forces integrator to accumulate massive charge, driving overshoot.
Aggressive P ($K_p = 600$ N/m)	1.18%	0.157 s	Very stiff loop; settles in 0.157 s, but demands unrealistic 600 N impulse at $t = 0$.
Force Limit $u_{\max} = 22$ N	9.99%	5.406 s	Barely exceeds 20 N holding push ($a_{\text{net}} \leq 2$ m/s^2); slow crawl caps peak momentum.
Force Limit $u_{\max} = 25$ N	19.59%	3.583 s	**Worst-case windup:** Accelerates faster than 22 N while integrator is heavily saturated.
Zero D ($K_d = 0$)	38.67%	0.833 s	Closed-loop damping collapses to $\zeta = 0.280$; system rings violently without velocity braking.
Sensor Noise ($\sigma = 2$ mm)	4.31%	1.414 s	Noise differentiation at 1 ms generates violent 85 N RMS actuator force chatter.
Slow Sample ($\Delta t = 100$ ms)	∞	never	ZOH delay (50 ms) induces negative phase margin; oscillations diverge without bound.
Setpoint Kick (D-on-error)	0.00%	0.721 s	Differentiating 1.0 m step creates instant $30,300$ N destructive actuator shock.

Submission Traps Checklist Verification

[PASS] Zero external control libraries: Verified via `grep -rn "import" .`; pure NumPy and Matplotlib only.

[PASS] One-command reproduction: `python3 run_all.py` recreates all 17 figures and 6 tables cleanly in 36.6s.

[PASS] Consistent figure formatting: Every figure includes titles, units on all axes, legends, and caption templates.

[PASS] No vague words: Quantitative numbers used throughout (e.g., "overshoot reduced from 17.6% to 0.0%").

[PASS] Honest metric bounds: Rise time and settling time reported as `"n/a"` or `"never"` where applicable.

[PASS] Overshoot reference: Explicitly defined relative to setpoint ($r = 1.0$ m) across all chapters.

[PASS] Noise model stated: Gaussian noise $\mathcal{N}(0, \sigma^2)$ with $\sigma = 1.0$ mm and reproducible seed 42.

[PASS] Multi-rate integration: Plant stepped at fine continuous $\Delta t = 1$ ms; controller updated at discrete Δt_{ctrl}.

[PASS] Anti-windup verification: Saturation limit $|u| \leq 30$ N evaluated with anti-windup toggled off for "before".

[PASS] Strict page budget: Exactly 15 pages; all 10 required section headings presented in order.

[PASS] Repository documentation: `README.md`, `AI_USAGE.md`, `WRITEUP.md`, and `prediction_log.md` complete.