


Trainings ▾

Remove

Turn the keyswitch to the OFF position.

Disconnect the cab thermostat harness from the cab thermostat.


This connection location typically can be found behind the panel where the thermostat is mounted.

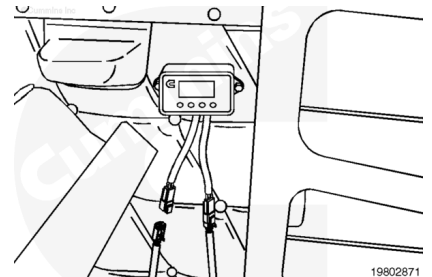

Disconnect the cab thermostat harness from the cab harness.

Remove the cab thermostat harness.


This harness is typically located under or in the dash, on the driver's side of the cab.

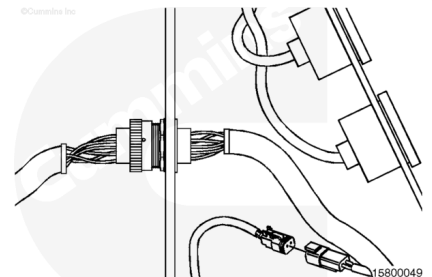


Install

Turn the keyswitch to the OFF position.

Connect the cab thermostat harness to the cab harness.

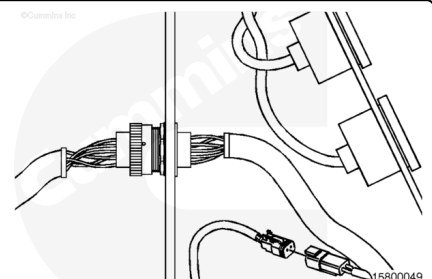

Connect the cab thermostat harness to the cab thermostat.

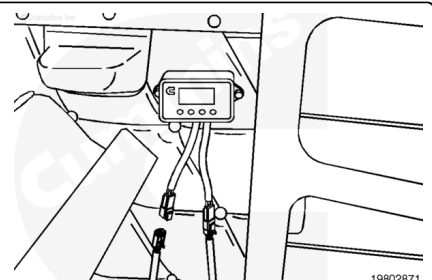

Last Modified: 12-Jun-2003