


## Trainings ▾

### Maintenance Check

**Note :** Never remove the felt washer from the indicator. The felt washer absorbs moisture.

A mechanical restriction indicator is available to indicate excessive air restriction through a dry-type air cleaner. This instrument can be mounted in the air cleaner outlet or on the vehicle instrument panel. The red flag (1) in the window gradually rises as the cartridge loads with dirt. After changing or replacing the cartridge, reset the indicator by pushing the reset button (2).

Restriction or vacuum indicators are to be installed as close as possible to the turbocharger air inlet in order to obtain a true indication of restrictions.

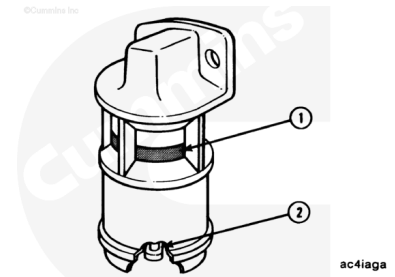

Vacuum switches actuate a warning light on the instrument panel when the air restriction becomes excessive.

Air restriction on turbocharged engines **must not** exceed 635 mm [25 in] under full power conditions.

