


Trainings ▾

Install

For QSK19 CM500, install the camshaft installation pilots, Part Number 3825150, on the valve lobes of the camshaft.

For QSK19 CM850 MCRS and QSK19 CM2150 MCRS, install the camshaft installation pilots, Part Number 5299377, on the valve lobes of the camshaft.


Use Lubriplate® 105, or equivalent, to lubricate the camshaft and camshaft bushings.

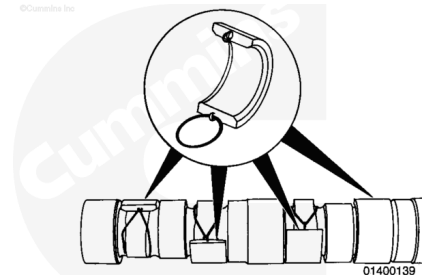

⚠ CAUTION ⚠


If the installation pilots are not available. Be careful when installing the camshaft to prevent the camshaft lobes from damaging the bushings.

Install the camshaft. Turn the camshaft backward and forward as it is being pushed. Keep the pilots turned downward to support the camshaft.

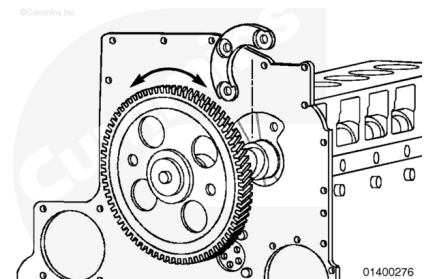


Tighten the three 12-point capscrews.

Torque Value: 64 n·m [47 ft·lb]

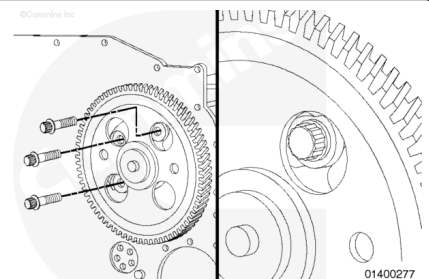

Use a dial indicator to measure the camshaft end clearance.

Camshaft End Clearance		
mm		in
0.15	MIN	0.006
0.33	MAX	0.013

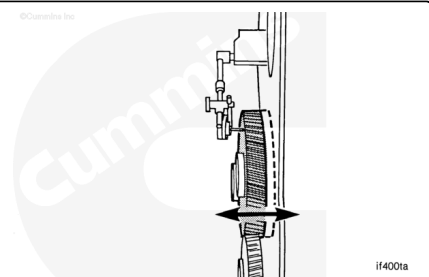

If the clearance is **not** within specifications, check for foreign material or a piece of gasket between the thrust plate and the block.

Last Modified: 15-Sep-2015
