


Trainings ▾


Remove

Remove the three 12-point capscrews and thrust bearing plate.

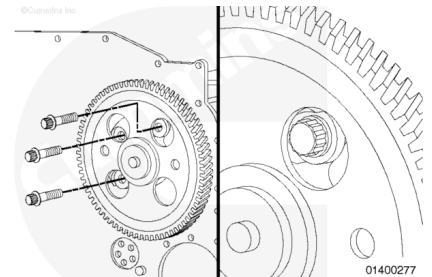

⚠ CAUTION ⚠

Pilots must be used to prevent damage to the camshaft and the bushings. Be sure the hooks do not damage the camshaft bushings.

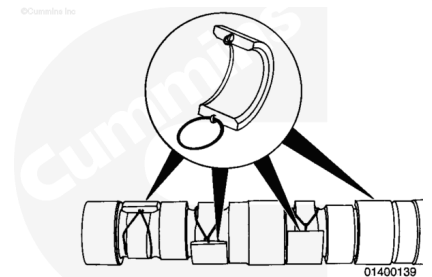


For QSK19 CM500, use camshaft installation pilots, Part Number 3825150.

For QSK19 CM850 Modular Common Rail System (MCRS) and QSK19 CM2150 MCRS, use camshaft installation pilots, Part Number 5299377.

Place the pilots on the inner base circle of the valve lobes for the last two cylinders before removing the camshaft from the block.

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lbs]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

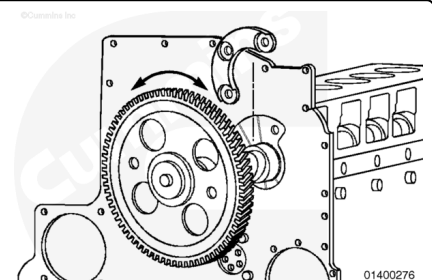

Rotate the camshaft during removal so that one of the pilots is always on the bottom part of the camshaft bushing.

Last Modified: 15-Sep-2015
