

Trainings ▾


Install

Install the vibration damper on the crankshaft pulley or adapter, if equipped.

Install the six washers and capscrews.

Tighten the capscrews.

Torque Value: 140 n•m [105 ft-lb]

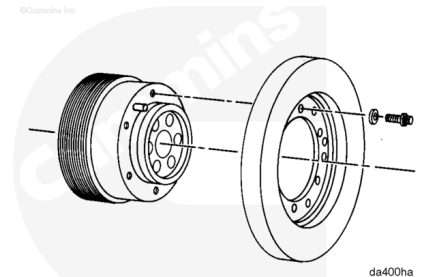

Install the guide stud in the crankshaft.

Install the vibration damper assembly. The pilot **must** be aligned with the crankshaft correctly.


Install the washers and capscrews.

Tighten the capscrews.

Torque Value:

1. 230 n•m [170 ft-lb]

2. 445 n•m [330 ft-lb]

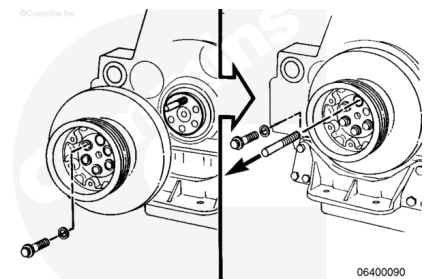

Finishing Steps

- Install the fan belt and related components. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/20/20-008-002-shopas.html>)