

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- No Cummins® service tools required.


Additional Service Items

- No additional service items required.

Inspect for Reuse

Inspect the thrust bearing for damage. Measure the thickness.

Camshaft Thrust Bearing Thickness		
mm		in
9.34	MIN	0.368
9.44	MAX	0.372

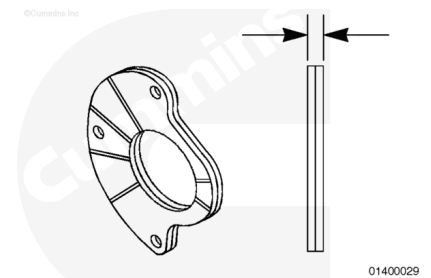

Note : The camshaft thrust bearing has two bearings. Both have a steel back with an aluminum overlay. The bearings can separate during engine operation. Do not use RTV to hold the bearings together for assembly or the thickness may be too great when the RTV cures. The thrust bearing must be installed with the smooth sides against each other.