

Trainings ▾

Install

with Mechanically Actuated Injector


Note : The push rods **must** be seated correctly in the cam followers.

Note : Mechanically Actuated Injectors: The injector push rods are thicker in the middle. The valve push rods are the same for both intake and exhaust.

Use engine oil to lubricate the sockets in the cam followers.

Install the push rods.

Install the crossheads.

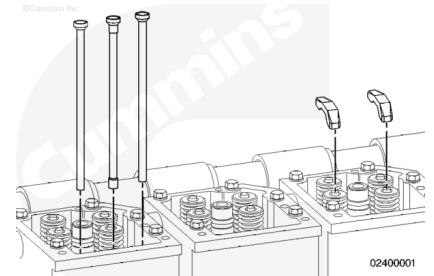

with Electronically Actuated Injector

Note : The push rods **must** be seated correctly in the cam followers.

Use clean engine oil to lubricate the sockets in the cam followers.

Install the push rods.

Install the crossheads.

