


Trainings ▾

Install

Use Lubriplate® Number 105, or equivalent, to position and secure the o-rings. Install the o-rings.

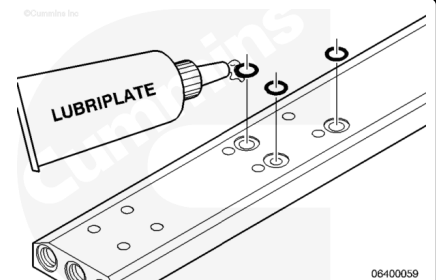

Install the **front** fuel manifold. Use the sequence illustrated to tighten the 12 capscrews.

Torque Value: 10 n•m [89 in-lb]

Repeat this process for the installation of the **rear** fuel manifold.

