



Trainings ▾

Pressure Differential Test


Use a differential pressure gauge or one pressure gauge with two oil hoses and two valves to eliminate gauge error. Use a gauge with a minimum pressure capacity of 517 kPa [75 psi].

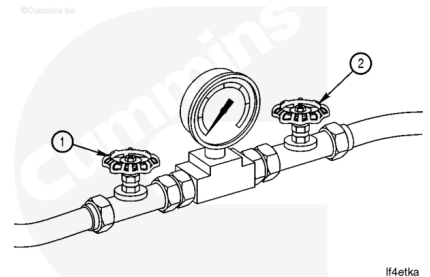


Install each hose into the [1 1/16-12 UNF inch] plugged hole at each end of the oil cooler housing.

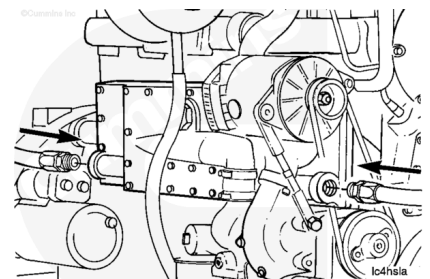

Operate the engine at rated rpm until the oil temperature is at least 65°C [150°F].

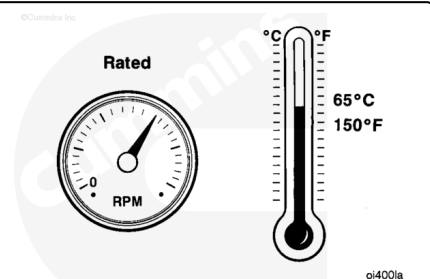

Close valve Number. 1 and **open** valve Number. 2. Read the oil pressure after the oil has passed through the oil coolers.

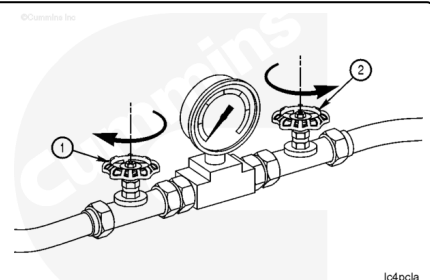

Open valve Number. 1 and **close** valve Number. 2. Read the pressure of the oil being supplied to the oil coolers.

Compare the difference between the two pressures. If the difference is more than 138 kPa [20 psi], replace the oil cooler elements. Refer to Procedure 007-007 in Section 7.

(/qs3/pubsys2/xml/en/procedures/20/20-007-007-tr.html)

Max Lubricating Oil Cooler Differential: 138 kPa [20 psi]

