


Trainings ▾

Install

All Applications Except Rail

⚠ WARNING ⚠

The component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component.

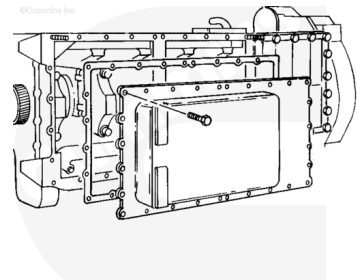

⚠ CAUTION ⚠

Gasket cement will prevent the gasket from sealing properly.


Use a contact adhesive such as 3M Spray 77 or 3M 4693 to hold the gasket in position.

Install the gaskets and the lubricating oil pan.

Install the capscrews.


Tighten the capscrews in sequence.

Torque Value: 45 n•m [33 ft-lb]

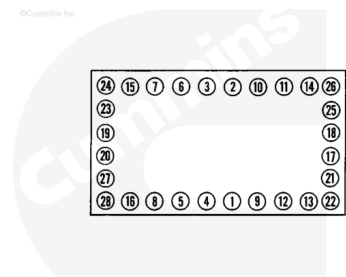

Rail Applications

Install two 3/8 - 16 guide studs in the top row of capscrew holes.

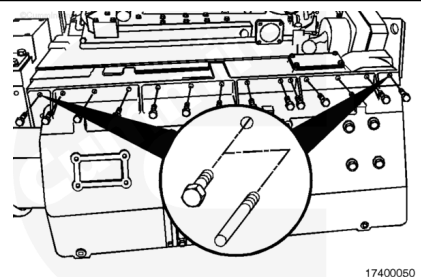

⚠ WARNING ⚠


The component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component.

⚠ CAUTION ⚠

Gasket cement will prevent the gasket from sealing properly.

Use a contact adhesive such as 3M Spray 77 or 3M 4693 to hold the gasket in position.

Install the gasket and lubricating oil pan.

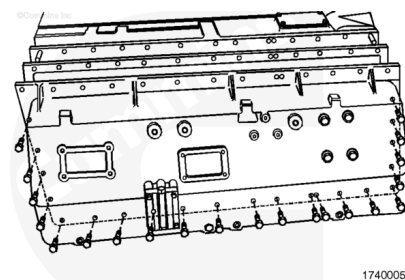

Install the 38 capscrews.

Tighten the capscrews in the sequence shown.

Torque Value: 45 n•m [33 ft-lb]

