


Trainings ▾

Remove

All Applications Except Rail

⚠ WARNING ⚠

The component weighs 23 kg [50 lb] or more. To reduce the possibility of personal injury, use a hoist or get assistance to lift the component.

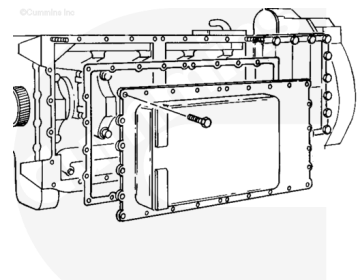

07400008

Remove the 28 capscrews.


Remove the lubricating oil pan.

Remove and discard the gasket.

Rail Applications

Remove 15 capscrews on the top of the lubricating oil pan.


Install two 3/8- 16 guide studs in the capscrew holes.

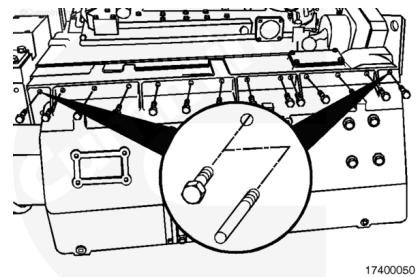

17400060

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift component or assembly.

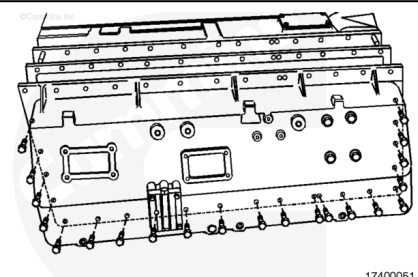

17400061

Remove the remaining 23 capscrews.

Remove the lubricating oil pan.

Remove and discard the gasket.

