


Trainings ▾

Install

⚠ CAUTION ⚠

Do not use gasket cement. Gasket cement will prevent the gasket from sealing properly.

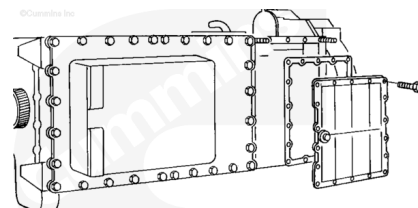

07400012

Use a contact adhesive such as 3M Spray 77 or 3M 4693 to hold the gasket in position.

Install the gasket and oil pan adapter cover.


Install the capscrews.

Tighten the capscrews in sequence.

Use the sequence shown to tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

©Cummins Inc.

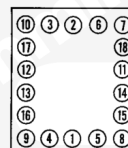

074000014