


Trainings ▾

Pressure Test


Use a pressure gauge with a minimum capacity of 275 kPa [40 psi]. Measure the coolant pressure at the water manifold (1).

Operate the engine until the coolant temperature reaches 80°C [180°F].

Note : The thermostats must be open.

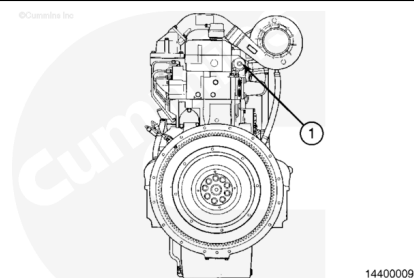

Operate the engine at rated rpm. Compare the pressure readings to the following specifications.

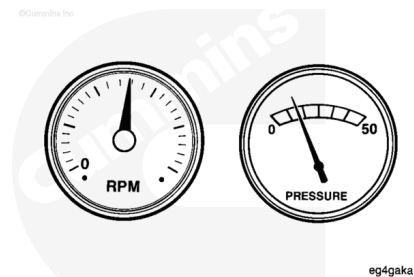

Minimum Coolant Pressure-At-Water Manifold

Engine rpm	kPa	psi
1800	75	11
1900	82	12
2100	89	13

kpa

psi

241

MAX

35

If the above measurement location is **not** accessible, install the gauge in the oil cooler housing in place of the draincock.

Minimum Coolant Pressure-At-Oil Cooler Housing

Engine rpm	kPa	psi
1800	103	15
1900	117	17
2100	131	19


kpa

psi


241

MAX


35

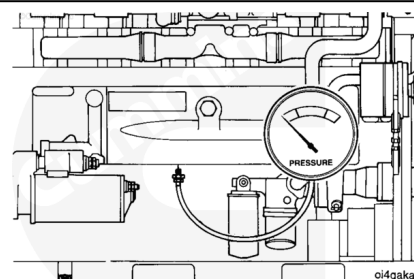

If coolant pressure is high, check the thermostat or radiator for a restriction. Refer to Procedure 008-042 (</qs3/pubsys2/xml/en/procedures/20/20-008-042.html>).

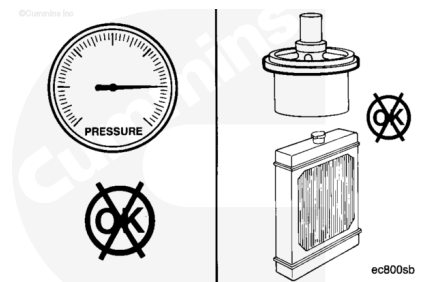

If the coolant pressure is low, install a gauge (with a maximum capacity of 69 kPa [10 psi]) at the water pump inlet.

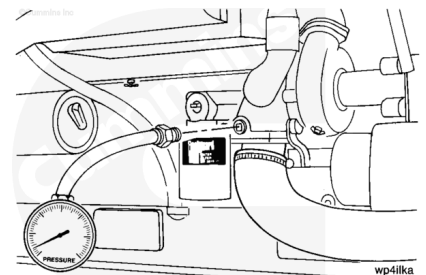

Operate the engine at rated rpm. If the gauge reads more than 35 kPa [5 psi], check the radiator. Refer to Procedure 008-042 (</qs3/pubsys2/xml/en/procedures/20/20-008-042.html>).

