


Trainings ▾

Install


Install the bolt seals in the aftercooler housing.

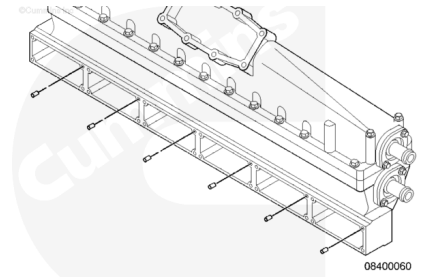

Note : Use guide studs long enough to protrude beyond the installed part.


Install 12 guide studs in the upper row of capscrew holes in the cylinder heads.

Install the gaskets on the studs with the raised bead on the gasket toward the cylinder head.

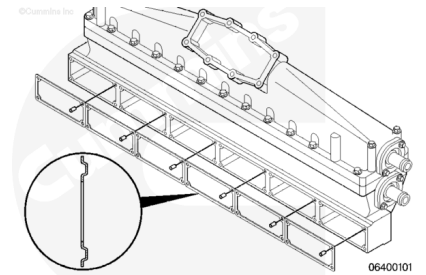

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

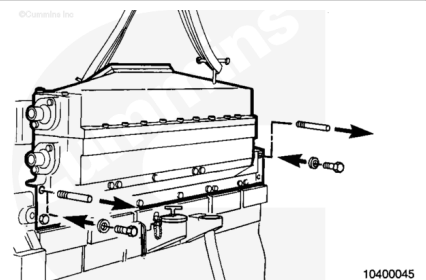


Install the aftercooler and the bottom row of capscrews.

Tighten the capscrews **only** enough to hold the part.

Remove the guide studs and install the top row of capscrews.

Use the sequence shown, and the steps and values indicated below to tighten the capscrews.


Torque Value:	Step 1	25 n.m [20 ft-lb]
	Step 2	45 n.m [35 ft-lb]

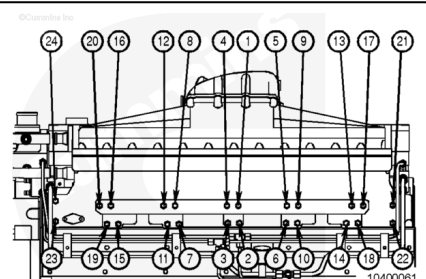

Rail Applications

Install the intake manifold and the 24 capscrews.

Use the sequence shown, and the steps and values indicated below to tighten the capscrews.



Torque Value:	Step 1	25 n.m [20 ft-lb]
	Step 2	45 n.m [35 ft-lb]