

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

Drain the cooling system. Refer to Procedure 008-018 in Section (</qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html>)

©Cummins Inc.



ck800wa


Remove

Disconnect the coolant supply hose from the turbocharger and the torque converter cooler cover.

Remove the male union from the torque converter cooler cover.

Discard the o-ring.

©Cummins Inc.

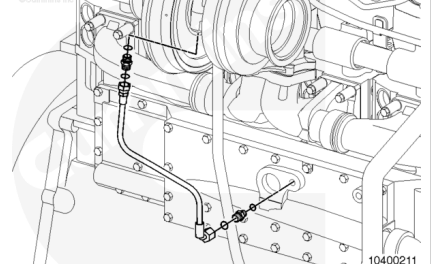


10400211

Disconnect the coolant return hose from the turbocharger and the water manifold tube.

Discard the o-rings.

Remove the male union fitting from the turbocharger and water manifold tube.


Discard the o-rings.

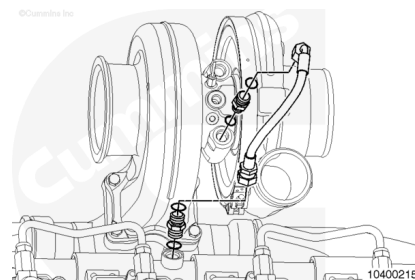

Inspect for Reuse

Check the coolant supply and return hoses for damage, kinks, fretting, or restrictions.

Inspect the male unions for damage, stripped threads, and cracks.

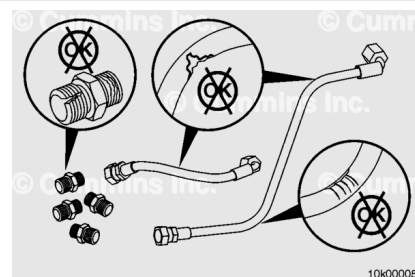

Install

Install the new o-ring on the male union fittings and install the fittings on the torque converter cooler cover.

Torque Value: 34 n•m [25 ft-lb]


Install the new face seal o-rings.

Connect the turbocharger coolant supply hose to the male union fitting on the torque converter cooler cover and the turbocharger.

Torque Value:


Turbocharger Coolant Supply Hose

1. 25.5 n•m [19 ft-lb]

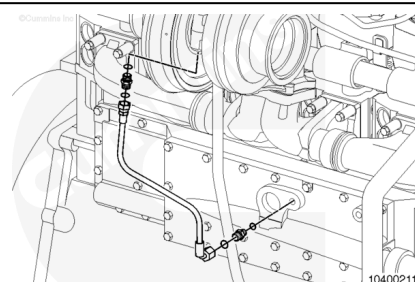

Install the new o-rings on the male union fittings and install the fittings in the water manifold tube and on the turbocharger.

Torque Value: 73 n•m [55 ft-lb]

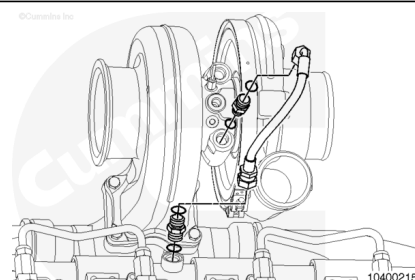

Install the new face seal o-rings and connect the turbocharger coolant return hose to the turbocharger and the water manifold tube.

Make sure that the coolant return hose is **not** in contact with the oil supply hose. Use the following procedure if they are in contact and more clearance is needed. Refer to Procedure 010-046 in Section 10.

(/qs3/pubsys2/xml/en/procedures/20/20-010-046.html)

Torque Value:

Turbocharger Coolant Return Hose


1. 45 n•m [34 ft-lb]

Finishing Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Fill the cooling system. Refer to Procedure 008-018 in Section. (/qs3/pubsys2/xml/en/procedures/20/20-008-018-tr.html)
- Operate the engine and check for proper operation.

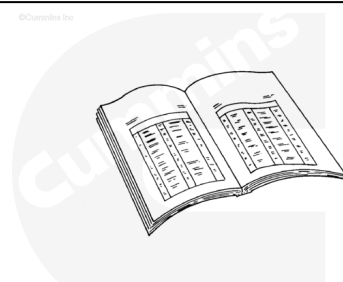

ck800wa