

Trainings ▾

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

⚠ WARNING ⚠

Cummins does not recommend resurfacing of the flexplate. Resurfacing the flexplate can cause personal injury and property damage because the flexplate is too thin.

⚠ CAUTION ⚠

Do not isassemble the flexplate assembly. Improper assembly of the flexplate can cause engine damage.

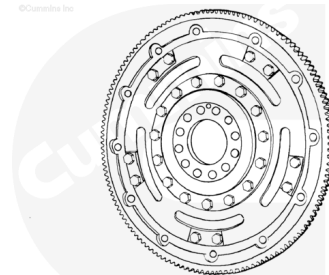

Clean the flexplate with solvent and dry with compressed air.

Check the ring gear for damaged or worn teeth. If the teeth are damaged or worn the flexplate **must** be replaced.

Use the dye penetrant method to check the area of the mounting holes for cracks. If the flexplate is cracked in the mounting area the flexplate **must** be replaced.

Check the mounting pilot for damage. If the pilot is damaged, the flexplate **must** be replaced.

